


# **SERVICE MANUAL**

**FOR**

**Jeep**  
**UTILITY VEHICLES**



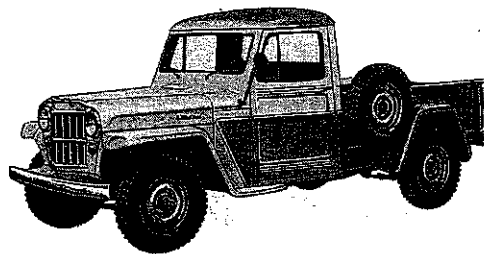

# SERVICE MANUAL

## **Jeep** UTILITY VEHICLES

### MODELS

L6-226	4WD	F4-134	4WD
L6-226	4x4	F4-134	4x4
L6-226	4x2	F4-134	4x2

ORIGINAL REPRODUCTIONS  
P.O. BOX 74  
UPLAND, CALIF. 91786  
U.S.A.

PRINTED IN U. S. A.

SECTION INDEX	
Name	Section
General Data	A
Lubrication	B
Tune-Up	C
L6-226 Engine	D
F4-134 Engine	E
Fuel System	F
Exhaust System	G
Cooling System	H
Electrical	I
Clutch	J
Transmission - OD Transfer Case	K
Propeller Shafts	L
Front Axle	M
Rear Axle	N
Steering	O
Brakes	P
Wheels	Q
Frame	R
Springs Shock Absorbers	S
Body	T
Miscellaneous	U





## Vehicle Description

This manual covers all 'Jeep' Utility Vehicle models currently being produced. Significant changes made in each model since it was first produced are included in the manual. A description of each model follows. General information for each model is listed on page 4. Detailed service standards covering major vehicle units are listed at the end of each section of the manual.

**L6-226 4WD** — This is a 4-wheel-drive truck with a cab and either a pickup or platform stake body. It has a six-cylinder, L-head, engine.

**L6-226 4x4** — This is a 4-wheel-drive vehicle with either a Station Wagon or Utility Delivery body. It has a six-cylinder, L-head, engine.

**L6-226 4x2** — This is a 2-wheel-drive vehicle with either a Utility Wagon or Utility Delivery body. It has a six-cylinder, L-head, engine. It was formerly designated as Model 6-226 2x4.

**F4-134 4WD** — This is a 4-wheel-drive truck with a cab and either a pickup or platform stake body. It has a four-cylinder, F-head, engine. It was formerly designated as Model 475 4WD.

**F4-134 4x4** — This is a 4-wheel-drive vehicle with either a Utility Wagon or a Utility Delivery body. It has a four-cylinder, F-head, engine. It was formerly designated as Model 4 x 475.

**F4-134 4x2** — This is a 2-wheel-drive vehicle with either a Station Wagon or a Utility Delivery body. It has a four-cylinder, F-head, engine. It was formerly designated as Model 475 and Model 2 x 475.

## GENERAL DATA

## L6-226 Models

Model	L6-226 4WD Pickup Truck, Stake Truck	L6-226 4x4 Utility Wagon, Utility Deliv'y	L6-226 4x2 Station Wagon, Utility Deliv'y
Engine	L6-226	L6-226	L6-226
Type	L-head	L-head	L-head
Number of cylinders	6	6	6
Bore	3 $\frac{5}{16}$ " [84,14 mm.]	3 $\frac{5}{16}$ " [84,14 mm.]	3 $\frac{5}{16}$ " [84,14 mm.]
Stroke	4 $\frac{3}{8}$ " [111,12 mm.]	4 $\frac{3}{8}$ " [111,12 mm.]	4 $\frac{3}{8}$ " [111,12 mm.]
Displacement	226.2 cu. in. [3706,73 cm <sup>3</sup> ]	226.2 cu. in. [3706,73 cm <sup>3</sup> ]	226.2 cu. in. [3706,73 cm <sup>3</sup> ]
Ignition Timing	5° BTC	5° BTC	5° BTC
Compression Ratio	6.86 to 1	6.86 to 1	6.86 to 1
Compression Pressure	125 to 140 psi. [8,8 a 9,8 kg-cm <sup>2</sup> ]	125 to 140 psi. [8,8 a 9,8 kg-cm <sup>2</sup> ]	125 to 140 psi. [8,8 a 9,8 kg-cm <sup>2</sup> ]
Horsepower (max. brake)	105 at 3600 rpm.	105 at 3600 rpm.	105 at 3600 rpm.
Horsepower (SAE)	26.33	26.33	26.33
Torque (max. at 1400 rpm.)	190 lb.-ft. [26,3 kg-m.]	190 lb.-ft. [26,3 kg-m.]	190 lb.-ft. [26,3 kg-m.]
Wheelbase	118" [299,7 cm.]	104 $\frac{1}{2}$ " [265,4 cm.]	104 $\frac{1}{2}$ " [265,4 cm.]
Tread			
Front	57" [144,8 cm.]	57" [144,8 cm.]	57" [144,8 cm.]
Rear	63 $\frac{1}{2}$ " [162,0 cm.]	57" [144,8 cm.]	57" [144,8 cm.]
Height (over all)	74 $\frac{3}{8}$ " [189,0 cm.]	72" [187,9 cm.]	71 $\frac{1}{2}$ " [186,7 cm.]
Length (over all)	183 $\frac{3}{4}$ " [466,7 cm.]	176 $\frac{1}{4}$ " [447,6 cm.]	176 $\frac{1}{4}$ " [447,6 cm.]
Width (over all)	73" [185,4 cm.]		
Utility Wagon		71 $\frac{3}{4}$ " [182,2 cm.]	71 $\frac{3}{4}$ " [182,2 cm.]
Utility Delivery		68 $\frac{1}{8}$ " [173,0 cm.]	68 $\frac{1}{8}$ " [173,0 cm.]
Ground Clearance	7 $\frac{3}{4}$ " [19,68 cm.]	8 $\frac{1}{2}$ " [21,59 cm.]	7 $\frac{3}{8}$ " [18,74 cm.]
Gross Vehicle Weight (GVW)	6000 lb. [2.721 kg.]	4500 lb. [2.041 kg.]	4300 lb. [1.950 kg.]
Utility Delivery			4500 lb. [2.041 kg.]
Weights (approximate):			
Shipping (less fuel, oil, water):			
Pickup or Utility Wagon	3176 lb. [1.441 kg.]	3206 lb. [1.454 kg.]	2971 lb. [1.348 kg.]
Stake or Utility Delivery	3341 lb. [1.515 kg.]	3008 lb. [1.364 kg.]	2859 lb. [1.297 kg.]
Curb (including fuel, oil, water):			
Pickup or Utility Wagon	3311 lb. [1.502 kg.]	3345 lb. [1.517 kg.]	3106 lb. [1.409 kg.]
Stake or Utility Delivery	3476 lb. [1.577 kg.]	3147 lb. [1.427 kg.]	2998 lb. [1.360 kg.]
Capacities:			
Fuel tank	15 gal. [56,8 ltr.]	15 gal. [56,8 ltr.]	15 gal. [56,8 ltr.]
Cooling System:			
Without heater	12 qt. [11,4 ltr.]	12 qt. [11,4 ltr.]	12 qt. [11,4 ltr.]
With heater	13 qt. [12,3 ltr.]	13 qt. [12,3 ltr.]	13 qt. [12,3 ltr.]

## F4-134 Models

MODEL	F4-134 4WD Pickup Truck, Stake Truck	F4-134 4x4 Utility Wagon, Utility Deliv'y	F4-134 4x2 Station Wagon, Utility Deliv'y
Engine	F4-134	F4-134	F4-134
Type	F-head	F-head	F-head
Number of cylinders	4	4	4
Bore	3 $\frac{1}{8}$ " [79,37 mm.]	3 $\frac{1}{8}$ " [79,37 mm.]	3 $\frac{1}{8}$ " [79,37 mm.]
Stroke	4 $\frac{3}{8}$ " [111,12 mm.]	4 $\frac{3}{8}$ " [111,12 mm.]	4 $\frac{3}{8}$ " [111,12 mm.]
Displacement	134.2 cu. in. [2199,53 cm <sup>3</sup> ]	134.2 cu. in. [2199,53 cm <sup>3</sup> ]	134.2 cu. in. [2199,53 cm <sup>3</sup> ]
Ignition Timing	5° BTC	5° BTC	5° BTC
Compression Ratio	6.9 to 1	6.9 to 1	7.4 to 1
Compression Pressure	120 to 130 psi. [8,4 a 9,1 kg-cm <sup>2</sup> ]	120 to 130 psi. [8,4 a 9,1 kg-cm <sup>2</sup> ]	120 to 130 psi. [8,4 a 9,1 kg-cm <sup>2</sup> ]
Horsepower (max. brake)	72 at 4000 rpm.	72 at 4000 rpm.	75 at 4000 rpm.
Horsepower (SAE)	15.63	15.63	15.63
Torque (max. at 2000 rpm.)	114 lb.-ft. [15,7 kg-m.]	114 lb.-ft. [15,7 kg-m.]	114 lb.-ft. [15,7 kg-m.]
Wheelbase	118" [299,7 cm.]	104 $\frac{1}{2}$ " [265,4 cm.]	104 $\frac{1}{2}$ " [265,4 cm.]
Tread			
Front	57" [144,8 cm.]	57" [144,8 cm.]	57" [144,8 cm.]
Rear	63 $\frac{1}{2}$ " [162,0 cm.]	57" [144,8 cm.]	57" [144,8 cm.]
Height (over all)	74 $\frac{3}{8}$ " [189,0 cm.]	74" [187,9 cm.]	73 $\frac{1}{8}$ " [186,7 cm.]
Length (over all)	183 $\frac{3}{4}$ " [466,7 cm.]	176 $\frac{1}{4}$ " [447,6 cm.]	176 $\frac{1}{4}$ " [447,6 cm.]
Width (over all)	73" [185,4 cm.]		
Utility Wagon		71 $\frac{3}{4}$ " [182,2 cm.]	71 $\frac{3}{4}$ " [182,2 cm.]
Utility Delivery		68 $\frac{1}{8}$ " [173,0 cm.]	68 $\frac{1}{8}$ " [173,0 cm.]
Ground Clearance	7 $\frac{3}{4}$ " [19,68 cm.]	8 $\frac{1}{2}$ " [21,59 cm.]	7 $\frac{3}{8}$ " [18,74 cm.]
Gross Vehicle Weight (GVW)	6000 lb. [2.721 kg.]	4500 lb. [2.041 kg.]	4300 lb. [1.950 kg.]
Utility Delivery			4500 lb. [2.041 kg.]
Weights (approximate):			
Shipping (less fuel, oil, water):			
Pickup or Utility Wagon	3065 lb. [1.390 kg.]	3093 lb. [1.403 kg.]	2858 lb. [1.297 kg.]
Stake or Utility Delivery	3230 lb. [1.465 kg.]	2895 lb. [1.313 kg.]	2746 lb. [1.246 kg.]
Curb (including fuel, oil, water):			
Pickup or Utility Wagon	3200 lb. [1.451 kg.]	3228 lb. [1.464 kg.]	2993 lb. [1.358 kg.]
Stake or Utility Delivery	3365 lb. [1.526 kg.]	3030 lb. [1.374 kg.]	2881 lb. [1.307 kg.]
Capacities:			
Fuel tank	15 gal. [56,8 ltr.]	15 gal. [56,8 ltr.]	15 gal. [56,8 ltr.]
Cooling System:			
Without heater	11 qt. [10,4 ltr.]	11 qt. [10,4 ltr.]	11 qt. [10,4 ltr.]
With heater	12 qt. [11,3 ltr.]	12 qt. [11,3 ltr.]	12 qt. [11,3 ltr.]

## LUBRICATION

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Air Cleaner.....	B-24, B-42	King Pin Bearings.....	B-11
Bearing, Clutch Release.....	B-34	Lubrication Fittings.....	B-8
Bearing, Water Pump.....	B-34	<b>LUBRICATION REQUIREMENTS</b>	
Bearings, King Pin.....	B-11	<b>FOR OFF-HIGHWAY OPERATIONS</b> .....	B-38
Bearings, Starter Motor.....	B-35	Lubrication System, Engine.....	B-4
Bearings, Wheel.....	B-13, B-14	Master Cylinder, Brake.....	B-29
Body.....	B-32	Multipurpose Gear Lubricant GL4.....	B-3
Bolts, Pivot.....	B-9	Oil Bath Air Cleaner.....	B-24
Brake Control, Hand.....	B-26	Oil Filter.....	B-23, B-41
Brake Master Cylinder.....	B-29	Overdrive.....	B-17
Centrifugal Governor.....	B-48	Overdrive Control.....	B-18
Chassis Lubrication.....	B-40	<b>PARTS REQUIRING</b>	
Choke Control.....	B-27	<b>NO LUBRICATION</b> .....	B-33
Clutch Linkage.....	B-30	Pivot Bolts.....	B-9
Clutch Release Bearing.....	B-34	Power Take-Off.....	B-46
Crankcase, Engine.....	B-7	Power Take-Off Propeller Shaft	
<b>DETAIL LUBRICATION</b>		Universal Joints.....	B-47
<b>REQUIREMENTS</b> .....	B-5	Powr-Lok Nonslip Differential.....	B-20
Differential, Front Axle.....	B-19, B-45	Propeller Shaft Universal Joints.....	B-10, B-47
Differential, Powr-Lok Nonslip.....	B-20	Pulley Drive.....	B-46
Differential, Rear Axle.....	B-19, B-45	Rear Axle Differential.....	B-19, B-45
Distributor.....	B-21	Rear Wheel Bearings.....	B-14
Engine Crankcase.....	B-7	Release Bearing, Clutch.....	B-34
Engine Lubrication System.....	B-4	Shackles, Spring.....	B-9
Engine Oil.....	B-39	Shock Absorbers.....	B-37
Engine Oil Classifications.....	B-2	Speedometer.....	B-25
Exhaust Manifold Heat Control Valve.....	B-28	Spring Shackles.....	B-9
Filter, Oil.....	B-23, B-41	Springs.....	B-36
Fittings, Lubrication.....	B-8	Starter Motor Bearings.....	B-35
Front and Rear Axle Differentials.....	B-19, B-45	Steering Gear.....	B-12
Front Axle Shaft King Pin Bearings.....	B-11	Transfer Case.....	B-16, B-44
Front Axle Shaft Universal Joints.....	B-10, B-43	Transmission.....	B-15, B-44
Front Wheel Bearings.....	B-13	Universal Joints, Front Axle Shaft.....	B-11, B-43
Generator.....	B-22	Universal Joints,	
GL4, Multipurpose Gear Lubricant.....	B-3	Power Take-Off Propeller Shaft.....	B-47
Governor, Centrifugal.....	B-48	Universal Joints, Propeller Shaft.....	B-10
Hand Brake Control.....	B-26	Valve, Exhaust Manifold Heat Control.....	B-28
Heat Control Valve.....	B-28	Water Pump Bearing.....	B-34
Initial Lubrication.....	B-6	Wheel Bearings.....	B-13, B-14

**B-1. GENERAL**

It is highly important that the correct amounts of the proper lubricants be used at regular intervals. The specifications given in the charts and detailed description of this section should be closely followed. Special lubricating instructions for field and industrial use are given as the last part of this section.

**B-2. Engine Oil Classifications**

The American Petroleum Institute has adopted a new system of classifying engine oils according to type of service. These new designations are:

ML — Light and favorable service conditions.

MM — Moderate to severe service conditions.

MS — Most severe service conditions.

Common short trip, stop-and-go driving is the

most severe and becomes intensified even more in cold weather. In contrast, constant-speed driving on highways is the least severe.

These new designations replace the older designations of "regular", "premium", and "heavy duty". Depending upon the conditions of operation, either MM or MS grade is recommended for 'Jeep' vehicles. The API-SAE viscosity numbering system is not affected by this change. It is still necessary to specify the SAE number in addition to the above classification.

**B-3. Multipurpose Gear Lubricant GL4**

A new multipurpose gear lubricant designated as "A.P.I. Service GL4" has improved load carrying capacity for most hypoid, spiral bevel, and worm

(Text continued on page 12)

## LUBRICATION SPECIFICATIONS

## Model L6-226 4WD

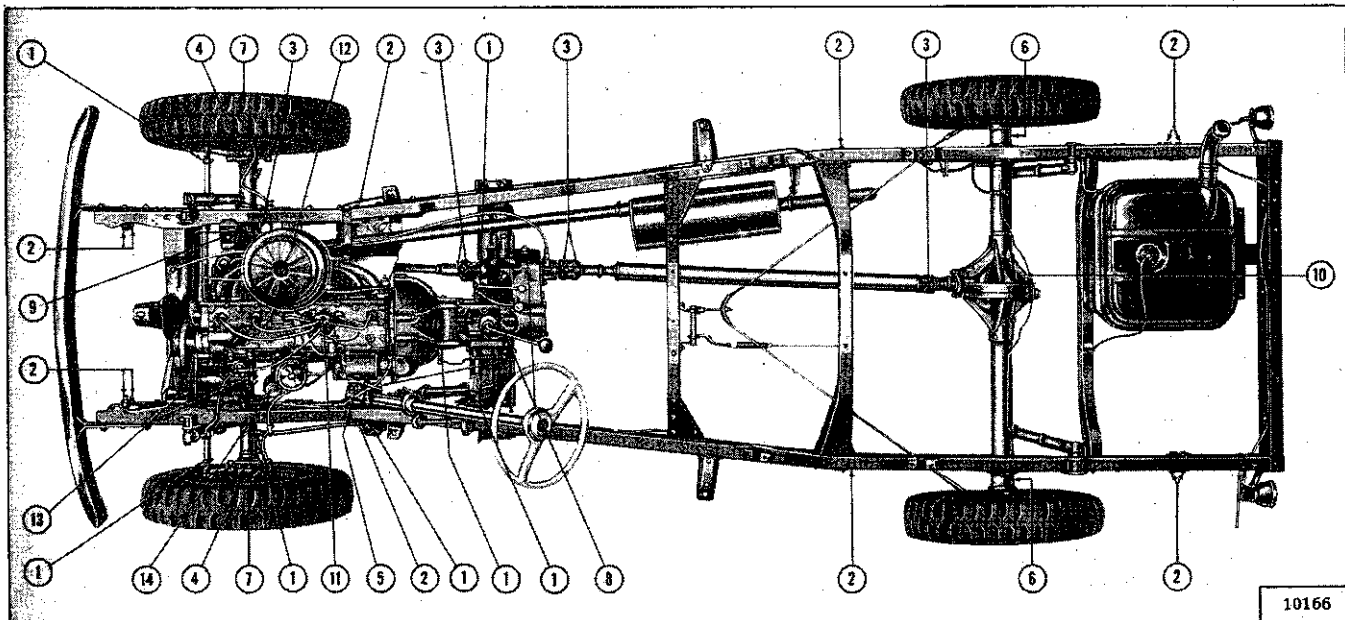


FIG. 1—LUBRICATION CHART — MODEL L6-226 4WD

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY* 1000 miles = 1.600 km.	QUANTITY			LUBRICANT		
			U.S.	Imperial	Metric	TYPE	GRADE	
							Summer	Winter
1.	Chassis Bearings.....	Each 1000 miles	As required			Chassis Lubricant	No. 1	No. 0
2.	Spring Shackle Bushings... Spring Pivot Bolt Bushings	With lube fittings: Each 1000 miles Without lube fittings: No lubrication	As required			Chassis Lubricant	No. 1	No. 0
3.	Universal Joints	Each 1000 miles Check each 1000 miles Change each 12,000 miles [19,200 km.]	As required			Universal Joint Lubricant	No. 1	No. 0
4.	Propeller Shaft..... Front Axle Shaft.....		As required			Universal Joint Lubricant	No. 1	No. 0
5.	Steering Gear.....	Check each 1000 miles	As required			GL-4	SAE 90	SAE 90
6.	Rear Wheels.....	Sparingly each 1000 miles	As required			Wheel Bearing Lubricant	No. 2	No. 2
7.	Front Wheels.....	Disassemble to lubricate each 6000 miles [9,600 km.]	As required			Wheel Bearing Lubricant	No. 2	No. 2
8.	Transmission and Transfer Case.....	(Check each 1000 miles Change each 10,000 miles)	6 pts. 5 pts. 2,8 ltrs.			GL-4	SAE 90	SAE 80
9.	Differentials	(Check each 1000 miles Change each 10,000 miles)	2 ½ pts. 2 pts. 1,2 ltrs.			GL-4	SAE 90	SAE 90
10.	Front..... Rear.....		3 pts. 2 ¼ pts. 1,3 ltrs.			GL-4**	SAE 90	SAE 90
11.	Distributor	Each 1000 miles Each 1000 miles Each 1000 miles Each 1000 miles	Several Drops One drop One drop Sparingly			Engine Oil	Same as engine Same as engine Same as engine Soft	
	Oil.....					Engine Oil		
	Wick.....					Engine Oil		
	Pivot.....					Engine Oil		
	Cam.....					Grease		
12.	Air Cleaner.....	Each 2000 miles	1 ½ pt. 1 pt. 0,6 ltrs.			Engine Oil	Same as engine	
13.	Generator.....	Each 1000 miles	2 to 4 drops			Engine Oil	Same as engine	
14.	Engine.....	Change each 2000 miles	5*** qts. 4 ¼ qts. 4,7 ltrs.					

Not lower than 32°F. [0°C.]  
use SAE 30 or  
10W-30

As low as 10°F. [-12°C.]  
use SAE 20, 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or  
5W-20

\*For frequency of lubrication under field or industrial use, see Par. B-38.

\*\*For Power-Lok differential use only Willys Power-Lok Differential Oil, Part No. 94557.

\*\*\*When oil filter is changed at the same time, add one quart [1 ltr.].

## LUBRICATION SPECIFICATIONS

Model L6-226 4x4

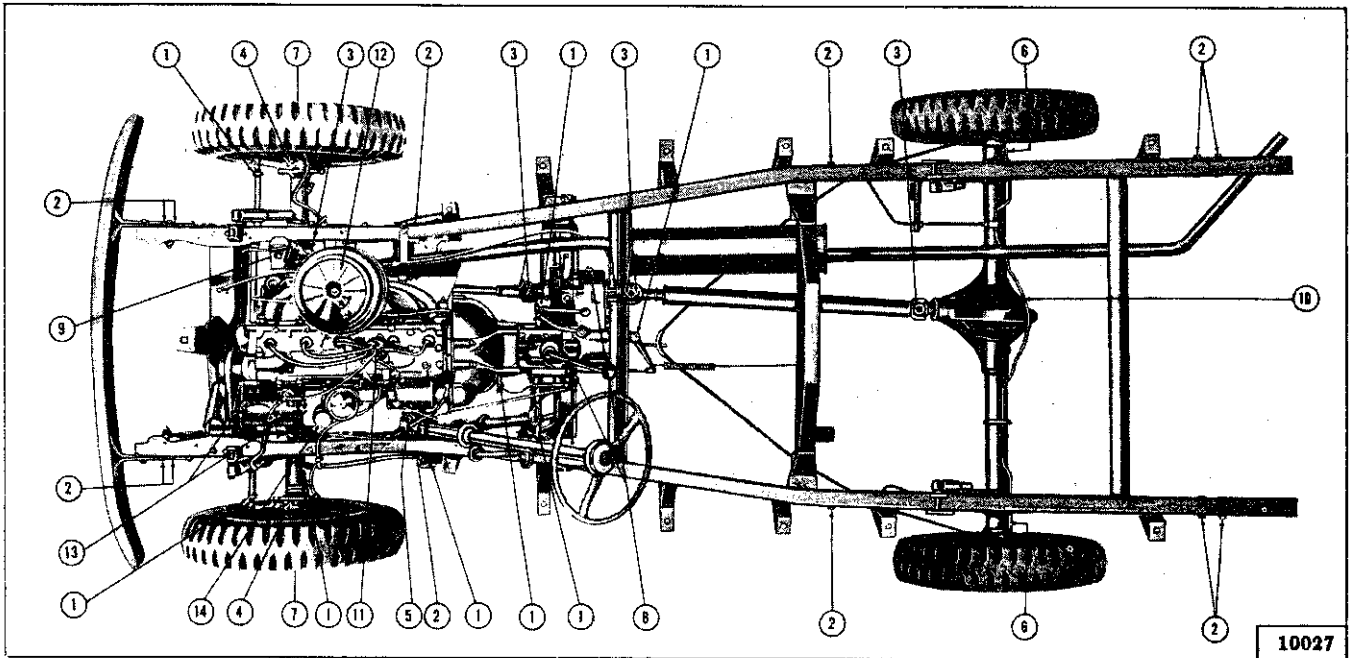


FIG. 2—LUBRICATION CHART — MODEL L6-226 4x4

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY* 1000 miles = 1.600 km.	QUANTITY			LUBRICANT	
			U.S.	Imperial	Metric	TYPE	GRADE
1.	Chassis Bearings	Each 1000 miles	As required			Chassis Lubricant	Summer   Winter
2.	Spring Shackle Bushings	With lube fittings: Each 1000 miles	As required			Chassis Lubricant	No. 1   No. 0
	Spring Pivot Bolt Bushings	Without lube fittings: No lubrication					No. 1   No. 0
3.	Universal Joints	Each 1000 miles	As required			Universal Joint Lubricant	No. 1   No. 0
4.	Propeller Shaft	Check each 1000 miles	As required			Universal Joint Lubricant	No. 1   No. 0
	Front Axle Shaft	Change each 12,000 miles 19,200 km.					
5.	Steering Gear	Check each 1000 miles	As required			GL-4	SAE 90   SAE 90
6.	Rear Wheels	Sparingly each 1000 miles	As required			Wheel Bearing Lubricant	No. 2   No. 2
7.	Front Wheels	Disassemble to lubricate each 6000 miles 9,600 km.	As required			Wheel Bearing Lubricant	No. 2   No. 2
8.	Transmission and Transfer Case	Check each 1000 miles Change each 10,000 miles	6 pts.	5 pts.	2.8 ltrs.	GL-4	SAE 90   SAE 80
9.	Differentials						
10.	Front	Check each 1000 miles	2 1/2 pts.	2 pts.	1.2 ltrs.	GL-4	SAE 90   SAE 90
	Rear	Change each 10,000 miles	3 pts.	2 1/4 pts.	1.3 ltrs.	GL-4**	SAE 90   SAE 90
11.	Distributor						
	Oiler	Each 1000 miles	Several Drops			Engine Oil	Same as engine
	Wick	Each 1000 miles	One drop			Engine Oil	Same as engine
	Pivot	Each 1000 miles	One drop			Engine Oil	Same as engine
	Cam	Each 1000 miles	Sparingly			Grease	Soft
12.	Air Cleaner	Each 2000 miles	1 1/4 pt.	1 pt.	0.6 ltrs.	Engine Oil	Same as engine
13.	Generator	Each 1000 miles	2 to 4 drops			Engine Oil	Same as engine
14.	Engine	Change each 2000 miles	5***qts.	4 1/4 qts.	4.7 ltrs.		

Not lower than 32°F. [0°C.]  
use SAE 30 or  
10W-30

As low as 10°F. [-12°C.]  
use SAE 20, 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or  
5W-20

\*For frequency of lubrication under field or industrial use, see Par. B-38.

\*\*For Powr-Lok differential use only Willys Powr-Lok Differential Oil, Part No. 94557.

\*\*\*When oil filter is changed at the same time, add one quart [1 ltr.].

## LUBRICATION SPECIFICATIONS

## Model L6-226 4x2

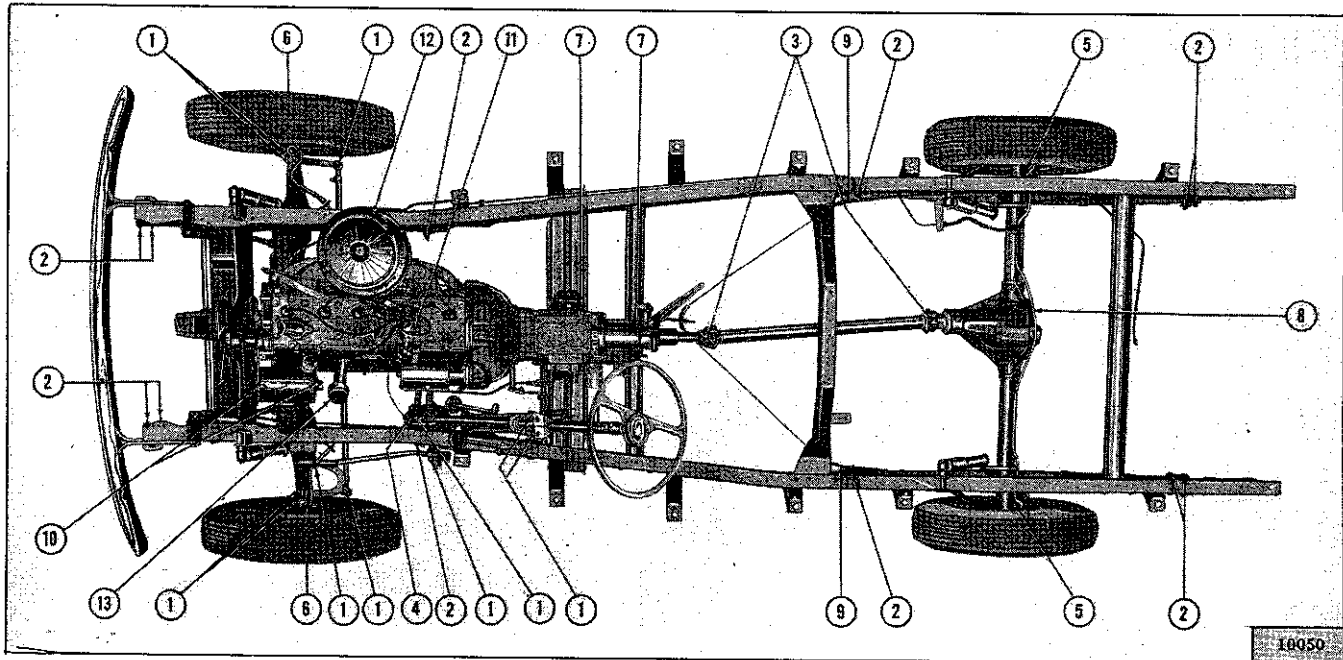


FIG. 3—LUBRICATION CHART — MODEL L6-226 4x2

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY 1000 miles = 1.600 km.	QUANTITY			LUBRICANT		
			U.S.	Imperial	Metric	TYPE	GRADE	
							Summer	Winter
1.	Chassis Bearings.....	Each 1000 miles			As required	Chassis Lubricant	No. 1	No. 0
2.	Spring Shackle Bushings... Spring Pivot Bolt Bushings.	(With lube fittings: Each 1000 miles Without lube fittings: No lubrication)			As required	Chassis Lubricant	No. 1	No. 0
3.	Universal Joints.....	Each 1000 miles			As required	Universal Joint Lubricant	No. 1	No. 0
4.	Steering Gear.....	Check each 1000 miles			As required	GL-4	SAE 90	SAE 90
5.	Rear Wheels.....	Sparingly each 1000 miles			As required	Wheel Bearing Lubricant	No. 2	No. 2
6.	Front Wheels.....	Disassemble to lubricate each 10,000 miles			As required	Wheel Bearing Lubricant	No. 2	No. 2
7.	Transmission..... Overdrive.....	Check each 1000 miles Change each 10,000 miles	2 1/2 pts. 1 pt.	2 pts. 3/4 pt.	1.2 ltrs. 0.5 ltrs.	GL-4 GL-4	SAE 90 SAE 90	SAE 80 SAE 80
8.	Differential.....	Check each 1000 miles Change each 10,000 miles	2 pts.	1 3/4 pts.	1.0 ltrs.	GL-4*	SAE 90	SAE 90
9.	Hand Brake Cable.....	Disassemble to lubricate each 10,000 miles			As required	Graphite Grease	Light	
10.	Generator.....	Each 1000 miles			2-4 drops	Engine Oil	Same as engine	
11.	Distributor Oiler..... Wick..... Pivot..... Cam.....	Each 1000 miles Each 1000 miles Each 1000 miles Each 1000 miles			Several drops One drop One drop Sparingly	Engine Oil Engine Oil Engine Oil Grease	Same as engine Same as engine Same as engine Soft	
12.	Air Cleaner.....	Change each 2000 miles	1 1/4 pts.	1 pt.	0.6 ltrs.	Engine Oil	Same as engine	
13.	Engine.....	Change each 2000 miles	5** qts.	4 1/4 qts.	4.7 ltrs.			

Not lower than 32°F. [0°C.]  
use SAE 30 or  
10W-30

As low as 10°F. [-12°C.]  
use SAE 20, 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or  
5W-20

\*For Powr-Lok differential use only Willys Powr-Lok Differential Oil, Part No. 94557.

\*\*When oil filter is changed at the same time, add one quart [1 ltr.].

## LUBRICATION SPECIFICATIONS

## Model F4-134 4WD

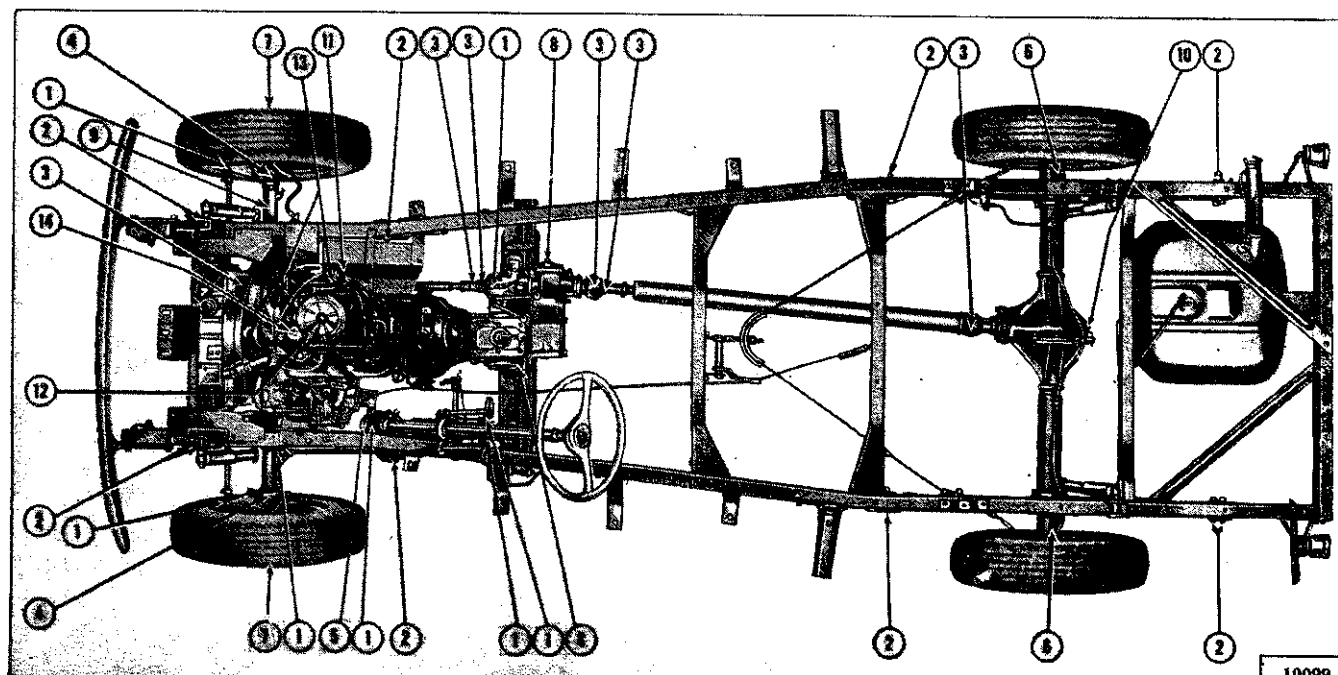


FIG. 4—LUBRICATION CHART — MODEL F4-134 4WD

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY* 1000 miles = 1.600 km.	QUANTITY			LUBRICANT		
			U.S.	Imperial	Metric	TYPE	GRADE	
							Summer	Winter
1.	Chassis Bearings.....	Each 1000 miles	As required			Chassis Lubricant	No. 1	No. 0
2.	Spring Shackle Bushings... Spring Pivot Bolt Bushings	{ With lube fittings: Each 1000 miles Without lube fittings: No lubrication	As required			Chassis Lubricant	No. 1	No. 0
3.	Universal Joints.....	Each 1000 miles	As required			Universal Joint Lubricant	No. 1	No. 0
4.	Propeller Shaft..... Front Axle Shaft.....	{ Check each 1000 miles Change each 12,000 miles [19,200 km.]	As required			Universal Joint Lubricant	No. 1	No. 0
5.	Steering Gear.....	Check each 1000 miles	As required			GL-4	SAE 90	SAE 90
6.	Rear Wheels.....	Sparingly each 1000 miles	As required			Wheel Bearing Lubricant	No. 2	No. 2
7.	Front Wheels.....	Disassemble to lubricate each 6000 miles [9,600 km.]	As required			Wheel Bearing Lubricant	No. 2	No. 2
8.	Transmission and Transfer Case.....	{ Check each 1000 miles Change each 10,000 miles	6 1/2 pts.	5 1/4 pts.	3,7 ltrs.	GL-4	SAE 90	SAE 80
9.	Differentials.....							
10.	Front..... Rear.....	{ Check each 1000 miles Change each 10,000 miles	2 1/2 pts. 3 pts.	2 pts. 2 1/4 pts.	1,2 ltrs. 1,3 ltrs.	GL-4 GL-4**	SAE 90 SAE 90	SAE 90 SAE 90
11.	Distributor.....	Each 1000 miles				Engine Oil	Same as engine	
	Wick.....	Each 1000 miles				Engine Oil	Same as engine	
	Pivot.....	Each 1000 miles				Engine Oil	Same as engine	
	Cam.....	Each 1000 miles				Grease	Soft	
12.	Air Cleaner.....	Each 2000 miles	1 1/2 pt.	1 pt.	0,6 ltrs.	Engine Oil	Same as engine	
13.	Generator.....	Each 1000 miles				Engine Oil	Same as engine	
14.	Engine.....	Change each 2000 miles	4***qts.	3 1/4 qts.	3,8 ltrs.			

Not lower than 32°F. [0°C.]  
use SAE 30 or 10W-30

As low as 10°F. [-12°C.]  
use SAE 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or 5W-20

\*For frequency of lubrication under field or industrial use, see Par. B-38.

\*\*For Power-Lok differential use only Willys Power-Lok Differential Oil, Part No. 94557.

\*\*\*When oil filter is changed at the same time, add one quart [1 ltr.].

## LUBRICATION SPECIFICATIONS

## Model F4-134 4x4

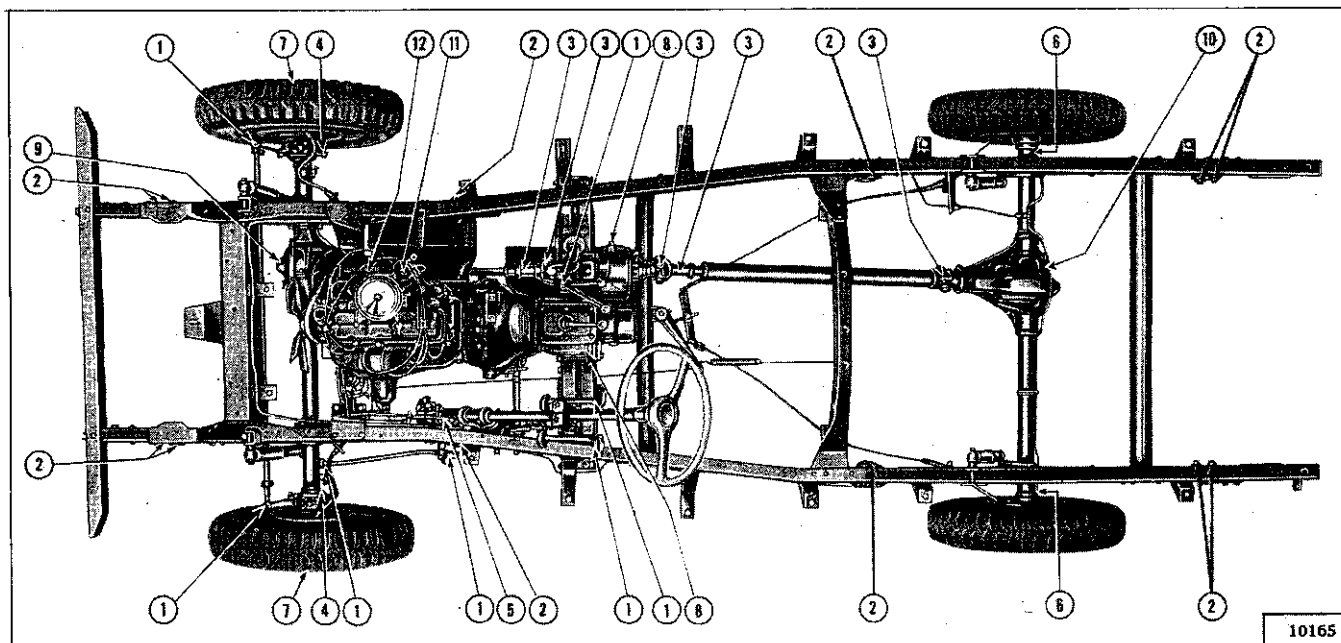


FIG. 5—LUBRICATION CHART — MODEL F4-134 4x4

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY* 1000 miles = 1.600 km.	QUANTITY			LUBRICANT		
			U.S.	Imperial	Metric	TYPE	GRADE	
							Summer	Winter
1.	Chassis Bearings.....	Each 1000 miles		As required		Chassis Lubricant	No. 1	No. 0
2.	Spring Shackle Bushings..... Spring Pivot Bolt Bushings..	(With lube fittings: Each 1000 miles Without lube fittings: No lubrication)		As required		Chassis Lubricant	No. 1	No. 0
3.	Universal Joints..... Propeller Shaft..... Front Axle Shaft.....	Each 1000 miles Check each 1000 miles Change each 12,000 miles [19,200 km.]		As required As required		Universal Joint Lubricant Universal Joint Lubricant	No. 1 No. 1	No. 0 No. 0
5.	Steering Gear.....	Check each 1000 miles		As required		GL-4	SAE 90	SAE 90
6.	Rear Wheels.....	Sparsingly each 1000 miles		As required		Wheel Bearing Lubricant	No. 2	No. 2
7.	Front Wheels.....	Disassemble to lubricate each 6000 miles [9,600 km.]		As required		Wheel Bearing Lubricant	No. 2	No. 2
8.	Transmission and Transfer Case.....	(Check each 1000 miles Change each 10,000 miles)	6 1/2 pts.	5 1/2 pts.	3,7 ltrs.	GL-4	SAE 90	SAE 80
9.	Differentials							
10.	Front..... Rear.....	(Check each 1000 miles Change each 10,000 miles)	2 1/2 pts. 3 pts.	2 pts. 2 1/4 pts.	1,2 ltrs. 1,3 ltrs.	GL-4 GL-4**	SAE 90 SAE 90	SAE 90 SAE 90
11.	Distributor							
	Oil..... Wick..... Pivot..... Cam.....	Each 1000 miles Each 1000 miles Each 1000 miles Each 1000 miles		Several Drops One drop One drop Sparsingly		Engine Oil Engine Oil Engine Oil Grease	Same as engine Same as engine Same as engine Soft	
12.	Air Cleaner.....	Each 2000 miles	1 1/4 pt.	1 pt.	0,6 ltrs.	Engine Oil	Same as engine	
	Generator.....	Each 1000 miles		2 to 4 drops		Engine Oil	Same as engine	
	Engine.....	Change each 2000 miles	4***qts.	3 1/2 qts.	3,8 ltrs.			

Not lower than 32°F. [0°C.]  
use SAE 30 or  
10W-30

As low as 10°F. [-12°C.]  
use SAE 20, 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or  
5W-20

\*For frequency of lubrication under field or industrial use, see Par. B-38.

\*\*For Powr-Lok differential use only Willys Powr-Lok Differential Oil, Part No. 94557.

\*\*\*When oil filter is changed at the same time, add one quart [1 ltr.].



## LUBRICATION SPECIFICATIONS

## Model F4-134 4x2

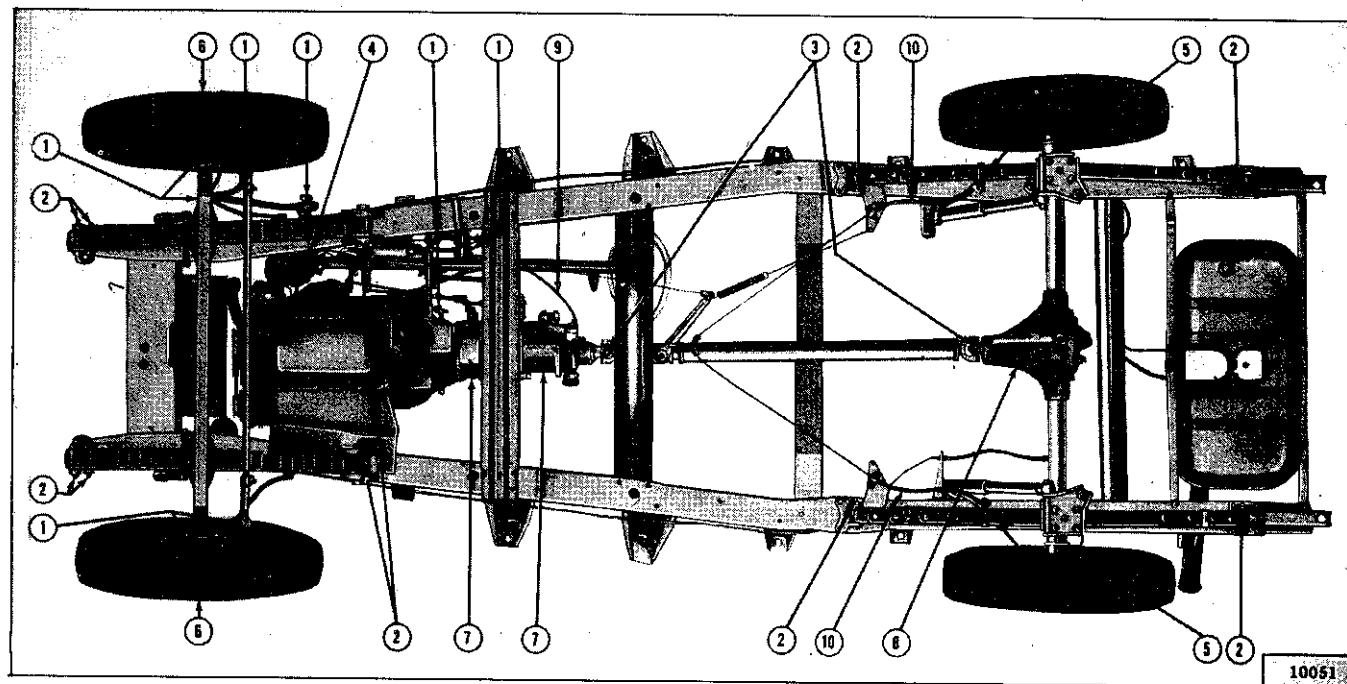


FIG. 6—LUBRICATION CHART — MODEL F4-134 4x2

Chart No.	ITEM TO BE LUBRICATED	FREQUENCY 1000 miles = 1,600 km.	QUANTITY			LUBRICANT		
			U.S. Imperial Metric			TYPE	GRADE	
							Summer	Winter
1.	Chassis Bearings.....	Each 1000 miles	As required			Chassis Lubricant	No. 1	No. 0
2.	Spring Shackle Bushings... Spring Pivot Bolt Bushings.	{ With lube fittings: Each 1000 miles { Without lube fittings: No lubrication	As required			Chassis Lubricant	No. 1	No. 0
3.	Universal Joints.....	Each 1000 miles	As required			Universal Joint Lubricant	No. 1	No. 0
4.	Steering Gear.....	Check each 1000 miles	As required			GL-4	SAE 90	SAE 90
5.	Rear Wheels.....	Sparingly each 1000 miles	As required			Wheel Bearing Lubricant	No. 2	No. 2
6.	Front Wheels.....	Disassemble to lubricate each 10,000 miles	As required			Wheel Bearing Lubricant	No. 2	No. 2
7.	Transmission..... Overdrive.....	{ Check each 1000 miles { Change each 10,000 miles	1 1/2 pts.	1 1/4 pts.	0.8 ltrs.	GL-4	SAE 90	SAE 80
			3/4 pt.	5/8 pt.	0.4 ltrs.	GL-4	SAE 90	SAE 80
8.	Differential.....	{ Check each 1000 miles { Change each 10,000 miles	2 pts.	1 1/4 pts.	1.0 ltrs.	GL-4*	SAE 90	SAE 90
9.	Speedometer Cable.....	Disassemble to lubricate each 12,000 miles [19,200 km.]	As required			Graphite Grease	Light	
	Hand Brake Cable.....	Disassemble to lubricate each 10,000 miles	As required			Graphite Grease	Light	
	Generator.....	Each 1000 miles	2-4 drops			Engine Oil	Same as engine	
	Distributor							
	Oil.....	Each 1000 miles	Several drops			Engine Oil	Same as engine	
	Wick.....	Each 1000 miles	One drop			Engine Oil	Same as engine	
	Pivot.....	Each 1000 miles	One drop			Engine Oil	Same as engine	
	Cam.....	Each 1000 miles	Sparingly			Grease	Soft	
	Air Cleaner.....	Change each 2000 miles	1 1/4 pts.	1 pt.	0.6 ltrs.	Engine Oil	Same as engine	
	Engine.....	Change each 2000 miles	4** qts.	3 1/2 qts.	3.8 ltrs.			

Not lower than 32°F. [0°C.]  
use SAE 30 or  
10W-30

As low as 10°F. [-12°C.]  
use SAE 20, 20W,  
10W-30, or 10W-20

As low as -10°F. [-23°C.]  
use SAE 10W,  
10W-30, or 10W-20

Lower than -10°F. [-23°C.]  
use SAE 5W or  
5W-20

\*For Power-Lok differential use only Willys Power-Lok Differential Oil, Part No. 94557.

\*\*When oil filter is changed at the same time, add one quart [1 ltr.].

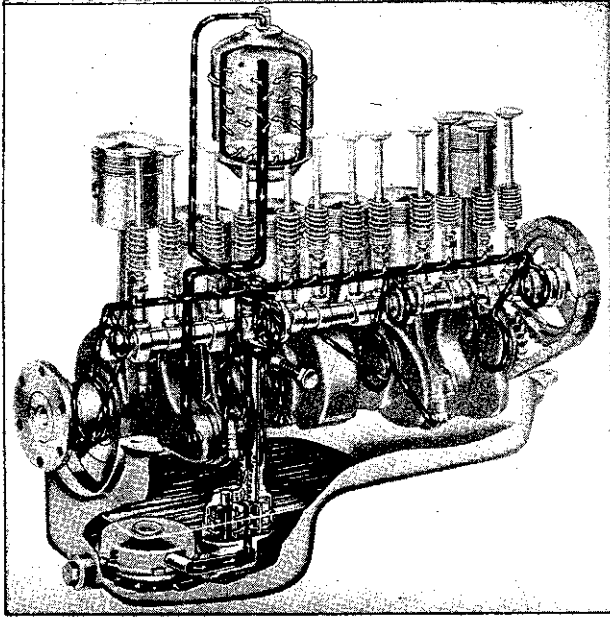


FIG. 7—L6-226 ENGINE LUBRICATION SYSTEM

gear applications. GL4 is recommended in the Lubrications Specifications tables for transmissions, differentials (except Powr-Lok differentials) and steering gears. The proper SAE grade of GL4 should be selected to correspond with climatic conditions.

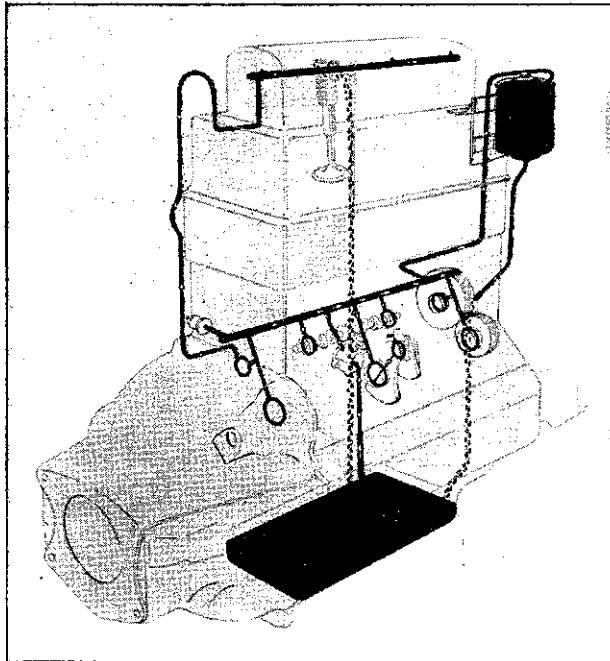


FIG. 8—F4-134 ENGINE LUBRICATION SYSTEM

#### B-4. Engine Lubricating System

The engine is pressure lubricated by a gear type oil pump driven by a spiral gear on the camshaft. Oil is drawn through a floating, screened intake to prevent the recirculation of any sediment or water that might accumulate in the oil pan. Engine lubri-

cation is shown in Figs. 1 and 2. Maximum oil pressure in the system is limited by an oil pressure relief valve located on the oil pump of the F4-134 engine and in the cylinder block of the L6-226 engine. See Par. D-122 and E-65.

#### B-5. DETAIL LUBRICATION REQUIREMENTS

##### B-6. Initial Lubrication

When a new vehicle is placed in service or an engine is overhauled, the engine oil should be changed after the first 500 miles [800 km.] of operation and again after an additional 1500 miles [2,400 km.]. The oil filter should be cleaned and the element replaced after the first 2000 miles [3,200 km.] of operation. For all other vehicle lubrication, follow the instructions given in the remainder of this section of this manual.

During the run-in period, until the piston rings have become seated, oil consumption in the engine is usually greater than that considered normal for proper lubrication. As much as 4000 miles [6,400 km.] of operation may be required to properly seat the rings and decrease oil consumption to normal. Do not overfill the crankcase as excess oil will be rapidly dissipated. Under no conditions should an oil heavier than SAE 20W be used during the summer or SAE 10W during the winter for the first 500 miles [800 km.] when an engine is new or has been rebuilt.

##### B-7. Engine Crankcase

The oil in the crankcase should be changed after each 2000 miles [3,200 km.] of normal service, or more often under any of the following exceptions. Change engine oil more frequently depending on type and quality of oil used, severity of operating conditions, and if vehicle is driven short distances in cold weather or allowed to idle excessively.

Always drain while crankcase oil is hot as suspended dirt and contaminants will more likely be held in suspension and, therefore, drain out more completely.

- Position drain receptacle under plug.
- Remove drain plug using correct size wrench. Be careful of hot oil.
- Clean drain plug. Inspect and replace gasket if deteriorated.
- When oil has drained, replace and tighten drain plug.
- Check for presence of excess water in the oil that might indicate an internal leak from the cooling system.

##### B-8. Lubrication Fittings

Each 1000 miles [1,600 km.] clean each lubrication fitting indicated by No. 1 on Lubrication Charts. Use a pressure gun to lubricate. Be sure that grease channels are open to provide complete lubrication of bearing surfaces. In some cases it may be necessary to replace the lubrication fitting. In extreme cases it may be necessary to disassemble and clear plugged channels.

##### B-9. Spring Shackles and Pivot Bolts

All spring shackles and spring pivot bolts are shown as No. 2 on the Lubrication Charts, but

some of these points will not have lubrication fittings. Where there is no lubrication fitting at one of these points, indicating a silent bloc bushing has been installed, that point is not to be lubricated. Where there are lubrication fittings at the spring shackles or pivot bolts lubricate at each fitting with a pressure gun every 1000 miles [1.600 km.].

#### **B-10. Propeller Shaft Universal Joints**

The propeller shaft universal joints and slip joints are equipped with lubrication fittings. These should be lubricated each 1000 miles [1.600 km.] using a hand compressor.

#### **B-11. Front Axle Shaft Universal Joints and King Pin Bearings**

All 4-wheel drive front axle shaft universal joints and the front axle king pin bearings are enclosed in the steering knuckle housings. Check the lubricant level in the housings each 1000 miles [1.600 km.] to maintain it at fill plug level. Once each year or at each 12,000 miles [19.200 km.] remove the shafts. Thoroughly clean the universal joints and housings and refill the housings with universal joint lubricant. Use No. 1 for summer and No. 0 for winter.

#### **B-12. Steering Gear**

Check the lubricant level in the steering gear housing at each 1000 miles [1.600 km.] to be sure that the lubricant is at fill plug opening level. Should lubricant be required, fill the housing slowly with a hand compressor. Do not overlook replacing the fill plug.

#### **B-13. Front Wheel Bearings**

Seasonally or at each 6000 miles [9.600 km.] remove the front wheels and repack the bearings with wheel bearing grease. Work the grease into the cage holding the rollers.

#### **B-14. Rear Wheel Bearings**

The rear wheel bearings are equipped with lubrication fittings with a vent opening through the housings above each fitting. Lubricate each 1000 miles [1.600 km.]. Use a hand compressor and wheel bearing grease, forcing the grease through each lubrication fitting until it flows from the vent. Vent should be kept clear of obstruction or grease will back up into the brakes. Do not add grease after it flows from the vent for it may be forced through the wheel keyway onto the outside of the wheel and possibly onto the brake linings.

#### **B-15. Transmission**

Check the transmission lubricant level at each regular 1000-mile lubrication and add lubricant to the level of the fill plug hole.

Drain and refill the transmission each 10,000 miles [16.000 km.]. To drain the oil from the transmission case, unscrew the drain plug in the lower right side of the case. Replace the drain plug and remove the fill plug in the right side of the case. Pour in lubricant to the level of the fill plug hole and replace the fill plug.

On those model L6-226 4x2 vehicles equipped with a conventional transmission, there is a second fill plug located in the side of the long rear bearing

retainer. Check the fluid level in the rear bearing retainer whenever the transmission housing is checked. Add GL4 lubricant as required.

For those models equipped with transmission overdrive, see Par. B-17.

#### **B-16. Transfer Case**

Drilled passages are provided for oil circulation between transmission and transfer case housings on all 4-wheel-drive vehicles. All transfer cases should be serviced separately even though the lubricant circulates to the transmission.

Lubricate the transfer case in the same manner and use the same lubricants as outlined above for the transmission.

#### **B-17. Overdrive**

On those vehicles equipped with an overdrive, use GL4 lubricant grade SAE 90 in summer and SAE 80 in winter in both transmission and overdrive units. If these grades cannot be obtained, use SAE 40 engine oil.

The overdrive case drain plug is located in the lower rear part of the case and the filler hole on the right hand side. The overdrive case should be filled first with oil, then fill the transmission because the lubricant passes between the two units. The overdrive should be checked for lubricant level every 1000 miles [1.600 km.].

#### **B-18. Overdrive Control**

If so equipped, once each year disconnect the overdrive control cable from the overdrive and pull the cable from the conduit to lubricate the conduit with light graphite grease.

#### **B-19. Front and Rear Axle Differentials**

Check the level in each unit every 1000 miles [1.600 km.] to be sure that they are filled to the level of the fill plug openings. Drain and refill the housings every 10,000 miles [16,000 km.]. Do not mix different types of lubricants. Use only flushing oil or light engine oil to clean out the housings. Do not use water, steam, kerosene, or gasoline for flushing.

#### **B-20. Powr-Lok Nonslip Differential**

Some vehicles may be equipped with the Powr-Lok nonslip differential as optional equipment. For identification of this unit, see Par. N-17. The Powr-Lok differential requires a special lubricant and ordinary multipurpose gear lubricants *must not* be used. Use only Willys Powr-Lok Differential Oil, Part No. 94557, furnished in pint cans.

Powr-Lok differential may be cleaned only by disassembling the unit and wiping with clean rags. Do not flush the Powr-Lok unit.

#### **B-21. Distributor**

The distributor shaft is lubricated through an oiler mounted on the side of the housing. Place three or four drops of light engine oil in the oiler each 1000 miles [1.600 km.]. Also place one drop of light engine oil on the wick located on the top of the shaft, which is made accessible by removing the rotor arm. Sparingly apply soft grease to the breaker arm cam. Place a drop of oil on the breaker arm pivot.

**B-22. Generator**

Oilers are provided at each end of the generator. Place two to four drops of light engine oil in each oiler every 1000 miles [1.600 km.].

**B-23. Oil Filter**

After the initial change specified in Par. B-6, clean the oil filter and replace the element at each 6000 miles [9.600 km.] of normal vehicle use. Oil filter servicing should be performed at the same time as one of the regular engine oil changes. At that time be sure to add one quart [1 ltr.] to the engine oil change requirement.

**B-24. Oil Bath Air Cleaner**

The oil bath air cleaner thoroughly removes all dust from the air before it enters the carburetor. For efficient operation, the cleaner must be serviced at regular intervals.

Care of the air cleaner is extremely vital to the life of the engine. Pay particular attention to the amount of dust and dirt in the air taken into the engine through the air cleaner. When dirt is not noticeable in the air, service the air cleaner each 2000 miles [3.200 km.]. Whenever the air is noticeably dusty (for example when the vehicle is driven on secondary roads or through fields) then service the air cleaner more frequently. Under extreme continually dusty and dirty conditions where the vehicle operates in clouds of dust and dirt, service the air cleaner daily.

To service the air cleaner, unscrew the eye bolt on the oil cup clamp and remove the oil cup. Scrape all dirt from inside the oil cup and clean the inside surface with cleaning solution. Refill with new oil of the same viscosity as is recommended for the engine crankcase to the oil level bead and install the cup securely to the cleaner body with the attaching clamp.

Air cleaner body (less oil cup) should be removed from the vehicle and cleaned at weekly intervals or oftener.

To do this, loosen hose clamp, and remove hose from the cleaner.

Detach breather hose from the fitting on the cleaner. Remove the two wing screws and lift cleaner from vehicle. Agitate the cleaner body thoroughly in cleaning solution to clean the filtering element. Dry element with air hose but do not re-oil.

Install the cleaner body in the vehicle with the two wing screws and attach hoses securely.

Carefully check the hose clamps and fittings on the breather hoses at frequent intervals. Loose connections will affect proper operation of the crankcase ventilating system.

**B-25. Speedometer Cable**

Remove the speedometer cable from the tube every 12,000 miles [19.200 km.]. Clean it thoroughly and coat it with a good quality light graphite grease.

**B-26. Hand Brake Control**

Lubricate all bearings and clevis pins of the hand brake control each 1000 miles [1.600 km.]. Lubricate the brake cables inside the conduits each 12,000 miles [19.200 km.].

To lubricate the cables, clean the exposed surfaces.

Then remove the rear wheels and disconnect the conduits from the brake backing plates by removing the retaining clips. Remove the clips from the front end of the conduits and move the conduits forward until the parts of the cables ordinarily covered are exposed. Apply graphite grease liberally to the cables. Reassemble the cables.

Lubricate all moving parts of the control lever every 1000 miles [1.600 km.]. Lubricate the slide mechanism through the side plate slots with chassis lubricant. Lubricate all other pivot points with SAE 30 motor oil.

**B-27. Choke Control**

Lubricate the exterior surfaces of the flexible conduit with penetrating oil every 1000 miles [1.600 km.].

**B-28. Exhaust Manifold Heat Control Valve**  
Some L6-226 engines.

On those L6-226 engines which have an exhaust manifold heat control valve, lubricate the valve shaft and bushing at each 1000-mile lubrication. Place a few drops of penetrating oil at each end of the shaft where it passes through the manifold. Then move the valve up and down a few times to work the oil into the bushing.

**B-29. Brake Master Cylinder**

Check the fluid level in the brake master cylinder every 1000 miles [1.600 km.]. Wipe clean the top of the filler cap and also the housing area around it. Replenish the brake fluid to a level  $\frac{1}{2}$ " [1,3 cm.] below the top of the fill hole. Use only heavy-duty brake fluid conforming to specification SAE-70-R1. Be sure to handle the brake fluid in clean dispensers and containers that will not introduce even the slightest amount of other liquids. Replace and tighten the filler cap.

**B-30. Clutch Linkage**

Lubricate all friction points of the clutch linkage every 1000 miles [1.600 km.]. Use the same grade of engine oil as used for the engine. Failure to lubricate these points will result in premature wear; the links will wear and the holes in the mating parts will become elongated.

**B-31. Windshield Wiper**

On those models where the windshield wiper blades are operated through pulleys and cables, once a year coat the cables with light grease and oil the pulley bearings with engine oil.

On those models where the wiper blades are operated by rigid arms, regularly lubricate all pivot points of the assembly with engine oil.

**B-32. Body**

Often attention is not given to the proper lubrication of the body hardware. However, when this is done it should be called to the owner's attention to avoid soiled clothing. A few drops of oil should be placed on the door, tail gate and hood hinges. Use greaseless lubricant on the door dovetails and striker plates. Put a little oil on the door check hinge pins. The hood catch, hand brake ratchet, cowl ventilator control, and hood and tail gate props should be oiled for easy operation. Whenever necessary, the door glass regulator mechanism should be lubricated sparingly.

**B-33. PARTS REQUIRING NO LUBRICATION****B-34. Water Pump Bearing, Clutch Release Bearing**

The water pump and clutch release bearings are prelubricated for life when manufactured and cannot be relubricated.

**B-35. Starting Motor Bearings**

The starting motor bearings are lubricated at assembly to last between normal rebuild periods.

**B-36. Springs**

The vehicle springs should not be lubricated. At assembly the leaves are coated with a long lasting special lubricant which is designed to last the life of the springs. Spraying with the usual mixture of oil and kerosene has a tendency to wash this lubricant from between the leaves, making it necessary to relubricate often to eliminate squeaking.

**B-37. Shock Absorbers**

Hydraulic direct-action shock absorbers are permanently sealed and require no periodic lubrication service. Also the shock absorber mounting bushings are not to be lubricated.

**B-38. LUBRICATION REQUIREMENTS FOR OFF-HIGHWAY OPERATION**

Adequate lubrication becomes increasingly important when vehicles are used in off-highway operation. Under these conditions all operating parts of both the engine and chassis are subjected to unusual pressures. At the same time such operation is usually under abnormal dust and dirt conditions making additional precautions necessary. The importance of correct lubrication for the conditions of operation cannot be overestimated.

**B-39. Engine Oil**

Use only a nationally advertised brand of MS grade oil. No definite change interval can be recommended because of the great variety of uses and conditions of use. It is important, however, that the oil in a new or rebuilt engine be changed at the first eight or ten hours of operation and for heavy, dusty work every fifty hours thereafter. Watch the condition of the oil closely and should it become contaminated, change it immediately.

**B-40. Chassis Lubrication**

The period of lubrication depends entirely upon the type of work being done. Using the specified interval of 1000 miles [1.600 km.] recommended for highway travel as a guide, lubricate at safe intervals required for the type of operation being done. Under the extremely dusty conditions lubricate these points daily. Be sure to force enough lubricant into each fitting to force out the old lubricant which might be contaminated with grit and which would cause rapid wear if allowed to remain.

Do not place lubricant on the various ball and socket joints or pivot points of the lift linkage as dirt will accumulate to form an abrasive mixture. It is best to simply wipe these parts clean with a cloth.

**B-41. Oil Filter**

Dismantle and clean the filter and replace the element at the end of the first 100 hours of service. Element replacement at each 150 hours of additional service should provide satisfactory filtering. However, under extreme conditions this may not be true. The condition of the oil will indicate the condition of the filter element. Should the oil quickly become discolored and show evidence of contamination, change the element without delay.

**B-42. Air Cleaner**

The care of the air cleaner is extremely important at all times. When operation is under dusty conditions, clean and refill the cleaner reservoir to the full mark daily. When servicing the unit, use a suitable tool to dislodge dirt clinging to the bottom and sides of the intake passage within the body of the cleaner.

**B-43. Front Axle Shaft Universal Joints**

The front axle steering knuckle pivot pins (king pins) are supported in housings at each end of the front axle which also enclose the front axle shaft universal joints. Maintain the lubricant level in the housings even with the filler plug openings at all times. For off-highway use remove the universal joints twice yearly, thoroughly clean both the housings and joints with a suitable solvent, and refill the housings to the fill plug opening levels with the correct lubricant as shown in the Lubrication Charts.

**B-44. Transmission and Transfer Case**

The combined capacity of the two housings is small for economy, making it important that the lubricant be changed at regular intervals. For off-highway use drain both housings every 300 hours of operation and refill to the fill plug opening levels.

**B-45. Front and Rear Axle Differentials**

Because of the higher pressures developed in the axle assemblies with heavy-duty operation drain, flush, and refill the differential assemblies each 300 hours of operation. Use only flushing oil or light engine oil to clean out the housings (except Powr-Lok differentials).

**B-46. Power Take-Off and Pulley Drive**

Check the lubrication level each time the vehicle is lubricated to be sure that the housings are filled to filler opening levels. Should the units be used often drain and refill the housings each 300 hours of operation.

**B-47. Power Take-Off Propeller Shaft Universal Joints**

For average use the original factory lubrication will last the life of the vehicle. Should the power

take-off be used often, however, for long periods of time, disassemble and repack the joints once each year.

When repacking, guard against overfilling for hydraulic action may damage the boots. The capacity of each joint is one fluid ounce.

**B-48. Centrifugal Governor**

Check the oil level in the governor housing at each vehicle lubrication. Use the same seasonal grade oil as is used in the engine and change oil at each engine oil change. Do not fill the housing above the level indicating plug opening. Keep the vent in the filler plug open at all times.

## ENGINE TUNE-UP

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Battery.....	C-2	Ignition Circuits.....	C-17
Carburetor.....	C-10, C-13	Ignition Timing.....	C-6
Compression.....	C-4	Pre-ignition.....	C-20
Distributor.....	C-16	Spark Plugs.....	C-3
Fuel Pump.....	C-9, C-14	Trouble Shooting.....	C-12
Fuel Supply.....	C-15	Vacuum.....	C-18
Fuel System.....	C-8	Valve Tappet Clearance.....	C-5
Heat Control Valve.....	C-7	Valve Timing.....	C-19

## C-1. GENERAL

To secure the best performance and dependability, the engine should receive a tune-up each 6000 miles [9.600 km.] or at the end of each 250 hours of off-the-road use. A definite sequence should be followed as outlined in Fig. 9. It is essential that the carburetor receive attention at the last of this sequence as it is impossible to satisfactorily adjust the carburetor until all other units are correctly adjusted.

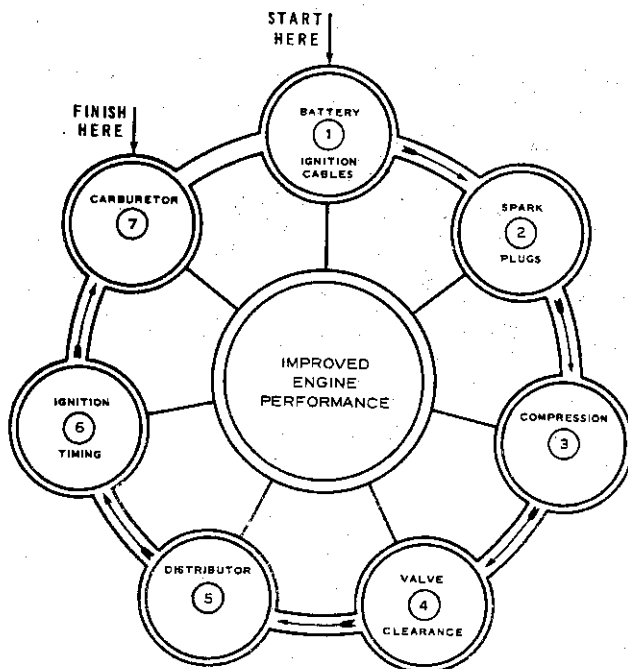


FIG. 9—ENGINE TUNE-UP SEQUENCE

## C-2. Clean and Check Battery

- Check the level of the electrolyte in each battery cell. Add distilled water as necessary to bring to proper level.
- Check the specific gravity of the electrolyte in each cell of the battery with a hydrometer. A variation of 25 points or more between cells indi-

cates that the battery requires attention.

c. Clean the battery terminals and cable connectors. Prepare a strong solution of baking soda and water and brush it around the terminals to remove any corrosion that is present. The cell caps must be tight and their vents sealed to prevent cleaning solution entering the cells. After cleaning, coat the terminals with heavy grease.

d. Check the tightness of the terminal screws to ensure good electrical connections.

e. Check the tightness of the negative ground cable connection at the frame to ensure a good ground connection.

f. Test for capacitance by placing a 150-ampere load (roughly equivalent to the load imposed by operating the starting motor) for 15 seconds and at the same time measuring voltage drop across cells with a voltmeter. The voltage drop for each pair of adjacent cells should not be more than  $1\frac{1}{2}$  volts with a 6-volt battery or 3 volts with a 12-volt battery.

g. Be sure the engine ground strap connection, Fig. 10, is tight at both connections.

h. If the battery is not satisfactory, install a fully-charged battery to allow completion of the tune-up.

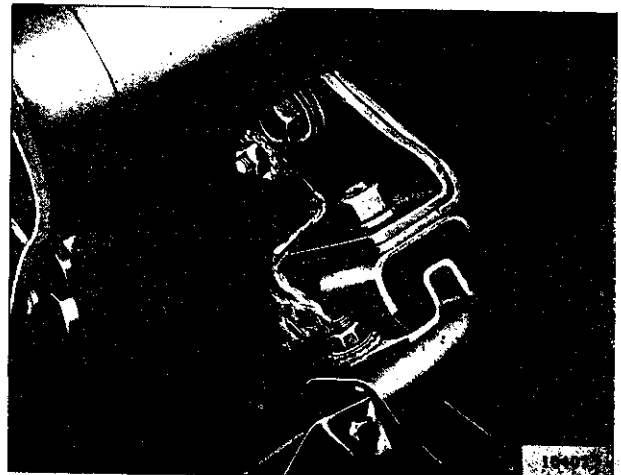


FIG. 10—ENGINE GROUND STRAP

### C-3. Clean and Adjust Spark Plugs

- a. Using a spark plug wrench, loosen each spark plug one or two turns to break loose any carbon deposits on the plug base.
- b. Blow out all carbon and dirt from each spark plug hole with compressed air. If compressed air is not available, start the engine and accelerate to 1000 rpm. to blow out the carbon and dirt. Stop the engine.
- c. Remove the plugs carefully with a spark plug wrench.
- d. Inspect the plugs for serviceability. Especially check for burned and eroded electrodes, blistering of porcelain at the firing tip, cracked porcelain, or black deposits and fouling. These conditions indicate that the plugs have not been operating at the correct temperature. Replace bad or worn plugs in sets.
- e. Measure the electrode gap of each plug with a wire gauge as shown in Fig. 11. Adjust each electrode gap to the specified gap by bending the outer electrode mounted in the plug shell.
- f. Reinstall plugs. Torque with a wrench to proper setting.

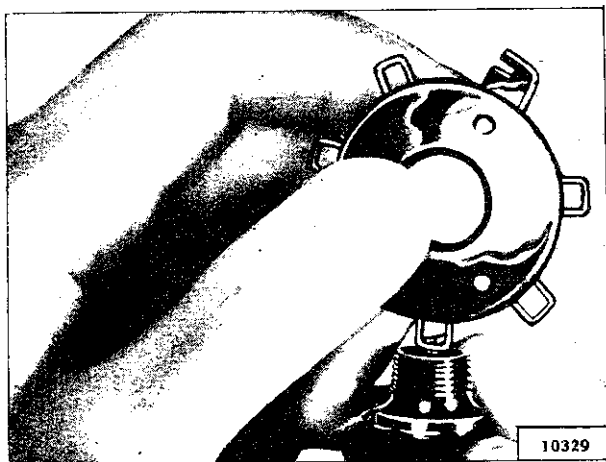


FIG. 11—SETTING SPARK PLUG GAP

### C-4. Check Compression

Take compression readings with a compression gauge, as shown in Fig. 12, at each cylinder while cranking the engine with the starter motor. Allow only four compression strokes at each cylinder and record only the first and fourth readings. Interpret the reading as follows:

- a. When pressure quickly comes up to specified pressure and is uniform between all cylinders within 10 psi. [0,7 kg-cm<sup>2</sup>] it indicates that the engine is operating normally with satisfactory seating of rings, valves, valve timing, etc.
- b. When pressure is low on the first stroke and builds up to less than specified pressure it indicates compression leakage usually attributable to rings or valves. To determine which is responsible, pour  $\frac{1}{2}$  oz. [15 cm<sup>3</sup>] of tune-up oil into each cylinder. Allow a few minutes for the oil to leak down past the rings and then again test compression. If compression pressures improve over the first test, the trouble is probably worn piston rings and bores. If

compression pressures do not improve, the trouble is probably caused by improper valve seating. If this condition is noticed on only two cylinders that are adjacent, it indicates that there is a possible gasket leak between these cylinders. If inspection of the spark plugs from these cylinders disclosed fouling or surface cracking of electrodes, gasket leakage is probable.

c. When pressure is higher than normal it indicates that carbon deposits in the combustion chamber have reduced the side of the chamber enough to give the effect of a raised compression ratio. This will usually cause pinging under load that cannot be satisfactorily corrected by timing. The carbon must be cleaned out of the engine to correct this trouble.

d. Pressures not uniform—Faulty valves, a leaking head gasket, or worn valve guides should be suspected.

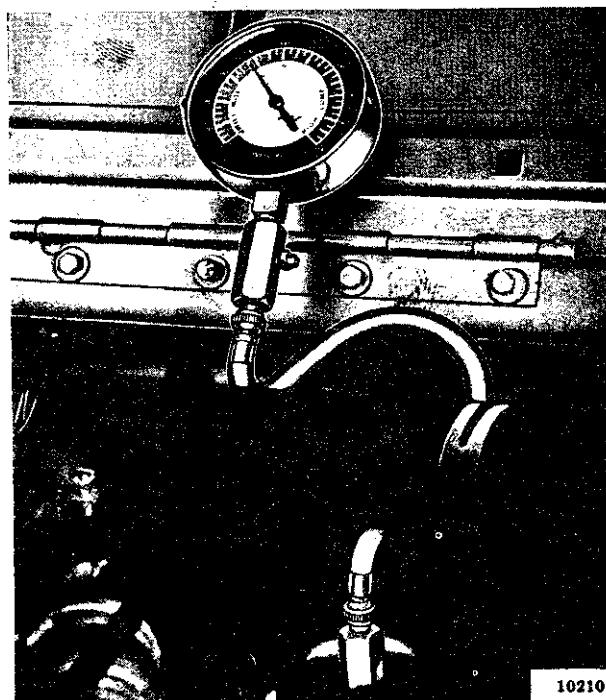


FIG. 12—COMPRESSION AND VACUUM GAUGE

### C-5. Check Valve Tappet Clearance

Before making this check, use a torque wrench to torque all the cylinder head bolts. Refer to Section D or E for the proper torquing sequence and torque specifications. If the cylinder head bolts are not torqued correctly, incorrect valve adjustments may result. Adjust all valves with the engine cold.

a. F4-134 engine. Adjust the intake valves to .018" [0,457 mm.] clearance and the exhaust valves to .016" [0,406 mm.] clearance.

b. L6-226 engine. Adjust both the intake and exhaust valves to .014" [0,356 mm.] clearance. See paragraph D-16 for information on access to the valve chamber. Following is the recommended order for adjusting tappets at room temperature. Tappets are numbered consecutively starting from the front of the engine.



## TAPPET ADJUSTMENT SEQUENCE

With Valves No. 1 and 3 fully raised — Adjust Tappets No. 10 and 12  
 With Valves No. 8 and 9 fully raised — Adjust Tappets No. 4 and 5  
 With Valves No. 2 and 6 fully raised — Adjust Tappets No. 7 and 11  
 With Valves No. 10 and 12 fully raised — Adjust Tappets No. 1 and 3  
 With Valves No. 4 and 5 fully raised — Adjust Tappets No. 8 and 9  
 With Valves No. 7 and 11 fully raised — Adjust Tappets No. 2 and 6

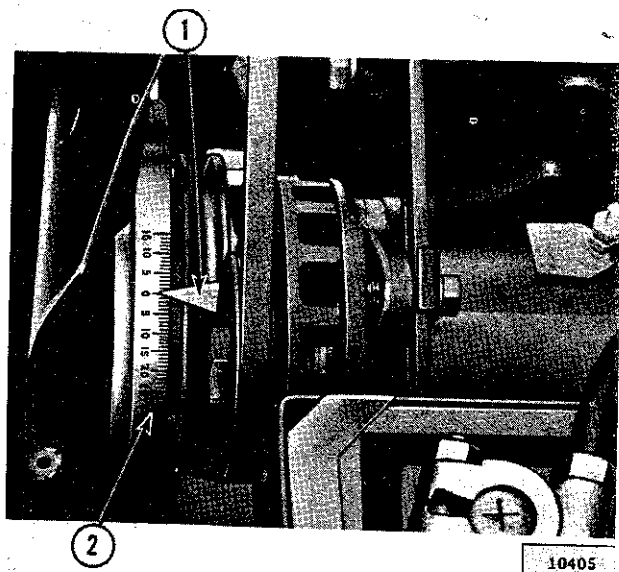


FIG. 13—L6-226 ENGINE TIMING MARKS

1—Timing Pointer

2—Vibration Damper

**C-6. Check Ignition Timing**

If a neon timing light is available, use it to check ignition timing following the instructions of the timing light manufacturer.

In the absence of a timing light, remove No. 1 spark plug and turn the engine over until No. 1 piston is on compression stroke as indicated by air being forced from No. 1 spark plug opening. Turn the engine slowly until the 5° BTC mark on the timing gear cover is in alignment with the notch on the crankshaft pulley as shown in Fig. 14 for the F4-134 engine, or the 5° mark on the vibration damper is in alignment with the timing pointer as shown in Fig. 13 for the L6-226 engine. When the piston is positioned 5° BTC, timing is correctly set if the distributor rotor arm points

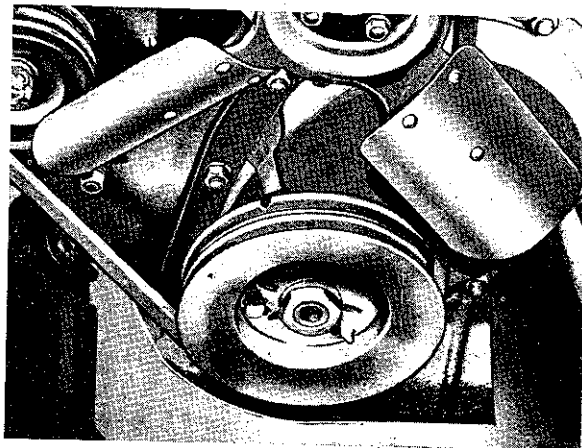


FIG. 14—F4-134 ENGINE TIMING MARKS

to No. 1 terminal in the distributor cap and the distributor points are just ready to break. (See Fig. 17.) Timing may be altered by loosening the distributor. Turn the distributor clockwise to advance the timing and counterclockwise to retard the timing. Do not overtighten the mounting clamp screw.

**C-7. Check Manifold Heat Control Valve**

Late L6-226 engines are equipped with a manifold heat control valve that should be checked with each tune-up for satisfactory operation. Refer to Par. B-28 and Section G.

**C-8. Check Fuel System**

- Check the fuel filtering screen and the fuel pump bowl.
- Check all fuel line connections to guard against leakage.
- Service the air cleaner. Follow the procedure given in Par. B-24.

**C-9. Check Fuel Pump Pressure**

Fuel pump pressure is important, for low pressure will seriously affect engine operation and high pressure will cause excessive fuel consumption and possibly flood the carburetor. Should there be any doubt of normal operation, check the pressure with a gauge as shown in Fig. 15.

The minimum and maximum allowable pressures are for the F4-134 engine 2½ to 3¾ lb. [0,176 a 0,264 kg-cm<sup>2</sup>] and for the L6-226 engine 3½ to 5½ lbs. [0,246 a 0,386 kg-cm<sup>2</sup>].

Also check the condition of the vacuum line rubber connector.


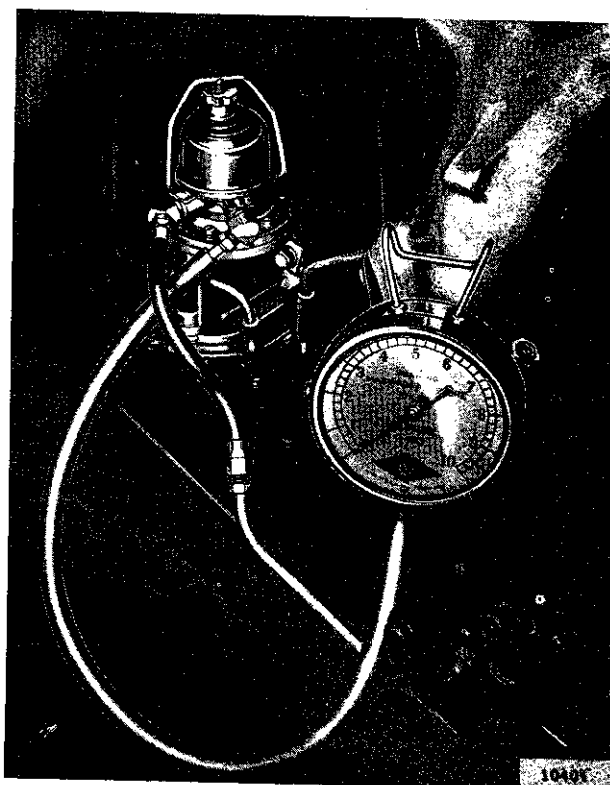


FIG. 15—CHECKING FUEL PUMP PRESSURE

### C-10. Adjust Carburetor

Start the engine and allow it to run until normal operating temperature is reached. Set the engine idle speed with adjusting screw, Fig. 16, No. 1, to provide the standard idle of 600 rpm. for the F4-134 engine and 550 rpm. for the L6-226 engine. Adjust low speed adjusting screw No. 2 to provide smooth idle.

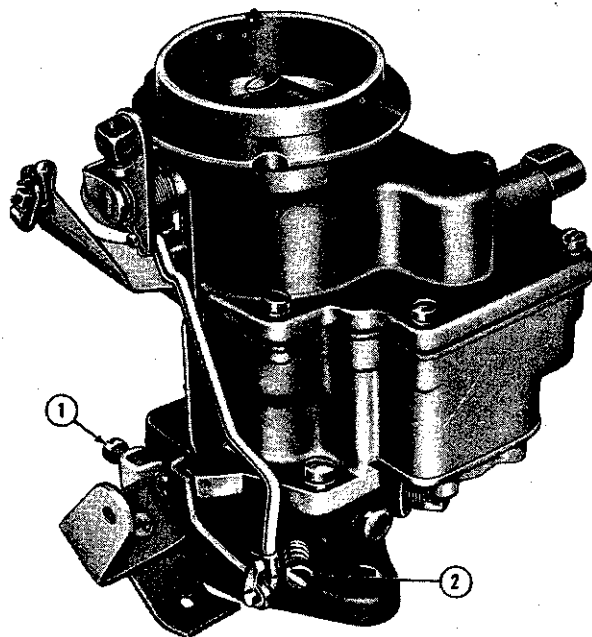

10408

FIG. 16—CARBURETOR

### C-11. Test Vehicle

Adjust the spark timing to the point where faint "ping" can be heard under full-throttle, low-speed conditions.

### C-12. TROUBLE SHOOTING

If the tune-up sequence has been carefully followed and the carburetor overhauled but performance is still not satisfactory, isolate the reason using the following trouble shooting procedures.

#### C-13. Carburetor

Investigate for flooding or vapor lock before checking fuel system components. Flooding, or enriching the fuel-air mixture, can be caused by an inoperative air cleaner. The air cleaner should be checked and serviced first, if necessary. This condition can also be caused by the choke being connected so that it will not open fully. The lever should be connected to the choke rod in the fully-open position when the choke control is pushed all the way in. Incorrect float level, poorly seating float valve, and other carburetor conditions may be responsible and for this reason, the carburetor should be fully checked. Refer to Section F.

### C-14. Fuel Pump

The fuel pump should be checked for pressure, volume, and vacuum as follows:

- a. Test for pressure as described in Par. C-9. If the pressure is low, the fuel line may be restricted. Disconnect the tank line at the flexible tube. Put the end of the flexible tube in a can of gasoline and retest. If the pressure is still too low, repair or replace the fuel pump.
- b. Test for volume as a pump may build up sufficient pressure but fail to produce sufficient volume. Turn down the carburetor line fitting and, with the tank line connected, pump out a couple of strokes to be sure the pump is primed. Using a half-pint bottle or similar measure, pump  $\frac{1}{2}$  pint [0,24 lt.] of fuel by cranking the engine with the starter motor. Count the strokes necessary to fill the measure. If more than 20 strokes are required, the fuel pump is inefficient, the tank line is leaking air, or the fuel supply is restricted.
- c. To test the pump for vacuum, disconnect the tank line and connect a vacuum gauge in its place. Crank the engine and observe the vacuum reading. If less than 8 inches [20,8 cm.] of mercury [Hg] the pump is at fault. If 10 inches [25,4 cm.] or more, check the fuel line.

### C-15. Fuel Supply

Should there be inadequate fuel supply to the fuel pump, the following should be checked:

- a. Check for a faulty tank vent. Occasionally a stuck vacuum relief valve in the fuel tank cap (or cap vent in a nonpressure fuel tank cap) is mistaken for a fuel line obstruction. If the pump vacuum is satisfactory but the volume is insufficient, remove the tank cap and repeat the volume test. If the volume is then satisfactory, replace the pressure cap or clear the vent hole of the nonpressure cap.
- b. Check for an air leak in the tank-to-pump fuel line. If the fuel line is leaking air, this may be determined by disconnecting the line at the tank and connecting a vacuum gauge at that end. Connect the tank line at the pump making sure that the joint is tight. Repeat the vacuum test of Par. C-14c. If the vacuum gauge reads lower than it did when the pump was tested, the line probably has an air leak. If the vacuum is the same, the trouble is probably caused by a restriction in the line or tank.
- c. Check for restrictions. Disconnect the line at the pump and blow air under pressure through it. This will frequently dislodge an obstruction in the line. If air goes through freely and there is no evidence of the fuel line being dented or flattened anywhere along its length, the line may be considered clear and the restriction is probably in the tank. Apply air pressure to the fuel line fitting on the tank with the tank cap removed. Any obstruction will usually be dislodged from the fuel pickup line inside the tank. If necessary, push a soft wire into this fitting to clear the fuel pick up.

### C-16. Distributor

Remove the distributor cap and inspect for cracks, carbon runners, corrosion, or excessive burning of the contacts inside the cap. Inspect the rotor for

the same conditions. If these conditions are found, replace the cap or rotor or both. If flaws in the cap or rotor are invisible, they will show up in testing the secondary circuit. Par. I-67. Check the points for burning and build-up of metal. If build-up does not exceed  $\frac{1}{64}$ " [0,4 mm.] file or grind the points clean, bend into perfect closing alignment, and gap to .020" [0,508 mm.].

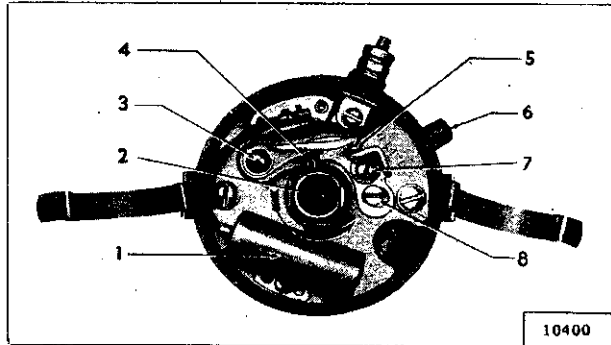


FIG. 17—DISTRIBUTOR

- |                     |                         |
|---------------------|-------------------------|
| 1—Condenser         | 5—Distributor Points    |
| 2—Lubricating Wick  | 6—Oiler                 |
| 3—Breaker Arm Pivot | 7—Adjustment Lock Screw |
| 4—Breaker Cam       | 8—Adjusting Screw       |

### C-17. Ignition Circuits

Check the primary circuit according to the procedure given in Par. I-66. Check the secondary circuit according to the procedure given in Par. I-67.

### C-18. Vacuum Check

Disconnect the vacuum line fitting from the head just below the carburetor and install the proper adapter. Connect a vacuum gauge to the adapter and start the engine. Connect a tachometer from the distributor primary terminal to ground and set the engine speed at the correct rpm. (F4-134 engine: 600 rpm.; L6-222 engine: 550 rpm.). Observe the vacuum reading and interpret as follows:

- a. A steady reading from 18 to 21 inches [46 a 63 cm.] of mercury [Hg] is a normal reading indicating that valve and spark timing, valve seating, and piston ring sealing are all satisfactory.
- b. A steady but below normal reading indicates a condition common to all cylinders such as a leak at the carburetor gasket, late ignition or valve timing, or uniform piston ring and bore wear.
- c. A slowly fluctuating or drifting reading indicates that the idle mixture is incorrect and the cause should be looked for in the fuel system.
- d. A rhythmic pulsating reading is caused by a condition affecting one or more cylinders, but not all, and indicates leaky valve, gasket blowby, restricted intake port, or an electrical miss.
- e. An intermittent pulsating reading is caused by an occasional malfunction such as a sticking valve (all valves may be erratic in operation if the valve springs are weak), and electrical miss caused by insufficient distributor point tension or low coil voltage coupled with inconsistent spark plug gaps or fouled plugs, or dirt in the fuel system finding

its way into passages of critical size or valve seats in the carburetor.

- f. A normal reading that quickly falls off (with engine running at 2000 rpm.) indicates exhaust back pressure caused by a restriction in the exhaust system.

### C-19. Factors Affecting Valve Timing

Valve timing may be off because of improper installation or excessive wear of timing gears, excess crankshaft or camshaft end play, or incorrect valve tappet clearance adjustment.

**NOTE:** References to timing gears applies to F4-134 models. This same information also applies to the timing chain and sprockets for L6-222 models.

- a. Correct meshing of the timing gears is critical because it determines the timing of the valves in relation to the positions of the pistons. Occasionally an engine will be found which has been reassembled with the timing gears not properly meshed. A displacement of one tooth from the correct position will advance or retard the valve timing  $7\frac{1}{2}^{\circ}$ . If compression and vacuum readings are consistently low and no other causes can be found, check the timing gears.

- b. Excessive wear of the timing gears creates backlash which tends to retard valve timing. Excessive end play of the crankshaft or camshaft may add to this backlash. Check the gears for wear and the crankshaft and camshaft for correct end play.

- c. Since tappet clearance must be taken up by rotation of the cam before the valve can begin to open, improper clearance will affect valve timing seriously. Too little clearance will advance the valve opening and delay closing and, in the extreme case, prevent the valve from seating properly. Too much clearance will delay opening and advance closing, reducing both the time the valve is open and the size of the opening. Check for proper tappet clearance adjustment.

### C-20. Pre-ignition

Pre-ignition is caused by deposits in combustion chambers and on spark plug insulators. These deposits result from stop-and-go driving with low engine speeds or from excessive idling.

Spark plug fouling is the formation of these deposits on spark plug insulators. Failure of the spark plugs becomes evident as poor acceleration, engine roughness, and reduced vehicle top speed. Clean fouled spark plugs.

Carbon ping, carbon rattle, and deposit-induced pre-ignition are produced by carbon deposits in the combustion chambers. Carbon ping is usually audible during acceleration and can be reduced or eliminated by retarding ignition timing or removal of carbon. Carbon deposit rattle is audible upon deceleration and can be mistaken for a bearing knock or tappet maladjustment. It can be eliminated by removal of carbon.

Deposit induced pre-ignition occurs when the carbon deposits in the combustion chambers con-

tinue to glow after the power and exhaust cycles have been completed and is sometimes audible as carbon ping. Although the audible effects can sometimes be eliminated by use of fuels with greater antiknock qualities, the inaudible effects, such as engine roughness, may still remain. Unless deposit induced pre-ignition is eliminated by removal of carbon, serious damage, such as burned pistons can result.

The possibility of pre-ignition problems occurring can be eliminated or reduced by use of the following suggestions:

- a. Check carburetor and set float and metering rod to specifications.
- b. Adjust idle mixture to smoothest engine operation; then set engine idle to specified rpm.
- c. Torque spark plugs to specifications.
- d. Use hotter plugs if vehicle is used for slow driving.
- e. Use heavy-duty or detergent oil.
- f. Subject the vehicle to moderate-to-high-speed highway driving.

### **C-21. MECHANICAL FACTORS AFFECTING DISTRIBUTOR TIMING**

Difficulty in obtaining correct timing or irregularity of spark advance characteristics can be caused by the mechanical factors affecting the distributor described in paragraphs C-28 thru C-31.

### **C-22. Incorrect Installation of Oil Pump**

The relationship of the oil pump driven gear to the driven gear on the camshaft is critical because it determines the relationship between distributor rotor position and piston position. If the gears are meshed one tooth away from the correct position the distributor will be advanced or retarded 36°. With No. 1 piston at top dead center the distributor rotor should point downward and forward at about five o'clock. If it does not, remove and correctly install the oil pump as instructed in Par. D-107 and E-93.

### **C-23. Excess Gear Lash**

If the gear lash in the oil pump and distributor drive is excessive, the distributor timing and advance will be erratic. Due to the right-angle helical gear drive this lash consists of the combined effects of rotational lash and end play in both gears. Check timing gear lash and crankshaft and camshaft end play as described under the proper Engine Section.

### **C-24. Distributor Internal Faults**

Erratic timing and advance may be caused by such distributor internal troubles as excess bearing

clearance, worn cam, excess play or improper spring tension in the advance mechanism, etc. See Electrical Section for distributor test and rebuild procedures.

### **C-25. Timing Pointer Setting Incorrect**

#### **Model L6-226 Engines**

If satisfactory engine performance is not realized after carefully tuning the engine, the position of the timing pointer in relation to vibration damper calibration should be checked and corrected if necessary. This may be done with the cylinder head either removed (Par. C-26) or installed (Par. C-27).

### **C-26. With Cylinder Head Removed**

Mount and adjust a dial indicator so the top end of travel of No. 1 piston registers 0° on the indicator. Turn the crankshaft slowly clockwise until the needle on the indicator just starts to move from 0°; then mark the vibration damper at the resulting pointer indication. Turn the crankshaft counterclockwise until the indicator again starts to move after reaching the 0° indicator reading; mark the vibration damper at this second resulting pointer indication. Move the crankshaft until the pointer is exactly halfway between the two marks just scribed. The pointer should now point directly to the zero mark on the vibration damper. If not, without allowing the crankshaft to move, bend the pointer until it does point to zero.

### **C-27. With Cylinder Head Installed**

Remove the spark plugs and crank the engine until No. 1 piston is near top dead center (compression stroke). Then fill No. 1 cylinder with enough oil to bring the level to the bottom of the spark plug hole. Turn the crankshaft slowly until the oil just starts to recede from its highest level; mark the vibration damper at the resulting pointer indication. Turn the crankshaft counterclockwise until the oil again starts to recede after reaching the maximum level; mark the vibration damper at this second pointer indication. Move the crankshaft until the pointer is exactly halfway between the two marks just scribed. The pointer should now point directly to the zero mark on the vibration damper. If not, without allowing the crankshaft to move, bend the pointer until it does point to zero. Draw as much oil from the cylinder as possible with a suitable suction gun, then turn the engine a few revolutions with the starter to further clear the cylinder of oil. Oil removal must be thorough before the spark plugs are replaced, or engine damage may result when the first attempt is made to start the engine. Replace spark plugs.

**SERVICE DIAGNOSIS****Poor Fuel Economy**

- Ignition Timing Slow or Spark Advance Stuck
- Carburetor Float High
- Accelerator Pump Not Properly Adjusted
- High Fuel Pump Pressure
- Fuel Leakage
- Leaky Fuel Pump Diaphragm
- Loose Engine Mounting Causing High Fuel Level in Carburetor
- Low Compression
- Valves Sticking
- Spark Plugs Bad
- Spark Plug Cables Bad
- Weak Coil or Condenser
- Improper Valve Tappet Clearance
- Carburetor Air Cleaner Dirty
- High Oil Level in Air Cleaner
- Dragging Brakes
- Front Wheels Out of Alignment
- Tires Improperly Inflated
- Inaccurate Odometer
- Faulty Fuel Tank Cap
- Clogged Muffler or Bent Exhaust Pipe

**Lack of Power**

- Low Compression
- Ignition System (Timing Late)
- Improper Functioning Carburetor or Fuel Pump
- Fuel Lines Clogged
- Air Cleaner Restricted
- Engine Temperature High
- Improper Tappet Clearance
- Sticking Valves
- Valve Timing Late
- Leaky Gaskets
- Muffler Clogged
- Bent Exhaust Pipe

**Low Compression**

- Leaky Valves
- Poor Piston Ring Seal
- Sticking Valves
- Valve Spring Weak or Broken
- Cylinder Scored or Worn
- Tappet Clearance Incorrect
- Piston Clearance too Large
- Leaky Cylinder Head Gasket

**Burned Valves and Seats**

- Sticking Valves or too Loose in Guides
- Improper Timing
- Excessive Carbon Around Valve Head and Seat
- Overheating
- Valve Spring Weak or Broken
- Valve Tappet Sticking
- Valve Tappet Clearance Incorrect
- Clogged Exhaust System

**Valves Sticking**

- Warped Valve
- Improper Tappet Clearance

**Valves Sticking—Continued**

- Carbonized or Scored Valve Stems
- Insufficient Clearance Valve Stem to Guide
- Weak or Broken Valve Spring
- Valve Spring Cocked
- Contaminated Oil

**Overheating**

- Inoperative Cooling System
- Thermostat Inoperative
- Improper Ignition Timing
- Improper Valve Timing
- Excessive Carbon Accumulation
- Fan Belt too Loose
- Clogged Muffler or Bent Exhaust Pipe
- Oil System Failure
- Scored or Leaky Piston Rings

**Popping-Spitting-Detonation**

- Improper Ignition
- Improper Carburetion
- Excessive Carbon Deposit in Combustion Chambers
- Poor Valve Seating
- Sticking Valves
- Broken Valve Spring
- Tappets Adjusted too Close
- Spark Plug Electrodes Burned
- Water or Dirt in Fuel
- Clogged Lines
- Improper Valve Timing

**Excessive Oil Consumption**

- Piston Rings Stuck in Grooves, Worn or Broken
- Piston Rings Improperly Fitted or Weak
- Piston Ring Oil Return Holes Clogged
- Excessive Clearance, Main and Connecting Rod Bearings
- Oil Leaks at Gaskets or Oil Seals
- Excessive Clearance, Valve Stem to Valve Guide (Intake)
- Cylinder Bores Scored, Out-of-Round or Tapered
- Too Much Clearance, Piston to Cylinder Bore
- Misaligned Connecting Rods
- High Road Speeds or Temperature
- Crankcase Ventilator Not Operating

**Bearing Failure**

- Crankshaft Bearing Journal Out-of-Round
- Crankshaft Bearing Journal Rough
- Lack of Oil
- Oil Leakage
- Dirty Oil
- Low Oil Pressure or Oil Pump Failure
- Drilled Passages in Crankcase or Crankshaft Clogged
- Oil Screen Dirty
- Connecting Rod Bent

## TUNE-UP SPECIFICATIONS

		Metric
<b>Spark Plugs:</b>		
Make.....	Auto-Lite A-7 or Champion J-8	.....
Gap.....	.030"	0,762 mm.
<b>Torque:</b>		
L6-226.....	20 to 30 lb-ft.	2,8 a 4,1 kg-m.
F4-134.....	25 to 33 lb-ft.	3,4 a 4,6 kg-m.
<b>Distributor:</b>		
Rotation viewed from top.....	Counterclockwise	.....
Cam Angle.....	51°	.....
Point Gap.....	.020"	0,508 mm.
Arm Spring Tension.....	17 to 20 oz.	0,482 a 0,567 kg.
Wiring order and direction.....	Firing- Counterclockwise	.....
<b>Ignition Timing:</b>		
Marks.....	5° B + C	.....
Location:	5, IGN, or TC	.....
L6-226.....	Flywheel	.....
F4-134.....	Crankshaft Pulley	.....
<b>Compression Pressure Cranking:</b>		
L6-226.....	125-140 psi.	8,8 a 9,8 kg-cm <sup>2</sup>
F4-134.....	120-130 psi.	8,4 a 9,2 kg-cm <sup>2</sup>
<b>Valves:</b>		
<b>Tappet Clearance Cold:</b>		
<b>Intake:</b>		
L6-226.....	.014"	0,355 mm.
F4-134.....	.018"	0,457 mm.
<b>Exhaust:</b>		
L6-226.....	.014"	0,355 mm.
F4-134.....	.016"	0,406 mm.
Timing (Intake Opens).....	9° BTC	.....
<b>Engine Idle Speed Neutral:</b>		
L6-226.....	550 rpm.	.....
F4-134.....	600 rpm.	.....
<b>Firing Order:</b>		
L6-226.....	1-5-3-6-2-4	.....
F4-134.....	1-3-4-2	.....

## L6-226 ENGINE

## Contents

SUBJECT	PAR.
Assembly, Engine.....	D-91
Camshaft and Bearings.....	D-25, D-58, D-94
Clutch and Housing.....	D-88
Connecting Rods.....	D-15, D-37, D-106
Connecting Rod Bearings.....	D-51
Crankshaft.....	D-23, D-39, D-97
Crankshaft End Play.....	D-55
Crankshaft Filler Block.....	D-20, D-77
Crankshaft Main Bearings.....	D-46, D-97
Crankshaft Rear Oil Seal.....	D-75
Cylinder Block.....	D-32
Cylinder Bores.....	D-36
Cylinder Head.....	D-9, D-90, D-112
Disassembly, Engine.....	D-5
Flywheel.....	D-85
Ground Strap.....	D-3
Inspection and Repair.....	D-31

SUBJECT	PAR.
Manifold.....	D-6, D-114
Oil Filter.....	D-121
Oil Pan.....	D-10, D-84, D-110
Oil Pressure.....	D-123
Oil Pressure Relief Valve.....	D-30, D-99, D-122
Oil Pump.....	D-14, D-79, D-107
Oiling System.....	D-120
Pistons.....	D-15, D-37, D-105
Removal, Engine.....	D-4
Tappets and Cover.....	D-28, D-73, D-93
Timing Gears, Chain, and Cover.....	D-18, D-63, D-104
Valve Adjustment.....	D-117
Valves, Springs, and Guides.....	D-16, D-67
Vibration Damper.....	D-17, D-66, D-108
Water Pump.....	D-7, D-115

## D-1. GENERAL

The Willys engine Model L6-226, shown in Fig. 18, is used in Models L6-226 4WD, L6-226 4x4, and L6-226 4x2. It is a six-cylinder L-head engine of 226.2 cubic inch displacement and develops 105 brake horsepower at 3600 rpm.

The engine serial number is stamped near the left front corner of the cylinder block above the generator. The same engine serial number is also stamped on an engine plate on early models. This name plate is no longer used.

As a result of normal mass-production methods and in common with other engine manufacturers some engines are manufactured with oversized cylinder bores and/or undersize crankshaft journals. For L6-226 engines, such deviations are indicated by a code letter suffix to the engine serial number as follows:

- |  |
|--|
| <p><b>A</b> — .010" [0,254 mm.] undersize main and connecting rod bearings.</p> <p><b>N</b> — .020" [0,508 mm.] oversize pistons.</p> <p><b>AN</b> — Combination of A and N.</p> |
|--|

This engine is equipped with a fully counter-balanced crankshaft supported by four main bearings. Crankshaft end play is controlled by thrust flanges provided on the rear main bearing.

The cylinder block and crankcase are cast integrally, forming a rigidly reinforced unit. Special reinforcing at the tappet chamber, the oil pan mounting surface and at other important areas increases the strength of the block. The main bear-

ing caps are large in size to assure rigid support of the main bearings and crankshaft. Cup-type core hole plugs in the cylinder block decrease the possibility of coolant leakage at these points.


The engine is pressure lubricated. An oil pump, driven from the camshaft, forces the lubricant through the drilled passages in the crankshaft to efficiently lubricate the main and connecting rod bearings. Lubricant is also force fed to the camshaft bearings, tappets, timing gear chain and gears. Cylinder walls and piston pins are lubricated from spurt holes in the connecting rods.

The engine is provided with full length water jackets. The areas around the valves, cylinders and throughout the cylinder head are provided with passages, through which the coolant is circulated by a belt-driven pump. Circulation of the coolant is controlled by a thermostat in the cylinder head water outlet elbow on the cylinder head.

## D-2. Engine Supports

The engine is supported at its front end by two rubber insulators attached to the frame side rail brackets. It is supported at the rear at the transmission by two rubber insulators attached to the rear engine support cross member. This cross member is bolted to the frame side rails so that it can be dropped when removing the transmission.

The rubber insulators should be checked for separation and wear by jacking the power plant away from the frame, near the supports, while watching the action of the insulators. Vibration cannot be effectively controlled by separated or worn insulators and they should be replaced if faulty.

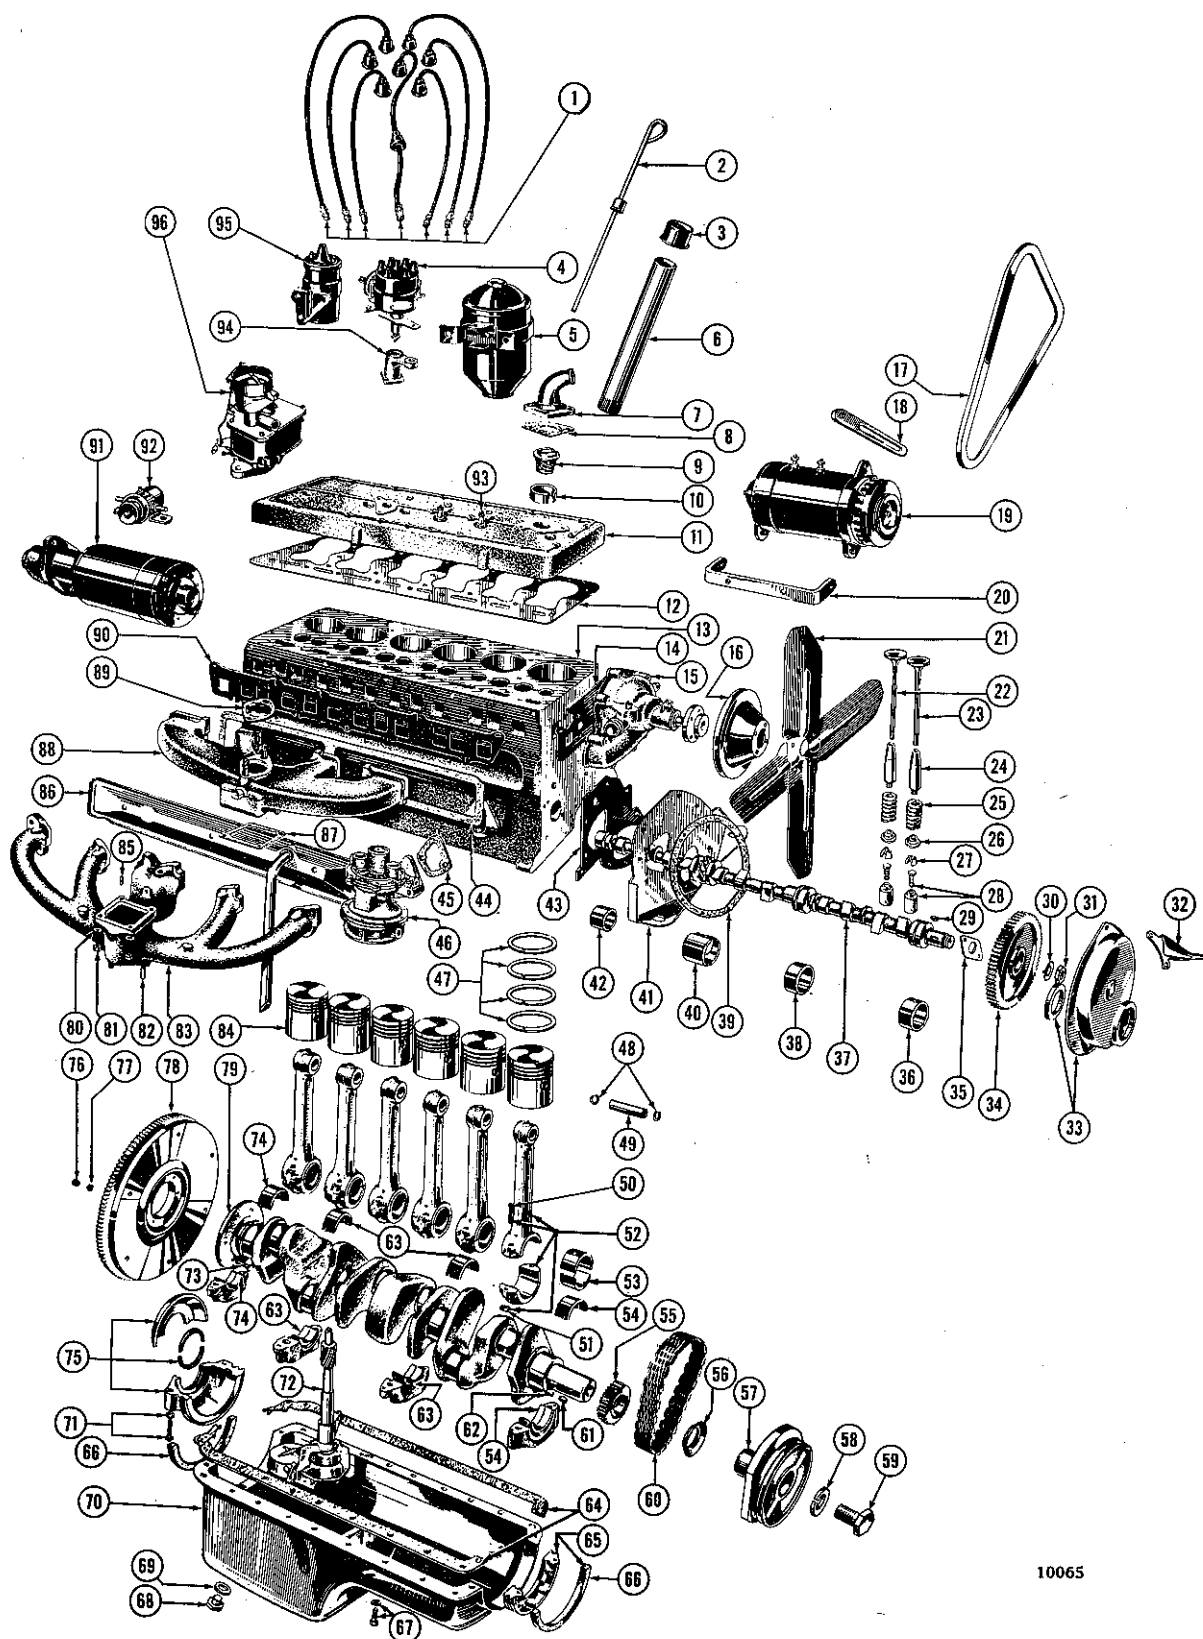

10065

FIG. 18—L6-226 ENGINE



## LEGEND FOR FIG. 18

- |                          |  |                                      |
|--------------------------|--|--------------------------------------|
| 1—Spark Plug Cables      | 33—Timing Chain Cover Assembly         | 65—Front Filler Block                |
| 2—Oil Level Indicator    | 34—Sprocket                            | 66—Gasket                            |
| 3—Oil Filler Cap         | 35—Thrust Plate                        | 67—Bolt and Lockwasher               |
| 4—Distributor            | 36—Front Bushing                       | 68—Drain Plug                        |
| 5—Oil Filter             | 37—Camshaft                            | 69—Gasket                            |
| 6—Oil Filler Tube        | 38—Front Intermediate Bushing          | 70—Oil Pan                           |
| 7—Water Outlet Elbow     | 39—Gasket                              | 71—Screw and Lockwasher              |
| 8—Gasket                 | 40—Rear Intermediate Bushing           | 72—Oil Pump                          |
| 9—Thermostat             | 41—Front Engine Plate                  | 73—Bolt                              |
| 10—Adapter Ring          | 42—Rear Bushing                        | 74—No. 4 Crankshaft Bearing          |
| 11—Cylinder Head         | 43—Gasket                              | 75—Oil Seal, Filler Block, and Guard |
| 12—Gasket                | 44—Gasket                              | 76—Nut                               |
| 13—Cylinder Block        | 45—Gasket                              | 77—Lockwasher                        |
| 14—Gasket                | 46—Fuel Pump                           | 78—Flywheel                          |
| 15—Water Pump            | 47—Piston Rings                        | 79—Crankshaft                        |
| 16—Water Pump Pulley     | 48—Retaining Ring                      | 80—Washer                            |
| 17—Generator Belt        | 49—Piston Pin                          | 81—Nut                               |
| 18—Adjusting Strap       | 50—Bolt                                | 82—Stud                              |
| 19—Generator             | 51—Nut                                 | 83—Exhaust Manifold                  |
| 20—Support Bracket       | 52—Connecting Rod Assembly             | 84—Piston                            |
| 21—Fan                   | 53—Connecting Rod Bearing              | 85—Stud                              |
| 22—Exhaust Valve         | 54—No. 1 Crankshaft Bearing            | 86—Valve Chamber Cover               |
| 23—Intake Valve          | 55—Crankshaft Sprocket                 | 87—Gasket                            |
| 24—Valve Guide           | 56—Oil Slinger                         | 88—Intake Manifold                   |
| 25—Valve Spring          | 57—Vibration Damper                    | 89—Insulator Gasket                  |
| 26—Valve Spring Retainer | 58—Washer                              | 90—Gasket                            |
| 27—Retainer Lock         | 59—Bolt                                | 91—Starting Motor                    |
| 28—Tappet Assembly       | 60—Timing Chain                        | 92—Solenoid                          |
| 29—Key                   | 61—Key                                 | 93—Spark Plug                        |
| 30—Lock Plate            | 62—Key                                 | 94—Distributor Adapter               |
| 31—Nut                   | 63—No. 2 and No. 3 Crankshaft Bearings | 95—Ignition Coil                     |
| 32—Timing Pointer        | 64—Gasket                              | 96—Carburetor                        |

**D-3. Engine Ground Strap**

To assure an effective ground to the chassis electrical circuits, a ground strap bridges the left front engine support to the chassis. The connections of this strap must be kept clean and tight for proper operation of lights, generator regulator, etc.

**D-4. Engine Removal**

- a. Drain the cooling system. Follow Par. H-3 instructions.
- b. Remove the hood from the hood hinges; also remove the radiator stay bars.
- c. Remove both the upper and lower radiator hoses. Remove any heater hoses.
- d. Remove the fan.
- e. Remove the radiator and shroud attaching screws and remove the radiator and shroud.
- f. Disconnect the battery negative ground cable.
- g. Disconnect wires from: temperature sender, oil pressure sender, starter, generator, coil, and secondary at distributor.
- h. Remove the air cleaner.
- i. Disconnect accelerator pedal linkage from bellcrank.
- j. Disconnect vacuum line from wiper motor.
- k. Disconnect fuel line from fuel pump and plug.
- l. Disconnect engine ground strap at front engine support.
- m. Disconnect clutch linkage.
- n. Disconnect exhaust pipe at manifold.
- o. Disconnect front engine supports.
- p. Attach a lifting sling to the head bolts and to a chain hoist or floor crane. Take up all slack.
- q. Remove bolts from bellhousing to rear engine plate.
- r. Raise the engine slowly while at the same time pull it forward until the clutch clears the bellhousing and dash panel.

**D-5. ENGINE DISASSEMBLY**

Engine disassembly is presented in the sequence to be followed when the engine is to be completely overhauled on an engine stand after re-

moval from the vehicle. Most of the operations of the procedure are also applicable separately with the engine in the vehicle, provided that wherever necessary the part of the engine to be worked on is first made accessible by removal of engine accessories or other engine parts.

When the disassembly operations are performed with the engine out of the vehicle, it is assumed, in this procedure, that all of the accessories have been removed prior to starting the disassembly and the oil has been drained.

In addition to the instructions covering operations for disassembling the engine out of the vehicle, special instructions are given to cover different operations required when disassembly is done with the engine installed.

Engine disassembly is covered in Par. D-6 through D-30.

**D-6. Remove Manifold**

Remove the nuts, plain washers, and retainers that attach the intake and exhaust manifold assembly to the cylinder block. Remove the manifolds and gasket from the cylinder block.

**D-7. Remove Water Pump**

Remove the bolts and lock washers that attach the water pump to the cylinder block. Remove the water pump.

**D-8. Remove Water Outlet Elbow**

Remove the nuts and lock washers that attach the water outlet elbow to the cylinder head and lift the elbow and thermostat assembly from the cylinder head.

**D-9. Remove Cylinder Head**

Remove the cylinder head bolts making sure to get the head bolt next to the distributor adapter location. Remove the cylinder head from the cylinder block. Remove and discard the cylinder head gasket. If the operations are being performed with the engine mounted on a stand, rotate the engine to the upside down position at this time.

**D-10. Remove Oil Pan**

Remove the bolts and lock washers that attach the oil pan to the cylinder block and remove the oil pan and gaskets. Discard the gaskets.

**D-11. Remount the Engine**

If the engine disassembly is to be performed using an engine stand, attach the engine stand brackets to the cylinder block oil pan flange to permit removal of the engine end plates or flywheel housing. Remove the mounting brackets that were attached to the end plates.

When the engine disassembly is being performed with the engine in the vehicle, suitable support must be provided to raise the engine, after the front engine mounting attaching nuts and washers are removed.

**D-12. Remove Clutch**

Remove four of the bolts and lock washers that attach the clutch assembly to the flywheel, leaving two opposed bolts to be backed out alternately until the clutch spring pressure is relieved. Then, support the clutch assembly with one hand while removing the two remaining bolts. Remove the clutch assembly. For information on disassembly, inspection, repair, and assembly of the clutch, refer to "Clutch" section. Instructions for removing the clutch when the engine is in the vehicle are also given in "Clutch" section.

**D-13. Remove Flywheel**

Remove the nuts and lock washers attaching the flywheel to the crankshaft flange. Use a pry bar between the flywheel and the housing and carefully loosen the flywheel from the crankshaft flange. Remove the flywheel. If the flywheel is to be removed with the engine in the vehicle, the transmission and clutch must first be removed as detailed in "Clutch" section.

**D-14. Remove Oil Pump**

Remove the lock wire from the rear intermediate main bearing bolts. Remove the nut and lock washer that attach the oil pump to the bearing cap. Lift the oil pump out of the bearing cap. Rotate the engine to the vertical position, front end facing up, if the operations are being performed with the engine out of the vehicle.

**D-15. Remove Piston and Connecting Rod Assemblies**

To prevent breaking the piston lands, the ridge at the top of each cylinder bore must be removed before attempting to remove the pistons. To remove the ridge, use a cylinder ridge reamer as shown in Fig. 19. For proper use of the reamer, follow the instructions furnished by the manufacturer. The portion of metal removed from the bore should not extend more than  $\frac{1}{64}$  inch [0.396 mm.] below the ridge.

Remove the self-locking nuts that attach the connecting rod bearing cap to one of the connecting

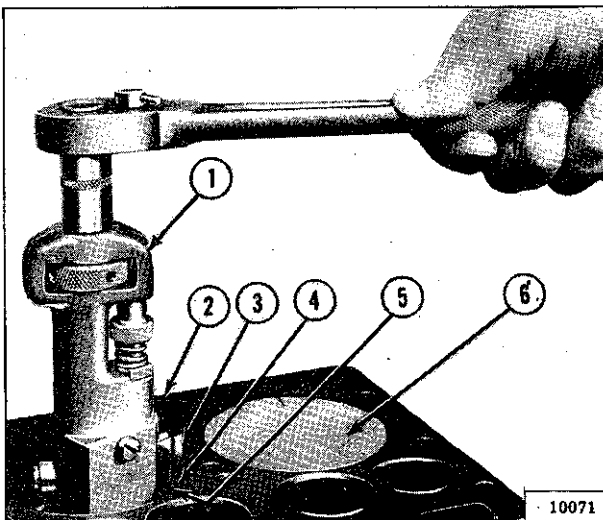


FIG. 19—REMOVING RIDGE FROM CYLINDER BORE

- |                  |                       |
|------------------|-----------------------|
| 1—Ridge Reamer   | 4—Stop Screw          |
| 2—Cylinder Block | 5—Stop Screw Lock Nut |
| 3—Cutting Blade  | 6—Piston              |

rods. Remove the bearing cap, Push the connecting rod and piston assembly out of the cylinder block with the handle end of a hammer as shown in Fig. 20 until the piston rings are free from the cylinder bore. Remove the piston and connecting rod assembly from the top of the cylinder block. Reassemble the connecting rod bearing cap with the bearings in place, to the rod from which it was removed. Rotate the crankshaft and follow the same procedure until all the piston and connecting rod assemblies are removed.

Pistons and connecting rod assemblies may be removed for repair with the engine in the vehicle after draining the cooling system, removing the oil pan and the cylinder head, and reaming the ridges as described above.

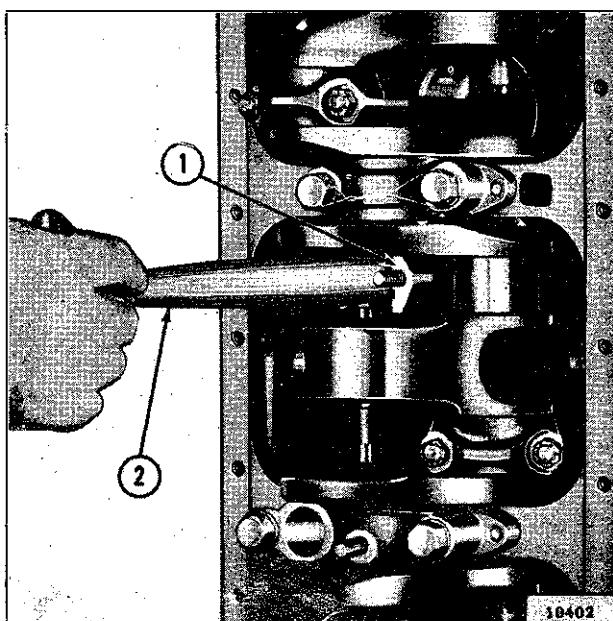


FIG. 20—REMOVING PISTON AND CONNECTING ROD ASSEMBLY

- |                  |                 |
|------------------|-----------------|
| 1—Connecting Rod | 2—Hammer Handle |
|------------------|-----------------|

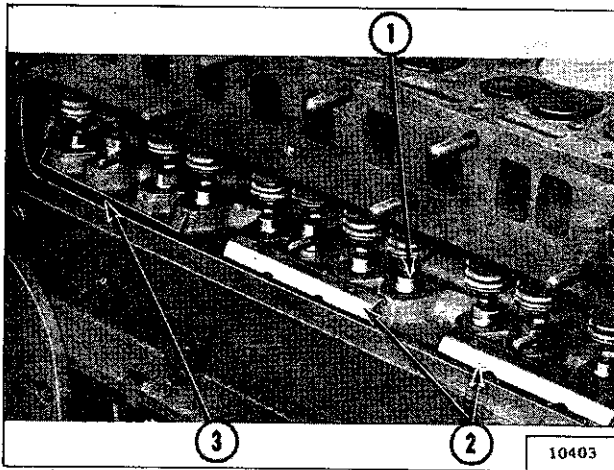


FIG. 21—VALVE TAPPET CHAMBER, TAPPETS AND OIL SHIELDS

- 1—Tappet
- 2—Oil Shields
- 3—Oil Shields Not Used At Rear

#### D-16. Remove Valves and Springs

Remove the three nuts and gaskets (nuts, rubber oil seals, and plain flat washers on later models) that attach the valve tappet cover to the cylinder block. Look for evidence of oil leakage past these gaskets. If any such leakage is indicated, install the later rubber oil seals and plain flat washers in place of the gaskets upon reassembly. Remove the cover and cover gasket. The two valve tappet chamber oil shields are positioned as shown in Fig. 21. They are held in place in the tappet chamber by means of spring clips on the underside of each shield. To remove the shields, lift them out with the fingers or, if necessary, pry them out with a screwdriver.

With a valve spring lifter, compress the valve springs as shown in Fig. 22 and remove the locks from the valve stems which are in the closed position. Close the other valves by rotating the crankshaft and remove the locks from these valves in the same manner. Remove all valves and tag or place in a rack to indicate the location of each in the cylinder block.

If a valve sticks in its guide and cannot be easily lifted out, pull the valve upward as far as possible and remove the spring. Lower the valve and remove any carbon deposits from the valve stem. This will permit removal of the valve. The valve

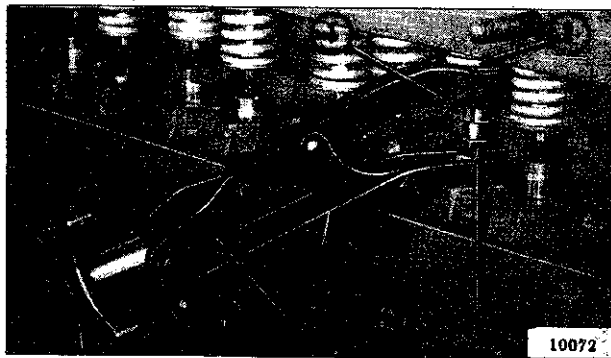


FIG. 22—REMOVING VALVE SPRING LOCKS

- 1—Valve Lock
- 2—Valve Spring
- 3—Tappet
- 4—Valve Spring Lifter

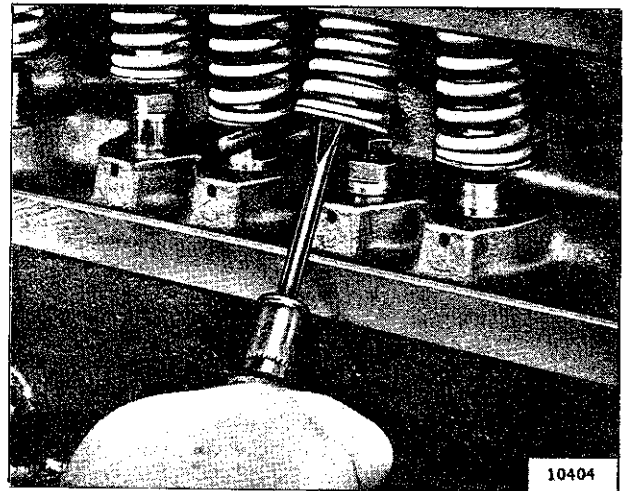


FIG. 23—REMOVING VALVE SPRINGS

springs can be pried out of the chamber with a screwdriver as shown in Fig. 23.

#### D-17. Remove Vibration Damper and Hub Assembly

If the vibration damper assembly is to be removed with the engine installed in the vehicle, the cooling system must be drained and the radiator removed. The vibration damper, pulley, and hub are removed from the crankshaft as a unit, using a special puller. Proceed as follows:

- a. Remove the vibration damper bolt and lock-washer from the end of the crankshaft.
- b. Install a vibration damper puller in the manner shown in Fig. 24.
- c. Turn the center screw of the puller against the end of the crankshaft until the vibration damper assembly is removed.

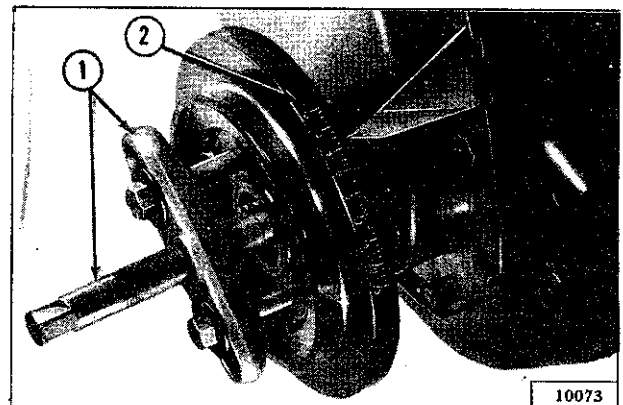


FIG. 24—REMOVING VIBRATION DAMPER

- 1—Puller
- 2—Vibration Damper

#### D-18. Remove Timing Chain Cover

Remove the two bolts and lock washers that attach the timing pointer to the timing chain cover and remove the pointer. Remove the remaining bolts, nuts, and lock washers, that attach the timing gear cover to the cylinder block. Remove the cover and gasket. Discard the gasket. Remove the crankshaft oil seal from the timing gear cover and discard the seal. Remove the hub key and the oil slinger from the crankshaft.

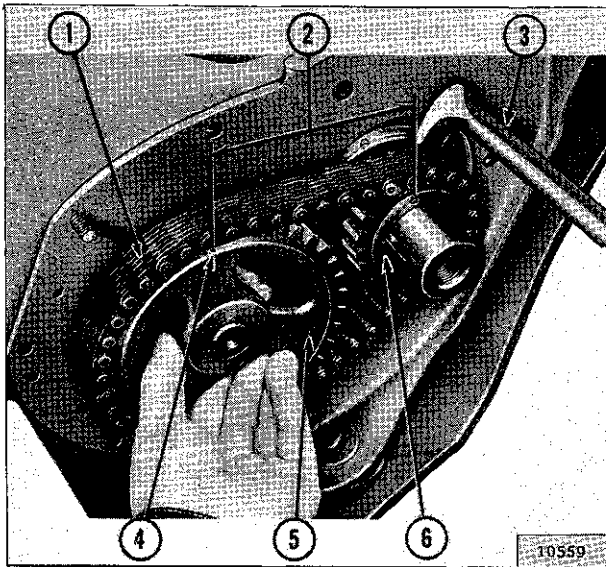


FIG. 25—REMOVING TIMING CHAIN AND GEARS

- |                |                   |
|----------------|-------------------|
| 1—Timing Chain | 4—Timing Mark     |
| 2—Nine Links   | 5—Camshaft Gear   |
| 3—Lifting Bar  | 6—Crankshaft Gear |

**D-19. Remove Timing Gears and Chain**

The timing chain and gears are removed from the engine as a unit. With a small chisel and hammer, straighten the lock plate at the camshaft gear retaining nut. Remove the nut and lock plate. With a hooked bar in the position shown in Fig. 25, pry alternately on the crankshaft gear and behind the spokes of the camshaft gear until both gears and timing chain are removed. Remove the Woodruff keys.

**D-20. Remove Front and Rear Filler Blocks**

Remove the socket head screw and the slotted-head screws and lock washers that attach the front filler block to the engine front end plate. Remove the bolts that attach the filler block to the cylinder block. Remove the filler block. Remove the two slotted-head screws and lock washers that attach the rear filler block to the cylinder block. Remove the rear filler block. If the rear filler block is being removed for gasket replacement, with the engine in the vehicle, the filler block guard should also be removed as detailed in Par. D-22.

**D-21. Remove Front End Plate**

Remove the bolts and lock washers that attach the engine front end plate to the cylinder block. Remove the front plate and gasket. Discard the gasket.

**D-22. Remove Rear Filler Block Guard**

Install a remover as shown in Fig. 26. Rotate the crankshaft 180° and remove the guard.

**D-23. Remove Crankshaft**

Remove the lockwire, bolts, and flat washers that attach the main bearing caps to the cylinder block. Using a lifting bar beneath the recessed ends of one of the bearing caps as shown in Fig. 27, alternately pry up each end of the bearing cap, being careful not to exert enough pressure to damage the bearing cap or the dowels, until the cap is free from

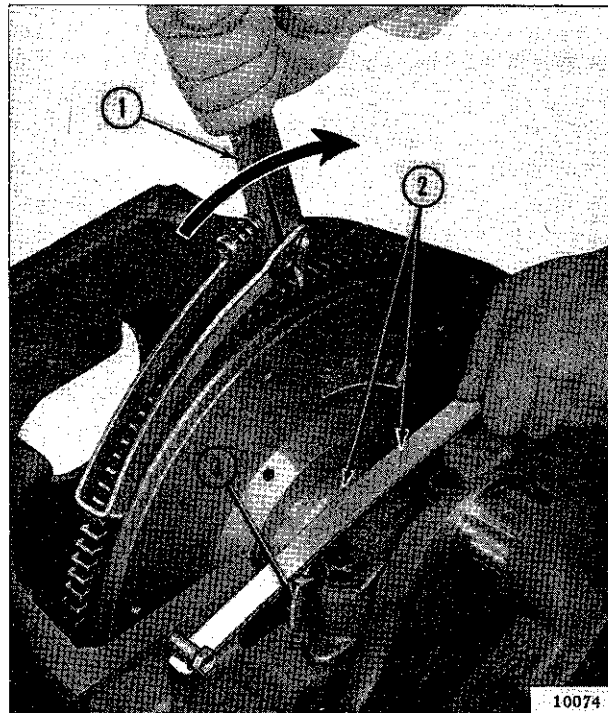


FIG. 26—REMOVING REAR FILLER BLOCK GUARD

- |                         |
|-------------------------|
| 1—Flywheel Turning Tool |
| 2—Remover Tool          |
| 3—Filler Block Guard    |

the dowels. Remove the bearing cap. Follow the same procedure to remove the remaining bearing caps. Lift the crankshaft from the cylinder block. Install the main bearing caps and bearings on the cylinder block in their original position. Removal of the crankshaft may be accomplished only with the engine out of the vehicle.

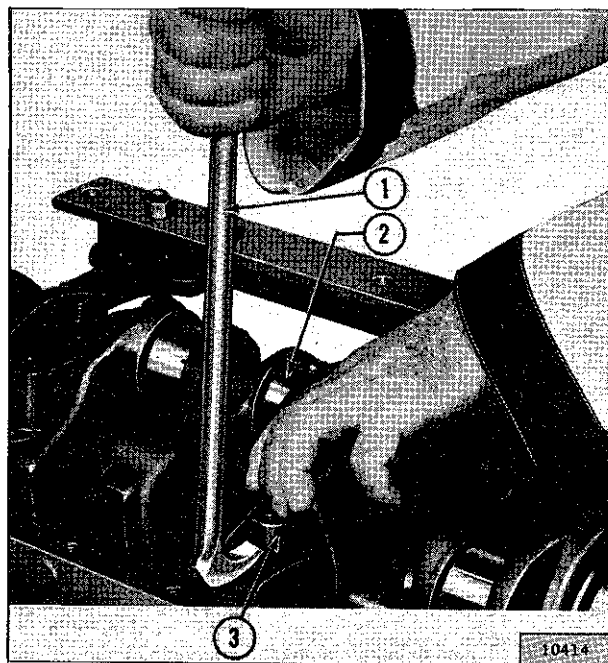


FIG. 27—REMOVING MAIN BEARING CAP

- |                    |
|--------------------|
| 1—Lifting Bar      |
| 2—Crankshaft       |
| 3—Main Bearing Cap |

**D-24. Remove Tappet Chamber Drain Tube**

Remove the nut and lock washer that attach the tappet oil drain tube clip to the cylinder block. Remove the drain tube and clip.

**D-25. Remove Camshaft**

The removal procedures for the camshaft with the engine installed and with it removed differ considerably and are covered separately as follows:

**D-26. Remove Camshaft  
(Engine out of Vehicle)**

Proceed as follows:

- a. Remove the attaching nuts, bolts, and washers and the camshaft thrust plate from the front end of the cylinder block.
- b. Push the tappets away from the camshaft to provide sufficient clearance for removal of the camshaft.
- c. Carefully withdraw the camshaft from the front of the engine in the manner shown in Fig. 29 so as to prevent damage to the camshaft bearings.

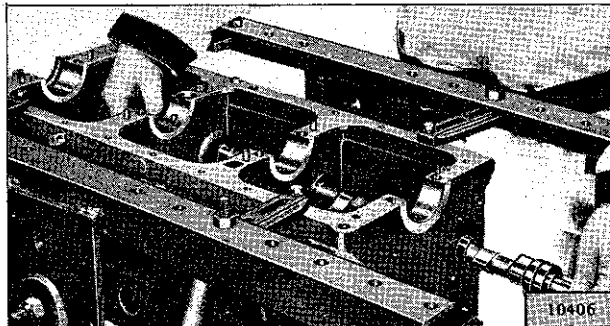


FIG. 28—REMOVING CAMSHAFT FROM CYLINDER BLOCK

**D-27. Remove Camshaft (Engine in Vehicle)**

Proceed as follows:

- a. Drain the cooling system. See Par. H-3.-
- b. Remove the radiator.
- c. Remove the vibration damper. See Par. D-17.
- d. Remove the timing chain cover. See Par. D-18.
- e. Remove the timing gears and chain. See Par. D-19.
- f. Disconnect the fuel lines from the fuel pump.
- g. Remove the fuel pump.
- h. Remove the cylinder head. See Par. D-9.
- i. Remove the oil pan. See Par. D-10.
- j. Remove the oil pump. See Par. D-14.
- k. Remove the valve tappet chamber cover, the valves, and springs. See Par. D-16.
- l. Hold the tappets in the fully up position with spring clothes pins to prevent the tappets from interfering with the camshaft while removing it.
- m. Remove the camshaft by following the procedure of Par. D-26.

**D-28. Remove Tappets**

With the camshaft out of the cylinder block, remove the tappets from the bottom or crankshaft side of the cylinder block as shown in Fig. 29. Place

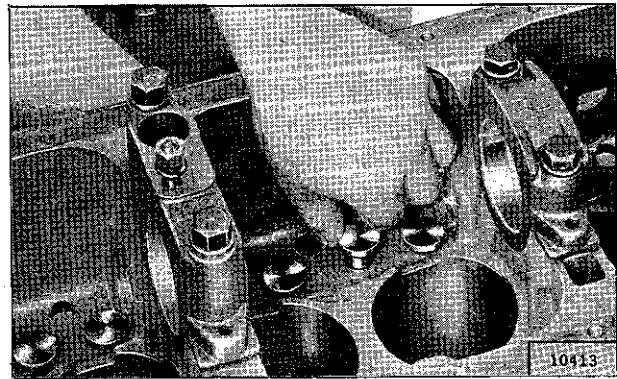


FIG. 29—REMOVING VALVE TAPPET FROM CYLINDER BLOCK

all tappets in a marked rack so they will be assembled in their original locations.

**D-29. Remove Oil Gallery Plugs**

Remove the plug at each end of the oil gallery in the cylinder block. This operation is only applicable with the engine out of the vehicle.

**D-30. Remove Oil Pressure Relief Valve**

The oil pressure relief valve is located in the right side of the cylinder block below the tappet chamber cover and consists of the parts shown in Fig. 30. Remove the relief valve parts as follows:

- a. Remove the plug and gasket and pull out the valve spring and washer (if present).
- b. With long-nose pliers, remove the valve.
- c. If the valve sticks and cannot be removed with pliers, a wooden wedge may be used. To make the wedge, cut a slit in the end of a piece of wooden dowel stock and insert a small wedge into the dowel just far enough to hold the wedge securely as shown in Fig. 31.
- d. Insert the tool in the hole in the block and into the valve. When tapped lightly with a hammer, this wedge will spread the dowel inside the valve. Remove the dowel and the valve which is wedged tightly on the end of the dowel.

**CAUTION:** Do not use a metal dowel as it may expand and distort the valve.

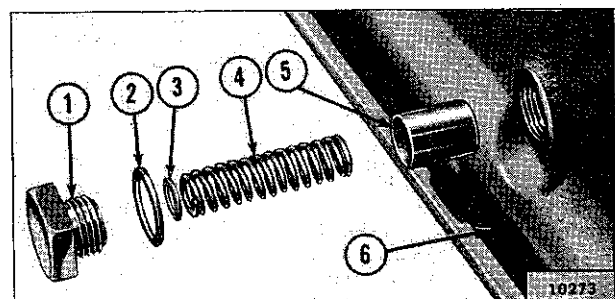


FIG. 30—OIL PRESSURE RELIEF VALVE

- |          |                  |
|----------|------------------|
| 1—Plug   | 4—Spring         |
| 2—Gasket | 5—Valve          |
| 3—Washer | 6—Cylinder Block |

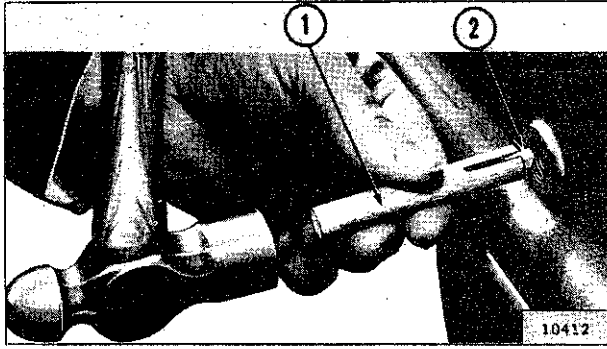


FIG. 31—REMOVING OIL PRESSURE RELIEF VALVE WITH WEDGE

1—Wood Dowel (Slotted)  
2—Wedge

### D-31. ENGINE INSPECTION AND REPAIR

The inspection and repair procedures detailed herein are recommended to be followed when a complete engine overhaul is to be made with the engine out of the vehicle. These instructions can generally be applied separately with the engine in the vehicle. Wherever the procedure differs due to the engine being in the vehicle the necessary special instructions will also be provided.

Inspection and repair instructions are included to cover the cylinder block, crankshaft and bearings, connecting rods and bearings, oil pump, valves and tappets, pistons and rings, flywheel, timing gears, and the camshaft and bearings. In addition, fitting operations for these engine components are included.

**Important:** Before the inspection and repair procedures listed below are begun, the engine serial number must be checked for the presence of code letters denoting deviations from standard dimensions. Refer to Par. D-1.

### D-32. Cylinder Block

The cylinder block must be thoroughly cleaned, inspected and repaired as detailed in the following paragraphs.

### D-33. Cleaning

The cylinder block may be steam cleaned or cleaned with a suitable solvent. A scraper is recommended to remove hard deposits, except on highly finished surfaces. Special attention must be directed to the cleaning of the oil passages, tappet chamber, crankcase, and cylinder walls to remove all sludge, dirt and carbon deposits. After cleaning, use air pressure to dry the block thoroughly.

### D-34. Inspection

Examine the cylinder block for minute cracks and fractures. Rusted valve springs or evidence of rust in the tappet chamber or the cylinder walls is a good indication of a possible crack in the block. Pressure testing the block will usually indicate the presence of a crack. A pressure test may be made by applying 30 to 60 pounds water and air pressure in the water jackets of the block. With the water

jacket ports sealed off, a drop in pressure will indicate the presence of a crack.

**NOTE:** To make this test the cylinder head and water pump must be installed and the inlet and outlet must be sealed tight.

a. Examine all machined surfaces of the cylinder block for burrs and scores. Check cylinder block distortion by placing a straight edge along the length of the cylinder head surface of the block. With a feeler gauge check for clearance between the straight edge and the block as shown in Fig. 32, particularly between adjacent cylinders.

b. Check the cylinder bores for out-of-round and taper to determine whether the bores require honing or re boring. For detail information refer to Par. D-36.

c. If main bearing caps are not removed carefully, raising both sides of each cap evenly until free of the dowels, the dowels may be bent. This is especially probable if a pry bar is used, first at one side of the cap and then the opposite, to raise the cap from the cylinder block. Bent main bearing cap dowels can cause misalignment of the bearing cap and resultant rapid bearing wear necessitating early bearing replacement. Therefore, remove each main bearing cap carefully and if there is any reason to believe any of the dowels may have been bent during bearing cap removal, remove those dowels and install new ones as detailed below.

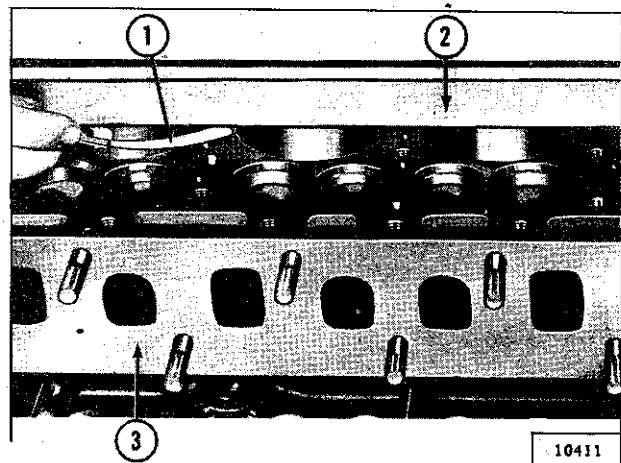


FIG. 32—CHECKING CYLINDER BLOCK FOR DISTORTION

1—Feeler Gauge  
2—Straight Edge  
3—Cylinder Block

### D-35. Cylinder Block Dowel Replacement

Since the hardened dowels must fit tightly to ensure correct cap alignment, gripping them with a tool for removal is sometimes difficult. To simplify the operation, file a notch on each side of the dowel to accommodate a pair of diagonal cutters. Using a piece of bar stock under the diagonals for leverage, work the dowel out of the cylinder block.

Before installing a new dowel in the cylinder block make sure the dowel hole is clean. Start the dowel straight in the hole, then tap the dowel lightly with a hammer until it bottoms.



### D-36. Cylinder Bores

The cylinder bores may be reconditioned by honing or reboring. Use oil-soaked rags to protect crankshaft journals and other engine parts from abrasive dust during all reconditioning operations.

Both honing and reboring of the cylinders must be closely coordinated with fitting the pistons to maintain specified tolerances.

Reboring the cylinders may be accomplished only when adequate facilities and trained or experienced service technicians are available. The engine must be removed from the vehicle and mounted in a suitable level holding fixture.

The amount of material to be removed is determined from the original diameter of the cylinder bores (3.3125" to 3.3145") [84,137 a 84,188 mm.] diameter plus the amount of oversize in diameter of the oversize pistons to be fitted.

The largest cylinder bore will determine the oversize to which all cylinders must be rebored, since the size and weight of all pistons must be uniform to maintain proper engine balance. The maximum rebore should not exceed .060" [1,524 mm.] from standard.

Measure the cylinder diameters by making measurements both parallel to and at right angles to crankshaft over entire piston travel and at bottom of cylinder using a cylinder bore checking gauge as shown in Fig. 33. Proceed as follows:

a. If bores are scored; if out-of-round exceeds .005" [0,127 mm.]; if diameters differ more than .005"; or if taper exceeds .005" on diameter, it is generally recommended that cylinders be reconditioned by boring and honing to the next oversize using new pistons of the proper size. If reboring is performed, all cylinders must be rebored to the same oversize allowing .0015" [0,0381 mm.] for final honing. All cylinder bore diameters must be within .002" [0,0508 mm.] after reconditioning.

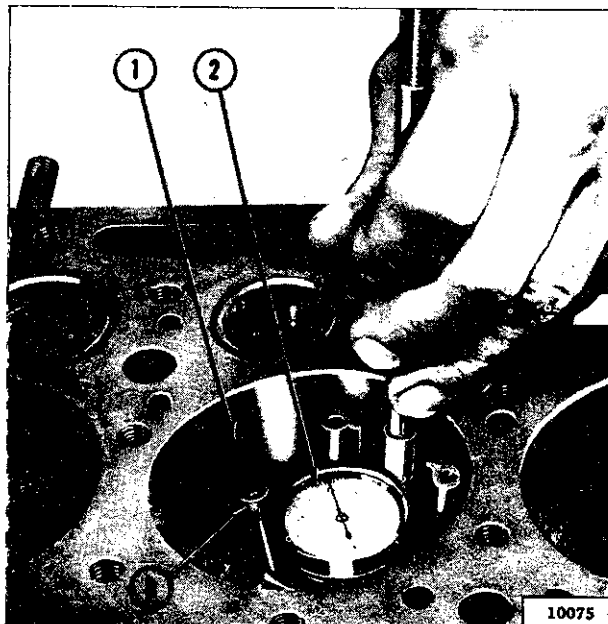


FIG. 33—CHECKING CYLINDER BORE

- 1—Cylinder Bore
- 2—Cylinder Bore Checking Gauge
- 3—Lock Screw

b. If bore measurements are within the above limits, but indicate hollows or waviness, cylinders should be honed with 250 grit stones as shown in Fig. 34. Pump hone up and down in cylinder while it is rotating to produce a satin-finish, diamond cross-hatched pattern approximately 30° with horizontal. Hone only enough to correct waviness.

c. If cylinder bore correction is unnecessary, break the glaze on cylinder walls with a hone with 250 grit stones or with a suitable deglazing tool. Operate the hone or deglazer to obtain diamond cross-hatched pattern same as above.

d. Regardless of the type of correction on cylinder walls, clean out the bores thoroughly afterwards and apply a light coat of clean engine oil. If cylinders have been rebored or honed heavily, measure cylinder diameters again to ensure proper selection of piston size.

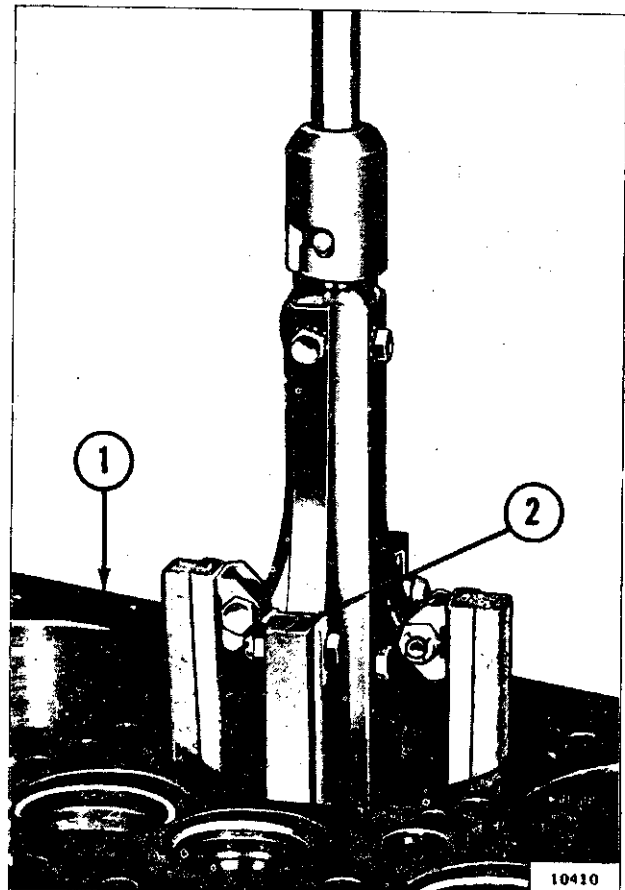


FIG. 34—HONING CYLINDER BORE

- 1—Cylinder Block
- 2—Cylinder Hone

### D-37. Pistons, Rings and Connecting Rods

The pistons and connecting rods were removed from the engine as assemblies. If cylinders were rebored, new oversized pistons and rings will have to be installed as determined at the time cylinders were rebored. Use standard size pistons in cylinder bores up to .009" [0,029 mm.] oversize measured at bottom of bore. For oversize, use the following chart:

OVERSIZE PISTON APPLICATION CHART

Oversize Piston	Use in Oversize Cylinder Bore Range	Metric
.010"	.010" to .019"	0,254 a 0,483 mm.
.020"	.020" to .024"	0,508 a 0,610 mm.
.025"	.025" to .029"	0,635 a 0,737 mm.
.030"	.030" to .039"	0,762 a 0,991 mm.
.040"	.040" to .049"	1,016 a 1,244 mm.
.050"	.050" to .059"	1,270 a 1,499 mm.
.060"	.060" max.	1,524 mm.

If cylinders were not rebored, disassemble pistons and rods by removing piston pin retaining rings as shown in Fig. 35, and pressing out pin. Keep the parts of each assembly identified so they may be installed in the same cylinder from which they were removed. Remove rings from piston. Clean carbon from piston head and clean ring grooves and grain holes.

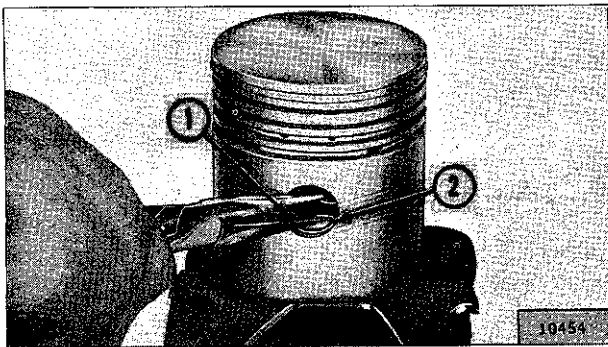


FIG. 35—REMOVING PISTON PIN RETAINING RINGS

1—Piston Pin  
2—Retaining Ring

Use care not to scrape metal from side of grooves nor to make burrs on ring groove surfaces. Check pistons for broken lands, cracks, or worn grooves.

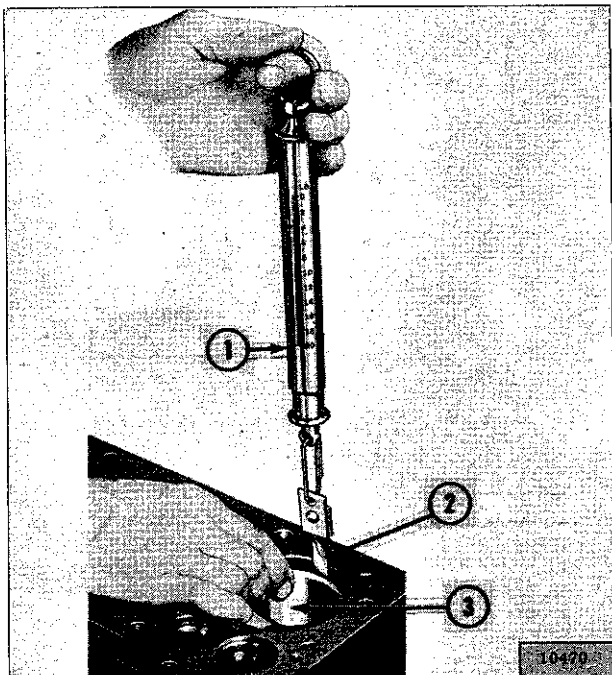


FIG. 36—FITTING PISTON IN CYLINDER BORE

1—Piston Fitting Gauge and Scale, C-690  
2—Feeler Gauge  
3—Piston

Replace piston if necessary using same size as old piston. Proceed as follows:

a. Check fit of each piston to cylinder bore, when block and pistons are clean and dry and at approximately 70°F [21°C] by using Piston Fitting Gauge and Scale C-690 as shown in Fig. 36. Use a .004" [0,1016 mm.] thickness gauge ( $\frac{1}{2}$ " wide) [12,7 mm.] if old pistons are to be used. When fitting new pistons, use .0015" [0,0381 mm.] gauge. The piston is fitted upside down in the block to facilitate the operation, and the gauge must extend the full length of piston on the thrust side (side opposite slot in piston skirt). Scale should register 5 to 10 pounds [2,26 a 4,53 kg.] pull to remove thickness gauge from between cylinder wall and piston. Excessive pull indicates need for a slightly smaller piston or additional honing of cylinder. Insufficient pull indicates need for fitting a larger piston.

b. Check piston pin fit. The piston pin should be a palm push fit at room temperature.

If the pin is loose, a new pin must be used. It may be necessary to use a .003" [0,0762 mm.] or a .005" [0,127 mm.] oversize pin and ream the piston with Piston Pin Reamer DD-82-2 as shown in Fig. 37 to obtain a push fit.

c. After checking the piston pin fit in the piston, check its fit in the connecting rod bushing. The pin should just slip through the bushing under its own weight. If the pin is too tight, ream the inside diameter of the bushing with Piston Pin Reamer DD-82-2 as shown in Fig. 38 to .8593" to .8595" [21,826 a 21,831 mm.] for a standard pin or, if an oversize pin is used, ream the bushing .003" to .005" [0,0762 a 0,127 mm.] oversize. If the pin is too loose, install a new bushing and ream to proper size. The new bushing must be installed with the oil hole aligned with the oil hole in the connecting rod. The bushing must protrude  $\frac{1}{64}$ " [0,396 mm.] on

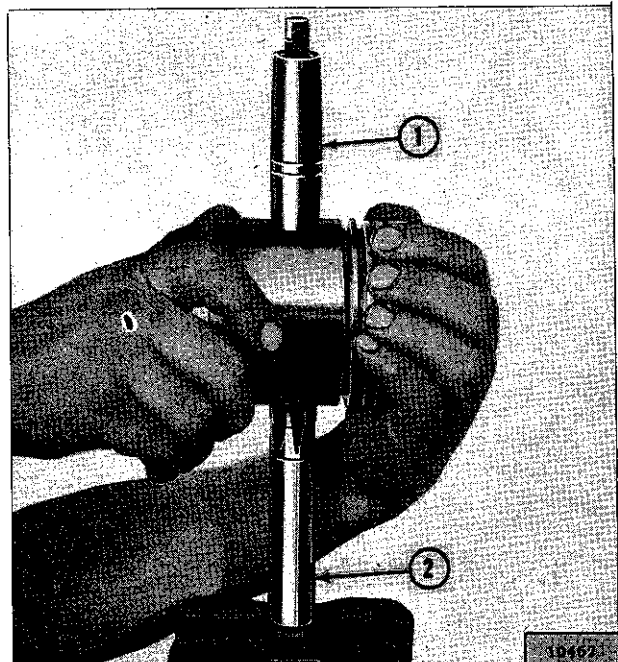


FIG. 37—REAMING PISTON PIN BORE

1—Pilot  
2—Reamer, DD-82-2



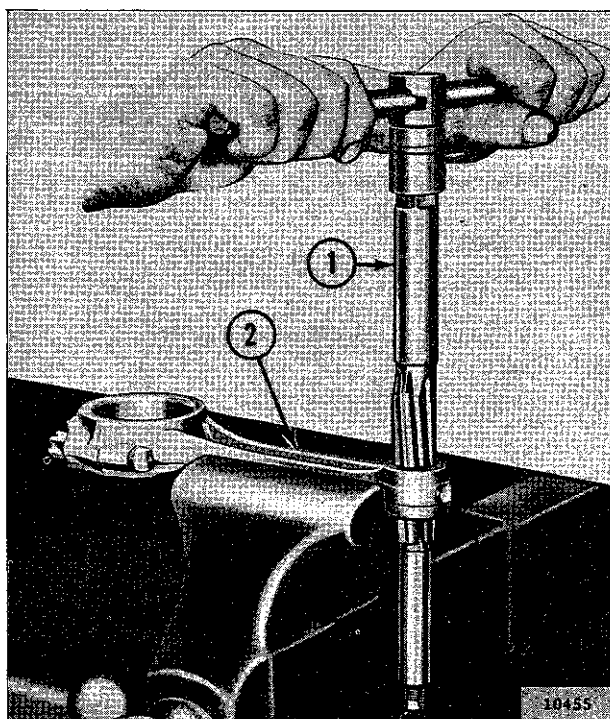


FIG. 38—REAMING CONNECTING ROD BUSHING

1—Reamer, DD-82-2  
2—Connecting Rod

each side of the connecting rod.

**d.** Check and correct connecting rod alignment with a connecting rod aligning fixture as shown in Fig. 39. Follow the instructions furnished with the fixture.

**e.** Assemble piston and rod by heating the piston to approximately 160°F [71°C]. Place the connecting rod in the piston, making sure the oil spurt hole in the rod is on the opposite side from the T-slot in the piston. Install the piston pin, pushing it in by hand, and install the pin retaining rings.

**f.** Place piston and rod assembly in a fixture and check alignment of the assembly as shown in Fig. 40. Follow instructions furnished with the fixture.

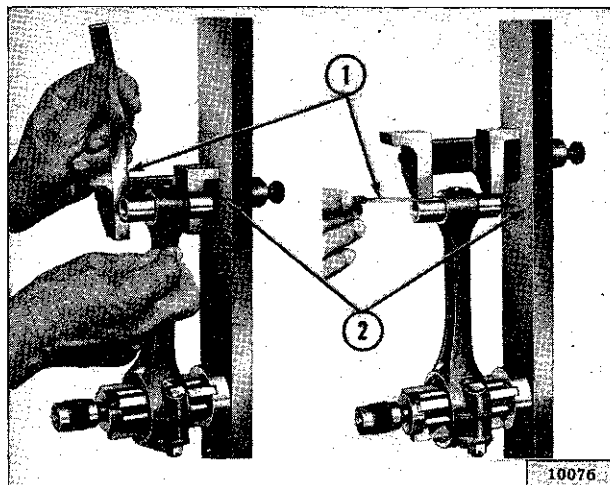


FIG. 39—CHECKING CONNECTING ROD ALIGNMENT

1—Feeler Gauge  
2—Fixture

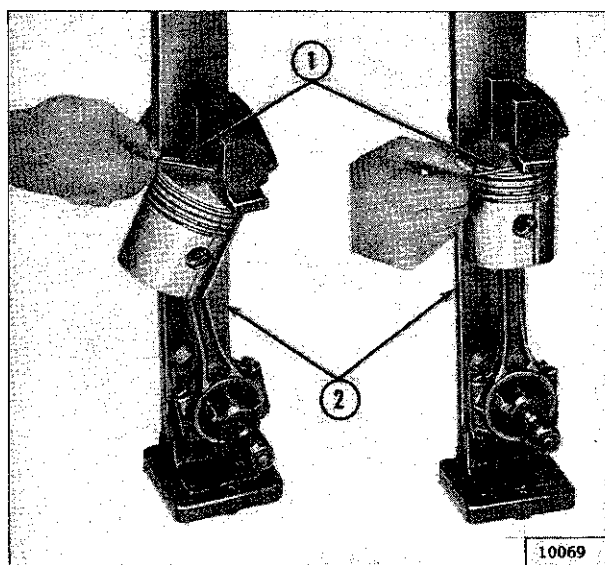


FIG. 40—CHECKING PISTON AND CONNECTING ROD ALIGNMENT

1—Feeler Gauge  
2—Fixture

**g.** Check width of piston ring grooves using a new piston ring and a feeler gauge as shown in Fig. 41.

#### RING TO GROOVE CLEARANCES

Upper Compression Ring...	.002" to .004" [0,0508 a 0,1016 mm.]
Lower Compression Ring...	.003" to .007" [0,0762 a 0,1780 mm.]
Oil Control Rings.....	.006" to .010" [0,152 a 0,254 mm.]

Insert feeler gauge between ring and piston to bottom of groove. Replace piston if ring grooves are not within allowable tolerances.

If a feeler gauge larger than .006" [0,152 mm.] can be inserted  $\frac{1}{16}$ " [1,588 mm.] between piston and upper compression ring, groove is worn excessively bell-mouthed and piston should be replaced.

**h.** Check piston ring end gap by placing compression ring in cylinder bore below ring travel

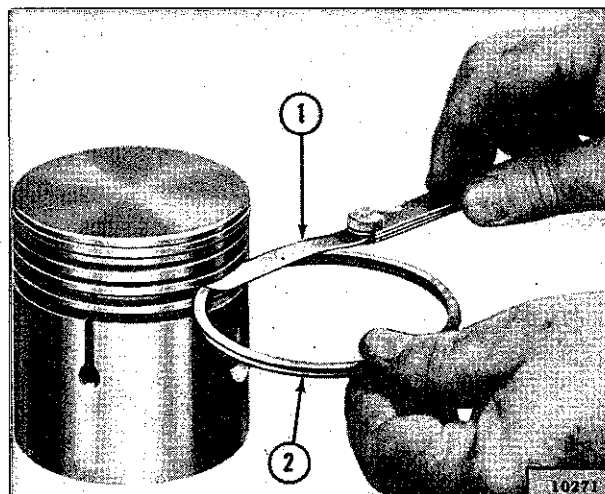


FIG. 41—CHECKING PISTON RING SIDE CLEARANCE

1—Feeler Gauge  
2—Piston Ring

using head of a piston to push ring in squarely. Minimum end gap must be .007" [0,178 mm.] for all rings. If less, place ring in a jig and file ends to obtain minimum gap. Excessive filing or ring gap over .045" [1,143 mm.] indicates improper size rings were selected. Proper rings in cylinders re-bored to usual oversizes should have a .007" to .020" [0,178 a 0,508 mm.] end gap without filing. Select piston rings of proper size for installation in the oversize cylinder bores using the Piston Ring Application Chart in Par. D-38.

i. Install new ring set using either production replacement rings or oil control rings. Production replacement rings are the same as the original factory installed rings while oil control ring sets have different components, notably the oil ring expander. Follow instructions on ring envelopes for proper installation. Use a piston ring tool to install rings on pistons as shown in Fig. 42. Do not expand rings more than necessary to install, also be careful not to burr the piston with ends of rings. Make sure upper compression ring is installed in groove with correct side up. Position rings so gaps are staggered according to instructions on the envelope.

#### D-38. Piston Ring Application Chart

Actual Ring Size*	Ring Oversize Range*	For Best Fit Use in Cyl. Bore Oversize	Ring Gap Fitting
Std.	Std. to .008" [Std. a 0,229 mm.]	Std. to .009" [Std. a 0,229 mm.]	No fitting necessary
.020" [0,508 mm.]	.010" to .029" [0,254 a 0,737 mm.]	.010" to .019" [0,254 a 0,483 mm.] .020" to .024" [0,508 a 0,610 mm.]	.007" Gap [0,178 mm.] No fitting necessary
.030" [0,762 mm.]	.030" to .039" [0,762 a 0,991 mm.]	.025" to .029" [0,635 a 0,737 mm.] .030" to .034" [0,762 a 0,863 mm.]	.007" Gap [0,178 mm.] No fitting necessary
.040" [1,016 mm.]	.040" to .049" [1,016 a 1,244 mm.]	.035" to .039" [0,889 a 0,991 mm.] .040" to .049" [1,016 a 1,244 mm.]	.007" Gap [0,178 mm.] No fitting necessary
.060" [1,524 mm.]	.050" to .060" [1,270 a 1,524 mm.]	.050" to .059" [1,270 a 1,499 mm.] .060" [1,524 mm.]	.007" Gap [0,178 mm.] No fitting necessary

#### D-39. Crankshaft

The crankshaft is machined from a heat treated carbon steel forging and is carefully balanced both dynamically and statically. The main bearing journals and crankpins are efficiently lubricated through the drilled oil gallery and passages in the cylinder block, through which oil is forced under pressure to the main bearings and through the cheeks of the crankshaft to the connecting rod bearings.

While the crankshaft is out of the engine be very careful when handling it to prevent damage to the connecting rod crankpins and the main bearing journals.

#### D-40. Crankshaft Cleaning

Clean out the drilled holes (oil passages) in the crankshaft journals with a small rifle brush or with a piece of wire. Blow out the passages with com-

pressed air after cleaning. Clean the crankshaft thoroughly with a suitable cleaning solvent.

#### D-41. Crankshaft Inspection and Repair

Inspect the crankshaft for cracks, alignment, and condition of the crankpins and the main bearing journals. Cracks, misalignment, and scored or worn journals and crankpins necessitate crankshaft replacement. Also check the pilot bushing for wear or damage in the rear end of the crankshaft.

#### D-42. Checking Crankshaft Alignment

To check alignment, mount the crankshaft in the cylinder block with the front and rear bearings in place but the two intermediate bearings removed. With a dial indicator mounted on the crankcase and the indicator button resting on the intermediate bearing journals, one at a time, slowly rotate the crankshaft and note the reading on the indicator dial. Install the two intermediate bearings and remove the front and rear bearings. Then repeat the operation with the dial indicator, checking at the front and rear bearing journals. The maximum allowable run-out is .002" [0,0508 mm.].

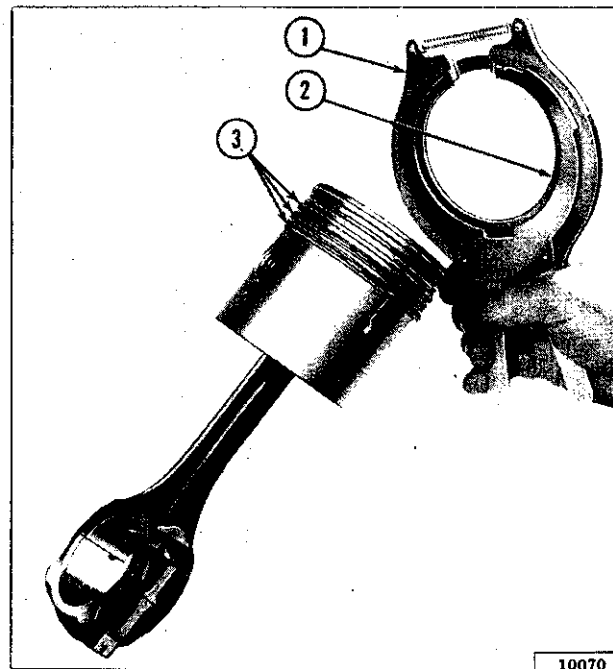


FIG. 42—INSTALLING RINGS ON PISTON

- 1—Piston Ring Installing Tool
- 2—Piston Ring
- 3—Piston Rings Installed

#### D-43. Checking Main Bearing Journals

Main bearing journal diameters may be checked with the crankshaft assembled in the engine or out of the engine. If the journal is to be checked with the crankshaft in the engine, then the bearing cap and upper and lower bearings must be removed from one journal at a time. A special journal micrometer as illustrated in Fig. 43 may be used. When the check is to be made with the crankshaft out of the engine, an ordinary 3" micrometer may be used. The standard journal diameter is 2.3752" to 2.3744" [6,033 a 6,031 cm.] for all main bearings. Allowable taper or out-of-round of the journals is .001" [0,0254 mm.].

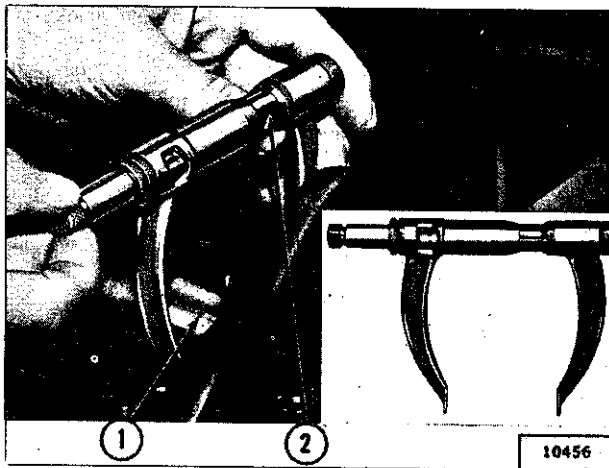


FIG. 43—MEASURING CRANKSHAFT JOURNAL DIAMETER

1—Crankshaft Journal  
2—Micrometer

#### D-44. Checking Connecting Rod Crankpins

Check the crankpin diameters with a micrometer to assure they are not out-of-round or tapered more than .001" [0,0254 mm.]. The standard crankpin diameter is 2.0627" to 2.0619" [5,239 a 5,237 cm.].

#### D-45. Crankshaft Pilot Bushing

Inspect the crankshaft pilot bushing in the flywheel end of the crankshaft. The pilot bushing may be replaced with the engine in the vehicle or out of the vehicle. For procedure on replacing the bushing, refer to Par. J-20.

#### D-46. Crankshaft Main Bearings

The crankshaft main bearings are the moraine type which provide long bearing life. They are the replaceable type which, when correctly installed, provide proper clearance without filing, boring, scraping or shimming. Upper and lower bearing halves are retained in position with locks notched on the bearing to fit into corresponding notches in the cylinder block and bearing cap. All four main bearings have the same bore diameter but differ in width, only the two intermediate bearings being the same and interchangeable. Upper and lower halves of each bearing are the same. Crankshaft bearings should be replaced as a complete set of four bearings, each bearing consisting of two halves.

The following undersize crankshaft main bearings are available:

.001" [0,025 mm.]	.012" [0,304 mm.]
.002" [0,050 mm.]	.020" [0,508 mm.]
.010" [0,254 mm.]	

The sizes .010" and .020" are intended for use with a crankshaft that has been turned to these sizes as standards. There are cases where the crankshaft does not need to be reworked and the slightly undersize bearings can be used.

Bearing sizes are rubber stamped on the back side of each bearing. The rear main bearing has an integral flange to serve as a crankshaft thrust washer. The crankshaft main bearings may be replaced with the engine in the vehicle without removing the crankshaft.

**NOTE:** Effective with engine serial numbers SW-6-L-226-12252 and TW-6-L-226-47787, new improved crankshaft bearings entered production. The old and new bearings should not be intermixed. If only part of the crankshaft bearings are to be replaced on engines with serial numbers lower than the above listed numbers, the old style bearings should be installed. If all crankshaft bearings are to be replaced on any L6-226 engine, the new type bearings should be installed.

#### D-47. Crankshaft Main Bearing Replacement

When the bearings are to be replaced with the engine in the vehicle the oil pan, oil pump and front and rear filler blocks must be removed as detailed previously in this Section. Replace one bearing at a time. With the engine out of the vehicle, the crankshaft may be removed, permitting removal of all the bearing halves from the cylinder block and the bearing caps at the same time.

Remove bearing caps carefully by raising both sides of each cap evenly until free of the dowels so as not to bend the dowels.

To replace bearings with the engine in the vehicle, remove one bearing cap and lower half of the bearing. Remove the upper half of the bearing as shown in Fig. 44 from between the crankshaft and the cylinder block. Fit a removing tool into the oil hole in the crankshaft journal and rotate the crankshaft in the direction to raise the bearing lock out of the notch in the cylinder block, continuing the rotation until the bearing is removed.

#### D-48. Crankshaft Main Bearing Inspection

The crankshaft journals must be carefully inspected as detailed previously in Par. D-41. Worn journals

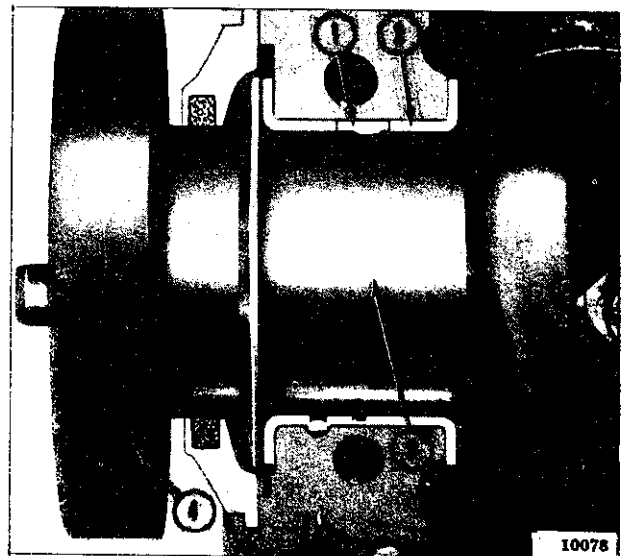


FIG. 44—REMOVING MAIN BEARING UPPER HALF WITH ENGINE INSTALLED

1—Removing and Installing Tool  
2—Upper Bearing  
3—Main Bearing Journal  
4—Flywheel Mounting Flange

will require undersize bearings. Scored, flaked or worn bearings must be replaced. Bearing wear can be checked by measuring the thickness which should be .09315-.09290 of an inch [2,366-2,359 cm.] for standard size bearings.

Measure the main bearing bores using a telescope gauge and micrometer as shown in Fig. 45. Measure the bores at right angles to the split line and at 45 degrees to the split line. The standard bore diameter is 2.5622-2.5615 inches [6,508-6,506 cm.]. The bores should not be over .001 of an inch [.0254 mm.] out-of-round or .001 of an inch in taper from end to end. Also, the bores should not be more than .001 inch oversize, considering the average diameter of the bore.

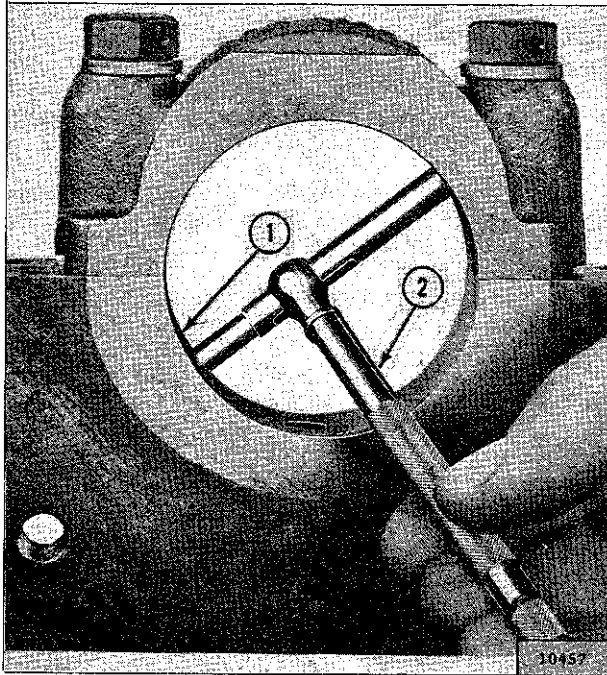


FIG. 45—MEASURING MAIN BEARING BORES

1—Main Bearing Bore  
2—Telescope Gauge

#### D-49. Fitting Crankshaft Main Bearings Using Plastigage

After wiping and carefully inspecting the bearing bore, install the proper bearing. See that the oil hole in the bearing upper half registers properly with the oil hole in the block, and that the bearing lock fits properly in the notch in the block. Install the crankshaft if replacing bearings with the engine out of the vehicle.

The desired running fit (difference between the diameter of the crankshaft journal and the inside diameter of the fitted bearing) for a main bearing is .0008" to .0028" [0,0203 a 0,0711 mm.].

Install the bearing lower half and the bearing cap and draw the cap bolts down equally and only slightly tight. Rotate the crankshaft by hand to be sure it turns freely without drag. Pull the cap bolts tighter, first one then the other, a little at a time, intermittently rotating the crankshaft by hand until the recommended torque of 85-95 foot pounds [11,7-13,1 kg. m.] is reached. If the bearings are of the correct size, and lubricated with light oil be-

fore installation, the crankshaft should turn freely in the bearings. If the crankshaft cannot be turned, a larger bearing is required. If there is no binding or tightness, it is still necessary to check clearance to guard against too loose a fit. Never file either the bearing cap or the bearing to compensate for too much clearance. Do not use shims under a bearing cap or behind a bearing shell. Do not run a new bearing half with a worn bearing half.

The use of "Plastigage" of the proper size to measure .001 of an inch [.0254 mm.] clearance is recommended for checking crankshaft main bearing clearance. The method of checking clearance is as follows:

- Remove the bearing cap and carefully wipe all oil from the bearing and the journal.
- Lay a piece of "Plastigage"  $\frac{1}{8}$ " [3,17 mm.] shorter than the width of the bearing across the journal (lengthwise of the crankshaft).
- Install the bearing and cap and tighten first one bolt, then the other, a little at a time to the specified torque. As the bearing tightens down around the journal, the "Plastigage" flattens to a width that indicates the bearing clearance.
- Remove the cap and measure the width of the flattened "Plastigage," using the scale printed on the edge of the envelope (Fig. 46). The proper size "Plastigage" will accurately measure clearance down to .001".
- If the flattened "Plastigage" tapers toward the middle, or toward the end, or both ends, there is a difference in clearance, indicating a taper, a low spot, or other irregularity of the bearing or journal.

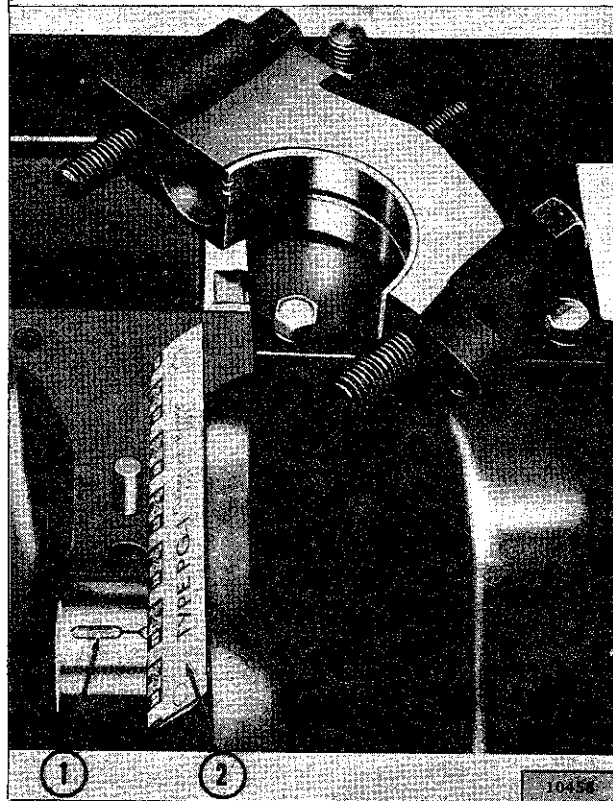



FIG. 46—CHECKING MAIN BEARING CLEARANCE WITH PLASTIGAGE

1—Plastigage  
2—Plastigage Scale

### D-50. Fitting Crankshaft Main Bearings Using Shim Stock

Thin feeler or shim stock may be used instead of "Plastigage" to check bearing clearances. The method is simple, but care must be taken to protect the bearing metal surface from injury by too much pressure against the feeler stock.

a. Cut a piece of .001" [0,0254 mm.] thick, by 1/2" [12,7 mm.] wide, feeler stock 1/8" [3,17 mm.] shorter than the width of the bearing. Coat this feeler stock with light engine oil and lay it on the bearing in the cap, as shown in Fig. 47. With the shim in this position, install the bearing and cap on the crankshaft.

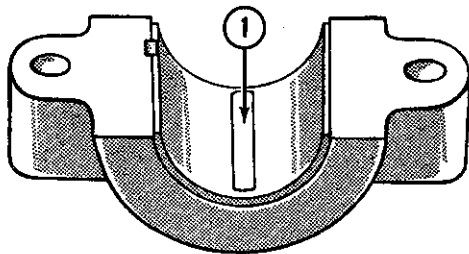

10442

FIG. 47—SHIM STOCK IN POSITION ON MAIN BEARING

b. Tighten the bearing cap bolts, first one and then the other, a little at a time to 85 to 95 lb./ft. torque [11,7 a 13,1 kg./m.].

c. Turn the crankshaft by hand not more than one inch in either direction.

**CAUTION:** *Turning the crankshaft more may imbed the shim stock in the bearing, giving a false indication of fit and damaging the bearing.*

If the bearing clearance is correct, the piece of .001" feeler stock should produce a light to heavy drag. If there is little or no drag the bearing fit is too loose — if the crankshaft will not turn there is not enough clearance. In either case another bearing must be selected to provide the proper fit.

d. After the bearing has been correctly fitted, remove the shim stock, wipe the bearing and journal carefully and apply clean engine oil to the surfaces. Replace the cap and tighten the bolts first one, then the other, a little at a time, to the prescribed torque. Replace the lock wires. The crankshaft should now turn freely without drag.

### D-51. Connecting Rod Bearings

The connecting rod bearings, like the crankshaft main bearings, are the replaceable type. When correctly installed, the bearings provide proper clearance without filing, boring, scraping, or shimming. Upper and lower bearing halves are retained in position with locks notched in the bearing to fit into corresponding notches in the cap and connecting rod. The position of the bearing lock and oil hole in the bearings for numbers 1, 3, and 5 connecting rods is the opposite of those for numbers 2, 4, and 6 and, therefore, they are not interchangeable.

able. Connecting rod bearings should be replaced as a complete set of six bearings, each bearing consisting of two halves.

The following undersize connecting rod bearings are available:

.001" [0,025 mm.]	.012" [0,304 mm.]
.002" [0,050 mm.]	.020" [0,508 mm.]
.010" [0,254 mm.]	

The bearings may be replaced with the engine in the vehicle when made accessible by removal of the oil pan. However, should it be necessary to replace the bearings due to wear, replacement of piston rings and piston pins is also recommended.

**NOTE:** Effective with engine serial numbers SW-6-L-226-12252 and TW-6-L-226-47787, new improved connecting rod bearings entered production. The old and new bearings should not be intermixed. If only part of the connecting rod bearings are to be replaced on engines with serial numbers lower than the above listed numbers, the old style bearings should be installed. If all connecting rod bearings are to be replaced on any L6-226 engine, the new type bearings should be installed.

### D-52. Connecting Rod Bearing Replacement

The bearings are replaced by removing the bearing cap and the upper and lower bearing halves. The new bearings must be installed so that the oil holes align with those in the connecting rod and the locks must fit into the corresponding notches in the rod and cap and seat evenly. Each bearing cap must be installed on the connecting rod from which it was removed, and in the same position.

### D-53. Connecting Rod Bearing Inspection

The crankpins must be carefully inspected as detailed previously in Par. D-41. Worn crankpins will require undersize bearings. Scored, flaked or worn bearings must be replaced.

### D-54. Fitting Connecting Rod Bearings

The bearing fits may be roughly checked by shaking the connecting rod by hand, prior to removal of the bearing cap, to determine if it is loose on the crankshaft.

The bearing clearances may be measured with "Plastigage" or shim stock as follows:

After wiping and carefully inspecting the bearing bore, install the proper bearing. See that the oil hole in the bearing upper half registers properly with the oil hole in the connecting rod and that the lock fits properly in the notch in the rod. Never file either the bearing cap or the bearing to compensate for too much clearance. Do not use shims under a bearing cap or behind a bearing shell. Do not run a new bearing half with a worn half.

The desired running fit (difference between the diameter of the crankpin and the inside diameter of the fitted bearing) for a connecting rod bearing is .001 of an inch [0,0254 mm.] with limits of .0005-.0015 of an inch [0,127-.0381 mm.].

Install the bearing lower half and the connecting rod cap and draw the cap bolt nuts down equally and only slightly tight. Move the connecting rod endwise, one way or the other, on the crankshaft

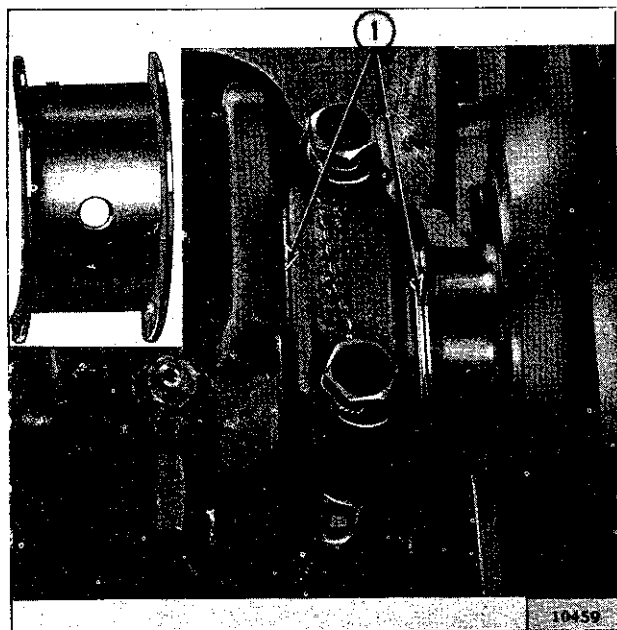


FIG. 48—REAR MAIN BEARING INSTALLATION  
1—Thrust Flanges

to be sure the bearing is not tight. Pull the nuts tighter, first one then the other, a little at a time, and keep trying the fit of the rod on the crankshaft by hand until recommended torque of 40-45 foot pounds [5,5-6,2 kg. m.] is reached. If the bearings are of the correct size, and lubricated with light engine oil before installation, the connecting rod should be easy to slide with the thumbs back and forth parallel to the crankpin. If the connecting rod is tight on the crankshaft, a larger bearing is required. If there is no binding or tightness, it is still necessary to check clearance to guard against too loose a fit.

The use of "Plastigage" or shim stock of the proper size to measure .001 of an inch [.0254 mm.] clearance is recommended for checking connecting rod bearing clearances. This is the same material recommended for checking crankshaft main bearings and the method of checking is similar. Refer to Par. D-49 and D-50. Connecting rod bearings are fitted to the same clearance as the main bearings but the torque specifications for connecting rod cap bolt nuts is only 40-45 foot pounds [5,5-6,2 kg.-m.].

#### D-55. Crankshaft End-Play

The end play of the crankshaft is controlled by flanges on the rear main bearing and the machined surface on the number 8 cheek and on the inner side of the oil seal flange of the crankshaft (Fig. 48). Allowable end play is .003 to .006 inch [.0762-.152 mm.]. If the crankshaft end play is greater than .006 inch the bearing flange is probably worn, which will necessitate bearing replacement.

#### D-56. Checking Crankshaft End-Play — Engine Out of Vehicle

Install the vibration damper bolt and washer. Mount a dial indicator on the front end of the engine with the indicator button against the front end of the vibration damper bolt (Fig. 49). Move the crankshaft endwise to the rear as far as possible

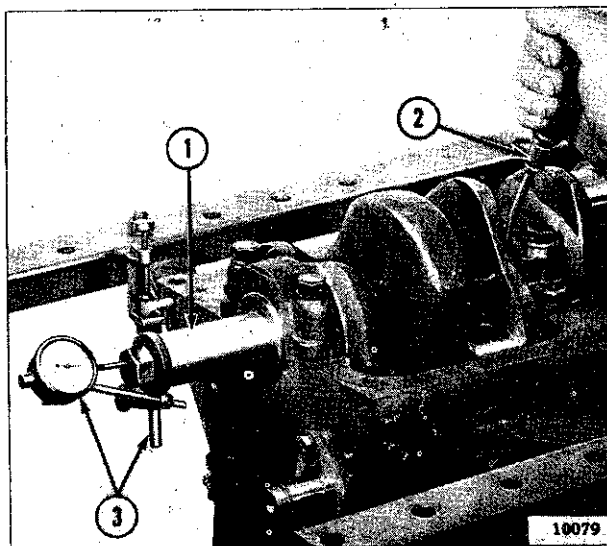


FIG. 49—CHECKING CRANKSHAFT END-PLAY

1—Crankshaft  
2—Screwdriver  
3—Dial Indicator

and set the indicator dial at zero. Then move the crankshaft forward, prying with a screwdriver as shown. The indicator reading is the total amount of end-play. Remove the dial indicator, cap screw and washer.

#### D-57. Checking Crankshaft End-Play — Engine in the Vehicle

When the engine is installed in the vehicle the end-play may be roughly checked by removing the clutch housing pan and moving the crankshaft backward and forward, while observing the amount of movement of the flywheel. Excessive end-play can only be caused by worn flanges on the rear main bearing.

#### D-58. Camshaft and Bearings

The camshaft is supported by four bearings (bushings) pressed into the cylinder block. The camshaft is chain driven from the timing gear at the front of the engine. A spiral gear, integral with the camshaft, drives the oil pump and distributor. The fuel pump is actuated by an arm which engages an eccentric on the camshaft. The camshaft bearings are pressure lubricated from the main oil gallery. Because the plug at the rear of the cylinder block must be removed for accessibility, the camshaft bearings may only be replaced with the engine out of the vehicle.

#### D-59. Camshaft and Bearings Inspection

Clean the camshaft thoroughly in suitable cleaning solvent. Check the diameter of the camshaft journals with a micrometer. The specified journal diameters are as listed below:

##### CAMSHAFT JOURNAL DIAMETERS

Front.....	1.8725"-1.8735" (47.561-47.586 mm.)
Front Intermediate.....	1.8095"-1.8105" (45.961-45.986 mm.)
Rear Intermediate.....	1.7472"-1.7485" (44.378-44.411 mm.)
Rear.....	1.2475"-1.2485" (31.688-31.711 mm.)

If the camshaft journals are worn or out-of-round more than .001 of an inch [.0254 mm.] the cams are probably also worn and the camshaft should be replaced. The cam faces must not be scored or worn and must be perfectly smooth throughout



their contact face. Run-out of the camshaft must not exceed .002 of an inch [.0508 mm.], measured with a dial indicator at the intermediate journals. Inspect all four camshaft bearings to determine if they are loose in the cylinder block, scored, or if the oil holes are out of alignment. Using a telescope gauge and micrometer, check the inside diameter of each bearing (Fig. 50). The specified inside diameters are listed below:

#### CAMSHAFT BEARING BORES

Front.....	1.8745"-1.8755" (47.612-47.637 mm.)
Front Intermediate.....	1.8115"-1.8125" (46.012-46.037 mm.)
Rear Intermediate.....	1.7485"-1.7502" (44.437-44.452 mm.)
Rear.....	1.2495"-1.2505" (31.737-31.762 mm.)

Compare each journal diameter with the corresponding bearing diameter. If the bearings are defective or permit over .004 of an inch [.1016 mm.] running clearance, the bearings and/or the camshaft must be replaced.

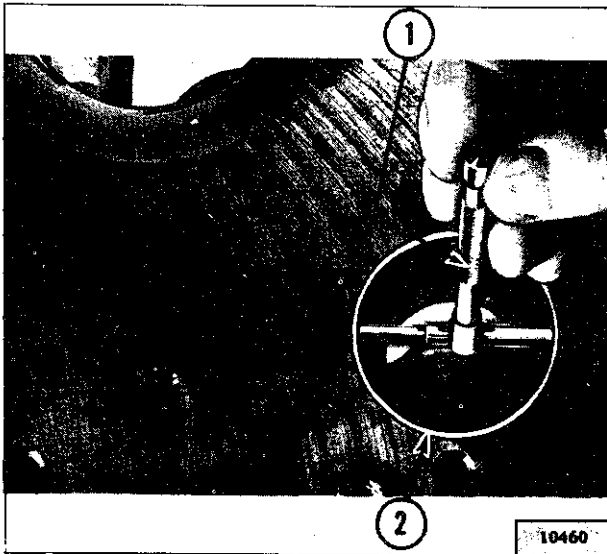


FIG. 50—CHECKING CAMSHAFT BEARING INSIDE DIAMETER

1—Telescope Gauge  
2—Camshaft Bearing

#### D-60. Camshaft Bearing Replacement

Replacement camshaft bearings are line bored in sets at the factory, and do not require additional machining. If it is found necessary to replace one bearing, all bearings must be replaced.

#### D-61. Camshaft Bearing Removal

To remove the camshaft bearings, remove the expansion plug from the rear camshaft bearing bore. Place all of the puller bushings into the bearings. Screw the two pieces of the puller bar together and slide the bar through the puller bushings in the bearings. Remove the bearings, one at a time, placing the slotted washer in the slot in the bar at the back of the bearing to be removed. Strike the nut end of the bar with the sliding weight to remove the bearing (Fig. 51).

#### D-62. Camshaft Bearing Installation

Install new camshaft bearings, one at a time, using the puller bushing that fits the bearing being installed. Install the pilots in the bores in the cylinder block and slide the replacer bar through the pilots and the puller bushing (with the bearing on it). Fit the slotted washer into the slot in the bar at

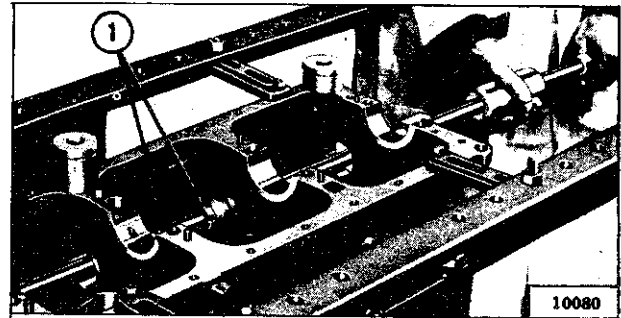


FIG. 51—REMOVING CAMSHAFT BEARINGS

1—Camshaft Bearing Remover and Replacer

the back of the bearing to be installed. Align the bearing with the bore, making sure the oil hole in the bearing is in position to align with the oil hole in the bore. When installing the front bearing, the small groove leading from the oil hole must be toward the front of the cylinder block.

Strike the nut end of the replacer bar with the sliding weight to drive the bearing into place, centering it in the bore. Fig. 52. Clean out the expansion plug seat of the rear bearing bore. Apply gasket paste and install a new expansion plug.

#### D-63. Timing Gears, Chain and Cover

The timing gears are mounted at the front of the engine, a wide short chain providing the drive. The gears are keyed to their respective shafts. Lubrication is provided by a continuous stream of oil from the engine pressure system. The timing gears and chain are enclosed by the sealed timing chain cover. Two types of timing chains and gears are in use (Fig. 53). The timing gears, chain and cover are accessible for inspection or replacement with the engine installed in the vehicle after removing the radiator, vibration damper and timing chain cover. Usually when one of the timing gears or the chain needs to be replaced, all of the parts should be replaced. When both of the gears and the chain are being replaced with new parts, "Morse Chain" and "Link Belt" makes of parts can be used interchangeably.

Engine S/N TW-6L-226-90919 and up

Engine S/N SW-6L-226-14188 and up

A new timing chain and gear set was installed in production with the starting engine serial numbers listed. A set consists of crankshaft gear, camshaft gear, and chain, and these components cannot be interchanged with the earlier parts. As a complete set, however, they can be installed on earlier engines.

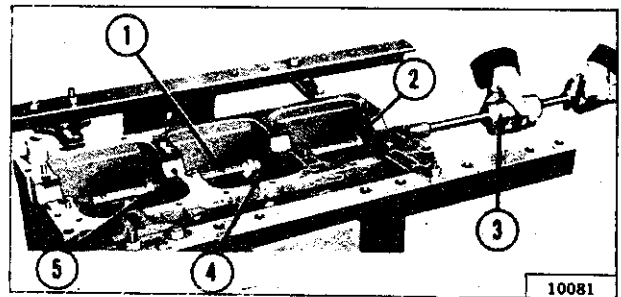


FIG. 52—INSTALLING CAMSHAFT BEARINGS

1—Camshaft Bearing Replacer 4—Camshaft Bearing  
2—Pilot 5—Pilot  
3—Slide Hammer

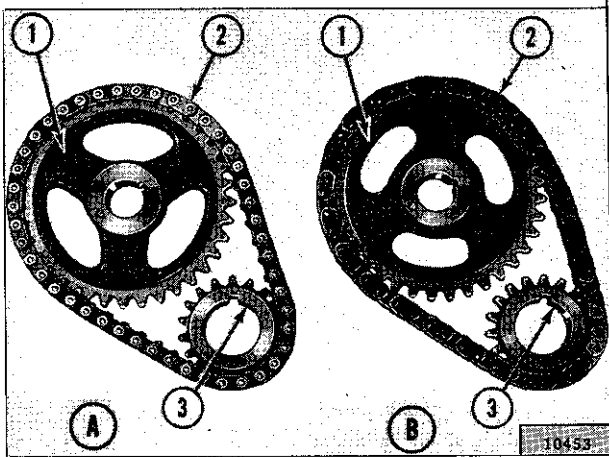


FIG. 53—TWO TYPES OF TIMING CHAINS AND GEARS

- A—Link Belt  
B—Morse Chain  
1—Camshaft Timing Gear  
2—Timing Gear Chain  
3—Crankshaft Timing Gear

#### D-64. Inspection and Repair

Check the general condition of both gears and chain and inspect for evidence of excessive wear. Replace excessively worn or damaged gears or chain.

Check the chain for excessive wear or stretch. Press on one side of the chain midway between the crankshaft and camshaft gears. If deflection of the chain is more than  $\frac{1}{2}$ " [1,8 cm.], the chain has been stretched or excessively worn and must be replaced. Inspect the cover and replace if bent or damaged. It is recommended that the crankshaft oil seal in the cover be replaced while the cover is removed, to assure a good seal around the crankshaft.

#### D-65. Timing Chain Cover Oil Seal

Drive out the old seal and replace with a new seal, using an oil seal driver (Fig. 54). When installing

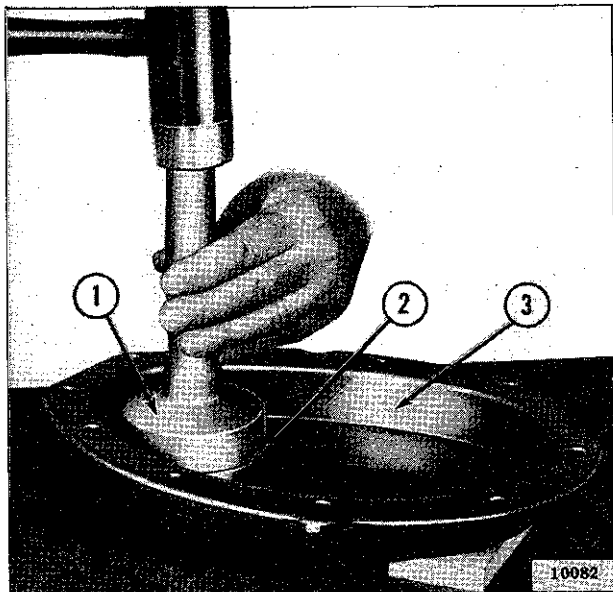


FIG. 54—INSTALLING TIMING CHAIN COVER OIL SEAL

- 1—Driver  
2—Oil Seal  
3—Timing Chain Cover

the new seal, be sure that the cover is braced so that the oil seal opening flange is firmly flush on a flat surface. This will prevent cocking the new seal. Apply a thin coating of sealing compound around the outer edge of the seal and place the seal in the opening so that the seal lip faces toward the inside of the cover. Drive the seal in place with a suitable driver. After installing the seal, check to see that it is not cocked and then thoroughly lubricate the seal with non-acid lubricant.

#### D-66. Vibration Damper

The vibration damper is mounted on the front end of the crankshaft. The damper is designed to reduce the amplitude of torsional vibration set up in the engine. A distorted, broken or otherwise damaged vibration damper must be replaced.

#### D-67. Valves, Springs and Guides

The valves, springs and guides are installed in the cylinder block. The valve seats on the top of the cylinder block with the stem extending down through the guide and into the tappet chamber. The valve spring is assembled and locked on the lower end of the valve stem. The retaining lock is the split type, which fits in a recess on the valve stem and into the taper in the valve spring retainer. The valves, springs, and guides may be repaired or replaced with the engine in the vehicle when made accessible by removal of the tappet chamber cover and cylinder head.

#### D-68. Inspection of Valves, Springs, Guides

Clean the valves on a wire wheel, making sure that all carbon is removed from the top and the underside of the heads and that all gum and varnish deposits are removed from the stems.

Polish the valve stems with steel wool or crocus cloth. Visually inspect all valves for warpage, cracks, or excessive burning and discard if one of these conditions exists. Replace any worn, pitted,

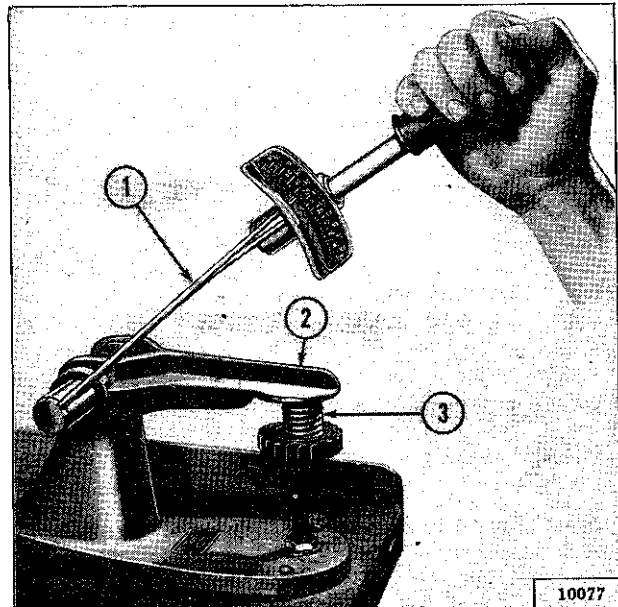


FIG. 55—TESTING VALVE SPRING

- 1—Torque Wrench  
2—Spring Testing Fixture  
3—Valve Spring



or corroded valves that cannot be cleaned with a wire brush. Replace any valves when seats are pitted, burned, or corroded so badly that they cannot be cleaned up with a light refacing on a valve refacing machine.

Replace valves with marks or scoring or abrasion visible on the stem. Replace any valves with bent stems which will be apparent when the valve is mounted in the valve refacing machine. Examine the stems of valves which employ the ball bearing rotators. Wear marks around the circumference of the stems indicates that the valve is rotating satisfactorily. Vertical heavy pressure areas indicate that the valve is not rotating and the valve spring retainer (Roto Cap) should be replaced if at fault. Check the condition of each Roto Cap, particularly the flexible washer for evidence of being cracked, broken, or otherwise not operating properly. Replace any Roto Cap that is defective.

Check the diameter of the valve stem at two or three places along the length of the stem with a micrometer. The intake valve stem diameter is .3414" to .3406" [8,671 a 8,651 mm.]. The exhaust valve stem diameter is .3382" to .3390" [8,590 a 8,610 mm.].

Wash the valve springs thoroughly in solvent. Visually examine the springs and replace any that are deformed or obviously damaged. Examine for corrosion from moisture or acid etching which might develop into surface cracks and cause failure. Measure the over all free length of the springs and replace any that do not measure to standard:  $1\frac{31}{32}$ " [35,7 mm.] for both intake and exhaust valve springs. If possible, check each valve spring in a valve spring testing fixture as shown in Fig. 55. Test each spring when compressed to the two different spring length given (representing valve closed and valve open spring length). If any spring fails to register spring tension equal to or greater than the minimum load limit in pounds specified for that spring length, replace the spring.

Length	Minimum Load
$1\frac{21}{32}$ " [4,2 mm.]	44 lb. [20,0 kg.]
$1\frac{3}{8}$ " [3,5 mm.]	98 lb. [44,5 kg.]

**NOTE:** When using a spring checking fixture as shown in Fig. 55, it is necessary to convert the torque wrench reading which is in pounds-feet to the static pound pressure specified above according to the instructions furnished with the wrench. For example, should the torque wrench reading be 50 lb-ft. and the wrench is two feet long the static pressure of the spring will be 50 x 2 or 100 lbs.

Clean the valve guides with a standard valve guide cleaner or a wire brush. Check the valve guides in the cylinder block. Replace valve guides which are broken or worn enough to cause excessive valve stem-to-guide clearance. See Par. D-72.

Standard intake valve clearance is .0008" to .0026" [0,0203 a 0,0660 mm.] and the exhaust valve clearance is .0032" to .0050" [0,0812 a 0,1270 mm.]. Excessive clearance between the valve stems and guides will cause improper seating and burned

valves. When there is a tendency to draw oil vapor through the guide causing excessive oil consumption, fouled spark plugs, and poor low-speed performance. To check the clearance of the valve stem to the valve guide, take a new valve and place in each valve guide. Check the clearance with a suitably mounted dial indicator or feel the clearance by moving the valve stem back and forth. If this check shows excessive clearance it will be necessary to replace the valve guide.

### D-69. Refacing Valves

Refacing the valves may be accomplished with a valve refacer (Fig. 56). The manufacturer's instructions should be followed when using the refacing equipment.

Reface the intake valves to an angle of 30 degrees and the exhaust valves to an angle of 45 degrees. Take off only the minimum of metal required to clean up the valve faces. If the outer edge of the valve becomes too thin or sharp due to excessive grinding, the valve must be replaced. The valves must be lapped into the valve seats, using a suitable lapping compound, after the valve seats are refaced as described in Par. D-71.

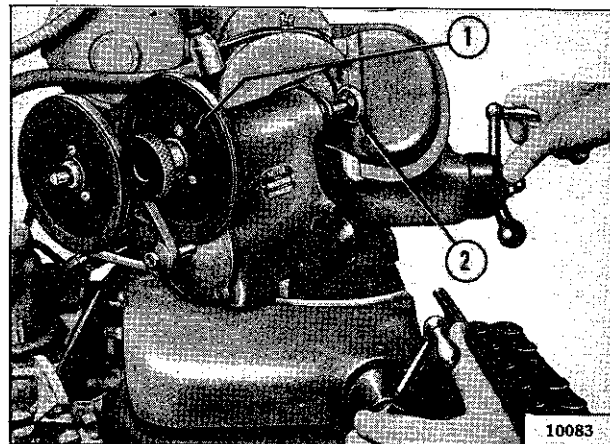


FIG. 56—REFACING VALVES

1—Valve Refacer  
2—Valve

### D-70. Exhaust Valve Seat Insert Replacement

Hardened valve seat inserts for exhaust valves were installed in production beginning with engine serial number SW-6-L-266-13815 and TW-6-L-226-81088. They will only occasionally require replacement.

To avoid damaging the block, remove an insert with a tool designed for this purpose. When installing a new insert, make certain the counterbore is clean and smooth. Use an installer tool that will keep the insert in true alignment with the bore. Cool the insert and the installing tool with dry ice for 30 minutes. Immediately after removing a seat insert from the dry ice, position it over the counterbore. Make certain the valve seat is facing out. Drive the insert with the tool until it bottoms in the counterbore. After installation, check the

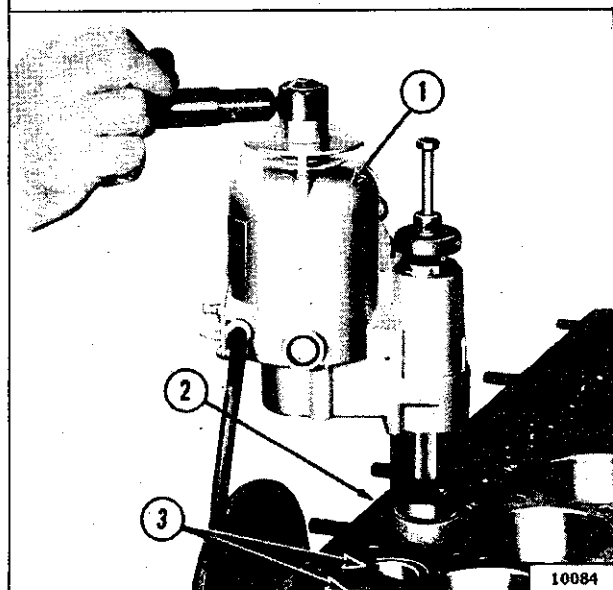


FIG. 57—REFACING VALVE SEATS

- 1—Valve Seat Refacer  
2—Cylinder Block  
3—Valve Seats

valve seat for concentricity with the valve guide. Grind the valve seat using the procedure given in Par. D-71.

#### D-71. Valve Seat Inspection and Refacing

Inspect the valve seats for cracks, burns, pitting, ridges, or improper angle and reface. During any general engine overhaul it is advisable to reface the valve seats regardless of their condition. If valve guides are to be replaced, this must be done before refacing the valve seats.

Refacing the valve seats may be accomplished with a valve seat grinder in accordance with the manufacturer's instructions (Fig. 57).

The valve seat width after refacing should measure  $\frac{5}{64}$  to  $\frac{3}{32}$  of an inch [1,98-2,38 mm.] for intake valves and  $\frac{3}{32}$  to  $\frac{7}{64}$  of an inch [2,38-2,78 mm.] for exhaust valves. The width may be checked by

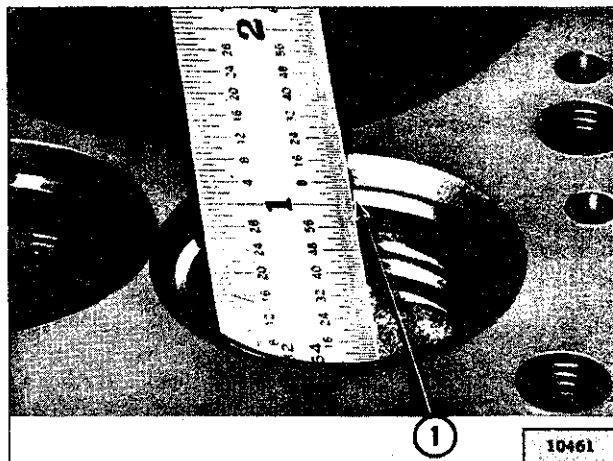


FIG. 58—CHECKING VALVE SEAT WIDTH

- 1—Valve Seat

placing a scale across the face of the seat (Fig. 58). If the width of the seat is greater than specified it should be narrowed by removing stock from the top of the seat with a valve seat relief counterbore and if necessary from the lower edge of the seat with a 70° valve seat cutter Fig. 59.

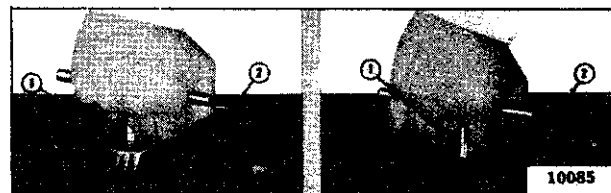


FIG. 59—NARROWING WIDTH OF VALVE SEAT

- 1—Pilot  
2—Relief Counterbore

- 1—Pilot  
2—Narrowing Cutter

The proper method of valve seat refacing when using a valve seat relief counterboring set and a 70° valve seat narrowing cutter is outlined below. Seat width should always be narrower than the valve face as illustrated by A in Fig. 60. Wide valve seats tend to collect carbon while narrow valve seats prevent the valve head from rapidly dissipating heat to the block.

Valve ports in L6-226 engines are not machined perpendicular to the centerline of the crankshaft, therefore the valve head sets at an angle in relation to the top surface of the block when properly assembled in its guide (see B in Fig. 60).

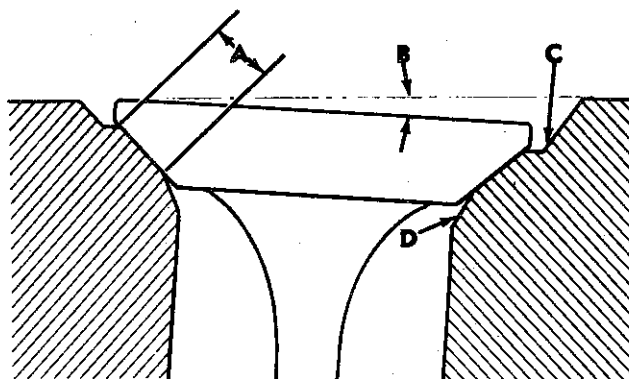


FIG. 60—PROPERLY REFACED VALVE SEAT

When a valve seat has been refaced several times or where it must be cut deeply for adequate reconditioning, the seat may become too wide for efficient operation and/or a high shoulder may be left in the block. In such cases, the counterbore in the surface of the block must be recut. Also, narrow the valve seat (shown at C in Fig. 60). This operation is performed only **after** the valve seats have been refaced and then only when necessary.

If the counterbore in the block is satisfactory and the valve is setting high on the valve seat, a 70° valve seat narrowing cutter may be used with a pilot to increase the inside diameter of the valve port thereby reducing the seat width from the lower inside edge of the seat as shown by D in Fig. 60. In some cases, it is necessary to obtain proper concentricity of the diameter at the lower

inside edge of the seat, or to clean up any roughness in the valve port that is evident just below the valve seat.

**CAUTION:** When using valve seat cutting tools, care must be taken to remove only the minimum amount of metal necessary to satisfactorily accomplish that phase of the operation being performed. Excessive removal of material may damage the block beyond repair by factory approved methods, or nullify the reconditioning work that had been accomplished on the valve seat up to that point.

A simple check can be made to prove the fit of the valve in the valve seat, by spreading a thin film of prussian blue on the valve face and then inserting the valve into the valve seat (Fig. 61). With hand pressure, rotate the valve a quarter of a turn and then remove the valve and observe the transfer of prussian blue to the valve seat. An uneven transfer of prussian blue will indicate an inaccurate valve and valve seat refacing operation.

### D-72. Valve Guide Replacement

Damaged, loose, or worn valve guides must be replaced. The guides may easily be removed with Valve Guide Remover and Replacer KF-27 (Fig. 62). If a valve guide is loose in the cylinder block, the valve guide bore should be reamed and an oversize guide should be installed.

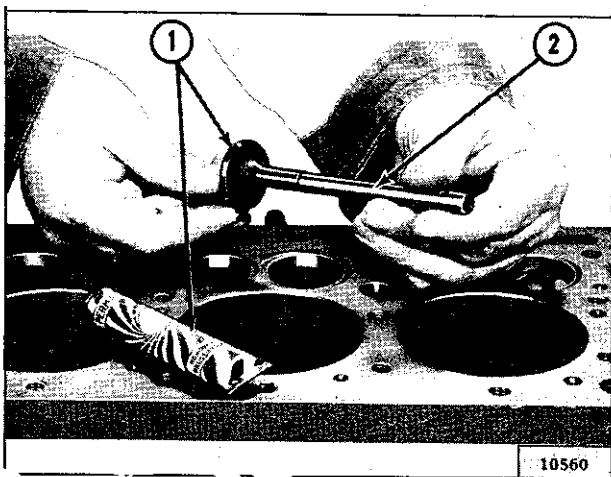


FIG. 61—CHECKING FIT OF VALVE IN VALVE SEAT  
1—Prussian Blue 2—Valve

Assemble the tool as shown in Fig. 62, using the angular spacer (3), with the thickest part of the spacer toward the manifold side of the cylinder block, and the small nut (4) at the end of the shaft inside the valve chamber. Be sure to place the thrust bearing with the rotating face toward the nut on the outside end of the tool. Hold the shaft (1) to prevent rotation and tighten the nut (2) until the valve guide top end is  $1\frac{1}{32}$  inches [30,95 mm.] below the top face of the cylinder block.

Check the valve guide bore in the block as well as the outside diameter of the new valve guide for size, to obtain .0005-.003 of an inch [.0127-.0762 mm.] press fit. Valve guides are available in .0005 and .0055 of an inch [.0127-.139 mm.] oversizes, marked "A" and "L" respectively for identification.

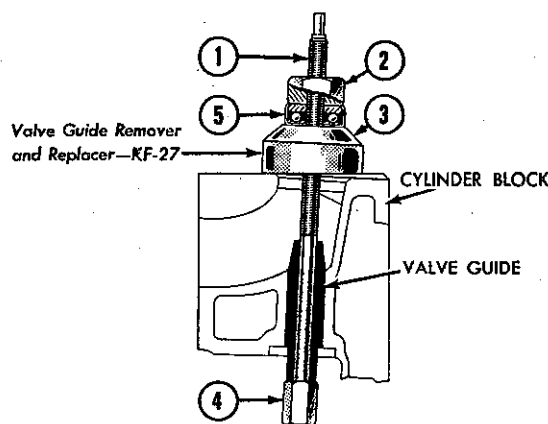


FIG. 62—REMOVING VALVE GUIDE FROM CYLINDER BLOCK

To replace a valve guide, place the guide (tapered end toward the top of the block) in the proper position in the bore. Assemble Valve Guide Remover and Replacer KF-27 as shown in Fig. 63, using the collar (8) with the proper end set into the valve port bore as required, and the recessed nut (6) at

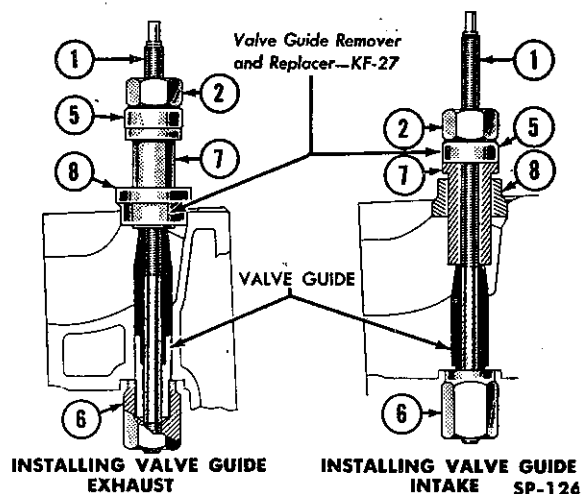


FIG. 63—INSTALLING VALVE GUIDE IN CYLINDER BLOCK

the end of the shaft inside of the valve chamber and the sleeve (7) at the top of the shaft. Hold the shaft (1) to prevent rotation and tighten the nut (2) until the valve guide top end is  $1\frac{1}{32}$  inches [30,95 mm.] below the top face of the cylinder block.

Use Valve Guide Reamer C-249 to ream the valve guides to .3432-.3422 inch [8,71-8,69 mm.] diameter (Fig. 64).

### D-73. Tappets and Cover

A mushroom type, two piece self-locking tappet is used in Model L6-226 engine. The tappets, operating directly on the lobes of the camshaft, are housed in bores of the cylinder block tappet chamber. The tappets are adjustable to maintain the specified clearance between the tappet and valve stem. Tap-

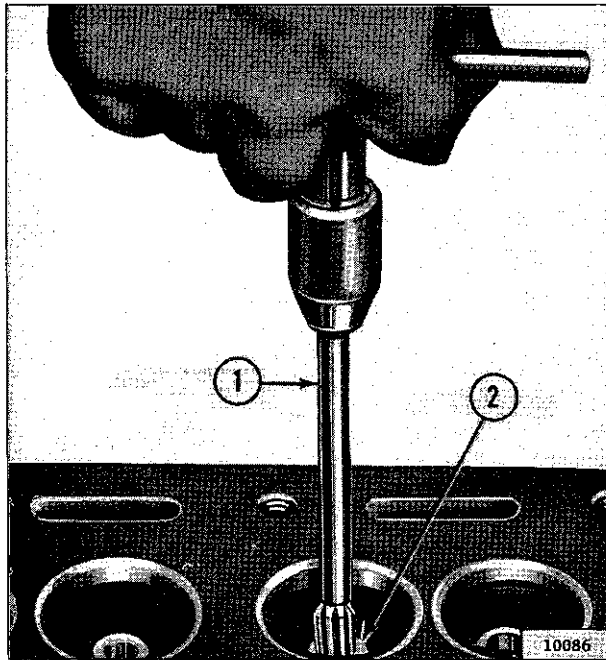


FIG. 64—REAMING VALVE GUIDE

1—Reamer  
2—Valve Guide

pets are available in standard size and .001, .002 and .005 inch [.0254, .0508, .127 mm.] oversizes. Oversize tappets are identified by a letter on each tappet as follows: .001 oversize is identified by the letter "B", .002 is "D" and .005 is "K".

The tappet chamber cover includes an integral ventilator tube to provide crankcase ventilation. The cover is mounted on the cylinder block to cover the tappet chamber and prevent the loss of oil.

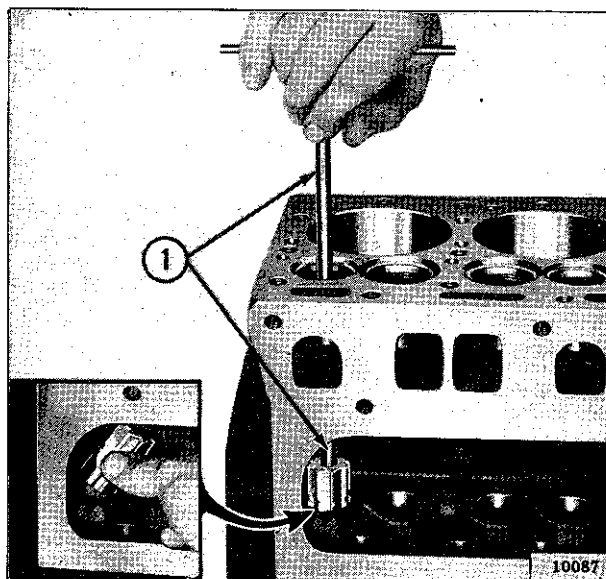


FIG. 65—REAMING TAPPET BORES


1—Reamer

### D-74. Tappet Inspection and Fitting

Inspect each tappet carefully. Worn, scored or damaged tappets must be replaced. Standard tappet diameter is .6855-.6860 of an inch [17,41-17,42 mm.]. Tappets are a selective fit in the tappet bores. Proper tappet fit may be determined by rotating the tappet in the bore; if properly fitted, a slight drag should be evident. If the tappet is loose, selectively fit another standard or an oversize tappet, or ream the bores to accommodate the next oversize tappet (Fig. 65).

### D-75. Crankshaft Rear Oil Seal

The rear end of the crankshaft is sealed against oil leaks by the gaskets (or seals) of the rear filler block and filler block guard. The filler block guard is mounted in a recessed groove of the cylinder block and is held in position by the filler block, with the gasket (or seal) fitting snugly against the crankshaft.

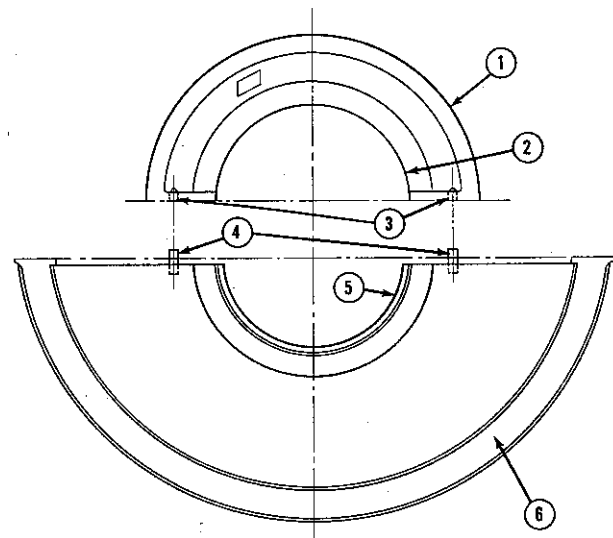

10585

FIG. 66—CRANKSHAFT REAR FILLER BLOCK DOWEL PINS

1—Guard  
2—Seal  
3—Holes  
4—Pins  
5—Seal  
6—Filler Block

A new rear bearing oil seal assembly designed to reduce the possibility of leakage at the rear oil seal entered production with engine serial numbers SW-6-L-226-13542 and TW-6-L-226-74176. The improved rear bearing filler block is provided with dowel pins, as shown in Fig. 66.

**NOTE:** Early production vehicles with this change had the dowel pins located in the filler block as illustrated in Fig. 66. On later production vehicles, the dowel pins are located in the guard. Whichever assembly is present will have dowels in one of these two mating parts and matching holes in the other part. With this assembly, the oil pan side gaskets must have a hole in the proper location for the dowel pins. See Par. D-110.

Whenever a filler block and guard are removed that do not have the dowel pins, they should be replaced with this new assembly. For converting to the doweled block and guard, a special Rear

Oil Seal Service Kit with all the necessary parts is available.

The filler block is bolted to the cylinder block with the gasket (or seal) fitting snugly against the crankshaft (Fig. 67).

The filler block and guard are removable for gasket replacement with the engine installed in the vehicle when made accessible by removing the oil pan.

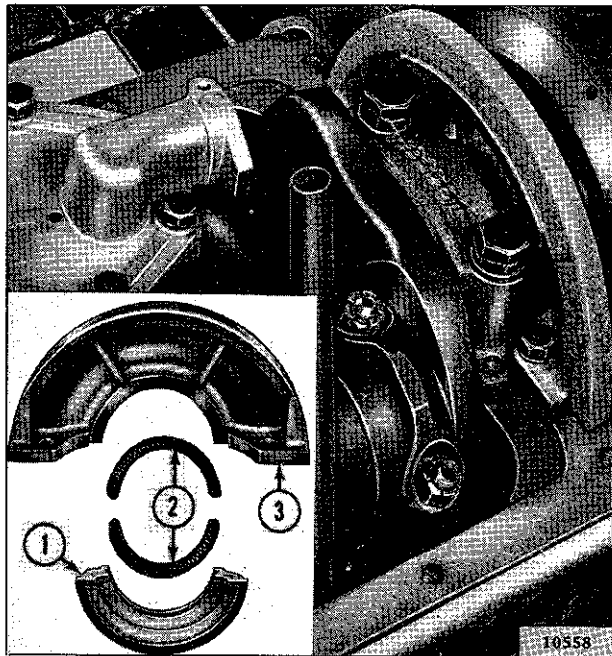


FIG. 67—CRANKSHAFT REAR OIL SEAL AND FILLER BLOCK

1—Guard  
2—Oil Seal  
3—Filler Block

#### D-76. Crankshaft Rear Filler Block Guard

Clean the crankshaft rear filler block guard thoroughly. Remove and discard the gasket (or seal) and clean the groove in the guard. A graphite impregnated oil seal should be used when replacement of the gasket is necessary.

To install the oil seal, slightly flatten the seal and insert it in the groove, seating it firmly by rolling with a mandrel. Roll from the ends toward the center of the seal. The ends of the seal should extend slightly beyond the flat surface of the guard. In order that this seal may be effective against oil leakage, it must be centered with respect to the crankshaft and exert uniform pressure all the way around the crankshaft. No shellac or sealing compound is needed between the oil seal and the groove in the guard.

#### D-77. Crankshaft Rear Filler Block

Clean the rear filler block thoroughly. Remove the cork gasket (or seal) material and carefully clean the grooves. Lightly coat the contact surface of the oil pan and gasket with gasket paste and place the gasket in the groove in the filler block.

To install the oil seal, insert it in the groove and seat it firmly by rolling with a mandrel. Roll from the ends toward the center of the seal. The ends

of the seal should extend slightly beyond the flat surface of the filler block (Fig. 68).

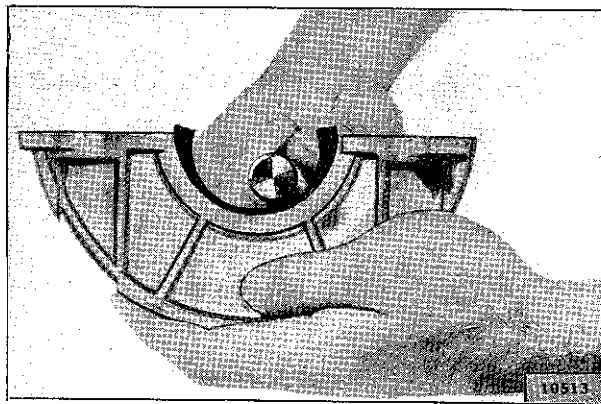


FIG. 68—INSTALLING OIL SEAL IN CRANKSHAFT REAR FILLER BLOCK

#### D-78. Crankshaft Front Filler Block

The front filler block is mounted to the cylinder block and front end plate. A gasket cemented in the groove of the filler block provides the front seal for the oil pan.

The filler block gasket may be replaced with the engine installed in the vehicle, after it has been made accessible by removal of the oil pan.

#### D-79. Oil Pump

The engine is pressure lubricated by a submerged, progressing-tooth-gear oil pump (Fig. 69) located in the oil pan. The pump, gear driven by the camshaft, draws oil through a floating oil screen and forces it under pressure to the main oil gallery, and thence to all main, connecting rod and camshaft bearings, as well as to the tappets, timing chain and gears. The cylinder walls and pistons are supplied with oil from spurt holes in the lower ends of the connecting rods. The pressure at which the oil relief valve opens with standard setting is approximately 35 lbs. [2,46 kg-cm<sup>2</sup>]. Safe minimum pressure is 6 lbs. [0,421 kg-cm<sup>2</sup>] at idle and 20 lbs. [1,406 kg-cm<sup>2</sup>] at 2000 rpm. (35 mph. [56 k.]).

The oil pump may be removed for repairs or replacement with the engine installed in the vehicle after it is made accessible by removal of the oil pan.

#### D-80. Oil Pump Disassembly

Before disassembling the oil pump clean it thoroughly in a suitable cleaning solvent.

- a. Remove the cotter pin attaching the float to the pump. Remove the float from the pump.
- b. Remove the pump cover and gasket. Discard the gasket.
- c. Drive out the pin that secures the camshaft drive gear to the oil pump drive shaft.
- d. Using a suitable drift, drive out the drive shaft.
- e. Remove the idler gear from the pump body.
- f. Remove the idle gear shaft (if necessary).
- g. Remove the drive gear from the drive shaft. The gear is pressed on and keyed to the shaft.

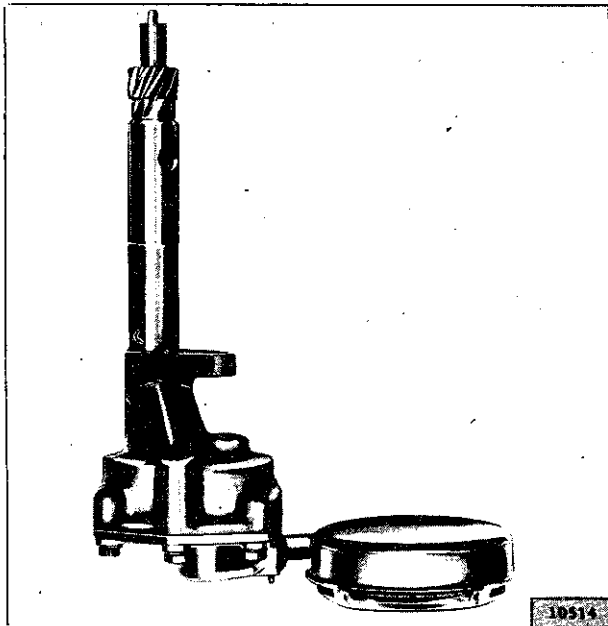


FIG. 69—OIL PUMP AND SCREEN

**D-81. Inspection and Repair**

Replace the oil pump body if it is cracked or damaged. If the oil pump body bushing is worn to permit a clearance of over .005 of an inch [127 mm.] measured between the gear teeth and the pump body (Fig. 71), the bushing must be replaced and line reamed to .500-.501 of an inch [12,70-12,72 mm.] diameter.

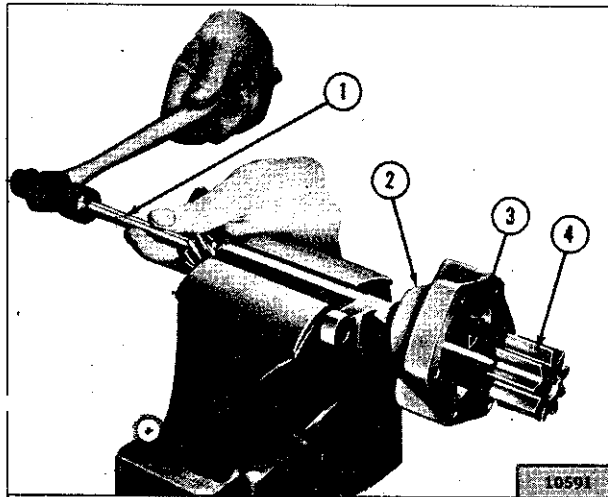


FIG. 70—REMOVING OIL PUMP DRIVE SHAFT AND GEAR

1—Driver  
2—Body  
3—Drive Shaft  
4—Drive Gear

If the drive shaft is worn it must be replaced. Specified drive shaft diameter is .4990-.4985 of an inch [12,67-12,66 mm.]. If the cover plate is worn from contact with the gears or if it is cracked, it must be replaced. Using the edge of a steel scale placed across the bottom face of the pump gears check the clearance between the scale and the face of the pump body with a feeler gauge (Fig. 72). This clearance must be .001-.004 of an inch [.0254-.1016 mm.].

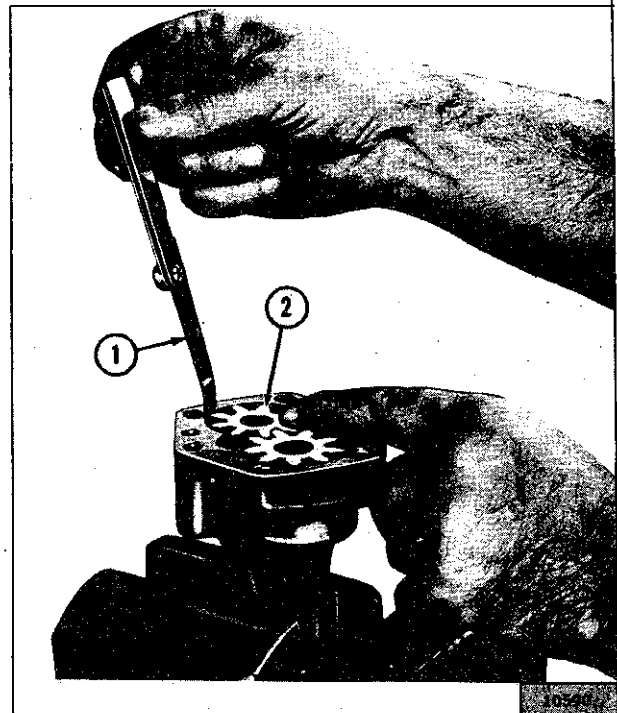


FIG. 71—CHECKING GEAR TOOTH TO BODY CLEARANCE

1—Feeler Gauge  
2—Drive Gear

If the teeth of the gears show excessive wear, the gears should be replaced. However, if inspection of various parts indicates extensive wear it is recommended that the oil pump assembly be replaced. The float assembly should be thoroughly cleaned and blown out with compressed air. Replace the float if it or the screen is damaged.

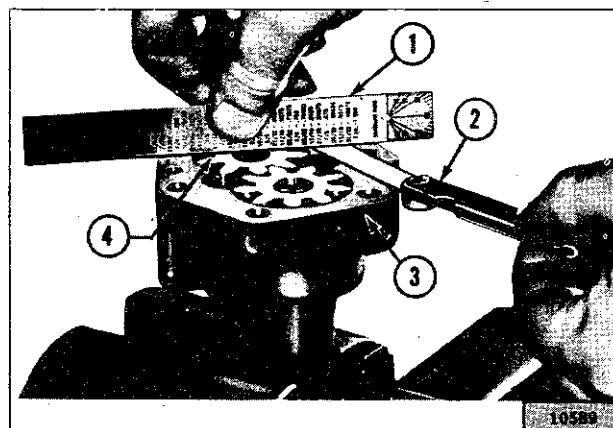


FIG. 72—CHECKING GEAR TO COVER CLEARANCE

1—Straight Edge  
2—Feeler Gauge  
3—Oil Pump Body  
4—Drive Gear

**D-82. Oil Pump Assembly**

After inspection and repair of the oil pump components assemble the pump (Fig. 73) as follows:

a. Press the gear on the drive shaft with the hole in the gear and in the shaft aligned. Install a new pin and peen the ends of the pin, making sure they are flush with the outside diameter of the gear. If a new shaft is to be installed it is furnished with a

new camshaft gear already assembled.

b. Install the drive shaft and gear assembly in the oil pump body.

c. Press the drive gear on the lower end of the drive shaft, using a new key. As indicated in Fig. 74 the gear should be pressed onto the shaft until there is .002" to .004" [0,0508 a 0,1016 mm.] clearance measured between the end of the camshaft gear and the pump body.

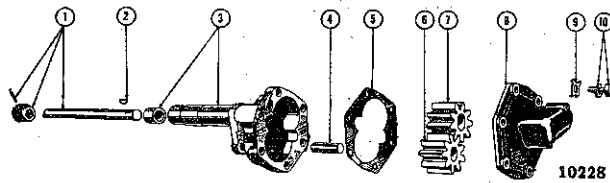


FIG. 73—OIL PUMP

- |                  |                        |
|------------------|------------------------|
| 1—Oil Pump Shaft | 6—Driven Gear          |
| 2—Woodruff Key   | 7—Drive Gear           |
| 3—Body           | 8—Cover                |
| 4—Stud           | 9—Tab Lockwasher       |
| 5—Gasket         | 10—Bolt and Lockwasher |

d. Press the idler gear shaft into the oil pump body and install the idler gear on the shaft.

e. Install a new gasket and the pump cover.

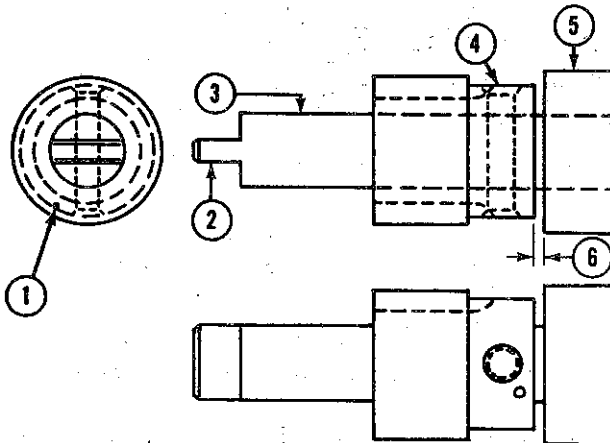


FIG. 74—LOCATING CAMSHAFT GEAR ON OIL PUMP SHAFT

- |   |
|---|
| 1—Prick Punch Mark in Gear              |
| 2—Tongue                                |
| 3—Shaft                                 |
| 4—Drill Hole at Right Angle with Tongue |
| 5—Pump Body                             |
| 6—.002" to .004" [0,0508 a 0,1016 mm.]  |

**NOTE:** Effective with engine S/N SW6L-226-13509 and TW6L-226-74081 a production change was made to include a tab lock washer under each of the six oil pump cover screws. The installation of these tab lock washers will eliminate the possibility of the cover coming loose. Install the tab lock washers on all pump cover screws without them. Also, oil pump cover screws having an over all length of  $\frac{3}{4}$ " [2 cm.] must be used with the tab lock washers. Check the screws for proper length and replace them with screws of the correct length if they prove to be shorter than  $\frac{3}{4}$ ".

Torque the oil pump cover screws 7 to 10 lb-ft. [1,0 a 1,4 kg-m.]. Bend one of the tabs against each screw to secure it.

f. Install the oil pump float on the cover and

secure it with a cotter pin.

g. Rotate the drive shaft. The shaft and gears must rotate freely.

#### D-63. Oil Pump Bushing (In Cylinder Block)

Replace the oil pump bushing if it is worn or loose in the cylinder block bore. A loose bushing may slip out of place and restrict the oil gallery.

The bushing may be driven out with a suitable drift inserted in the distributor drive shaft bore from the top of the cylinder block. Install the bushing from the bottom of the cylinder block, using a suitable driver. The bushing must be flush with the bottom of the cylinder block and must not restrict the oil gallery.

#### D-84. Oil Pan

Examine the oil pan carefully for evidence of corrosion, dents, or other damage. Replace with a new pan if necessary. Special attention must be given to the bolting flange to assure proper alignment and a tight seal at the cylinder block. Whenever the oil pan is removed, replace all gaskets regardless of condition.

#### D-85. Flywheel

The flywheel is mounted to the rear flange of the crankshaft. The crankshaft, flywheel, and clutch assembly are statically and dynamically balanced separately and as a unit; therefore, the components should be assembled in their original relative positions to maintain this balance, if possible.

#### D-86. Flywheel Inspection

Inspection should be done only when assembling the flywheel to the crankshaft when assembling the engine. Clean the flywheel thoroughly with a suitable cleaning solvent and wipe dry. Inspect the clutch face of the flywheel for burned condition, rivet grooves or scuffed condition.

Check the flywheel for run-out, warping, and wear. Mount the flywheel on the crankshaft, with the crankshaft in the cylinder block. Mount a dial indicator with the contact button of the indicator resting against the clutch face of the flywheel (Fig. 75). Set the indicator at zero and rotate the flywheel. Maximum allowable run-out is .005" [0,127 mm.].

Relocate the dial indicator and check the run-out on the surface where the clutch pressure plate cover bolts to the flywheel. Maximum allowable run-out is .005 of an inch [1,27 mm.]. Excessive run-out at the bolt circle or the clutch face will seriously affect clutch action; therefore, it is recommended that the flywheel be replaced if the run-out exceeds the specified limits.

Inspect for worn, broken or chipped ring gear teeth and replace the ring gear if necessary. Stripped threads in the tapped holes for pressure plate cover will require replacement of the flywheel.

#### D-87. Ring Gear Replacement

To remove the ring gear from the flywheel, drill a  $\frac{3}{8}$  inch [9,52 mm.] hole through the ring gear and cut through any remaining metal with a cold chisel. Remove the ring gear from the flywheel. Thoroughly clean the ring gear surface of the flywheel. Heat



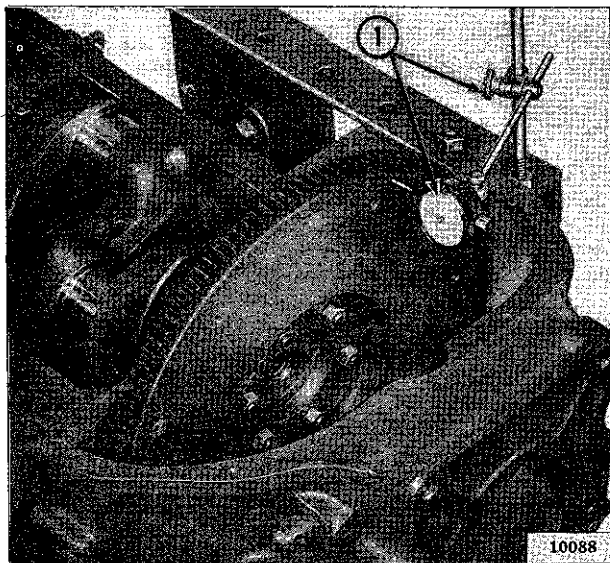


FIG. 75—CHECKING FLYWHEEL RUN-OUT

1—Dial Indicator

the new ring gear evenly to 650°-700°F. [343°-371° C.], and place it on the cold flywheel, making certain that the chamfer on the teeth is opposite the clutch side of the flywheel. Be sure that the ring gear is firmly seated on the flywheel. Allow the ring gear to cool slowly to shrink it onto the flywheel.

#### D-88. Clutch Housing

The clutch housing, which encloses the flywheel and clutch, is bolted to the cylinder block. A removable pan, bolted to the bottom of the housing, provides access to the clutch and flywheel. The rear of the housing provides the front support for the transmission.

Examine the housing for cracks and distortion of the machined surfaces. The front face must seat evenly against the cylinder block or engine rear end plate without evidence of warpage. The rear face must be parallel to the front face. Improper alignment will seriously affect the alignment of the power train. In addition the hole in the rear of the housing, which serves as a pilot for the transmission, must be concentric with the crankshaft.

With the clutch housing installed, the run-out of the pilot hole and the rear face of the housing can be checked with a dial indicator. Install a clutch plate aligning arbor on the crankshaft pilot bushing, expanding it so that it is tight and will not wobble. Then attach the dial indicator to the arbor with the indicator button resting against the rear face of the clutch housing.

Rotate the flywheel, noting the run-out on the indicator. Maximum allowable run-out is .005 of an inch [.127 mm.]. Relocate the dial indicator so that the indicator button will indicate the run-out of the pilot hole in the clutch housing. Rotate the flywheel and note the run-out which should not exceed .006 of an inch [.152 mm.].

If desired, a suitable fixture can be made to attach to the flywheel with one of the flywheel bolts, provided the clutch is not installed on the flywheel,

so that the dial indicator can be mounted on it to check the clutch housing run-out

**NOTE:** Clutch housing run-out should be checked after the clutch housing is installed when assembling the engine.

#### D-89. Core Hole Expansion Plugs

Any evidence of coolant leakage around the core hole plugs will require plug replacement. There are five plugs in the left side of the cylinder block and one at the rear (Fig. 76).

The plugs can be replaced with the engine installed in the vehicle.

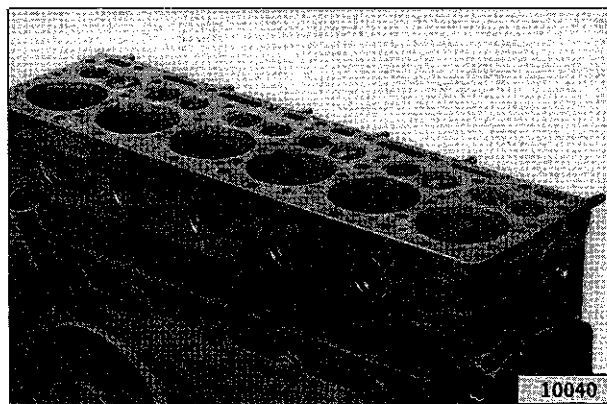


FIG. 76—CORE HOLE EXPANSION PLUGS

The expansion plugs may be removed by drilling a 1/2 inch [12.7 mm.] hole through the expansion plug, drilling as close as possible to the flange of the plug. Cut through the flange with a hacksaw blade being careful not to cut into the cylinder block. Drive a small drift between the flange and block where the cut was made. Pry the plug out of the block.

Before attempting to install the new plug, clean the hole in the block thoroughly. Apply a thin coat of gasket paste on the plug. Install the plug.

#### D-90. Cylinder Head

Replace the cylinder head if cracked, or warped 1/32" [.793 mm.] or more over the full length of the head. Uneven surface condition in localized areas of the head cannot exceed .010" [.254 mm.]. If any tapped hole for spark plugs or water temperature gauge has damaged threads which cannot be cleaned up with the proper tap, or if the threads are stripped, replace the cylinder head. Be sure that all water passages are open and that all carbon is removed.

#### D-91. ENGINE ASSEMBLY

The engine assembly procedure in the following paragraphs is given in the sequence to be followed when the engine is being completely overhauled.

Individual inspection, repair, and fitting operations previously detailed are to be performed when necessary throughout the assembly procedure.

The assembly procedure does not cover accessories.



If a new cylinder block fitted with pistons is used many of the operations will be unnecessary. Most of the operations as given are also applicable with the engine installed in the vehicle.

#### D-92. Install Oil Gallery Plugs

Dip plug threads in suitable sealing compound and install the plugs in the front and rear ends of the oil gallery.

#### D-93. Install Tappets

The tappets and camshaft can be installed while the engine is in the vehicle if the radiator, timing gear cover, oil pan, cylinder head and camshaft have been removed as detailed in Par. D-25. Insert the tappets in the proper locations after the adjustment screw has been turned down to leave about  $\frac{1}{4}$  inch [6,35 mm.] of adjustment remaining. Be sure that all tappets fit snugly in their respective bores. Refer to Par. D-73 for the fitting procedure.

#### D-94. Install Camshaft and Thrust Plate

Lubricate all camshaft bearings and cam surfaces generously with clean light engine oil. Install the camshaft, locating it properly in the bearings. Install the camshaft thrust plate with two bolts and lockwashers. Tighten the bolts to 12-15 foot pounds torque [1,6-2,0 kg-m.].

#### D-95. Install Oil Drain Tube

Install the oil drain tube with the clip, lockwasher, and nut previously removed. Be sure that the tube is installed in the drain hole, the top end flush with the bottom of the valve chamber.

#### D-96. Install Crankshaft Rear Filler Block Guard

Apply gasket paste to the outer edge and shoulder of the rear filler block guard. Install the guard in the cylinder block. Make certain that the seal is concentric with and accurately fits the crankshaft to eliminate any oil leak at this point. Refer to Par. D-75 for the fitting procedure.

#### D-97. Install Crankshaft and Bearings

If there is any reason to believe any of the bearing cap dowels have been bent, remove those dowels and install new ones. Refer to Par. D-35.

Fit the four upper main bearings into their respective locations in the cylinder block. Fit the four lower main bearings into their respective bearing caps. Lubricate all bearing surfaces generously with clean light engine oil. Place the crankshaft in position in the cylinder block and install the main bearing caps. Be sure to tighten the bolts in each cap evenly to pull the cap into place on the dowels without bending the dowels or distorting the bearing cap. Torque the bolts 85 to 95 lb-ft. [11,7 a 13,1 kg-m.], rotating the crankshaft after the installation of each bearing cap is completed.

Install lock wire in the bearing cap bolts of the front, front intermediate, and rear bearings. The rear intermediate bearing cap bolts must not be wired until after the oil pump is installed. Refer to Par. D-47 for information on fitting main bearings.

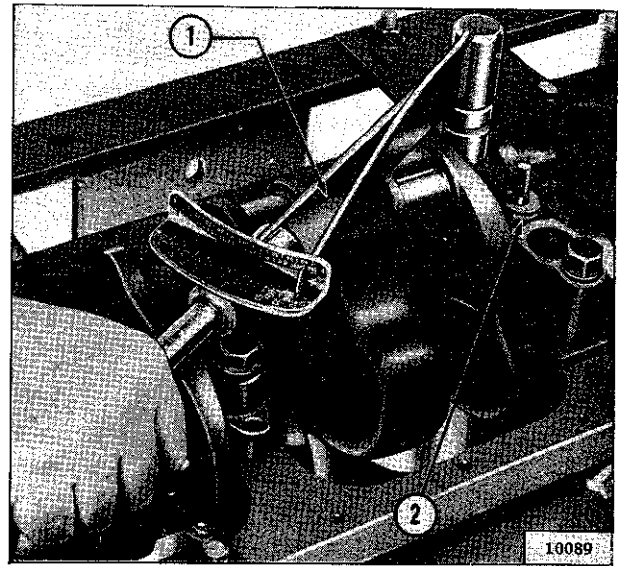


FIG. 77—TIGHTENING MAIN BEARING CAP BOLTS

1—Torque Wrench  
2—Main Bearing Cap

#### D-98. Install Front End Plate

Apply a thin coat of gasket paste to both sides of the front end plate gasket and assemble the gasket to the front end plate. Install the front end plate on the cylinder block. Tighten the  $\frac{5}{16}$  inch [7,9 mm.] diameter bolts to 12-15 foot pounds torque [1,6-2,0 kg-m.] and the  $\frac{7}{16}$  inch [11,1 mm.] diameter bolts to 40-50 foot pounds torque [5,5-6,9 kg-m.].

#### D-99. Install Oil Pressure Relief Valve

Be certain that the recess in the cylinder block is clean and that all pressure relief valve parts are clean, then install the valve, spring, washer (if used), plug gasket, and the plug. Tighten the plug securely. Refer to Fig. 30.

#### D-100. Install Flywheel Housing

Be certain that the mating surfaces of the clutch housing and cylinder block are clean and smooth. Place the clutch housing in position and attach to the cylinder block, installing the long bolts with the lockwasher and nuts on the flywheel housing side. Install the two lockwashers and bolts in the two top center holes. Install the remaining lockwashers and bolts. Torque all bolts 30 to 35 lb-ft. [4,1 a 4,8 kg-m.]. Check the clutch housing alignment as described in Par. D-88.

#### D-101. Install Flywheel

Be sure that the crankshaft flange to flywheel mating surfaces are clean to permit proper flywheel alignment. Place the flywheel on the mounting bolts on the crankshaft (Fig. 78). The bolts are so spaced that the flywheel will fit in only one position. Assemble the lockwashers and nuts to attach the flywheel, tightening the nuts alternately and evenly until each nut is tightened to 35-30 foot pounds torque [4,8-5,5 kg-m.]. Refer to Par. D-85 for checking flywheel alignment.

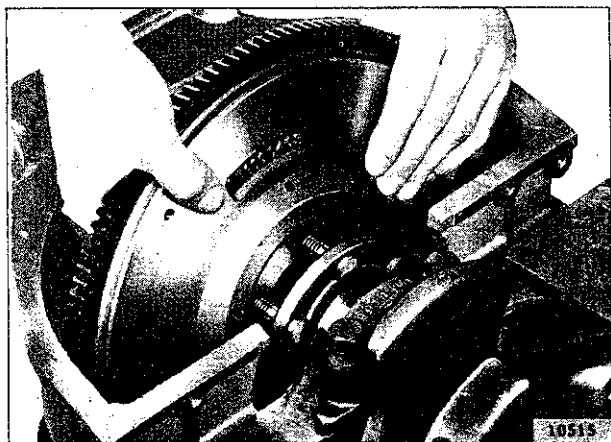


FIG. 78—INSTALLING FLYWHEEL ON CRANKSHAFT

#### D-102. Install Clutch

To install the clutch assembly with the engine out of the vehicle, use a clutch plate aligning arbor. Placing the clutch disc in position against the flywheel, insert the arbor into the crankshaft pilot bushing and against the clutch disc expanding the arbor in the bushing to hold it in place (Fig. 79).

Hold the clutch pressure plate assembly in position against the clutch disc and install the six attaching bolts and washers tightening the bolts alternately and evenly. Remove the arbor.

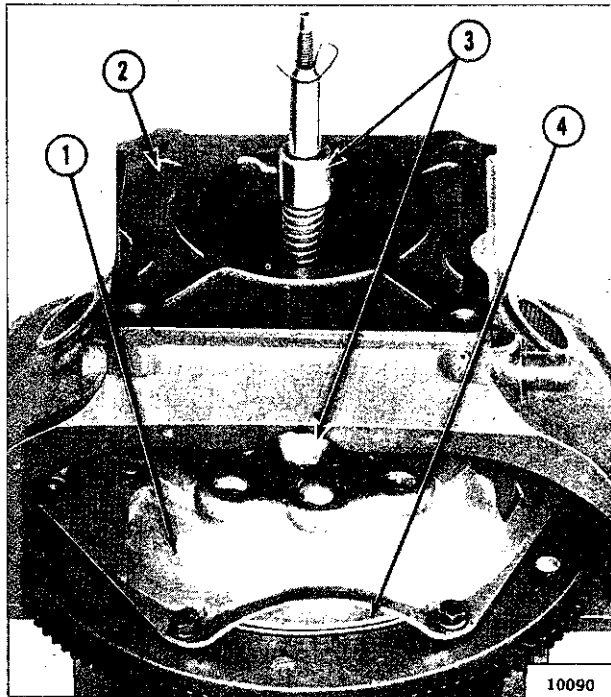


FIG. 79—INSTALLING CLUTCH ON FLYWHEEL

- 1—Pressure Plate Assembly
- 2—Clutch Housing
- 3—Clutch Arbor
- 4—Clutch Disc

#### D-103. Install Valves and Springs

Install valve springs and retainers by slipping the

top end of the spring onto the bottom end of the valve guide and with a large screwdriver pry the spring and washer over the tappet adjusting screw. Make certain that the two close wound coils of each spring are at the top.

Insert all intake and exhaust valves in their proper locations. Using a valve spring lifter (refer to Fig. 22), compress the springs, while holding the valves down, so that the valve stem extends through the valve spring retainer far enough to permit installation of the valve spring locks. Heavy lubricating oil or grease placed on the inside surface of the valve locks will help to hold the locks on the valve stem until the valve spring lifter can be removed. After the valves are installed check the spring height of each spring with the valves in the closed position. If the spring extends down beyond the mean of the gauge, install a service shim on top of the spring.

Adjust the valve tappets to the proper specified clearance. Refer to Par. D-118 for specifications and adjustment procedure.

#### D-104. Install Timing Gears and Chain

Set the timing gears into the timing chain so that the timing marks on the two gears are exactly nine links or ten pins apart. Refer to Fig. 25. Place the small gear of the assembly on the crankshaft and the large gear on the camshaft after the Woodruff keys are placed in their respective keyways (Fig. 80).

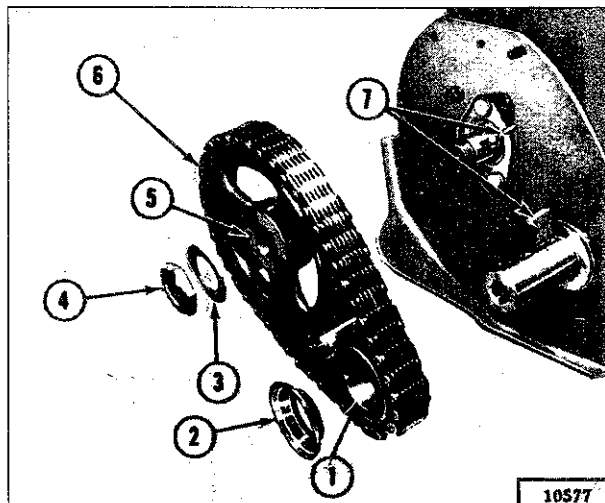


FIG. 80—TIMING GEARS AND CHAIN

- 1—Crankshaft Gear
- 2—Oil Slinger
- 3—Lock Plate
- 4—Nut
- 5—Camshaft Gear
- 6—Timing Chain
- 7—Woodruff Keys

The gears should slip onto the shafts (after the shafts are rotated to properly align the keyways) with finger pressure. If the camshaft gear must be tapped onto the shaft make certain that the camshaft bearing journals are not contacting the side of numbers 1, 5, or 9 tappets (Fig. 81).

This interference may exist if the camshaft has moved to the rear from its normal position during the installation of the camshaft timing gear. The camshaft must be held forward while the timing

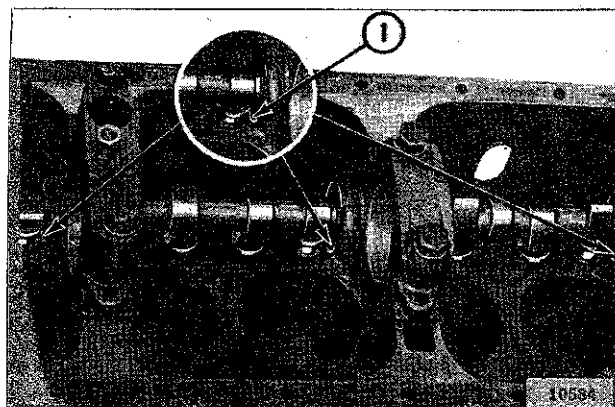


FIG. 81—CAMSHAFT JOURNAL AND TAPPET INTERFERENCE

1—Interference

gears are tapped on, to prevent damaging the tappets.

When the timing gears are fully seated, place the lock plate on the end of the camshaft, with the tab in the hole in the camshaft timing gear. Install the timing gear retaining nut and tighten to 35-40 foot pounds torque [4,8-5,5 kg-m.]. Bend up a section of the lock plate against the hex flat of the timing gear nut. Install the crankshaft oil slinger on the crankshaft, against the timing gear.

#### D-105. Install Timing Chain Cover

Apply a thin coat of gasket paste to both sides of the timing chain cover gasket. Position the gasket on the timing chain cover. If a timing cover oil seal installing sleeve, as shown in Fig. 82, is available, place it on the front end of the crankshaft and carefully locate the timing chain cover on the front of the cylinder block; using the sleeve as a guide and to prevent damaging the seal. Attach the cover with bolts, lockwashers, and nuts. Torque the bolts

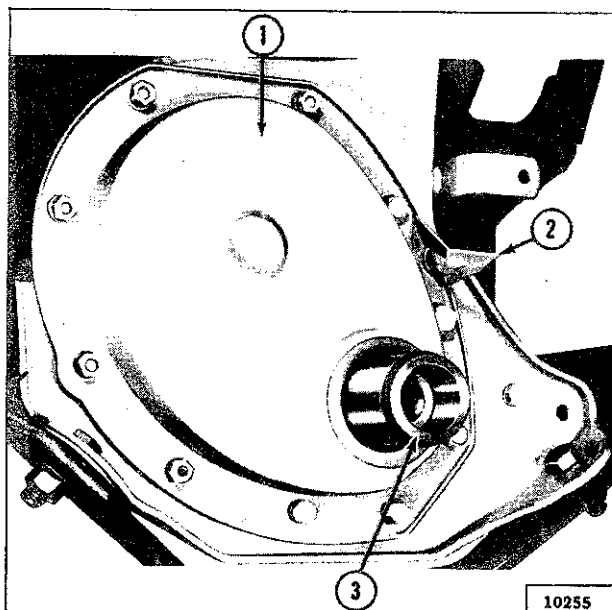


FIG. 82—INSTALLING TIMING CHAIN COVER AND POINTER

1—Timing Chain Cover  
2—Timing Pointer  
3—Oil Seal Installing Sleeve

12 to 15 lb-ft. [1,6 a 2,0 kg-m.]. Two of the cover bolts also mount the timing pointer bracket as shown. Remove the sleeve.

#### D-106. Install Pistons and Connecting Rods

Before installing each piston and connecting rod assembly in the cylinder block, generously lubricate the entire assembly with clean heavy engine oil. Install each piston and connecting rod assembly in the cylinder to which it was previously fitted. When installing each assembly, rotate the crankshaft so that the crankpin is in the down position. Stagger the ring gaps so that no two gaps are aligned vertically and are not located over the T-slot in the piston skirt. Insert the connecting rod in the cylinder, with the oil spurt hole toward the camshaft side of the cylinder block. Fit a piston ring compressor tightly around the piston. Then, using a hammer handle, gently tap the piston into the cylinder (Fig. 83).

Lubricate the connecting rod bearing surfaces generously with clean light engine oil and install the bearing cap (Fig. 86). Use new self locking nuts and tighten to 40-45 foot pounds torque [5,5-6,2 kg-m.].

Refer to Par. D-36 and D-37 for detailed information on fitting pistons and rings in the cylinder bores.

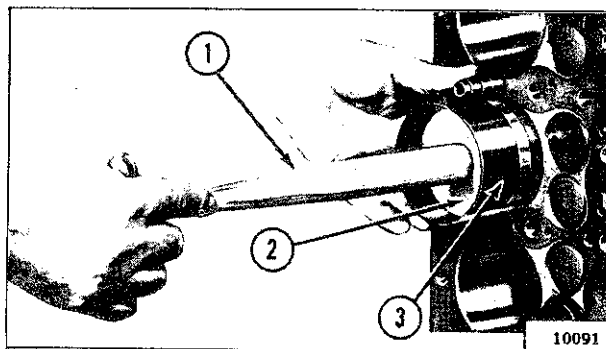


FIG. 83—INSTALLING PISTON AND CONNECTING ROD ASSEMBLY

1—Hammer Handle  
2—Piston  
3—Piston Ring Compressor

#### D-107. Install Oil Pump

The oil pump must be installed so that it is properly timed with the camshaft since the distributor is driven by the oil pump shaft. To accomplish this, rotate the crankshaft to move the piston in the number 1 cylinder to the top of its stroke. Insert the distributor main drive shaft in position, from the top of the cylinder block. Rotate the oil pump drive shaft so that when the oil pump is installed the oil pump drive shaft tongue engages the slot in the lower end of the distributor main drive shaft. The slot in the top of the distributor main drive shaft must be approximately parallel to the side of the cylinder block (Fig. 89). Install the lockwasher and nut, tightening the nut to secure the oil pump to the main bearing cap. Install lock wire in the rear intermediate main bearing bolts and oil pump attaching bolt to complete the installation. Now lift out the distributor main drive shaft to permit cylinder head installation.

**D-108. Install Vibration Damper**

To install the vibration damper and hub assembly, insert the cork keyway plug in the front part of the keyway in the hub. Place the key in the crankshaft keyway. Lubricate the polished surface of the damper hub; then, slide the vibration damper assembly onto the crankshaft and install the lock washer and bolt to retain the assembly. Tighten the attaching bolt to 100–130 foot pounds torque [13,8–17,9 kg-m.].

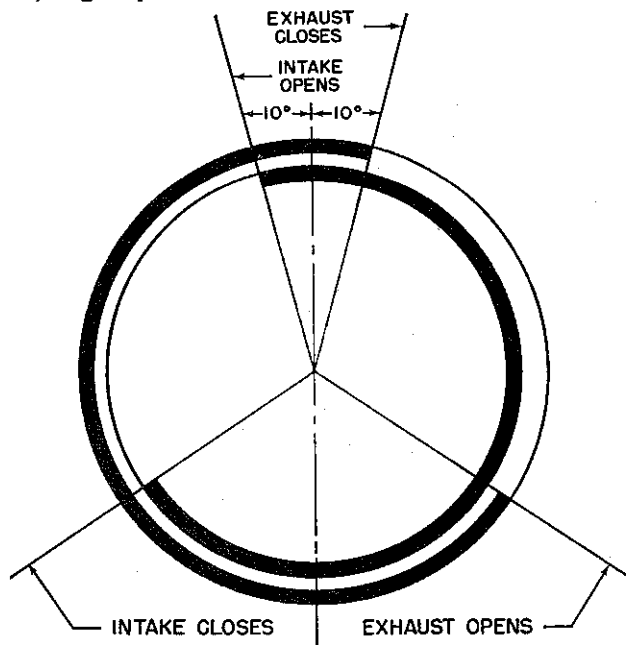


FIG. 84—VALVE TIMING—EARLY L6-226 ENGINES

**D-109. Valve Timing**

A high-torque camshaft was installed in production effective with engine serial numbers SW-6-L-13138 and TW-6-L-66747. The following procedure for timing valves applies to both early (Fig. 84) and late (Fig. 85) production engines.

a. Check the timing marks on the vibration damper

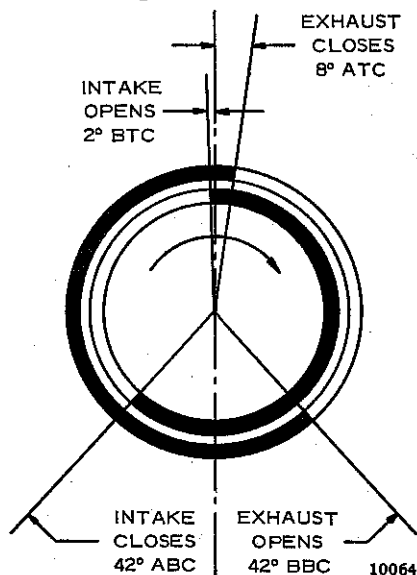


FIG. 85—VALVE TIMING—LATE L6-226 ENGINES

indicated by the timing pointer for top dead center piston position in No. 1 cylinder.

b. Adjust No. 1 cylinder exhaust valve tappet to a cold clearance of .020" [0,508 mm.] (.0175" [0,444 mm.] for late engines) with No. 6 cylinder exhaust valve (No. 12 valve) wide open. Adjust No. 1 cylinder intake valve (No. 2 valve) tappet to a cold clearance of .018" [0,457 mm.] (.0175" [0,444 mm.] for late engines) with No. 6 cylinder intake valve (No. 11 valve) wide open.

c. With spark plugs removed, turn the engine slowly clockwise to the point of zero clearance for No. 1 cylinder intake valve tappet and check the timing indicator. It should show 10° (late engines 2°) plus or minus 2° before top center, for the opening of this valve. Turn the engine still further clockwise to establish the closing point for No. 1 cylinder exhaust valve. This should be 10° (late engines 8°) plus or minus 2° after top center.

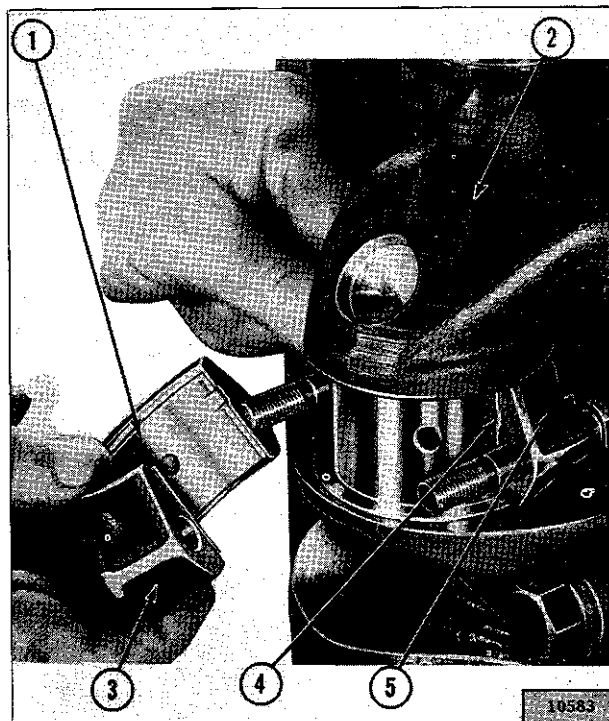


FIG. 86—INSTALLING CONNECTING ROD BEARING CAP

- |                              |                          |
|------------------------------|--------------------------|
| 1—Connecting Rod Bearing     | 4—Connecting Rod Bearing |
| 2—Crankshaft                 | 5—Connecting Rod         |
| 3—Connecting Rod Bearing Cap |                          |

**D-110. Install Oil Pan**

Apply a thin coat of gasket paste over the engine surface of the oil pan gaskets. Place the oil pan gaskets in position on the cylinder block.

Install the front filler block, using a new gasket coated with gasket paste. Since the filler block fits in place against the oil pan gaskets, the gaskets must be on the cylinder block before installing the filler block.

Install the rear filler block, using a new gasket coated with gasket paste. The rear filler block also fits against the oil pan gaskets, hence the gaskets must be on the cylinder block before installing the rear filler block.

**NOTE:** Where an engine has a filler block with dowel pins (see paragraph headed **CRANKSHAFT REAR OIL SEAL**) the oil pan side gaskets must have matching holes shown as A in Fig. 87. It is possible to have new oil pan side gaskets without these holes. When required, locate and make the holds in the gaskets using the dimensions given in Fig. 87.

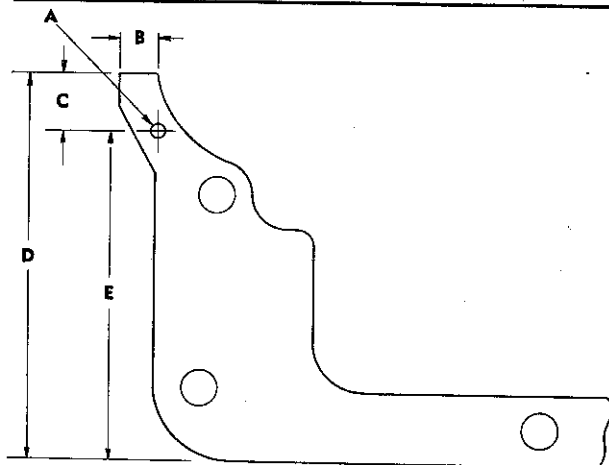


FIG. 87—OIL PAN GASKET HOLE LOCATION

A—	.125" [0,318 cm.]	Dia.
B—	.373" [0,947 cm.]	
C—	.613" [1,557 cm.]	
D—	3.938" [10,003 cm.]	
E—	3.325" [8,446 cm.]	

To complete the installation of the front filler block, install the lower three cap screws through the timing chain cover, threading them into the front filler block to hold it against the engine front end plate.

Apply a liberal coating of nondrying Permatex or equal to front and rear filler block seal grooves in the oil pan. Set the oil pan in position on the cylinder block and install the oil pan bolts and lockwashers, tightening them to 12 to 15 lb.-ft. torque [1,6 a 2,0 kg.-m.]. Wipe off the excess Permatex. Install the oil pan drain plug and gasket and tighten the plug securely.

#### D-111. Install Valve Tallet Cover

Apply a thin coat of gasket paste over both sides of the valve tappet cover gasket. Position the gasket on the cover. Before installing the cover, be sure that the two tappet chamber oil shields (Fig. 21) are securely held in place by their spring clips and that they are positioned properly. Assemble the cover with gasket to the cylinder block and attach with three rubber oil seals, flat washers, and nuts (gaskets were used in place of the oil seals and washers on earlier models).

Torque the nuts 7 to 10 lb.-ft. [0,96 a 1,3 kg.-m.].

#### D-112. Install Cylinder Head

a. Make certain that the entire top of the cylinder block assembly, the lower surface of the cylinder head, and the cylinder head gasket are clean.

b. Blow all dirt or carbon out of the blind tapped bolt holes in the cylinder block.

c. Inspect all tapped holes and studs for damage. Repair any damaged threads. Replace any broken studs.

d. Examine cylinder head and block for distortion. Unevenness between the cylinder head and block must not exceed .015" [0,381 mm.] at any point.

e. Inspect the new cylinder head gasket to be sure it is in perfect condition.

f. Inspect condition of all cylinder head bolts, particularly the threads. Replace any not in perfect condition.

g. Place the cylinder head on top of the block without the gasket. Run all bolts in by hand without washers under the bolt heads. Each cylinder head bolt must turn down freely with the head of the bolt tight on the cylinder head. If any bolt does not turn down freely, retap the threads of that particular bolt hole. Where a bolt does not run down tight on the cylinder head, check to make sure foreign material in the bolt hole is not restricting entry of the bolt. If there is no restriction, thread the hole deep enough so the bolt can be run down tight on the cylinder head.

h. Cut the hexagonal heads from two cylinder head bolts and file a screw driver slot in the cut end of each.

i. Install these two modified guide pins in the cylinder block holes numbered 24 and 26 in Fig. 88. The location and smaller size of the number 24 and 26 holes make these the only locations that can be used effectively for guide pins.

j. Place the cylinder head gasket over the guide pins and position it flat on the cylinder block. Place the cylinder head over the pins and down against the gasket.

**NOTE:** On some vehicles, restricted firewall clearance may prevent the gasket and head from being easily positioned as described. In any such case, install one of the guide pins in the number 26 hole. Then, holding the rear of the gasket and head to one side, place the front over the guide pin and lower them onto the block. Swing the rear of the gasket and head into place on the block. Then, install the second guide pin in the number 24 hole.

k. Coat the threads of the cylinder head bolts with gasket paste.

l. Install the cylinder head bolts with washers. Tighten the bolts until they are snug. Remove the two guide pins and install two head bolts in these locations. Torque all head bolts in the sequence given in Fig. 88. Torque with a torque wrench 35 to 45 lb.-ft. [4,8 a 5,5 kg.-m.].

m. Start the engine and let it warm to normal operating temperature. Retorque in sequence to the specified torque.

n. Check the gasket and all head bolts for leaks.

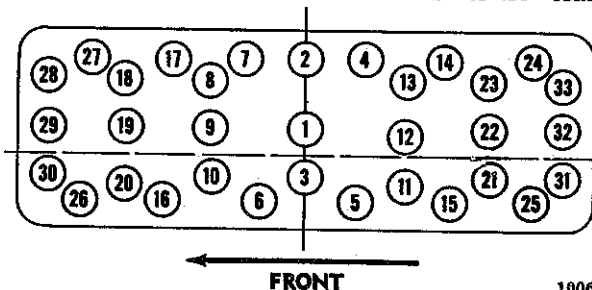


FIG. 88—CYLINDER HEAD BOLT TIGHTENING SEQUENCE

10063

**NOTE:** Any time the head has been removed it is advisable to check the tightness of the head bolts again after 500 and again after 1000 miles of normal operation. Always torque with a torque wrench in the sequence given, to the specified torque, and with the engine at operating temperature.

#### D-113. Install Distributor Main Drive Shaft

Insert the distributor main drive shaft in the opening in the cylinder head. The slot in the head of the shaft must be approximately parallel to the sides of the cylinder block with the offset (narrow) side toward the valve side of the cylinder block (refer to Fig. 89). When properly positioned the shaft will protrude approximately  $\frac{1}{8}$  of an inch [3,17 mm.] above the top of the cylinder head.

#### D-114. Install Manifolds

Assemble the intake and exhaust manifolds before installing them on the cylinder block. Make certain that no foreign objects are inside the manifolds, and that all passages are clear. Place the manifold gasket in position on the side of the cylinder block. Then, carefully slide the manifolds onto the studs

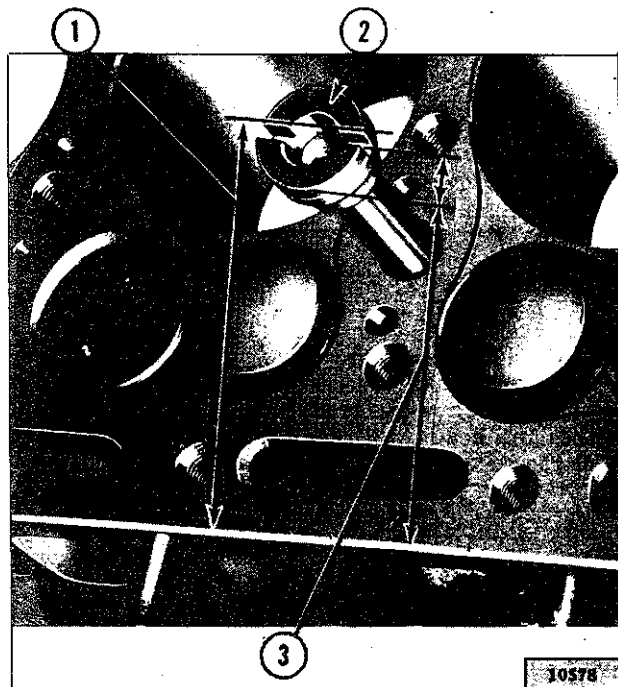


FIG. 89—CORRECT POSITION OF DISTRIBUTOR MAIN DRIVE SHAFT

- 1—Approximately Parallel
- 2—Distributor Main Drive Shaft
- 3—Narrow Side of Distributor Drive Shaft

and against the cylinder block, being careful not to damage the gasket. Hold the manifolds in that position while a retainer and nut are assembled on one of the top studs to support the manifolds. Install retainers and nuts on all manifold studs except the top end and lower center studs, on which a plain washer and nut are used.

In some cases it is possible to position the manifold and the valve cover in such a manner that the manifold overlaps the upper rear corner of the valve cover. When tightened, the manifold could leak. Check to make sure this condition does not exist.

Torque all nuts 30 to 35 lb.-ft. [4,1 a 4,8 kg.-m.] starting from the center of the manifold and working out toward the ends.

#### D-115. Install Water Pump

Make certain that the mating surfaces of the water pump and the cylinder block are clean and smooth. Apply a coat of gasket paste to both sides of the water pump gasket. Position the gasket against the cylinder block. Slide the water pump onto the studs and against the gasket and cylinder block. Install the attaching bolts, stud nuts and lock washers. Tighten the bolts and nuts alternately and evenly to 15 to 20 lb.-ft. torque [2,1 a 2,8 kg.-m.].

#### D-116. Install Oil Level Indicator

When installing the oil level indicator (dip stick) check the starter cable to be sure the two do not contact. If there is possibility of contact, perform the following:

- a. Curve the slack in the starter cable away from the engine and the oil level indicator. It may be necessary to loosen the terminal nut, reposition the cable end, and retighten the nut.
- b. The oil level indicator may be moved away from possible interference by bending it toward the block. First be sure the indicator is fully inserted.

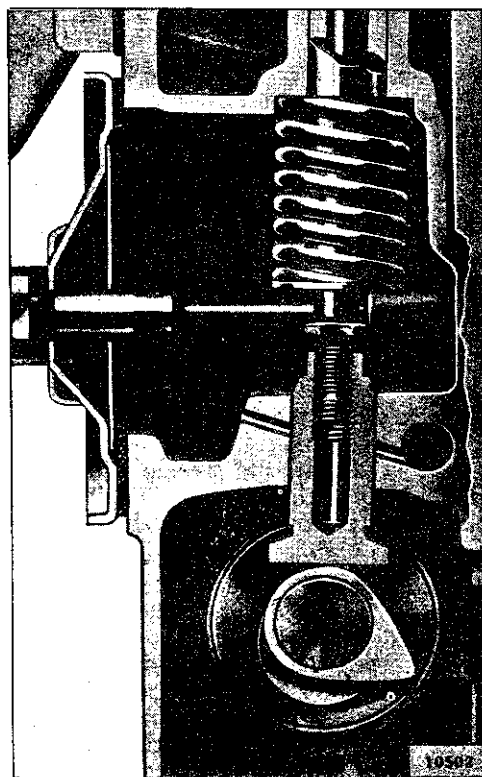


FIG. 90—CAMSHAFT, TAPPET AND VALVE

Then bend the indicator using the boss on the block as the pivot point for the bend.

#### D-117. VALVE ADJUSTMENT

Proper adjustment of the intake and exhaust valve tappets is important to prevent burning of valves and poor engine performance. This adjustment consists of obtaining a specified clearance between the tappet adjusting screw and the end of the valve stem. The relative positions of these parts are shown in Fig. 90.

The tappets should be adjusted to the proper clearance with the engine cold (at room temperature) and without starting the engine. Each valve tappet can be properly adjusted only when the tappet is on the heel or "low" portion of the cam.

#### D-118. Valve Adjustment Procedure

The tappets are adjusted by turning the tappet adjusting screw to obtain the proper clearance. Special wrenches should be used to facilitate adjustment. The proper clearance is .014 of an inch [.355 mm.] for both the intake and the exhaust valves. Adjustment of tappets is as follows:

Crank the engine over to close the valve and check the clearance with a feeler gauge (Fig. 91). To adjust the clearance hold the tappet from turning with a tappet wrench and turn the tappet adjusting

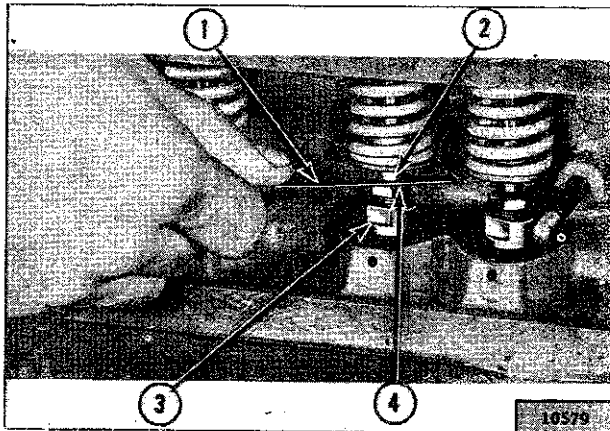


FIG. 91—CHECKING VALVE CLEARANCE

1—Feeler Gauge  
2—Valve Stem  
3—Tappet  
4—Tappet Adjusting Screw

screw using a second tappet wrench to obtain the proper clearance (Fig. 92). Remove the wrenches and recheck the clearance. Readjust if necessary. Check and adjust each of the tappets to the proper clearance in the following sequence. Tappets are counted consecutively starting from the front of the engine.

#### D-119. Tappet Adjustment Sequence

With Valves No. 1 and 3 fully raised	—	Adjust Tappets No. 10 and 12
With Valves No. 8 and 9 fully raised	—	Adjust Tappets No. 4 and 5
With Valves No. 2 and 6 fully raised	—	Adjust Tappets No. 7 and 11
With Valves No. 10 and 12 fully raised	—	Adjust Tappets No. 1 and 3
With Valves No. 4 and 5 fully raised	—	Adjust Tappets No. 8 and 9
With Valves No. 7 and 11 fully raised	—	Adjust Tappets No. 2 and 6

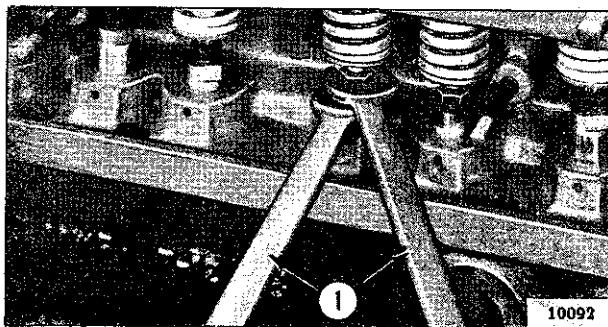


FIG. 92—VALVE TAPPET ADJUSTMENT

1—Tappet Wrenches

#### D-120. OILING SYSTEM

The engine pressure lubrication system is designed to provide adequate lubrication to all working

parts of the engine (Fig. 1).

The engine is pressure lubricated by a gear type oil pump driven from the engine camshaft. The pump is provided with a floating, screened, intake that prevents the recirculation of any sediment that might accumulate in the oil pan.

By means of this pump the engine oil is forced through the drilled passages in the crankshaft, to efficiently lubricate the main and connecting rod bearings. Oil is also forced to the camshaft bearings, timing gear chain and timing gears and valve tappets. The pressure under which oil is forced through the system is controlled by an oil pressure relief valve, located in the engine cylinder block. The relief valve is designed to open when excess pressure develops in the system, relieving the pressure and returning the excess oil to the oil pan.

The cylinder walls and piston pins are supplied with oil from spurt holes in the connecting rods. At the same time, a portion of the engine oil is continually by-passed through the oil filter which effectively removes foreign matter which may be suspended in the oil. The oil pressure gauge in the instrument panel and the oil level gauge or dip stick in the side of the engine provide a means for checking the oil pressure and oil level.

The engine crankcase is ventilated by circulating air through it to remove fuel and water vapor which would otherwise condense and contaminate the engine oil. Air is drawn into the crankcase through the breather cap on the oil filler tube. After circulating inside the crankcase, the air is drawn out through a tube on the valve tappet chamber cover. The end of the tube extends down into the air stream resulting from the forward motion of the vehicle producing suction at the tube outlet.

#### D-121. Oil Filter

Model L6-226 engine is equipped with the replaceable element type oil filter. This oil filter must be serviced periodically as outlined in the Lubrication Section. To replace the filter element remove the cover, lift out the old element and install a new one. The filter assembly may be replaced by detaching the oil lines at the case and removing the clamp bolts and washer.

#### D-122. Oil Pressure Relief Valve

(Refer to Fig. 30). The oil pressure relief valve is located in the right side of the cylinder block below the valve chamber and toward the rear of the engine. The relief valve consists of a valve, spring, washer (if used), gasket and plug which can be removed as described in Par. D-30.

Inspect the valve and the bore in the cylinder block and remove all dirt or foreign matter, cleaning thoroughly. If the valve is scored replace it. If the valve bore is scored smooth it with crocus cloth. The oil pressure relief valve spring should have a free length of 1.87" to 2.00" [47,5 a 50,8 mm.]. If the valve spring is collapsed or weak, replace the spring or install service washers between the spring and the plug as required to increase the spring tension and the oil pressure.

#### D-123. Checking Oil Pressure

If the oil pressure indicator or gauge shows insufficient pressure, stop the engine at once and



check the engine oil level as shown on the oil level gauge (dip stick). Next check the oil pressure indicator or gauge to be sure it is functioning properly. When sure the indicator is indicating correctly check the following:

- a. Check the oil pressure relief valve. If the oil pressure is low the valve may be stuck open or the spring may be weak. If the oil pressure is high the valve may be stuck closed.
- b. Check for oil leaks if the oil pressure is low.

c. Check the oil pump intake screen after removing the oil pan, if the oil pressure is low. The screen may be plugged with sludge, restricting the oil pump intake.

d. Remove the oil pump and disassemble it to check for worn gears, sheared pins, etc., if the oil pressure is low.

e. Check for worn main and connecting rod bearings, if the oil pressure is low.

## SERVICE DIAGNOSIS

### Poor Fuel Economy

- Ignition Timing Slow or Spark Advance Stuck
- Carburetor Float High
- Accelerator Pump Not Properly Adjusted
- High Fuel Pump Pressure
- Fuel Leakage
- Leaky Fuel Pump Diaphragm
- Loose Engine Mounting Causing High Fuel Level in Carburetor
- Low Compression
- Valves Sticking
- Spark Plugs Bad
- Spark Plug Cables Bad
- Weak Coil or Condenser
- Improper Valve Tappet Clearance
- Carburetor Air Cleaner Dirty
- High Oil Level in Air Cleaner
- Dragging Brakes
- Front Wheels Out of Alignment
- Tires Improperly Inflated
- Inaccurate Odometer
- Faulty Fuel Tank Cap
- Clogged Muffler or Bent Exhaust Pipe

### Lack of Power

- Low Compression
- Ignition System (Timing Late)
- Improper Functioning Carburetor or Fuel Pump
- Fuel Lines Clogged
- Air Cleaner Restricted
- Engine Temperature High
- Improper Tappet Clearance
- Sticking Valves
- Valve Timing Late
- Leaky Gaskets
- Muffler Clogged
- Bent Exhaust Pipe

### Low Compression

- Leaky Valves
- Poor Piston Ring Seal
- Sticking Valves
- Valve Spring Weak or Broken
- Cylinder Scored or Worn
- Tappet Clearance Incorrect
- Piston Clearance too Large
- Leaky Cylinder Head Gasket

### Burned Valves and Seats

- Sticking Valves or too Loose in Guides
- Improper Timing
- Excessive Carbon Around Valve Head and Seat
- Overheating
- Valve Spring Weak or Broken
- Valve Tappet Sticking

### Burned Valves and Seats—Continued

- Valve Tappet Clearance Incorrect
- Clogged Exhaust System

### Valves Sticking

- Warped Valve
- Improper Tappet Clearance
- Carbonized or Scored Valve Stems
- Insufficient Clearance Valve Stem to Guide
- Weak or Broken Valve Spring
- Valve Spring Cocked
- Contaminated Oil

### Overheating

- Inoperative Cooling System
- Thermostat Inoperative
- Improper Ignition Timing
- Improper Valve Timing
- Excessive Carbon Accumulation
- Fan Belt too Loose
- Clogged Muffler or Bent Exhaust Pipe
- Oil System Failure
- Scored or Leaky Piston Rings

### Popping-Spitting-Detonation

- Improper Ignition
- Improper Carburetion
- Excessive Carbon Deposit in Combustion Chambers
- Poor Valve Seating
- Sticking Valves
- Broken Valve Spring
- Tappets Adjusted too Close
- Spark Plug Electrodes Burned
- Water or Dirt in Fuel
- Clogged Lines
- Improper Valve Timing

### Excessive Oil Consumption

- Piston Rings Stuck in Grooves, Worn or Broken
- Piston Rings Improperly Fitted or Weak
- Piston Ring Oil Return Holes Clogged
- Excessive Clearance, Main and Connecting Rod Bearings
- Oil Leaks at Gaskets or Oil Seals
- Excessive Clearance, Valve Stem to Valve Guide (Intake)
- Cylinder Bores Scored, Out-of-Round or Tapered
- Too Much Clearance, Piston to Cylinder Bore
- Misaligned Connecting Rods
- High Road Speeds or Temperature
- Crankcase Ventilator Not Operating
- Oil Too Thin
- Crankcase Overfilled
- Leaky Vacuum Pump Diaphragm



## SERVICE DIAGNOSIS (Continued)

## Low Oil Pressure

Oil Pressure Indicator or Sending Unit Defective  
 Oil Too Thin  
 Faulty Oil Pressure Relief Valve  
 Dirty Oil Pump Intake Screen  
 Oil Passage Leaks or Fractures  
 Leaky Oil Pump  
 Too Much Clearance at Crankshaft, Connecting Rod and Camshaft Bearings  
 Leaky Oil Pump Drive Shaft Bushing

## Bearing Failure

Crankshaft Bearing Journal Out-of-Round  
 Crankshaft Bearing Journal Rough  
 Lack of Oil  
 Oil Leakage  
 Dirty Oil  
 Low Oil Pressure or Oil Pump Failure  
 Drilled Passages in Crankcase or Crankshaft Clogged  
 Oil Screen Dirty  
 Connecting Rod Bent

## L6-226 ENGINE SPECIFICATIONS

		Metric
<b>ENGINE:</b>		
Type.....	L-head	.....
Number of Cylinders.....	6	.....
Bore.....	3 $\frac{5}{16}$ "	84,13 mm.
Stroke.....	4 $\frac{5}{8}$ "	111,12 mm.
Piston Displacement.....	226.2 cu. in.	3707 cm <sup>3</sup>
Bore Spacing (center to center).....	3.876"	98,450 mm.
Firing Order.....	1-5-3-6-2-4	.....
Compression Ratio:		
Standard.....	6.86 to 1	6,86 a 1
Optional.....	7.3 to 1	7,3 a 1
Compression Pressure.....	125 to 140 psi.	.....
Horsepower (SAE).....	26.33	26,33
Horsepower (max. brake).....	105 @ 3600 rpm.	.....
Maximum Torque @ 1400 rpm.....	190 lb-ft.	26,27 kg-m.
Idle Speed.....	550 rpm.	.....
Governor Speed (optional):		
Velocity.....	2200 to 3800 rpm.	.....
Centrifugal.....	1000 to 2600 rpm.	.....
<b>PISTONS:</b>		
Material.....	Aluminum Alloy	.....
Description.....	Cam Ground, T-Slot, Tin Plated	.....
Length.....	3 $\frac{17}{32}$ "	8,96 cm.
Clearance Limits:		
Top Land.....	.020" to .030"	0,508 a 0,762 mm.
Skirt.....	.0007" to .0017"	0,0177 a 0,0431 mm.
Skirt Bottom.....	Selective Feeler Fit	.....
Ring Groove Depth:		
No. 1 and No. 2 Rings.....	.1860" to .1922"	4,7244 a 4,8819 mm.
No. 3 and No. 4 Rings.....	.1920" to .1982"	4,8768 a 5,0343 mm.
Ring Groove Width:		
No. 1 Ring.....	.0955" to .0965"	2,4257 a 2,4511 mm.
No. 2 Ring.....	.095" to .096"	2,413 a 2,438 mm.
No. 3 Ring.....	.1565" to .1575"	3,9751 a 4,0005 mm.
No. 4 Ring.....	.1575" to .1585"	4,0005 a 4,0259 mm.
<b>PISTON RINGS:</b>		
Function:		
No. 1 and No. 2 Rings.....	Compression	.....
No. 3 and No. 4 Rings.....	Oil	.....
Material:		
No. 1 Ring.....	Cast Iron, Chrome-Plated Face	.....
No. 2 Ring.....	Cast Iron	.....
No. 3 Ring.....	Steel, Chrome-Plated Face	.....
No. 4 Ring.....	Cast Iron	.....
Width:		
No. 1 and No. 2 Rings.....	.0930" to .0935"	2,3622 a 2,3749 mm.
No. 3 and No. 4 Rings.....	.1545" to .1550"	3,9243 a 3,9370 mm.
Gap.....	.008" to .016"	0,203 a 0,406 mm.
Thickness:		
No. 1 and No. 2 Rings.....	.156" to .166"	3,962 a 4,216 mm.
No. 3 and No. 4 Rings.....	.142" to .152"	3,607 a 3,861 mm.
Side Clearance:		
No. 1 and No. 2 Rings.....	.002" to .004"	0,051 a 0,102 mm.
No. 3 and No. 4 Rings.....	.006" to .010"	0,152 a 0,254 mm.
<b>PISTON PINS:</b>		
Material.....	SAE 1019 Steel	.....
Length.....	2.779"	70,58 mm.
Diameter.....	.8592"	21,82 mm.
Type.....	Floating	.....
Bushing.....	Bronze; in Rod	.....
Clearance:		
In Piston (selective fit).....	.0002"	0,0051 mm.
In Rod.....	.0004" to .0008"	0,0102 a 0,0203 mm.

## L6-226 ENGINE SPECIFICATIONS (Continued)

		Metric
<b>CONNECTING RODS:</b>		
Material.....	SAE 1035 Forged Steel	.....
Weight.....	29.6 oz.	839 gr.
Length (center to center).....	7.000"	1,778 mm.
Bearing:		
Type.....	Removable	.....
Material.....	Steel-backed Matrex	.....
Over All Length.....	1.125"	28,575 mm.
Clearance Limits.....	.0007" to .0025"	0,0178 a 0,0635 mm.
End Play.....	.006" to .011"	0,125 a 0,279 mm.
Installation.....	From Above	.....
Bore:		
Upper.....	.913" to .914"	23,190 a 23,217 mm.
Lower.....	2.1865" to 2.1870"	55,5371 a 55,5498 mm.
<b>CRANKSHAFT:</b>		
Material.....	SAE 1045 Forged Steel	.....
Vibration Damper Type.....	Tuned	.....
End Thrust Taken By.....	Rear Bearing	.....
Main Bearings:		
Type.....	Removable	.....
Material.....	Steel-backed Matrex	.....
Clearance.....	.0008" to .0028"	0,0203 a 0,0711 mm.
Journal Diameter.....	2.374" to 2.375"	60,300 a 60,325 mm.
Bearing Length:		
Front.....	1.062"	26,975 mm.
No. 2.....	1.250"	31,750 mm.
No. 3.....	1.250"	31,750 mm.
No. 4.....	1.321"	33,553 mm.
Crankpin Journal Diameter.....	2.0623"	52,3824 mm.
Flywheel Run Out (max.).....	.005"	0,127 mm.
<b>CAMSHAFT:</b>		
Bearings:		
Material.....	Steel-backed Babbitt	.....
Number.....	4	.....
Clearance.....	.001" to .003"	0,025 a 0,076 mm.
Journal Diameter:		
Front.....	1.8730"	47,57 mm.
Front Intermediate.....	1.8100"	45,97 mm.
Rear Intermediate.....	1.7478"	44,39 mm.
Rear.....	1.2480"	31,69 mm.
Bearing Diameter:		
Front.....	1.8745" to 1.8755"	47,6123 a 47,6377 mm.
Front Intermediate.....	1.8115" to 1.8125"	46,0121 a 46,0375 mm.
Rear Intermediate.....	1.7495" to 1.7502"	44,4373 a 44,4551 mm.
Rear.....	1.2495" to 1.2505"	31,7373 a 31,7627 mm.
End Play.....	.003" to .007"	0,076 a 0,178 mm.
Drive:		
Type.....	Chain	.....
Crankshaft Sprocket.....	SAE 1018 Steel	.....
Camshaft Sprocket.....	Cast Iron	.....
Timing Chain:		
Number of Links.....	46	.....
Width:		
Early.....	1.000"	25,400 mm.
Late.....	.875"	22,225 mm.
Pitch.....	.500"	0,127 mm.



## L6-226 ENGINE SPECIFICATIONS (Continued)

		Metric
<b>VALVE SYSTEM:</b>		
Valve Rotators.....	On Exhaust Valves	.....
Tappets (Intake and Exhaust):		
Clearance — Cold.....	.014"	0,355 mm.
Clearance for Timing.....	.0175"	0,4445 mm.
Over All Length.....	1.89"	48,01 mm.
Stem Diameter.....	.6860" to .6855"	17,4244 a 17,4117 mm.
Clearance in Block.....	Select Fit with Slight Drag	.....
Timing:		
Intake:		
Opens.....	2° BTC	.....
Closes.....	42° ABC	.....
Duration.....	224°	.....
Exhaust:		
Opens.....	42° BBC	.....
Closes.....	8° ATC	.....
Duration.....	230°	.....
Valve Opening Overlap.....	10°	.....
Valves:		
Intake:		
Material.....	Silchrome No. 1 Steel	.....
Over All Length.....	5.187"	131,750 mm.
Head Diameter.....	1.520"	38,608 mm.
Angle of Seat.....	30°	.....
Stem Diameter.....	.3402" to .3410"	8,6411 a 8,6614 mm.
Stem-to-Guide Clearance.....	.0012" to .0030"	0,0305 a 0,0762 mm.
Lift.....	.284"	7,214 mm.
Exhaust:		
Material.....	Silchrome XCR Steel, Hard Face	.....
Over All Length.....	5.205"	132,207 mm.
Head Diameter.....	1.328"	33,731 mm.
Angle of Seat.....	45°	.....
Seat Insert Material.....	Eatonite EMS 58	.....
Stem Diameter.....	.3382" to .3390"	8,5903 a 8,6106 mm.
Stem-to-Guide Clearance.....	.0032" to .0050"	0,0813 a 0,1270 mm.
Lift.....	.284"	7,214 mm.
Springs (Intake and Exhaust):		
Free Length.....	1 <sup>31</sup> / <sub>32</sub> "	50 mm.
Pressure @ Length:		
Valve Closed.....	51 lb. @ 1.672"	3,6 kg-cm <sup>2</sup> - 42,469 mm.
Valve Open.....	107 lb @ 1.312"	7,5 kg-cm <sup>2</sup> - 33,325 mm.
<b>LUBRICATION SYSTEM:</b>		
Type of Lubrication:		
Main Bearings.....	Pressure	.....
Connecting Rods.....	Pressure	.....
Piston Pins.....	Splash	.....
Camshaft Bearings.....	Pressure	.....
Tappets.....	Pressure	.....
Timing Chain.....	Nozzle	.....
Cylinder Walls.....	Nozzle	.....
Oil Pump:		
Type.....	Gear	.....
Drive.....	From Camshaft	.....
Minimum Safe Oil Pressure.....	6 lb. @ Idle	0,4 kg-cm <sup>2</sup>
	20 lb. @ 2000 rpm. (35 mph.)	1,4 kg-cm <sup>2</sup> - 56 kph.
	35 lb. @ 1700 rpm.	2,5 kg-cm <sup>2</sup>
Normal Oil Pressure.....		
Oil Pressure Sending Unit.....	Electric	.....
Oil Intake.....	Floating	.....
Oil Filter System.....	Partial Flow	.....



## F4-134 ENGINE

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Assembly, Engine.....	E-78	Inspection and Repair.....	E-31
Camshaft.....	E-28, E-51, E-81	Manifold.....	E-8, E-101
Clutch.....	E-24, E-89	Oil Filler Tube.....	E-9, E-102
Connecting Rods.....	E-19, E-36, E-95	Oil Filter.....	E-111
Crankcase Ventilator Valve.....	E-14, E-110	Oil Pan.....	E-18, E-66, E-97
Crankshaft.....	E-26, E-38, E-82	Oil Pump.....	E-13, E-65, E-93
Crankshaft End Play.....	E-50, E-84	Oiling System.....	E-109
Crankshaft Main Bearings.....	E-43	Pistons.....	E-19, E-36, E-95
Crankshaft Pulley.....	E-12	Removal, Engine.....	E-5
Crankshaft Rear Bearing Seal.....	E-63, E-85	Rocker Arms.....	E-15, E-74, E-99
Cylinder Block.....	E-32	Tappets and Cover.....	E-29, E-62
Cylinder Bores.....	E-35	Timing Gears and Cover.....	E-20, E-54, E-83
Cylinder Head.....	E-16, E-73, E-98		E-91, E-94
Disassembly, Engine.....	E-6	Valve Adjustment.....	E-106
Fan Shaft Assembly.....	E-11	Valves, Springs, and Guides.....	E-27, E-56, E-90
Flywheel.....	E-25, E-67, E-88	Water Outlet Fitting.....	E-10, E-104
Ground Strap.....	E-4	Water Pump.....	E-7, E-103

**E-1. GENERAL**

Engine service and repair is covered in this section in the following manner:

- General description of the engine.
- Removal of the engine from the vehicle.
- Complete engine disassembly out of the vehicle. Special instructions are included with some operations to cover differences required when disassembly is done with the engine installed.
- Inspection and repair of engine components with the parts removed.
- Engine reassembly with the engine removed from the vehicle. The final paragraphs cover valve adjustment, oiling system of the engine, and crankcase ventilation.

**E-2. Description**

The Model F4-134 engine is an F-head, four-cylinder engine of combustion valve-in-head and valve-in-block construction. Large intake valves mounted in the head allow rapid, unobstructed flow of fuel and air to the combustion chambers through short, water-jacketed intake passages. The intake valves are operated by push rods through rocker arms. The exhaust valves are mounted in the block with through water jacketing to provide effective cooling. The exhaust valves are operated by conventional valve tappets.

The engine is pressure lubricated. An oil pump driven from the camshaft forces the lubricant through oil channels and drilled passages in the crankshaft to efficiently lubricate the main and connecting rod bearings. Lubricant is also forced to the camshaft bearings, rocker arms, timing gears, etc. Cylinder walls and piston pins are

lubricated from spurt holes in the "follow" side of the connecting rods.

Circulation of the coolant is controlled by a thermostat in the water outlet elbow cast as part of the cylinder head.

The cylinder head assembly when installed on the engine consists of the inlet valve guides, inlet valves, inlet valve springs, rocker arm and shaft assemblies, spark plugs, temperature indicator fitting, water outlet fitting, and other assembled parts. The carburetor and air cleaner assembly bolt to the top of the cylinder head. The rocker arm cover is attached to the top of the head to enclose the inlet valve mechanism.

The engine is equipped with a fully counterbalanced crankshaft supported by three main bearings. To better control balance, the counterweights are independently forged and permanently attached to the crankshaft with dowels and cap screws that are tack-welded. Crankshaft end play is adjusted by shims placed between the crankshaft thrust washer and the shoulder on the crankshaft.

The exhaust manifold is a separate unit. The intake manifold is cast as an integral part of the cylinder head and is completely water jacketed. This construction transfers heat from the cooling system to the intake passages and assists in vaporizing the fuel when the engine is cold. Therefore, there is no heat control valve required in the exhaust manifold. Individual exhaust ports in the cylinder block direct gasses into the exhaust manifold for unobstructed flow through the exhaust system. The pistons have an extra groove directly above the top ring which acts as a heat dam or insulator.

*Text continued on page 66.*

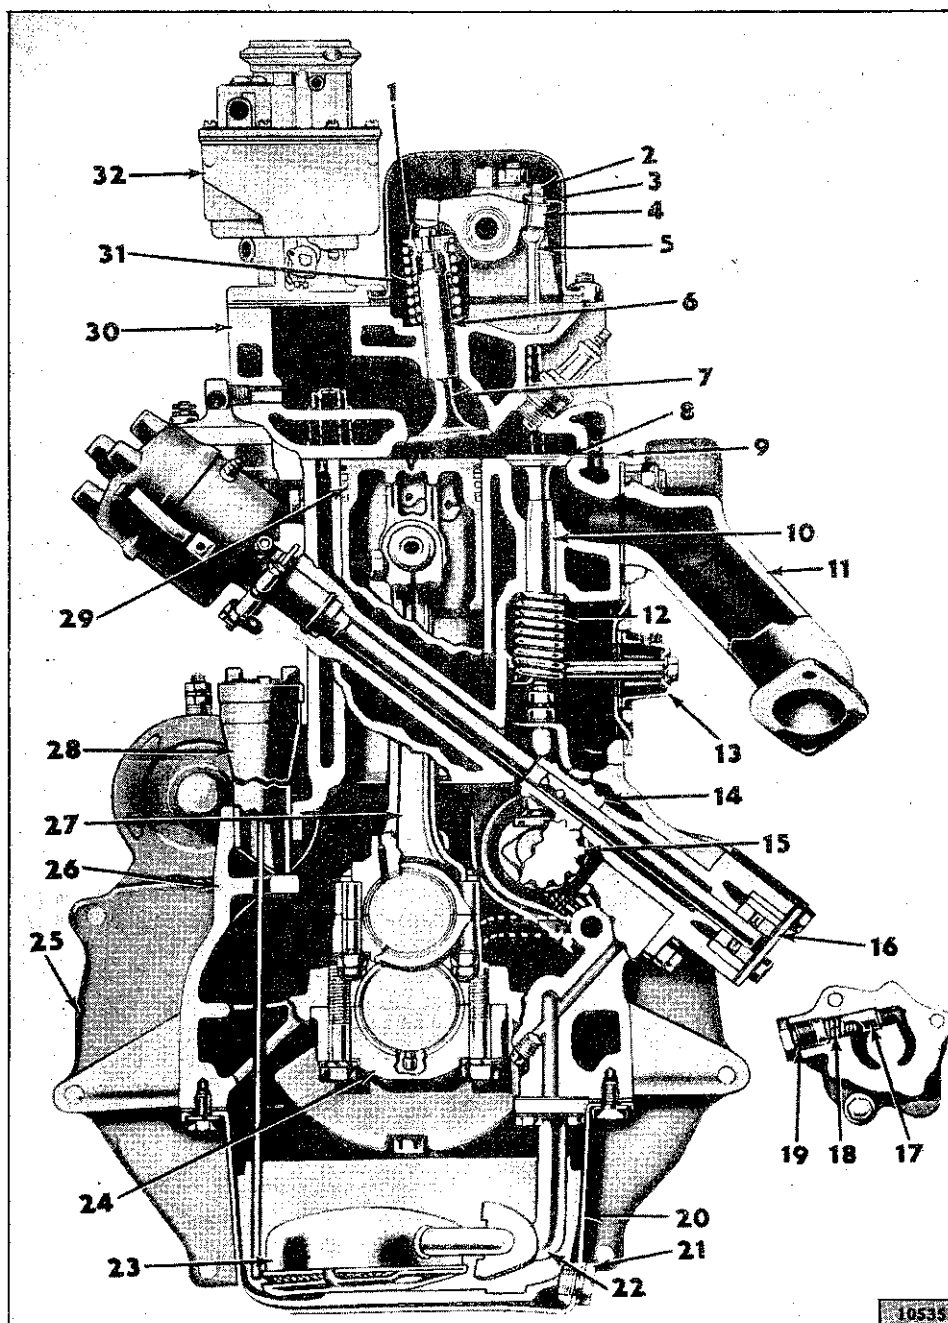


FIG. 93—END SECTION VIEW OF F4-134 ENGINE

- 1—Inlet Valve Spring Retainer
- 2—Adjusting Screw
- 3—Nut
- 4—Rocker Arm
- 5—Push Rod
- 6—Inlet Valve Guide
- 7—Inlet Valve
- 8—Exhaust Valve
- 9—Cylinder Head Gasket
- 10—Exhaust Valve Guide
- 11—Exhaust Manifold
- 12—Exhaust Valve Spring
- 13—Crankcase Ventilator
- 14—Oil Pump Gear
- 15—Camshaft
- 16—Oil Pump

- 17—Relief Plunger
- 18—Relief Plunger Spring
- 19—Relief Spring Retainer
- 20—Oil Pan
- 21—Drain Plug
- 22—Oil Float Support
- 23—Oil Float
- 24—Crankshaft
- 25—Engine Rear Plate
- 26—Cylinder Block
- 27—Connecting Rod
- 28—Oil Filler Tube
- 29—Piston
- 30—Cylinder Head
- 31—Inlet Valve Spring
- 32—Carburetor

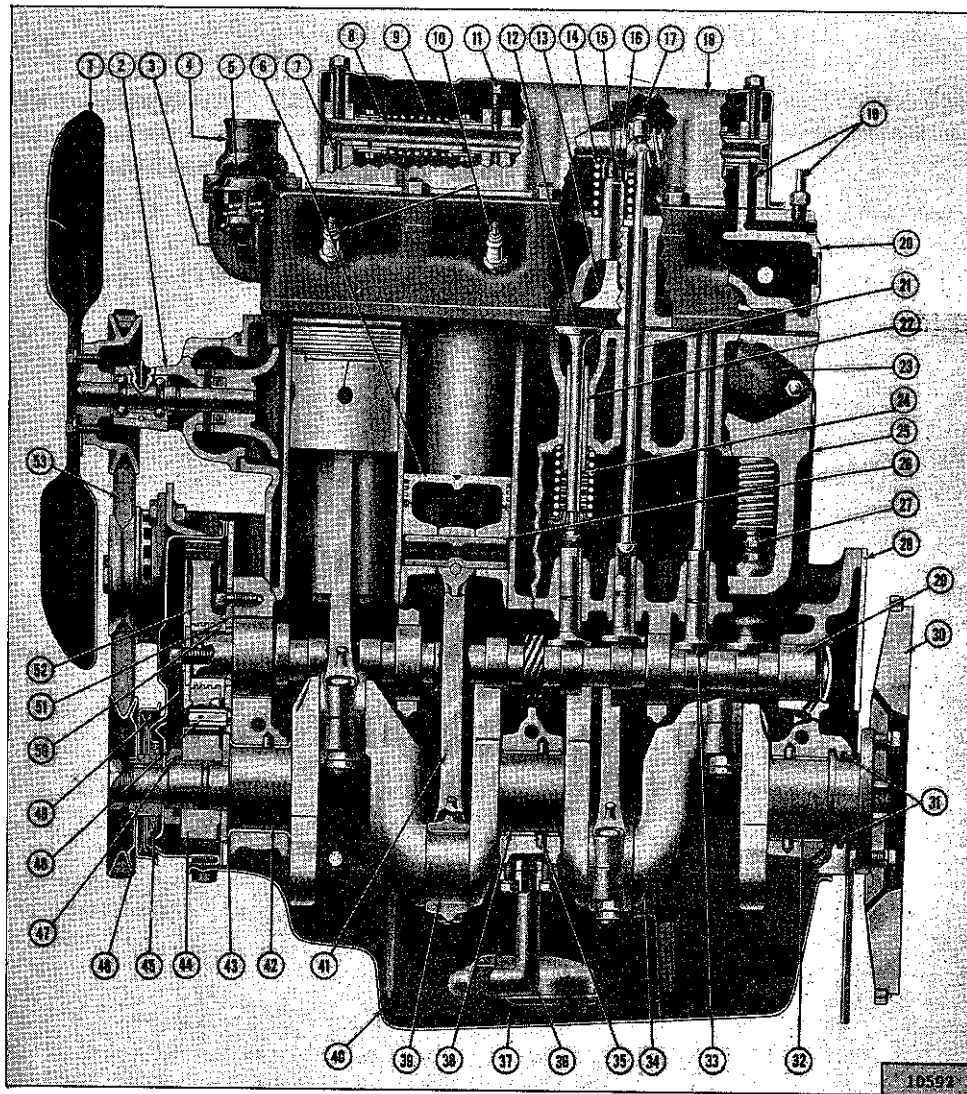


FIG. 94—SIDE SECTIONAL VIEW OF F4-134 ENGINE

- |                                   |                                      |
|-----------------------------------|--------------------------------------|
| 1—Fan Drive Pulley                | 28—Engine Rear Plate                 |
| 2—Water Pump                      | 29—Camshaft                          |
| 3—Pipe Plug                       | 30—Flywheel                          |
| 4—Water Outlet Fitting            | 31—Crankshaft Rear Bearing Seal      |
| 5—Thermostat                      | 32—Crankshaft Rear Bearing           |
| 6—Piston                          | 33—Intake Valve Tappet               |
| 7—Rocker Shaft Bracket            | 34—Crankshaft                        |
| 8—Rocker Arm Shaft                | 35—Crankshaft Bearing Dowel          |
| 9—Rocker Shaft Spring             | 36—Oil Float Support                 |
| 10—Spark Plug                     | 37—Oil Float                         |
| 11—Rocker Shaft Lock Screw        | 38—Crankshaft Center Bearing         |
| 12—Exhaust Valve                  | 39—Connecting Rod Bearing            |
| 13—Intake Valve                   | 40—Oil Pan                           |
| 14—Intake Valve Spring            | 41—Connecting Rod                    |
| 15—Intake Valve Guide             | 42—Crankshaft Front Bearing          |
| 16—Rocker Arm                     | 43—Engine Front Plate                |
| 17—Intake Tappet Adjusting Screw  | 44—Crankshaft Gear                   |
| 18—Rocker Arm Cover               | 45—Crankshaft Oil Seal               |
| 19—Oil Line                       | 46—Drive Pulley                      |
| 20—Cylinder Head                  | 47—Crankshaft Gear Spacer            |
| 21—Intake Valve Push Rod          | 48—Oil Jet                           |
| 22—Exhaust Valve Guide            | 49—Bolt                              |
| 23—Exhaust Manifold               | 50—Camshaft Gear Thrust Plate Spacer |
| 24—Exhaust Valve Spring           | 51—Camshaft Thrust Plate             |
| 25—Cylinder Block                 | 52—Camshaft Gear                     |
| 26—Piston Pin                     | 53—Fan and Generator Belt            |
| 27—Exhaust Tappet Adjusting Screw |                                      |

As is common practice with manufacturers, some engines are built with oversize cylinder bores or undersize crankshaft journals. These engines are considered standard as replacement parts of the correct sizes are supplied. Before ordering parts or doing any work with a particular engine, it is important to check the engine serial number to determine if oversize or undersize parts are required. Definite identification is given by a letter stamped after the engine serial number. The letters used and their meanings are given here:

- A** — .010" [0,254 mm.] undersize main and connecting rod bearings.
- B** — .010" [0,254 mm.] oversize pistons.
- AB** — Combination of A and B.

Detailed specifications for the F4-134 engine are at the end of this section. Torque specifications for engine service are at the end of this manual in Section U. When adjustments are necessary, refer to these specifications so that factory clearances are maintained.

### E-3. Engine Mountings

The front of the engine is supported by two rubber insulator mountings attached to the frame side rail brackets. The rear of the engine-transmission assembly is supported by a rubber insulator mounting under the rear of the transmission on the frame center cross member. This cross member is bolted to the frame side rails so that it can be dropped when removing the transmission or engine-transmission assembly. The rubber insulators allow free side and vertical oscillation to effectively neutralize engine vibration at the source.

The rubber insulator mountings should be inspected for separation and deterioration by jacking the power plant away from the frame, near the supports. Vibration cannot be effectively absorbed by separated or worn insulators. They should be replaced if faulty.

### E-4. Engine Ground Strap

To be sure of an effective ground for the electrical circuits, a ground strap bridges the right front engine support to the chassis. The connections of this strap must be kept clean and tight for proper operation of lights, generator, regulator, etc.

### E-5. ENGINE REMOVAL

Should the engine require overhauling, it is necessary to remove it from the vehicle. The following procedure covers removal of the engine only. On 4-wheel-drive vehicles, the engine, transmission and transfer case may be removed as a unit by removing (in addition to the following procedure) the radiator guard and the access plates in the floor pan.

- a. Drain the cooling system by opening the drain cocks at the bottom of the radiator and lower right side of the cylinder block.
- b. Disconnect the battery at the positive terminal to avoid the possibility of a short circuit.
- c. Remove the bolts and nuts which attach the

hood to the hood hinge, disconnect the hood brace rod, and remove the hood.

- d. Remove the air cleaner horn from the carburetor and disconnect the breather hose at the oil filler pipe.
- e. Disconnect the carburetor choke and throttle controls by loosening the clamp bolts and set screws.
- f. Disconnect the fuel-tank-to-fuel-pump line at the fuel pump by unscrewing the connecting nut.
- g. Plug the fuel line to prevent fuel leakage. Disconnect the windshield wiper hose at the fuel pump.
- h. Remove the radiator stay bar.
- i. Remove the upper and lower radiator hoses by loosening the hose clamps and slipping the clamps back on the hose. If so equipped, remove the heater hoses (one to the water pump, one to the rear of the cylinder head) in the same manner.
- j. Remove the four bolts from the fan hub and remove the fan hub and fan blades.
- k. Remove the four radiator attaching screws. Remove the radiator and shroud as one unit.
- l. Remove the starting motor cables. Remove the starting motor.
- m. Disconnect the wires from the generator. Disconnect the ignition primary wire at the ignition coil.
- n. Disconnect the oil pressure and temperature sending unit wires at the units.
- o. Disconnect the exhaust pipe at the exhaust manifold by removing the stud nuts.
- p. Remove the two nuts and bolts from each front engine support. Disconnect the engine ground strap. Remove the engine supports. This will allow the engine to drop slightly and will permit access to the two top bolts on the bell housing.
- q. Install a suitable lifting sling on the engine. Attach the sling to a chain hoist or other lifting device. Take up all slack.
- r. Remove the bolts which attach the flywheel bell housing to the engine.
- s. Pull the engine forward, or roll the vehicle backwards, until the clutch clears the bell housing. Lift the engine from the vehicle.

### E-6. ENGINE DISASSEMBLY

Engine disassembly is presented in the sequence to be followed when the engine is to be completely overhauled after removal from the vehicle. Some of the operations of the procedure are also applicable separately with the engine in the vehicle, provided that wherever necessary the part of the engine to be worked on is first made accessible by removal of engine accessories or other parts.

When the disassembly operations are performed with the engine out of the vehicle, it is assumed, in this procedure, that all of the accessories have been removed prior to starting the disassembly and the oil has been drained.

In addition to the instructions covering operations for disassembling the engine out of the vehicle, special instructions are given to cover different operations required when disassembly is done with the engine installed.



During disassembly operations, the engine should be mounted in a suitable engine repair stand. Where practicable, modify or adapt an existing repair stand as necessary to accommodate the engine. If an engine repair stand is not used, take care to perform disassembly operations in a manner that will protect personnel against an accident and the engine and its parts against damage.

#### E-7. Remove Water Pump

Remove the bolts and lockwashers that attach the water pump to the cylinder block. Remove the water pump.

#### E-8. Remove Exhaust Manifold

Remove the five nuts from the manifold studs. Pull the manifold off the mounting studs. Remove the center and two end gaskets from the cylinder block.

#### E-9. Remove Oil Filler Tube

Loop a piece of wire several times around the tube below the top and make a loop through which a pry bar may be used to pry over the top of the engine water outlet fitting. Pull on the tube, tapping it just above where it enters the crankcase,

#### E-10. Remove Water Outlet Fitting

Remove the nuts and lockwashers that attach the water outlet fitting to the cylinder head. Lift the outlet fitting and thermostat from the cylinder head.

#### E-11. Remove Thermostat

With the water outlet fitting removed, the thermostat can be lifted from the water outlet elbow on the cylinder head.

#### E-12. Remove Crankshaft Pulley

Remove the crankshaft nut. Install a puller and pull the pulley from the crankshaft.

#### E-13. Remove Oil Pump

The oil pump is located externally on the left side of the engine. If only the oil pump is being removed with the engine in the vehicle, set No. 1 piston at TDC for reference for reinstalling the oil pump without greatly disturbing the ignition timing. First remove the distributor cover and note the position of the distributor finger.

If the distributor is already removed, sight through the distributor hole before removing the oil pump. The slot should be near vertical. Remove the capscrews and lockwashers attaching the oil pump to the cylinder block. Carefully slide the oil pump and its drive shaft out of the cylinder block.

#### E-14. Remove Crankcase Ventilator Valve

On engines equipped with a positive crankcase ventilation system (Par. E-110) remove the ventilator valve and attaching lines and fittings. Remove the capscrew and ventilator body gasket securing the crankcase vent body and related parts to the exhaust valve spring compartment cover and to the cylinder block. Remove the crankcase vent body and the engine ventilation system parts threaded to it.

#### E-15. Remove Rocker Arm Assemblies

The rocker arm cover was previously removed as a step of the engine removal (Par. E-5).

Remove the nuts from the rocker arm shaft support studs, and lift the rocker arm assembly off the studs. Lift the intake valve push rods out of the cylinder block.

#### E-16. Remove Cylinder Head

Some engines will have a by-pass hose (from front of cylinder head to water pump) that must be removed. On later production engines, this by pass hose is not used and a pipe plug is installed at the front of the cylinder head.

Disconnect the oil line from the flared tube connector and remove the rocker arm attaching stud nuts, and rocker arm shaft assembly if not previously removed. Two end head bolts cannot be removed until the rocker arm shaft is removed. Remove the cylinder head bolts. There is one cylinder head bolt located below the carburetor mounting, inside the intake manifold, that must not be overlooked.

Carefully lift the cylinder head off the block.

Remove the valve push rods and the valve lifters. Remove and discard the cylinder head gasket. Disassemble the parts of the cylinder head as follows: With a spring compressor, remove the two-piece locks recessed in the valve spring retainers. Pull the O-ring, valve spring, and valve out of the cylinder head. Identify the valves for return to the same guides from which they are removed.

#### E-17. Ream Cylinder Bore Ridges

To prevent breaking the piston lands, the ridge at the top of each cylinder bore must be removed

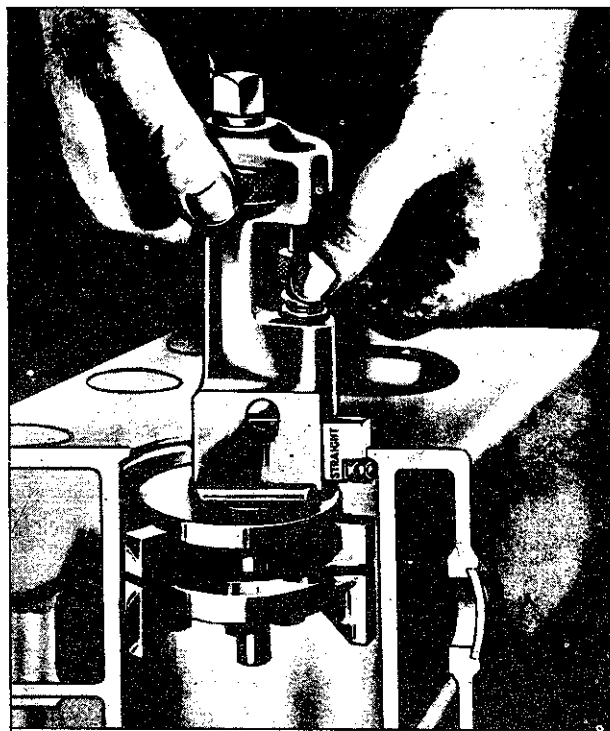


FIG. 95—REMOVING RIDGE WITH REAMER

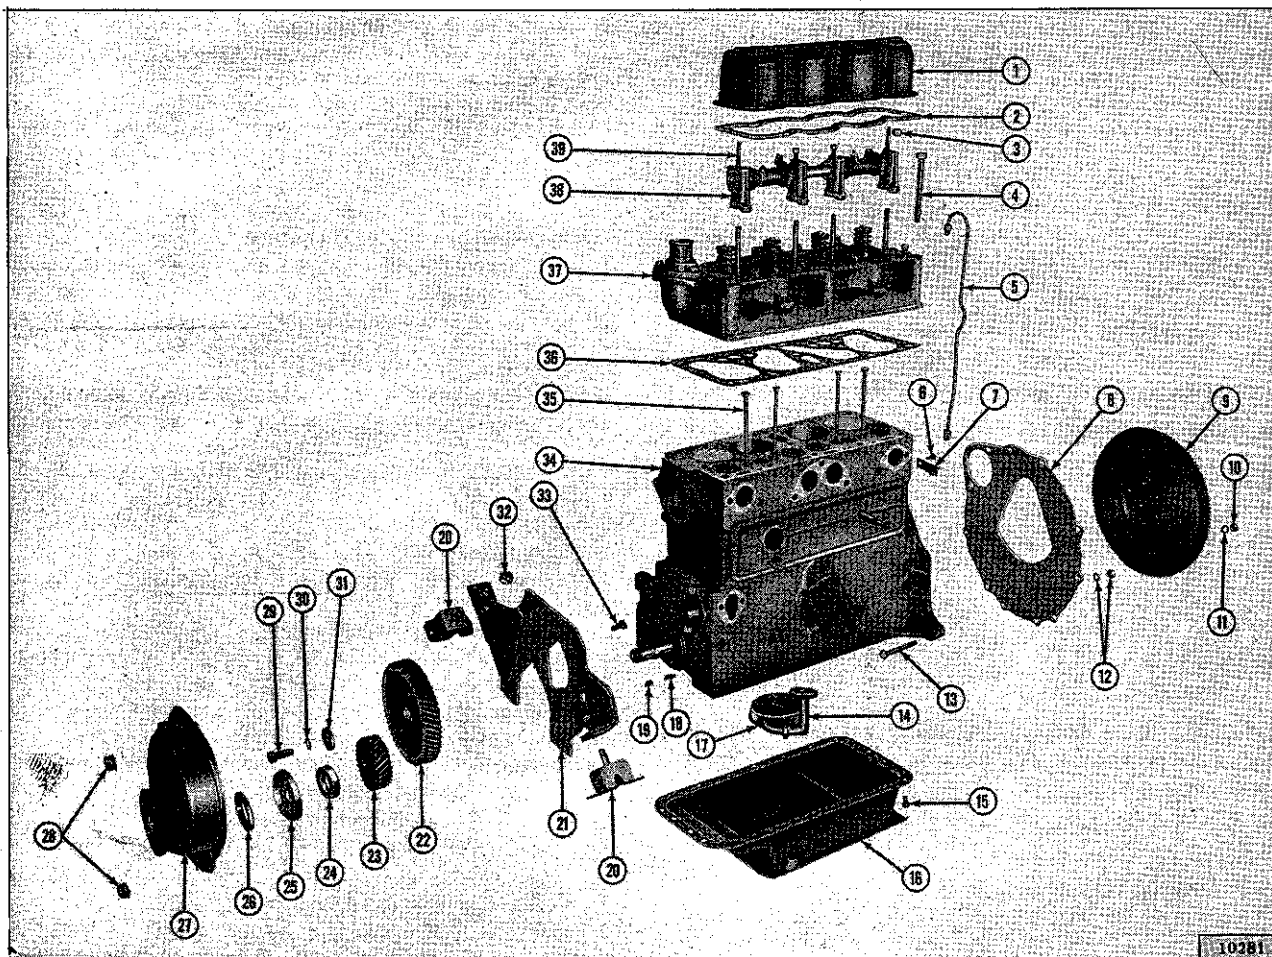


FIG. 96—F4-134 ENGINE

- |                              |                                   |                               |
|------------------------------|-----------------------------------|-------------------------------|
| 1—Rocker Arm Cover           | 14—Oil Float Support              | 27—Timing Gear Cover          |
| 2—Gasket                     | 15—Screw and Lockwasher           | 28—Nut and Lockwasher         |
| 3—Rocker Shaft Stud Nut      | 16—Oil Pan                        | 29—Bolt                       |
| 4—Cylinder Head Bolt         | 17—Oil Float                      | 30—Lockwasher                 |
| 5—Crankcase-to-Head Oil Line | 18—Woodruff Key No. 13            | 31—Camshaft Gear Washer       |
| 6—Screw and Lockwasher       | 19—Woodruff Key No. 9             | 32—Nut                        |
| 7—Oil Line Clip Bracket      | 20—Engine Support Front Insulator | 33—Bolt                       |
| 8—Engine Rear Plate          | 21—Engine Front Plate             | 34—Cylinder Block             |
| 9—Flywheel                   | 22—Camshaft Gear                  | 35—Inlet Valve Push Rod       |
| 10—Special Nut               | 23—Crankshaft Gear                | 36—Cylinder Head Gasket       |
| 11—Lockwasher                | 24—Thrust Washer                  | 37—Water Outlet Fitting       |
| 12—Nut and Lockwasher        | 25—Oil Slinger                    | 38—Rocker Shaft Bracket       |
| 13—Dowel Bolt                | 26—Crankshaft Front Oil Seal      | 39—Valve Cover Hold Down Stud |

first. To remove this ridge, use a cylinder ridge reamer, following the instructions furnished by the reamer manufacturer. Use care not to cut below the top of the upper ring travel in the bore. Keep each piston top covered with an oil-soaked cloth to prevent cuttings from falling into the cylinder.

**NOTE:** This operation should be performed at this time before the engine is rotated for the sequence steps following.

#### E-18. Remove Oil Pan

Rotate the engine to the upside down position. Remove the screws and lockwashers that attach the oil pan to the cylinder block. Remove the oil pan and gasket. Discard the gasket.

#### E-19. Remove Piston and Connecting Rod Assemblies

Remove the stamped locking nuts from the lower end of each connecting rod bearing bolt. Remove the connecting rod nuts. Remove the bearing cap evenly. Push the connecting rod and piston assembly out of the cylinder block with the handle end of a hammer until the piston rings are free from the cylinder bore.

Remove the piston and connecting rod assembly from the top of the cylinder block. Reassemble the connecting rod bearing cap with the bearings in place in the rod from which it was removed. Rotate the crankshaft and follow the same procedure until all the piston and connecting rod assemblies are removed.

Pistons and connecting rod assemblies may

removed for repair with the engine in the vehicle after draining the cooling system, removing the oil pan and the cylinder head, and reaming the ridges as previously described.

#### E-20. Remove Timing Gear Cover

Remove the bolts, nuts, and lockwashers, that attach the timing gear cover to the engine. Remove the cover, timing pointer, and cover gasket. Discard the gasket. Remove the crankshaft oil seal from the timing gear cover and discard the seal. Remove the oil slinger and spacer from the crankshaft.

#### E-21. Remove Timing Gears

Use puller W-172 for pulling both the crankshaft and the camshaft gears. With the threaded cap-screws supplied, adapt the puller to the crankshaft gear and pull the gear. With the special hook-type puller bolts that fit behind the camshaft gear flange, pull the camshaft gear. Remove the Woodruff Keys.

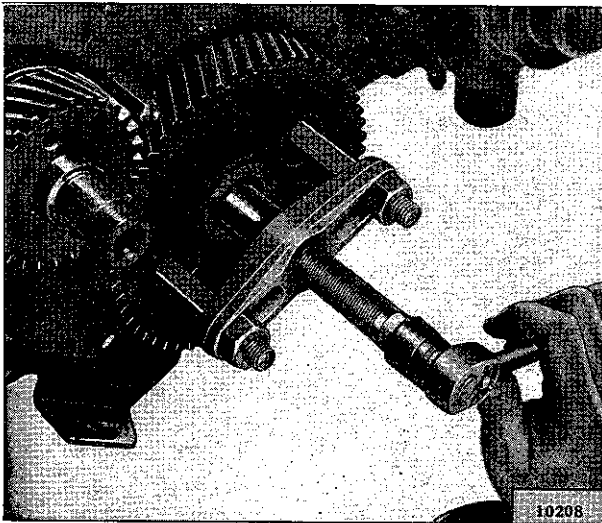


FIG. 97—PULLING TIMING GEARS

#### E-22. Remove Front End Plate

Remove the screws and lockwashers that attach the front end plate to the cylinder block. Remove the front end plate and gasket. Discard the gasket.

#### E-23. Remove Flywheel Bellhousing

Remove nuts from the flywheel bellhousing attaching bolts. With a drift pin drive the bolts out and remove the bellhousing.

#### E-24. Remove Clutch

Remove four bolts and lockwashers diagonally opposite that attach the clutch assembly to the flywheel, leaving two opposed bolts to be loosened alternately until the clutch spring pressure is relieved. Then, support the clutch assembly with one hand while removing the two remaining bolts. For information on disassembly, inspection, repair and assembly of the clutch refer to Section J. Instructions for removing the clutch when the engine is in the vehicle are also given in Section J.

#### E-25. Remove Flywheel

The flywheel is attached to the crankshaft with two tapered dowel bolts and four special bolts. Remove these attaching parts. Use a pry bar between the flywheel and the back of the engine and carefully loosen the flywheel from the crankshaft. If the flywheel is to be removed with the engine in the vehicle, the transmission and clutch must first be removed as detailed in Section J.

#### E-26. Remove Crankshaft

Slide the crankshaft thrust washer and all end-play adjusting shims off the front end of the crankshaft. Pull the two pieces of rear main bearing cap packing out of position between the side of the bearing cap and the cylinder block.

Note the marks on the bearing caps and cylinder block for bearing number and position.

Remove the screws and lockwashers that attach the main bearing caps to the cylinder block. Use a lifting bar beneath the ends of each bearing cap. Be careful not to exert too much pressure to cause damage to the cap or dowels and pry the caps free.

**CAUTION:** If main bearing caps are not removed carefully by raising both sides of each cap evenly until free of the dowels, the dowels may be bent. A bent main bearing cap dowel can cause misalignment of the cap and resultant rapid bearing wear necessitating replacement. Therefore, remove each main bearing cap carefully. If there is reason to believe any of the dowels have been bent during the bearing cap removal, remove them and install new dowels as detailed in Par. E-34c.

Remove the upper half of the rear main bearing oil seal from the cylinder block and the lower half from the oil seal groove in the rear main bearing cap. Install the main bearing caps and bearings on the cylinder block in their original positions.

**NOTE:** Removal of the crankshaft may be accomplished only with the engine out of the vehicle.

#### E-27. Remove Exhaust Valves and Springs

Access to the valve chamber is obtained by removing the attaching parts and the valve spring cover and gasket from the cylinder block. Use cloths to block off the three holes in the exhaust valve chamber to prevent the valve retaining locks falling into the crankcase, should they be accidentally dropped.

With a valve spring compressor, C-3422, compress the valve springs on those valves which are in the closed position (valve seated against cylinder block). Remove the exhaust valve spring retainer locks, the exhaust valve spring retainer, and the exhaust valve spring. Close the other valves by rotating the camshaft and repeat the above operation for the other valves in the same manner. Lift out all the exhaust valves and tag or place them in a rack to indicate the location where each was removed from the cylinder block. If a valve sticks in the guide and cannot be easily lifted out, pull the

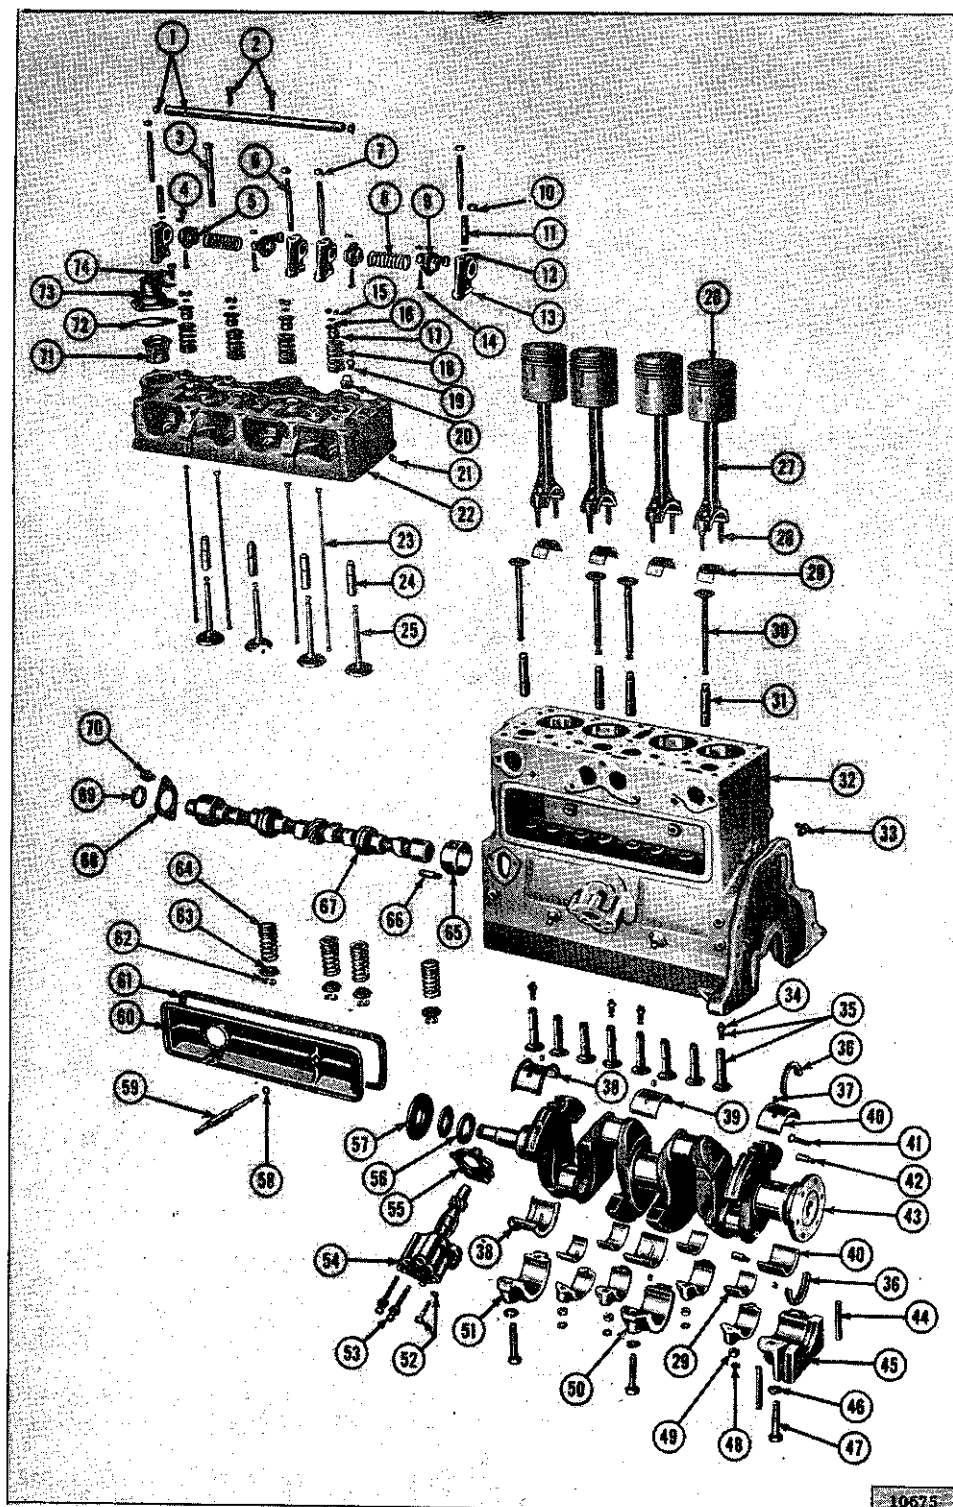


FIG. 98—F4-134 ENGINE

- 1—Rocker Arm Shaft and Plug
- 2—Rocker Shaft Lock Screw
- 3—Cylinder Head Bolt
- 4—Nut
- 5—Left Rocker Arm
- 6—Rocker Shaft Support Stud
- 7—Nut
- 8—Rocker Arm Shaft Spring
- 9—Right Rocker Arm
- 10—Nut
- 11—Rocker Arm Cover Stud
- 12—Plain Washer
- 13—Rocker Arm Shaft Bracket
- 14—Intake Valve Tappet Adjusting Screw
- 15—Intake Valve Spring Retainer Lock
- 16—Oil Seal
- 17—Intake Valve Spring Retainer
- 18—Intake Valve Spring
- 19—Flared Tube Connector
- 20—Pipe Plug  $\frac{1}{8}$ "
- 21—Pipe Plug  $\frac{1}{4}$ "
- 22—Cylinder Head
- 23—Intake Valve Push Rod
- 24—Intake Valve Guide
- 25—Intake Valve
- 26—Piston
- 27—Connecting Rod
- 28—Connecting Rod Cap Bolt
- 29—Connecting Rod Bearing Set
- 30—Exhaust Valve
- 31—Exhaust Valve Guide
- 32—Cylinder Block
- 33—Cylinder Block Drain Lock
- 34—Tappet Adjusting Screw
- 35—Exhaust Valve Tappet
- 36—Crankshaft Rear Bearing Seal
- 37—Crankshaft Bearing Dowel
- 38—Front Bearing Set
- 39—Center Bearing Set
- 40—Rear Bearing Set
- 41—Bolt
- 42—Dowel
- 43—Crankshaft
- 44—Rear Bearing Cap Packing
- 45—Rear Main Bearing Cap
- 46—Lockwasher
- 47—Bolt
- 48—Lock Nut
- 49—Connecting Rod Cap Nut
- 50—Center Main Bearing
- 51—Front Main Bearing
- 52—Screw and Lockwasher
- 53—Screw and Lockwasher
- 54—Oil Pump
- 55—Gasket
- 56—Crankshaft Shim
- 57—Crankshaft Thrust Washer
- 58—Gasket
- 59—Stud
- 60—Exhaust Valve Spring Cover
- 61—Gasket
- 62—Valve Spring Retainer Lower Lock
- 63—Roto-Cap
- 64—Exhaust Valve Spring
- 65—Camshaft Front Bushing
- 66—Timing Gear Oil Jet
- 67—Camshaft
- 68—Camshaft Thrust Plate
- 69—Spacer
- 70—Bolt and Lockwasher
- 71—Thermostat
- 72—Gasket
- 73—Water Outlet Fitting
- 74—Screw and Lockwasher

valve upward as far as possible and remove the spring. Lower the valve and remove any carbon deposits from the valve stem. This will permit removal of the valve.

#### E-28. Remove Camshaft

a. Push the intake and exhaust valve tappets into the cylinder block as far as possible so the ends of

the tappets are not in contact with the camshaft.  
b. Secure each tappet in the raised position by installing a common clip-type clothes pin on the shank of each tappet or tie them up in the valve chamber.

c. Remove the camshaft thrust plate attaching screws. Remove the camshaft thrust plate and spacer.

d. Pull the camshaft forward out of the cylinder block using care to prevent damage to the camshaft bearing surfaces.

### E-29. Remove Valve Tappets

Remove the intake and exhaust valve tappets from the bottom or crankshaft side of the cylinder block after the camshaft has been removed. Tag each tappet or place them in a marked rack so they may be reassembled in their original positions.

### E-30. Remove Oil Gallery Plugs

Remove the plug at each end of the oil gallery in the cylinder block. This operation is only applicable when the engine is out of the vehicle and will allow access to the oil gallery so it may be cleaned.

### E-31. ENGINE INSPECTION AND REPAIR

The inspection and repair procedures detailed herein are recommended to be followed when a complete engine overhaul is to be made with the engine out of the vehicle. These instructions can generally be applied individually with the engine in the vehicle. Wherever the procedure differs due to the engine being in the vehicle, the necessary special instructions are provided. Inspection and repair instructions are included to cover the cylinder block, cylinder head, crankshaft and bearings, connecting rods and bearings, oil pump, valves and tappets, pistons and rings, flywheel, timing gears, and the camshaft and bearings. In addition, fitting operations for these engine components are included.

**IMPORTANT:** Before the inspection and repair procedures listed below are begun, the engine serial number must be checked for the presence of code letters denoting undersize bearings or oversize pistons. Refer to Par. E-2.

### E-32. Cylinder Block

The cylinder block must be thoroughly cleaned, inspected and repaired as detailed in the following paragraphs.

### E-33. Cleaning

The cylinder block may be steam cleaned or cleaned with a suitable solvent. A scrapper is recommended to remove hard deposits, except on highly finished surfaces. Special attention must be directed to the cleaning of the oil passages, valve chamber, crankcase, and cylinder walls to remove all sludge, dirt carbon deposits. After cleaning, use air pressure to dry the block thoroughly.

### E-34. Inspection

Examine the cylinder block for minute cracks and fractures. Rusted valve springs or evidence of rust in the valve chamber or the cylinder walls is a good indication of a possible crack in the block.

a. Examine all machined surfaces of the cylinder block for burrs and scores. Check for cylinder block distortion by placing a straight edge along the length of the cylinder head surface of the block. With a feeler gauge, check for clearance between the straight edge and the block, particularly be-

tween adjacent cylinders. Maximum permissible out of line for service is .010" [0,254 mm.] over the full length of the block.

b. Check the cylinder bores for out-of-round and taper to determine if the bores require honing or reboring. For detail information refer to Par. E-35.

c. If there is any reason to believe that any of the main bearing cap dowels have been bent during bearing cap removal, install new ones. The dowels must fit tightly to ensure cap alignment and as they are hardened they may be difficult to grip and remove. To simplify the operation, file a notch on each side of the dowel to accommodate a pair of diagonal cutters. Using a piece of bar stock under the diagonals for leverage, work the dowel out. Before installing a new dowel in the cylinder block, make sure the dowel hole is clean. Start the dowel straight in the hole, then tap the dowel lightly with a hammer until it bottoms.

d. When installing bearing caps, be sure to tighten the bolts evenly in each cap to pull it into place without bending the dowels or distorting the bearing cap.

e. Other parts of the block which require inspection and possible repair, but which are directly related to other engine components (such as tappets, pistons, camshaft, valves, crankshaft, and oil pump) are covered later in this section.

### E-35. Cylinder Bores

The cylinder bores may be reconditioned by honing or reboring. Use oil-soaked rags to protect crankshaft journals and other engine parts from abrasive dust during all reconditioning operations.

Both honing and reboring of the cylinders must be done carefully to fit the pistons and to obtain specified clearances. If reboring of the cylinder bores is not required but the walls are glazed, use a finishing hone to remove the glaze. Reboring the cylinders must not be attempted unless adequate facilities and experienced service technicians are available. The amount of material to be removed is determined from the original diameter of the cylinder bores (3.125" to 3.127") [79,375 a 79,426 mm.] plus the amount of oversize in diameter of the oversize pistons to be fitted. Pistons are available in the following oversizes.

.010" [0,254 mm.]	.030" [0,762 mm.]
.020" [0,508 mm.]	.040" [1,016 mm.]

The largest cylinder bore will determine the oversize to which all cylinders must be rebored, since the size and weight of all pistons must be uniform to maintain proper engine balance. The maximum rebore should not exceed .040" [1,016 mm.] from standard.

Measure the cylinder diameters by making measurements both parallel to and at right angles to crankshaft over entire piston travel and at bottom of cylinder. Proceed as follows:

a. If bores are scored; if out-of-round exceeds .005" [0,127 mm.]; if diameters differ more than .005"; or if taper exceeds .005" on diameter, it is generally recommended that cylinders be reconditioned by reboring and honing to the next oversize using new pistons of the proper size.

**NOTE:** If reboring is performed, allow .0015" [0,0381 mm.] for final honing. All cylinder bore diameters must be within .002" [0,0508 mm.] after reconditioning.

b. If bore measurements are within the above limits, but indicate hollows or waviness, cylinders should be honed with 250 grit stone hone. Pump hone up and down in cylinder while it is rotating to produce a satin-finish, diamond cross-hatched pattern approximately 30° with horizontal. Hone only enough to correct waviness.

c. If cylinder bore correction is unnecessary, break the glaze on the cylinder walls with a 250 grit stone hone or with a suitable deglazing tool. Operate the hone or deglazer to obtain diamond cross-hatched pattern previously mentioned.

d. Regardless of type of correction on cylinder walls, wash out bores thoroughly afterwards and apply a light coat of engine oil. If cylinders have been rebored or honed heavily, measure cylinder diameters again to assure proper selection of piston size.

### E-36. Pistons, Rings, and Connecting Rods

The T-slot, aluminum pistons are each fitted with three rings; two compression rings and one oil control ring. An additional top groove serves as an insulator to protect the rings below it from the heat of the combustion chamber. The piston pin is secured by a lock screw.

The pistons and connecting rods were removed from the engine as assemblies. If cylinders were rebored, new oversized pistons and rings will have to be installed. Use standard size pistons in cylinder bores up to .009" [0,2286 mm.] oversize measured at the bottom of the bore. For oversize, use the following chart:

OVERSIZE PISTON APPLICATION CHART

Oversize Piston	Use in Oversize Cylinder Bore Range	Metric
.010"	.010" to .019"	0,254 a 0,483 mm.
.020"	.020" to .029"	0,508 a 0,737 mm.
.030"	.030" to .039"	0,762 a 0,991 mm.
.040"	.040"	1,016 mm.

Disassemble the pistons and rods. Remove the two compression rings, the oil control ring, and the oil control ring expander from each piston. Do not remove the bolts from the lower end of the connecting rods unless the bolts are damaged. Clamp each connecting rod and piston assembly in a padded bench vise and remove the piston pin lock screw and lockwasher. Press the piston pin out of the piston and connecting rod. Clean all carbon, gum, and lacquer deposits from both the inner and outer surfaces of each piston, connecting rod, and piston pin. Use a ring groove cleaner or a broken ring filed to a sharp square edge to clean the carbon from the piston ring grooves and the insulator groove. Use care not to scrape metal from the sides of the grooves or make burrs on ring groove surfaces. Run a length of wire through the oil spray hole near the lower end of the connecting rod to clear the hole of hardened oil deposits or foreign matter. Carefully inspect the pistons and

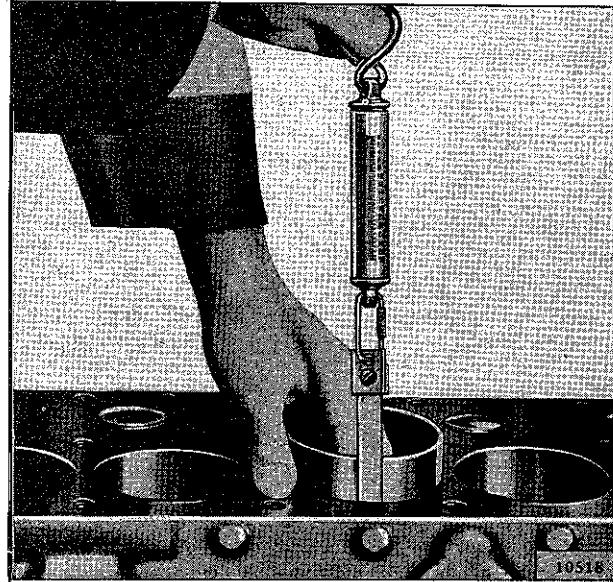


FIG. 99—PISTON FITTING

replace any that are broken or cracked. Replace pistons if any of the ring lands are chipped, broken, or rounded on the edges; or if the piston is scored, scratched, or burned so seriously that the imperfections cannot be removed with a hand honing stone or crocus cloth. Check the dimensions of the top and bottom of each piston and replace those which are not within .0005" [0,0127 mm.] of the desired dimensions.

Replace the pistons as follows:

a. After cylinder bores have been carefully checked for out-of-round and taper (Par. E-35), check fit of each piston to cylinder bore with block and pistons clean and dry and at approximately 70°F. [21°C.] by using piston fitting gauge and scale as shown in Fig. 99. Use a .003" [0,0762 mm.] thickness gauge 3/4" [19 mm.] wide. The piston is fitted upside down in the block to facilitate the operation. The gauge must extend the full length of the

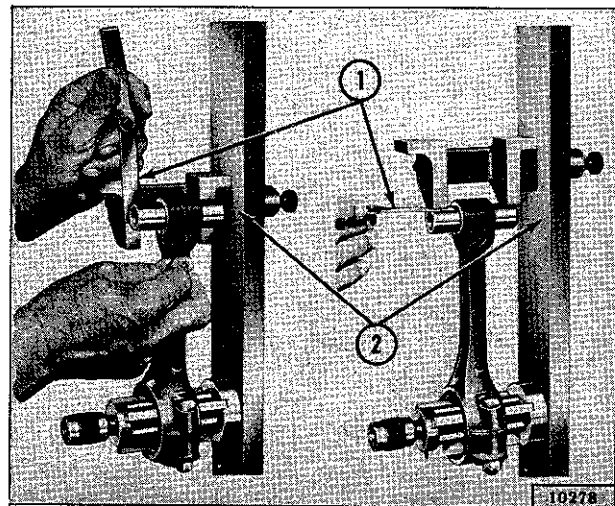


FIG. 100—CHECKING CONNECTING ROD ALIGNMENT.

1—Feeler Gauge

2—Fixture



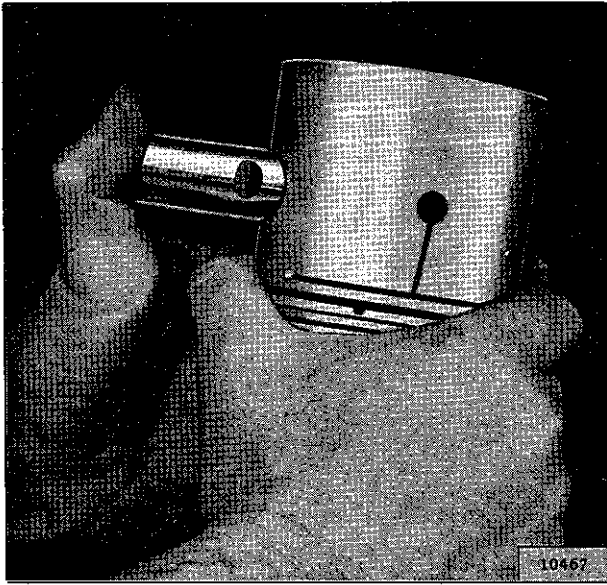


FIG. 101—PISTON PIN FITTING

piston on the thrust side (opposite side from slot in piston skirt). Scale should register 5 to 10 pounds [2,3 a 4,5 kg.] pull to remove the thickness gauge from between cylinder wall and piston. Excessive pull indicates need for a slightly smaller

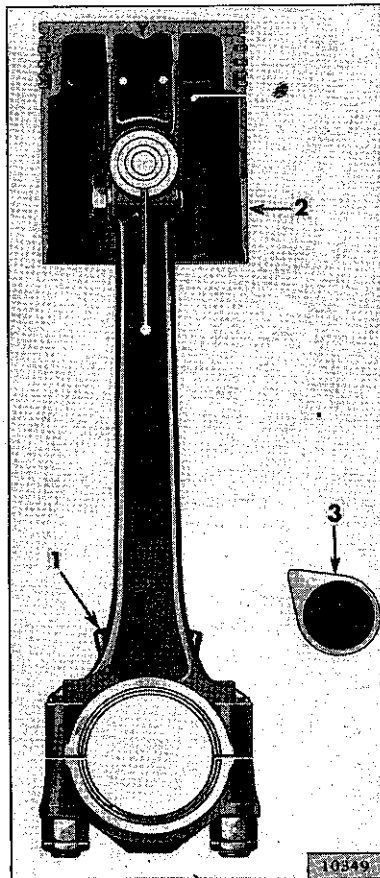


FIG. 102—CONNECTING ROD AND PISTON

- 1—Oil Spray Hole
- 2—Piston Skirt T-slot
- 3—Relative Position of Camshaft

piston or additional honing of cylinder. Insufficient pull indicates need for fitting a larger piston.

**b.** Check and if necessary correct connecting rod alignment using a connecting rod aligning fixture such as the one shown in Fig. 100, in accordance with the instructions furnished with the fixture.

**c.** Check the piston pin fit. The piston pins are fitted with a clearance of .0001" to .0003" [0,0025 a 0,0076 mm.] which approximates a light thumb push fit at room temperature. See Fig. 101. The piston pins are anchored in the rods with lock screws. Installation of oversize pins in this engine

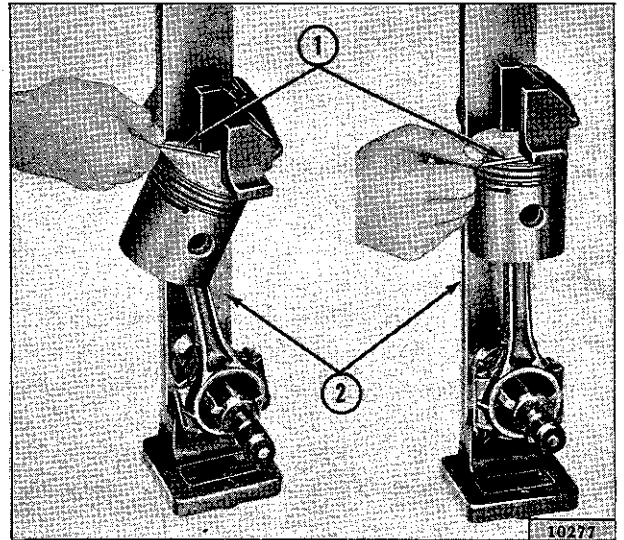


FIG. 103—CHECKING PISTON AND CONNECTING ROD ALIGNMENT

- 1—Feeler Gauge
- 2—Fixture

is not recommended as experience has shown that should a pin be worn sufficiently to require replacement, the piston should also be replaced.

Clamp the connecting rod in a vise using jaw shields of soft metal or two pieces of hardwood, one on each side of the rod and positioned approximately 3" [76 mm.] from the piston pin end. Start the piston pin in the piston with the lock screw groove

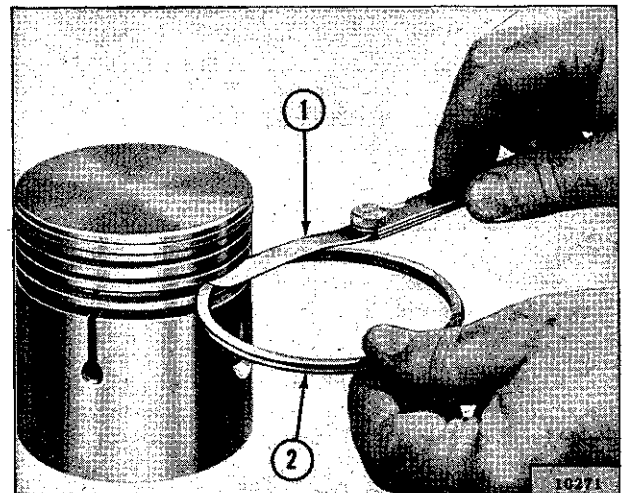


FIG. 104—CHECKING PISTON RING SIDE CLEARANCE

- 1—Feeler Gauge
- 2—Piston Ring

facing down. Assemble piston to connecting rod with slot, Fig. 102, No. 2, in the piston on the opposite side from the oil spray hole, No. 1, in the bearing end of the connecting rod. Install the piston pin lock screw and torque 35 to 41 lb-ft. [4,8 a 5,7 kg-m.].

d. Place piston and rod assembly in a connecting rod aligning fixture and check alignment of the assembly as shown in Fig. 103. Follow instructions furnished with the fixture.

e. Using a feeler gauge and new piston rings, check

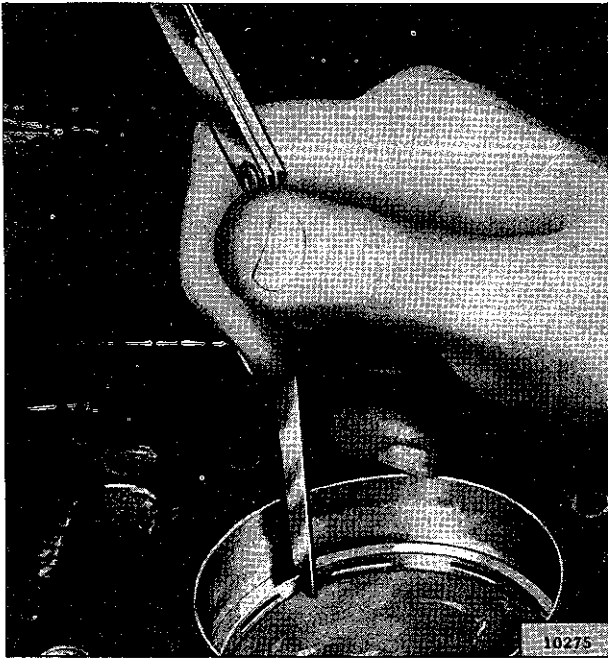


FIG. 105—PISTON RING GAP

the width of the two compression ring grooves and the oil ring groove. Replace the piston if the widths of the grooves are not within the limits given below:

#### RING TO GROOVE CLEARANCES

Top Compression Ring.....	.002" to .004" [0,0508 a 0,1016 mm.]
Center Ring.....	.0015" to .0035" [0,0381 a 0,0889 mm.]
Bottom Ring.....	.001" to .0025" [0,0254 a 0,0635 mm.]

Insert feeler gauge between ring and piston to back of groove. Replace piston if ring grooves are not within allowable tolerances. If a feeler gauge larger than .006" [0,152 mm.] can be inserted  $\frac{1}{16}$ " [1,6 mm.] between piston and upper compression ring, groove is worn excessively bell-mouthed and piston should be replaced.

f. Check piston ring end gap by placing compression ring in cylinder bore below ring travel using head of an inverted piston as a plunger to push ring in squarely. End gap must be as shown in Par. E-37 for all rings. If less, file ends to obtain minimum gap. With cylinders bored to an exact ring oversize of +.020", +.030", or +.040" [0,508-0,762-1,016 mm.] the proper end clearance of .007" to .017" [0,178 a 0,432 mm.] will result. If end gaps are not within the limits given in Par. E-37,

rings are of the wrong size or were incorrectly filed for fitting.

g. Install a new ring set using either production replacement rings or service type oil control rings. Production type replacement piston rings are the same as the original factory-installed rings while service oil control ring sets have different components, notably the oil ring expander. Follow instructions of manufacturer for proper installation. Use a piston ring expander to install rings on pistons. Do not expand rings more than necessary to install, also be careful not to burr the piston with ends of rings. Install bottom (oil) ring first, center ring second, and top ring last.

NOTE: Pistons have an extra groove directly above the top ring which acts as a heat dam or insulating groove to protect the top ring against sealing in the groove with hard carbon.

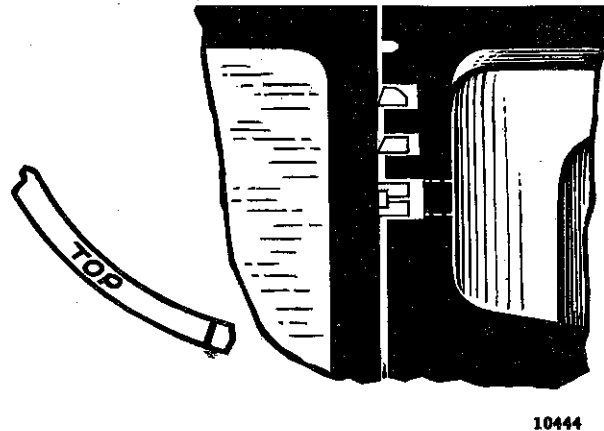


FIG. 106—PISTON RING INSTALLATION

The width of the compression rings is  $\frac{3}{32}$ " [2,38 mm.] and that of the oil control ring is  $\frac{3}{16}$ " [4,78 mm.]. While the compression rings are of the same size, they are different in construction and must not be interchanged. Install these rings as shown in Fig. 106. The upper compression ring has an inside beveled edge which must be installed toward the piston top. The face of the lower compression ring is tapered approximately .001" [0,03 mm.]. The letters **T** or **TOP** on the upper edge indicate how the ring is to be installed.

#### E-37. Piston Ring Application Chart

Cylinder Bore Oversize	Correct Ring Size	Ring Gap Fitting	End Gap
Std. to .009" [a 0,483 mm.]	Std.	None	.007" to .045" [0,1778 a 1,1430 mm.]
.010" to .019" [0,254 a 0,4826 mm.]	-.020"	File fit	.007" to .017" [0,1778 a 0,4318 mm.]
.020" to .024" [0,508 a 0,6096 mm.]	-.020"	None	.007" to .029" [0,1778 a 0,7366 mm.]
.025" to .029" [0,635 a 0,7366 mm.]	-.030"	File fit	.007" to .017"
.030" to .034" [0,762 a 0,8636 mm.]	-.030"	None	.007" to .029"
.035" to .039" [0,889 a 0,9906 mm.]	-.040"	File fit	.007" to .017"
.040" [1,016 mm.]	-.040"	None	.007" to .017"



### E-38. Crankshaft

The crankshaft is machined from a heat-treated carbon steel forging and is carefully balanced both dynamically and statically. The crankshaft is supported by three replaceable main bearings. The front main bearing is flanged to take the end thrust of the crankshaft. A flanged section on the rear of the crankshaft acts as an oil slinger. While the crankshaft is out of the engine, handle it carefully to prevent damage to the connecting rod crankpins and the main bearing journals.

### E-39. Crankshaft Inspection and Repair

Clean out the drilled oil passages in the crankshaft journals with a small rifle brush making sure to get rid of all sludge or gum deposits. Blow out the passages with compressed air after cleaning. Clean the crankshaft thoroughly with a suitable cleaning solvent. Inspect the crankshaft for cracks, alignment, and condition of the crankpins and the main bearing journals. Use magnaflux equipment, if available, to check for cracks or structural flaws. Cracks, misalignment, and scored or worn journals and crankpins necessitate crankshaft repair or replacement.

Check crankshaft counterweights to be sure they are not loose.

### E-40. Checking Crankshaft Alignment

To check alignment, mount the crankshaft in the cylinder block with the front and rear bearings in place but with the intermediate bearing removed. With a dial indicator mounted on the crankcase and the indicator button resting on the intermediate bearing journal, slowly rotate the crankshaft and note the reading on the indicator dial. Install the intermediate bearing and remove first the front and then the rear bearings to repeat the operation with the dial indicator, checking the front and rear bearing journals. The maximum allowable run-out is .002" [0,0508 mm.].

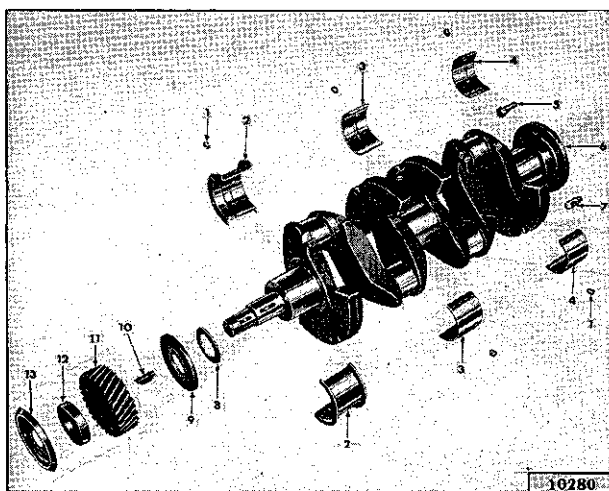


FIG. 107—CRANKSHAFT AND BEARINGS

- |                       |                       |
|-----------------------|-----------------------|
| 1—Bearing Dowel       | 8—Crankshaft Shim     |
| 2—Front Bearing       | 9—Thrust Washer       |
| 3—Center Bearing      | 10—Woodruff Key No. 9 |
| 4—Rear Bearing        | 11—Crankshaft Gear    |
| 5—Flywheel Bolt       | 12—Gear Spacer        |
| 6—Crankshaft          | 13—Oil Slinger        |
| 7—Flywheel Dowel-Bolt |                       |

### E-41. Checking Main Bearing Journals

An ordinary 3" [7,62 cm.] micrometer may be used. The standard journal diameter is 2,3341" to 2,3331" [5,9286 a 5,9261 cm.] for all main bearings. Allowable taper or out-of-round of the journals is .001" [0,0254 mm.].

### E-42. Checking Connecting Rod Crankpins

Check the crankpin diameters with a micrometer to ensure that they are not out-of-round or tapered more than .001" [0,0254 mm.]. The standard crankpin diameter is 1,9383" to 1,9375" [4,9233 a 4,9213 cm.].

### E-43. Crankshaft Main Bearings

The crankshaft rotates on three main bearings. These bearings are positioned and prevented from rotating in their supports in the cylinder block by dowel pins. Dowel pins are used in both the center and the rear bearing caps. No dowel pins are used in the front bearing cap because the bearing has a flange. The front main bearing takes the end thrust of the crankshaft. The main bearings are of premium type which provides long bearing life. They are replaceable and when correctly installed, provide proper clearance without filing, boring, scraping, or shimming. Crankshaft bearings can be removed from this engine only with the engine out of the vehicle. Crankshaft bearings must be replaced as a complete set of three bearings, each bearing consisting of two halves. Main bearings are available in the standard size and the following undersizes:

.001" [0,025 mm.]	.012" [0,304 mm.]
.002" [0,050 mm.]	.020" [0,508 mm.]
.010" [0,254 mm.]	.030" [0,762 mm.]

The .001" and .002" undersize main bearings are for use with standard size crankshafts having slightly worn journals. The .010", .020", and .030" undersize bearings are for use with undersize crankshafts in those sizes. The .012" undersize bearings are for use with .010" undersize crankshafts having slightly worn journals. Bearing sizes are rubber stamped on the reverse side of each bearing half.

### E-44. Crankshaft Main Bearing Inspection

The crankshaft journals must be carefully inspected as detailed previously in Par. E-41. Worn journals will require undersize bearings. Scored, flaked, or worn bearings must be replaced. Measure the main bearing bores in the cylinder block using a telescope gauge and micrometer. Measure the bores at right angles to the split line and at 45° to the split line. The bores should not be over .001" [0,0254 mm.] out-of-round or .001" in taper from end to end. Also, the bores should not be more than .001" oversize, considering the average diameter of the bore.

### E-45. Fitting Crankshaft Main Bearings

Fit the crankshaft main bearings using either "Plastigage" or shim stock. Refer to the instructions in Section D for "Plastigage" (Par. D-50) or shim stock (Par. D-51).

Note the following differences:

- a. The desired running fit in the F4-134 engine for

a main bearing is .001" to .0025" [0,0254 a 0,0635 mm.]. With a dimension in excess of this standard running fit, a satisfactory bearing replacement cannot be made and it will be necessary to regrind the crankshaft.

b. Main bearing cap bolts torque 65 to 75 lb-ft. [9,0 a 10,4 kg-m.].

#### E-46. Connecting Rod Bearings

The connecting rod bearings, like the crankshaft main bearings, are of the replaceable type. When correctly installed, the bearings provide proper clearance without filing, boring, scraping, or shimming.

Main bearings with maximum wearing surfaces are obtained through the use of offset connecting rods. When the rods are installed, the offset "A" in Fig. 108 is placed away from the nearest main bearing "B".

The oil spray hole should be on the "follow" side or away from the camshaft, toward the right side of the vehicle. Because of the offset and oil spray hole, No. 1 and 2 or No. 3 and 4 connecting rods cannot be interchanged for if they are reversed, the oil spray hole will be on the wrong side. No. 1 and 3 or No. 2 and 4 can be interchanged.

Connecting rod bearings should be replaced as a complete set. Each bearing consists of two halves. Connecting rod bearing sets are available in standard size and the following undersize:

.001" [0,025 mm.]	.012" [0,304 mm.]
.002" [0,050 mm.]	.020" [0,508 mm.]
.010" [0,254 mm.]	.030" [0,762 mm.]

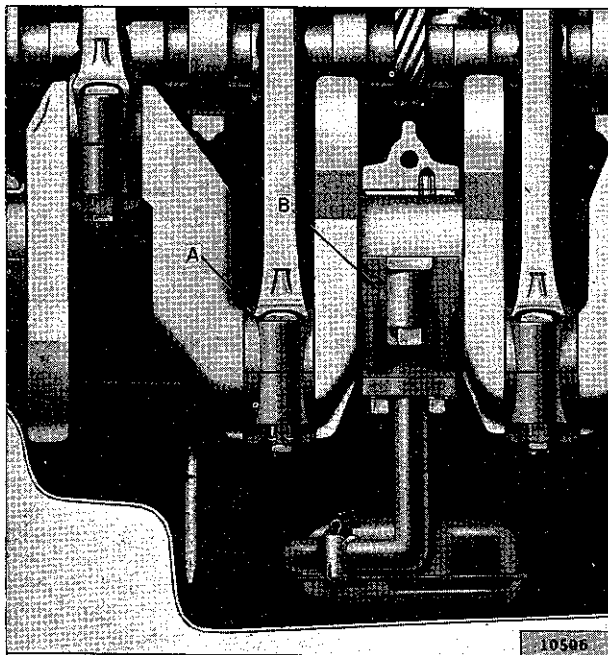


FIG. 108—CONNECTING ROD OFFSET

The .001" and .002" undersize bearings are for use with standard size crankshafts having slightly worn crankpins that do not require grinding. The .012" undersize bearings are for use with slightly worn crankshafts that have been previously ground for .010" undersize bearings.

Should it be necessary to replace the bearings due to wear, replacement of piston rings and piston pins is also recommended.

NOTE: Should it be necessary to replace a scored or burned No. 1 connecting rod bearing, see Par. E-92 regarding timing gear oil jet.

#### E-47. Connecting Rod Bearing Inspection

The bearing fits may be roughly checked by shaking the connecting rod by hand, prior to removal of the bearing cap, to determine if it is loose on the crankshaft. The crankpins must be carefully inspected as detailed previously in Par. E-41. Worn crankpins will require undersize bearings. Scored, flaked, or worn bearings must be replaced.

#### E-48. Installing Connecting Rod Bearings

New bearings must be installed so that the oil spray hole in the upper bearing half aligns with the oil spray hole in the connecting rod. Each bearing cap must be installed to seat evenly on the connecting rod from which it was removed, and in the same position. After wiping and carefully inspecting the bearing bore in the connecting rod, install the proper bearing. Never file either the bearing cap or the bearing to compensate for too much clearance. Do not use shims under a bearing cap or behind a bearing shell. Do not run a new bearing half with a worn half.

The desired running fit (difference between the diameter of the crankpin and the inside diameter of the fitted bearing) for a connecting rod bearing is .001" to .0019" [0,0254 a 0,04826 mm.]. With a dimension in excess of this standard running fit, a satisfactory bearing replacement cannot be made and it will be necessary to regrind the crankshaft. Install the bearing lower half and the connecting rod cap and draw the cap bolt nuts down equally and only slightly tight. Move the connecting rod endwise, one way or the other, on the crankshaft

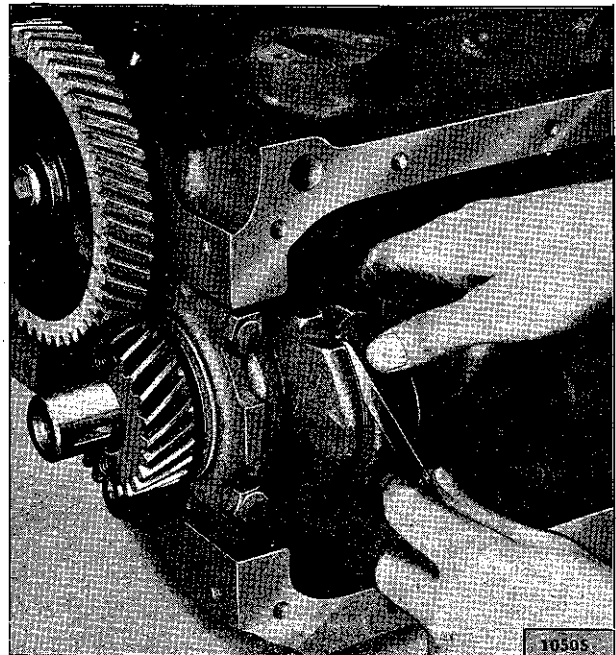


FIG. 109—CONNECTING ROD SIDE PLAY

to be sure the bearing is not tight. Pull the nuts tighter, first one then the other, a little at a time, and keep trying the fit of the rod on the crankshaft by hand until the recommended torque of 35 to 45 lb-ft. [4,8 a 6,2 kg-m.] is reached. If the bearings are of the correct size, and have been properly lubricated with light engine oil before installation, the connecting rod should be easy to slide back and forth parallel to the crankpin.

If the connecting rod is tight on the crankshaft, a larger bearing is required. If there is no binding or tightness, it is still necessary to check clearance to guard against too loose a fit. The use of "Plastigage" or shim stock of the proper size to measure .001" [0,0254 mm.] clearance is recommended for checking connecting rod bearing clearances. This is the same material recommended for checking crankshaft main bearings and the method of checking is similar. Refer to Par. D-50 or D-51. Connecting rod bearings are fitted to the same clearance as the main bearings but the torque specified for connecting rod cap bolt nuts is only 35 to 45 lb-ft. [4,8 a 6,2 kg-m.].

#### E-49. Connecting Rod Side Play

Check the connecting rod side play with a feeler gauge as shown in Fig. 109. The side clearance is .004" to .010" [0,1016 a 0,254 mm.].

#### E-50. Crankshaft End Play

The end play of the crankshaft is adjusted by shims placed between the crankshaft thrust washer and the shoulder on the crankshaft. Allowable end play is .004" to .006" [0,102 a 0,152 mm.]. This clearance may be checked with a dial indicator. (See Fig. 123.).

#### E-51. Camshaft and Bearings

The camshaft is supported at four points in the cylinder block. The front is supported in a replaceable, steel-shell, babbitt-lined bearing. The bearing is pressed into place. The other three bearing surfaces are precision machined in the cylinder block. The camshaft bearings are pressure lubricated through drilled passages in the crankcase. End thrust of the camshaft is taken by a thrust plate bolted to the crankcase. The camshaft is driven by a silent helical-cut tooth timing gear at the front of the engine. A worm gear, integral with the camshaft, drives the oil pump and distributor. The fuel pump is actuated by an eccentric forged onto the camshaft.

Clean the camshaft thoroughly in cleaning solvent. Inspect all camshaft bearing surfaces to determine if they are scored or rough. The cam faces must be perfectly smooth throughout their contact face and must not be scored or worn.

#### E-52. Camshaft Front Bearing Replacement

Use a suitable driver to remove the camshaft front bearing from the cylinder block. To install a new bearing, align the oil hole in the bearing with the bored hole in the cylinder block and drive the bearing in until the front end of the bearing is flush with the front surface of the cylinder block. Make sure the oil hole is open and clear. It is not necessary to line-ream the bearing after installation because bearings for replacement are precision

reamed to the finished size. Do not stake the bearing.

#### E-53. Camshaft End Play

End play of the camshaft is determined by running clearance between the rear face of the camshaft gear and the thrust plate and is established by the spacer thickness. The standard clearance is .004" to .007" [0,102 a 0,178 mm.] and can be measured by a dial indicator. As a general rule this clearance will change but little through wear or when a new gear is installed. To predetermine the correct end float with the gear, spacer, and thrust plate removed, measure the thickness of both the thrust plate and spacer with a micrometer. The thickness of the spacer should be approximately .006" [0,152 mm.] greater than that of the thrust plate. When this is correct and the parts are assembled and drawn tightly together by the gear retaining screw, the end play should come within standard limits.

#### E-54. Timing Gears and Cover

The timing gears are mounted at the front of the engine. Camshaft drive is through helical-cut timing gears; a steel gear on the crankshaft and a pressed fiber gear on the camshaft. The gears are keyed to their respective shafts. The camshaft driven gear is secured on the front end of the camshaft by means of a capscrew and a plain washer. The crankshaft gear is secured on the front end of the crankshaft by a nut threaded onto the front end of the crankshaft holding the crankshaft pulley, crankshaft oil slinger, and the crankshaft drive gear spacer. The timing gears are lubricated through a jet threaded into the crankcase directly above the gear contact and oil supplied through a drilled passage from the front main bearing. The timing gears are enclosed by the sealed timing cover. The oil seal in the cover bears against the hub of the crankshaft pulley. Timing gears are accessible for inspection or replacement with the engine installed in the vehicle after removing the radiator, belt drive pulley, and timing cover.

Should it be necessary to replace the timing gears, attention must be given to the end float of both the camshaft and crankshaft and to the running clearance (lash) of both gears. It is also advisable to check both the oil jet and oil passage to the crankshaft front bearing to be sure that they are clear.

#### E-55. Inspection and Repair

Check the general condition of both gears and inspect for evidence of excessive wear. Replace excessively worn or damaged gears. Inspect the cover and replace if bent or damaged. It is recommended that the crankshaft oil seal in the cover be replaced when the cover is removed to ensure a good seal around the crankshaft. To replace this seal with the engine in the vehicle requires removing the radiator and water pump.

#### E-56. Valves, Springs, and Guides

The exhaust valves seat on the top of the cylinder block with the stems extending down through replaceable valve guides. The exhaust valves are

actuated by the camshaft through exhaust valve tappets. The exhaust valve springs are assembled and locked on the lower end of the exhaust valve stems. The retaining locks are the split type, which fit in a recess on the valve stems and into the taper in the valve spring retainers.

Adjustment of exhaust valves is by means of the adjusting screw threaded into the upper end of the exhaust valve tappets. An exhaust valve rotator used as a valve spring retainer is installed on the lower end of the exhaust valve. This valve rotator, known as "Roto Cap", is a spring-loaded ball bearing device. On each lift, or opening stroke of a valve, the rotator gives the valve a slight positive clockwise rotation.

The intake valves operate in valve guides in the cylinder head and are actuated by rocker arms. The rocker arms are actuated by valve push rods and the intake valve tappets. The intake valve springs, the intake valve spring retainers, and the intake valve spring retainer locks make up the remainder of the valve operating parts. An intake valve spring retainer oil seal which encircles the upper end of the intake valve between the valve locks and the upper end of the valve guide, controls the passage of oil along the valve stem and guide.

**NOTE:** When engine trouble indicates defective valves as a possible source of trouble, also check the vacuum-pump-to-manifold vacuum line connector.

### E-57. Inspection of Valves, Springs, and Guides

Clean the valves on a wire wheel, making sure that all carbon is removed from the top and the underside of the heads and that all gum and varnish deposits are removed from the stems.

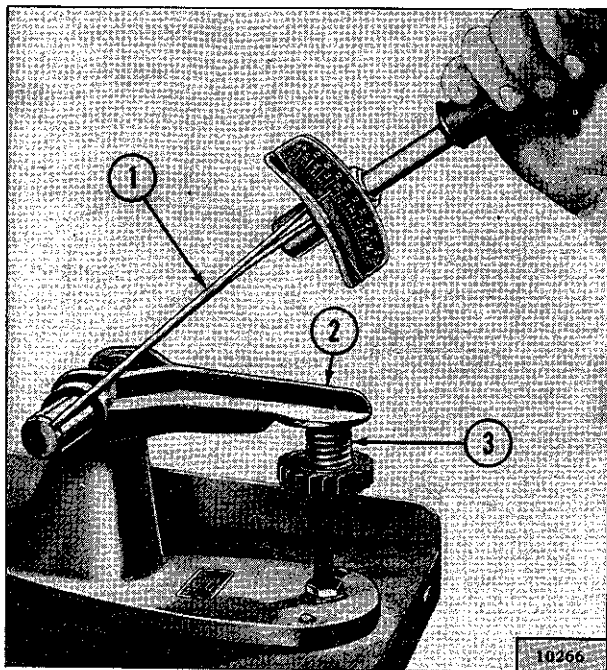


FIG. 110—TESTING VALVE SPRING

- 1—Torque Wrench
- 2—Spring Testing Fixture
- 3—Valve Spring

Polish the valve stems with steel wool or crocus cloth. Visually inspect all valves for warpage, cracks, or excessive burning and discard if one of these conditions exists. Replace any worn, pitted, or corroded valves that cannot be cleaned with a wire brush. Replace any valves when seats are pitted, burned, or corroded so badly that they cannot be cleaned up with a light refacing on a valve refacing machine.

Replace valves with marks of scoring or abrasion visible on the stem. Replace any valves with bent stems which will be apparent when the valve is mounted in the valve refacing machine. Examine the stems of valves which employ the ball bearing rotators. Wear marks around the circumference of the stems indicates that the valve is rotating satisfactorily. Vertical heavy pressure areas indicate that the valve is not rotating and the valve spring retainer (Roto Cap) should be replaced if at fault. Check the diameter of the valve stem at two or three places along the length of the stem with a micrometer. The intake valve stem diameter is .3733" to .3738" [9,482 a 9,495 mm.]. The exhaust valve stem diameter is .371" to .372" [9,423 a 9,449 mm.]. The specified valve stem-to-guide clearance is .0007" to .0022" [0,0178 a 0,0559 mm.] for the intake valves and .0025" to .0045" [0,0635 a 0,1143 mm.] for the exhaust valves.

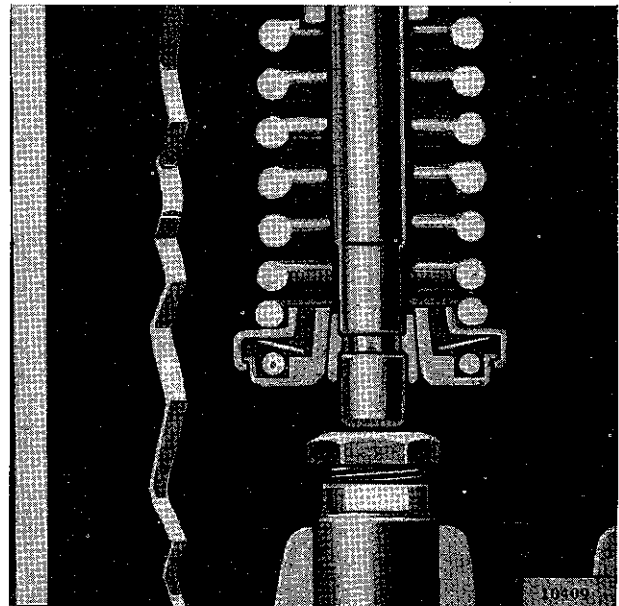


FIG. 111—VALVE WITH ROTO CAP

**NOTE:** Exhaust and intake valve springs are similar in appearance. They must not be interchanged as they have different spring characteristics.

Wash the valve springs thoroughly in solvent. Visually examine the springs and replace any that are deformed or obviously damaged. Examine for corrosion from moisture or acid etching which might develop into surface cracks and cause failure. Measure the over all free length of the springs and replace any that do not measure to standard:  $1\frac{31}{32}$ " [35,7 mm.] for intake valve springs and  $2\frac{1}{2}$ "

[63,5 mm.] for exhaust valve springs. If possible, check each valve spring in a valve spring testing fixture as shown in Fig. 110. Test each spring when compressed to the two different spring lengths given (representing valve closed and valve open spring length). If any spring fails to register spring tension equal to or greater than the minimum load limit in pounds specified for that spring length, replace the spring.

	Length	Minimum Load
Intake valve spring . . . . .	1.66" [43,5 mm.]	66 lb. [29,9 kg.]
	1.40" [35,6 mm.]	140 lb. [63,5 kg.]
Exhaust valve spring . . . . .	2.11" [53,6 mm.]	47 lb. [21,3 kg.]
	1.75" [44,5 mm.]	110 lb. [49,9 kg.]

**NOTE:** When using a spring checking fixture as shown in Fig. 110, it is necessary to convert the torque wrench reading which is in pounds-feet to the static pound pressure specified above according to the instructions furnished with the wrench. For example, should the torque wrench reading be 50 lb.-ft. and the wrench is two feet long the static pressure of the spring will be 50 x 2 or 100 lbs.

Clean the valve guides with a standard valve guide cleaner or a wire brush. Check the valve guides in the cylinder block. Replace valve guides which are broken or worn enough to cause excessive valve stem-to-guide clearance. See Par. E-61.

Standard intake valve clearance is .0007" to .0022" [0,01778 a 0,05588 mm.] and the exhaust valve clearance is .0025" to .0045" [0,0635 a 0,1143 mm.]. Excessive clearance between the valve stems and guides will cause improper seating and burned valves. When there is a tendency to draw oil vapor through the guide causing excessive oil consumption, fouled spark plugs, and poor low-speed performance. To check the clearance of the valve stem to the valve guide, take a new valve and place in each valve guide. Check the clearance with a suitably mounted dial indicator or feel the clearance by moving the valve stem back and forth. If this check shows excessive clearance it will be necessary to replace the valve guide.

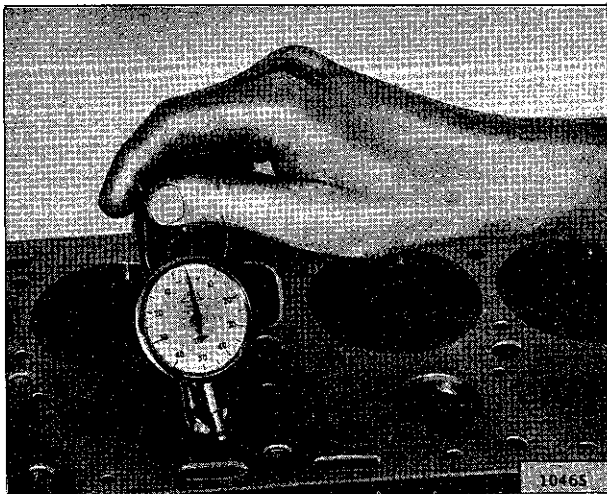


FIG. 112—GAUGING VALVE SEATS

### E-58. Refacing Valves

Reface the valves with a valve refacer. The valve refacer manufacturer's instructions should be followed carefully to ensure a valve face concentric with the valve stem. Reface both intake and exhaust valves to an angle of 45°. Take off only the minimum of metal required to clean up the valve faces.

If the thickness of the edge of the valve head is reduced to less than  $\frac{1}{32}$ " [0,8 mm.] replace the valve.

### E-59. Valve Seat Inspection and Refacing

Inspect the valve seats for cracks, burns, pitting, ridges, or improper angle. During any general engine overhaul it is advisable to reface the valve seats in both the cylinder block and head regardless of their condition. If the valve guides are to be replaced, this must be done before refacing the valve seats. Note that later engines have hardened exhaust valve seat inserts.

Valve seat inserts must be concentric with finish ream of valve stem guides (exhaust) within .002" [0,051 mm.] total indicator reading.

When necessary to reface the valve seats, use a valve seat grinder in accordance with the grinder

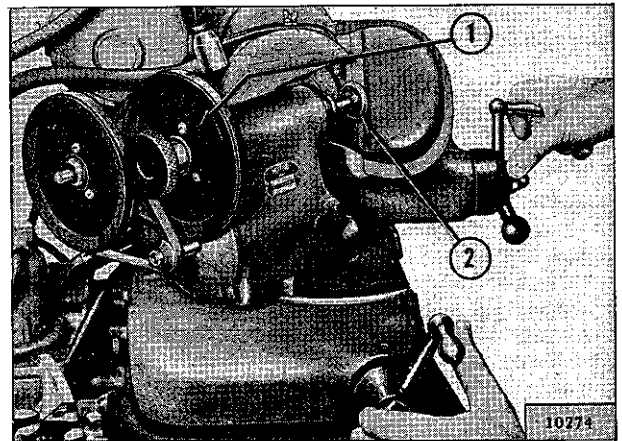


FIG. 113—REFACING VALVES

1—Valve Refacer  
2—Valve

manufacturer's instructions. Any grinding of valve seats should be preceded by touching up the grinding stone so that their angles are accurate and the stone is not clogged. Grind each valve seat to a true 45° angle. Never grind any more than is necessary to clean up pits, grooves, or to correct the valve seat runout. Check the valve seats with a dial indicator as shown in Fig. 112 after refacing. The valve seat should not be out of round more than .002" [0,051 mm.]. A simple check can be made in the absence of a dial indicator by spreading a thin coat of pencil lead or bearing-fitting blue on the valve face and then inserting the valve into the valve seat. With hand pressure, rotate the valve a quarter turn and then remove the valve and observe the transfer of blue (or pencil lead) to the valve seat. An uneven transfer will indicate an inaccurate valve and valve seat refacing operation. After the seat is ground, check its width with a seat width scale or a steel scale placed across the face of the seat. The valve seat width after refacing

should measure  $\frac{3}{32}$ " [2,3 mm.] and not wider than  $\frac{1}{8}$ " [3,2 mm.]. Valve seat width is vital. Too wide a seat can cause seat burning as it tends to trap and hold carbon particles. Seats that are too narrow will not transfer heat to the coolant rapidly enough to keep the valves in proper operating condition. When a valve seat has been refaced several times or where it must be cut deeply for adequate reconditioning, the seat may become too wide for efficient operation. Narrow the seat without changing its position in relation to the valve face by using a valve seat relief counterbore above the seat and a valve seat narrowing cutter below the seat. These operations are performed only after the valve seats have been refaced and then only when necessary. The finished valve seat should contact the approximate center of the valve face. Check by applying an extremely thin coat of pencil lead or bearing-fitting blue to the seat. Then install and rotate the valve with light pressure. Blue (or pencil marks) will transfer to the face of the valve. If the blue is near the top edge of the valve face, lower the valve seat by using the valve seat relief counterbore. If the blue is transferred to the bottom edge of the valve face, raise the seat by using the valve seat narrowing cutter.

When the valve seat can no longer be corrected, it is advisable to investigate installing seat inserts.

#### E-60. Exhaust Valve Seat Insert Replacement

Hardened valve seat inserts for exhaust valves were installed in production beginning with engine serial number IT-73584. They will seldom require replacement. To avoid damaging the block, remove an insert with a tool designed for this purpose. When installing a new insert, make certain the counterbore is clean and smooth. Use a driver that will keep the insert in true alignment with the bore. Cool the insert and the installing tool with dry ice for 30 minutes. Make certain the valve seat is facing out. Drive in the insert with the tool until it bottoms in the counterbore. After installation, grind the valve seat at an angle of  $45^\circ$  and then check with a dial indicator as shown in Fig. 112.

#### E-61. Valve Guide Replacement

Damaged, loose or worn valve guides must be replaced. Use a valve guide driver to drive out the old guides. When replacing valve guides, maximum engine performance can be secured only when the guide is positioned correctly. Driver W-238 is

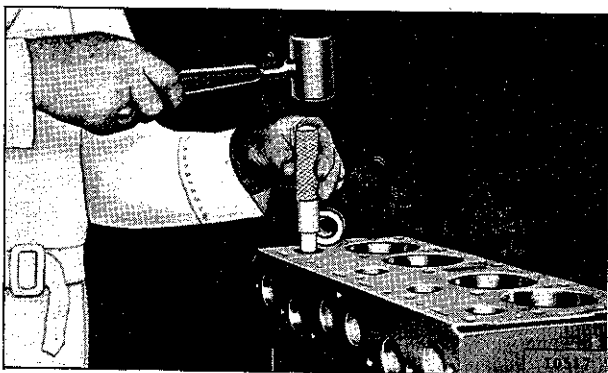


FIG. 114—VALVE GUIDE DRIVER

equipped with an adapter ring which correctly positions the guides.

Start a new exhaust valve guide, blunt (nontapered) end first, into the valve guide bore in the top of the cylinder block. When properly positioned, the top end of the guide is exactly 1" [25,4 mm.] below the level of the top of the block as shown in Fig. 115. Start a new intake valve guide, tapered end first, into position from the bottom of the cylinder head. When properly positioned, the end of the guide is just flush with the end of the valve guide bore in the cylinder head as shown in Fig. 115.

Run a reamer (Tool C-38) through the new guides after they have been correctly positioned.

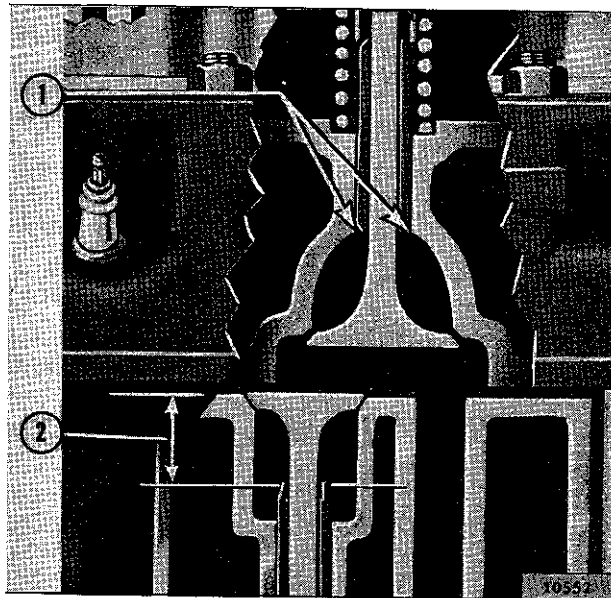


FIG. 115—VALVE GUIDE POSITIONS

1—Flush at this point 2—One Inch [25 mm.]

#### E-62. Tappets and Cover

The valve tappets are lubricated through oil troughs cast in the crankcase. The troughs are filled by oil sprayed from the connecting rod ends and passages are drilled through the tappet guides to carry the oil to the tappets. A groove around the center of the tappet shank carries the oil up and down the guide.

Check the threads and fit of the exhaust valve adjusting screw in the exhaust valve tappets. The fit of a screw should be such that a wrench is required to turn it into or out of the tappet as these are of the self-locking type. Replace the worn part, either the screw or the tappet, or both, if there is looseness between the parts.

#### E-63. Crankshaft Rear Bearing Seal

Oil leakage through the rear main bearing is prevented by a metal supported neoprene lip type seal which can readily be installed without removing the crankshaft.

Should trouble be experienced with oil leaking from the rear main bearing there are several points which should be checked.

a. Be sure that the identifying paint daub on the bearing cap is the same as that appearing on the center bearing web.



- b. The bearing to crankshaft clearance must not exceed .004" [0,102 mm.].
- c. Place sealer on the faces of the rear bearing cap from the rear oil groove to the oil seal grooves.
- d. Be sure the rubber oil seals extend about  $\frac{1}{4}$ " [6 mm.] below the bottom face of the cap.
- e. Be sure the oil pan gasket is not leaking.
- f. Check to be sure the oil leak is not at the camshaft rear bearing expansion plug or from the crankcase.

#### E-64. Floating Oil Intake

The floating oil intake is attached to the bottom of the crankcase with two screws. The float and screen causes it to ride, raise and lower with the amount of oil in the pan. This prevents water or dirt, which may have accumulated in the bottom of the oil pan, from circulating through the engine because the oil is drawn horizontally from the top surface. Whenever removed, the float, screen, and tube should be cleaned thoroughly to remove any accumulation of dirt. Also clean the oil pan. Fluctuating oil pressure can usually be traced to an air leak between the oil float support and the crankcase.

Be sure the float support flange is flat. Clean both the flange and the crankcase surfaces thoroughly before installing a new gasket. Be sure the retaining screws are tight.

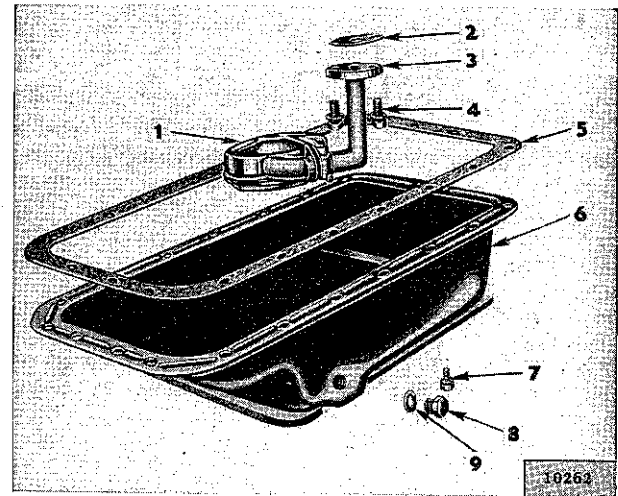


FIG. 116—FLOATING OIL INTAKE AND PAN

- 1—Oil Float
- 2—Gasket
- 3—Oil Float Support
- 4—Screw and Lockwasher
- 5—Oil Pan Gasket
- 6—Oil Pan
- 7—Bolt and Lockwasher
- 8—Drain Plug
- 9—Drain Plug Gasket

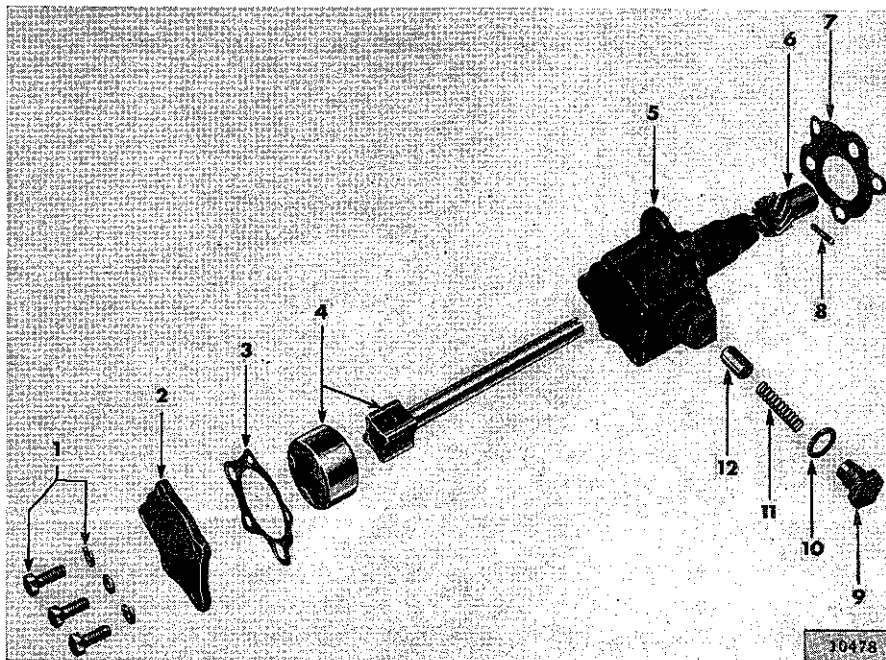


FIG. 117—OIL PUMP

- 1—Cover Screw
- 2—Cover
- 3—Cover Gasket
- 4—Shaft and Rotors
- 5—Body Assembly
- 6—Driven Gear
- 7—Pump Gasket
- 8—Gear Retaining Pin
- 9—Relief Valve Retainer
- 10—Relief Valve Retainer Gasket
- 11—Relief Valve Spring
- 12—Relief Valve Plunger

#### E-65. Oil Pump

The oil pump is located externally on the left side of the engine. In operation oil is drawn from the crankcase through the floating oil intake then passes through a drilled passage in the crankcase to the pump from which it is forced through drilled passages to the crankshaft and camshaft bearings. When it is necessary to remove an oil pump, first remove the distributor cover and note the position of the distributor rotor so that the

pump may be reinstalled without disturbing the ignition timing. To install the pump without disturbing the timing, the pump gear must be correctly meshed with the camshaft driving gear to allow engagement of the key on the distributor shaft with the pump shaft slot, without changing the position of the distributor rotor. Distributor can be installed only in one position as the slot and driving key are machined off-center.

The oil pump consists of an inner and outer rotor

within the pump body. An oil relief valve is mounted in the pump body which controls the oil pressure. To disassemble the pump, Fig. 117, first remove the gear which is retained by straight pin (8). It will be necessary to file off one end of the pin before driving it out with a small drift. By removing the cover (2) the outer rotor and the inner rotor and shaft (4) may be removed through the cover opening. Failure of the pump to operate at full efficiency may usually be traced to excessive end float of the rotors or excessive clearance between the rotors. The clearance between the outer rotor and the pump body should also be checked. Match the rotors together with one lobe of the inner rotor pushed as far as possible into the notch of the outer rotor. Measure the clearance between the lobes of the rotors as shown in Fig. 118. This clearance should be .010" [0,254 mm.] or less.

If more, replace both rotors. Measure the clearance between the outer rotor and the pump body as shown in Fig. 119. Should this clearance exceed .012" [0,305 mm.] the fault is probably in the pump body and it should be replaced. End float of the rotors is controlled by the thickness of the cover gasket which is made of special material that can be only slightly compressed. Never use other than a standard factory gasket. Check the cover to be sure the inner surface is not rough or scored and that it is flat within .001" [0,025 mm.] tested with feeler gauges, Fig. 120. Measure thickness of

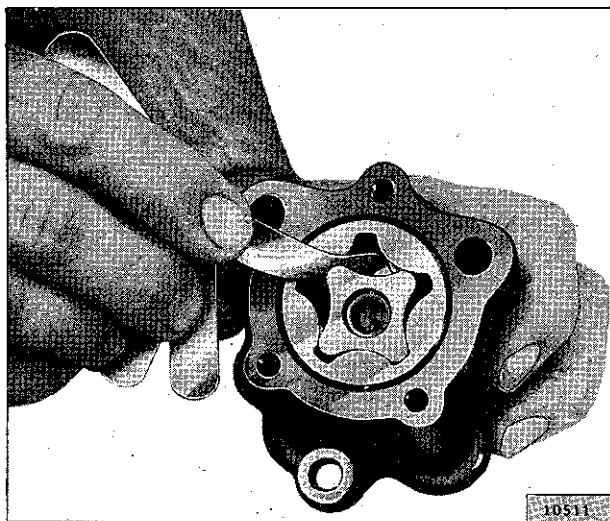


FIG. 118—CHECKING OIL PUMP ROTORS

the rotors which must be within .001" of each other. Assemble the rotors in the pump body and install the cover without the gasket. When the cover screws are tightened to normal tension, there should be interference between the rotors and the cover making it impossible to turn the pump shaft by hand. Remove the cover and replace it with the gasket in position. The rotors should then rotate freely, proving that end float of the rotors is less than the thickness of the gasket when compressed or .004" [0,102 mm.]. After assembling the gear on the pump shaft, check the running clearance between the gear and pump body with a feeler gauge. This clearance should be from .022"

to .051" [0,559 a 1,295 mm.].

Pump output is controlled by a pressure relief valve, Fig. 117, No. 12.

**CAUTION:** The oil pressure relief spring is calibrated. Never stretch this spring to alter the relief valve pressure setting. Adjust this setting by the use of shims only. Shims are available that can be added between the retainer and the spring to increase pressure. When shims are present, removing shims will decrease pressure.

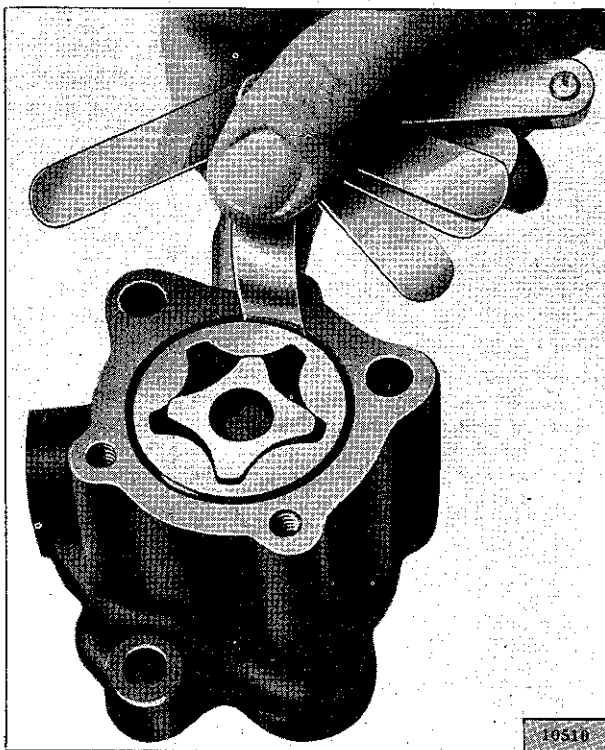


FIG. 119—CHECKING OUTER ROTOR TO OIL PUMP BODY

This adjustment will change the pressure at higher speeds but not at idle speed. Safe minimum pressure is 6 lbs. [0,4 kg-cm<sup>2</sup>] at idle, at which point the oil pressure light goes out; and 20 lbs. [1,4 kg-cm<sup>2</sup>] at 2000 rpm. (32 mph. [51 kph.]).

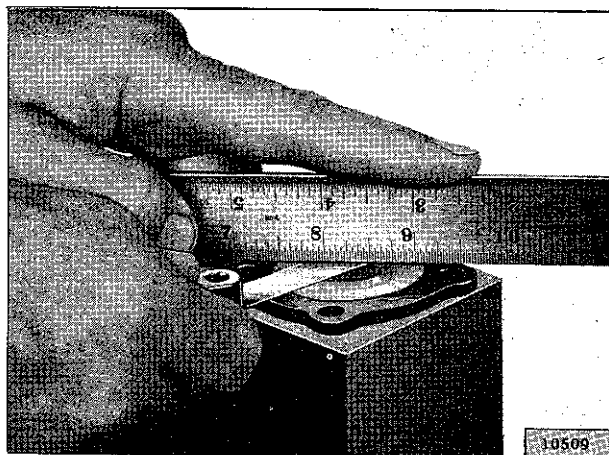


FIG. 120—CHECKING OIL PUMP COVER



**E-66. Oil Pan**

Examine the oil pan carefully for evidence of corrosion, dents, or other damage. Special attention should be given to the mounting flange to be sure of proper alignment and a tight seal at the cylinder block, oil pan, and engine front plate. Whenever the oil pan is removed, it is best to install a new oil pan gasket.

**E-67. Flywheel**

The flywheel is mounted on the rear flange of the crankshaft. The crankshaft, flywheel, and clutch assembly are statically and dynamically balanced separately and as a unit; therefore, these components should be assembled in their original relative positions to maintain this balance.

**E-68. Flywheel Inspection**

Clean the flywheel thoroughly with cleaning solvent. Inspect the clutch face of the flywheel for a burned or scuffed condition or rivet grooves. Check the flywheel for run-out or improper mounting according to the installation procedure given in Par. E-87.

If the inner ends of the flywheel ring gear teeth are only slightly burred or snubbed, remove the burrs

and reshape the teeth using a small emery wheel. If, however, the teeth are broken, cracked, or seriously burred, the ring gear should be replaced.

**E-69. Ring Gear Replacement**

The ring gear is secured on the flywheel by a shrink fit. Before starting the operation of replacing the ring gear, place the new ring gear against the old gear to make certain both have the same number of teeth.

To remove the ring gear from the flywheel, drill a  $\frac{3}{8}$ " [9.5 mm.] hole through the ring gear and cut through any remaining metal with a cold chisel. Remove the ring gear from the flywheel. Thoroughly clean the ring gear surface of the flywheel. Heat the new ring gear evenly to a range of 650°F. to 700°F. [343°C. to 371°C.] and place it on the cold flywheel, making certain that the chamfer on the teeth is on the crankshaft side of the flywheel. Be sure that the ring gear is firmly seated on the flywheel. Allow the ring gear to cool slowly to shrink it onto the flywheel. Do not quench the ring gear; allow it to slowly air cool.

**E-70. Flywheel Housing**

The flywheel housing, which encloses the flywheel

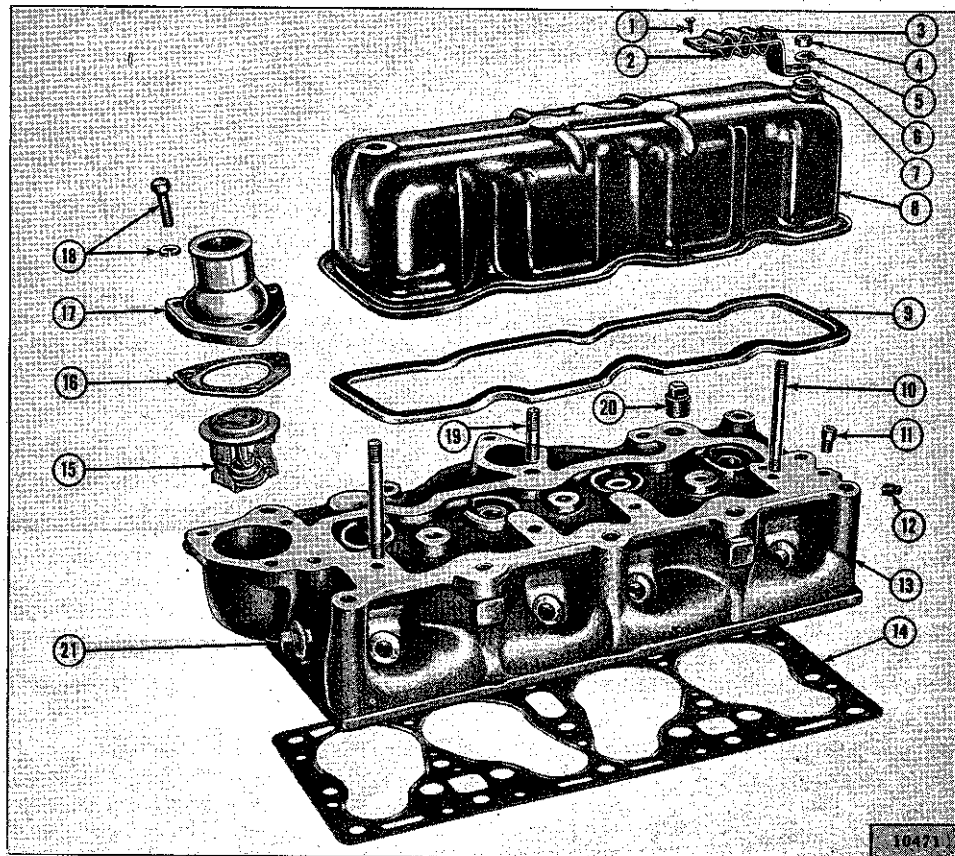


FIG. 121—CYLINDER HEAD

- 1—Pan Head Screw
- 2—Cable Lower Clip
- 3—Cable Upper Clip
- 4—Nut
- 5—Washer
- 6—Cable Bracket
- 7—Oil Seal
- 8—Rocker Arm Cover
- 9—Gasket
- 10—Cover Stud
- 11—Connector

- 12—Pipe Plug
- 13—Cylinder Head
- 14—Gasket
- 15—Thermostat
- 16—Gasket
- 17—Water Outlet Fitting
- 18—Screw and Lockwasher
- 19—Carburetor Mounting Stud
- 20—Pipe Plug  $\frac{1}{2}$ "
- 21—Pipe Plug  $\frac{1}{4}$ "

and clutch is bolted to the engine rear plate and cylinder block. The rear of the housing provides the front support for the transmission. Examine the housing for cracks and distortion of the machined surfaces. The front face must seat evenly against the engine rear end plate without evidence of warpage. The rear face must be parallel to the front face. Improper alignment may cause transmission gear disengagement. In addition, the opening in the rear of the housing, which serves as a pilot for the transmission, must be concentric with the crankshaft. The flywheel housing should be checked for alignment after it is installed on the engine. Refer to Par. E-88.

#### **E-71. Flywheel Clutch Shaft Bushing**

Inspect the flywheel clutch shaft bushing in the flywheel. For procedure on replacing the bushing, refer to Par. J-21.

#### **E-72. Core Hole Expansion Plug**

Any evidence of coolant leakage around any of the core hole expansion plugs will require replacement of the plug. The expansion plug at the rear end of the cylinder block can be driven out with a 24" [60 cm.] length of half-inch bar stock carefully inserted through the camshaft bore in the cylinder block. The other core hole expansion plugs in the cylinder block and cylinder head can be removed by piercing the center with a sharp tool and prying them out. Before attempting to install a new plug, clean the hole thoroughly. Apply a thin coat of sealer on the new plug and install the plug with a driver.

#### **E-73. Cylinder Head**

Be sure that water passages are open and that all carbon is removed. Inspect all tapped openings. Repair any damaged threads or broken studs. Run a tap in the threaded holes to clean up rough or damaged threads. Before using a tap, squirt penetrating oil on the threads. Discard or repair cracked cylinder heads, also those warped .010" [0,254 mm.] or more over the full length of the head.

#### **E-74. Rocker Arms**

The rocker arms and their related parts are mounted on the top of the cylinder head and enclosed by the rocker arm cover. The rocker arm shaft, supported in four rocker arm shaft brackets, carries the rocker arms and the rocker arm shaft springs. The intake valve adjusting screws and locknuts provide the means for adjusting these valves.

#### **E-75. Rocker Arm Shaft Disassembly**

- a. Remove the two studs in the rocker arm shaft brackets at the ends of the rocker arm shaft.
- b. Slide the rocker arm shaft brackets, the four rocker arm assemblies, and the two rocker arm shaft springs off the rocker arm shaft. Remove the two rocker arm shaft lock screws from the two remaining rocker arm shaft brackets and slide the brackets off the shaft.
- c. Insert a screwdriver under the edge of the rocker arm shaft plugs at each end of the rocker arm shaft, and pry the plugs out of the shaft.
- d. Remove the intake valve adjusting screw lock-

nuts from each of the rocker arm valve lash adjusting screws. Remove the screws from the rocker arms.

#### **E-76. Inspection and Repair**

Run a round wire brush through the bore of the rocker arm shaft and clean out the drilled oil holes. Clean out the oil holes in the rocker arm shaft brackets, and the oil holes and grooves in the bores of the rocker arm.

Inspect the diameter of the shaft at the rocker arm bearing areas. Replace the shaft if there are scores or abrasion marks along the length of the shaft. Check the shaft for alignment by rolling it across a smooth level surface. If the shaft will not roll freely, or if it rolls with a bumping motion, the shaft is out of alignment and must be replaced. Inspect the threads of the adjusting screw hole in the rocker arms and if necessary clean with a proper size tap. Replace the adjusting screw locknut or the adjusting screw if either part is damaged or deformed.

Inspect the threads in the tapped hole in the top of the rocker arm shaft brackets and if necessary clean with a proper size tap. Replace the bracket if either side is worn or scored.

#### **E-77. Assembly**

- a. Install two rocker arm shaft plugs, one on each end of the shaft. Slide two rocker arm shaft brackets onto the center of the shaft. Align the tapped holes in the brackets with the drilled holes in the top of the shaft and install the rocker arm shaft lock screws, making sure the points of the screws enter the drilled holes in the shaft.
- b. Screw the intake valve adjusting screws into the rocker arms and install the locknuts.
- c. The rocker arms are paired; that is, two of the arms are angled to the right and two are angled to the left. One of each type is used on each end of the rocker arm shaft. Slide a rocker arm with the adjusting screw end of the rocker arm angling away from the bracket onto the shaft so that the adjusting screw is on the same side of the shaft as the mounting hole in the bracket.
- d. Install rocker arm shaft brackets on the shaft so that the worn side of the bracket is facing away from the rocker arm. Temporarily secure the end bracket in place by installing a rocker arm cover stud in the tapped opening in the top of the support.
- e. Assemble the parts on the opposite end of the rocker arm shaft repeating steps c and d above.

#### **E-78. ENGINE ASSEMBLY**

The engine assembly procedure in the following paragraphs is given in the sequence to be followed when the engine is being completely overhauled. Individual inspection, repair, and fitting operations previously covered in detail are made throughout the assembly procedure. The assembly procedure does not cover accessories. If a new cylinder block fitted with pistons is used, many of the operations will not be required.

Mount the cylinder block in an engine repair stand. If an engine stand is not available, perform the following assembly operation in a manner designed

to protect personnel against an accident and the engine and its parts against damage.

**NOTE:** With the adoption of the  $4\frac{1}{2}$ " starting motor, a new bell housing, rear engine plate, and flywheel ring gear were required.

### E-79. Install Oil Gallery Plug

Coat plug threads with a suitable sealing compound and install the plugs in the front and rear ends of the oil gallery in the cylinder block and the rear end of the cylinder head. Torque the plugs 20 to 25 lb.-ft. [2,8 a 3,4 kg.-m.].

There is also a pipe plug ( $\frac{1}{8}$ " [3,2 mm.] slotted, headless) in the opening in the main oil gallery inside the cylinder block at No. 2 cylinder and another pipe plug ( $\frac{1}{8}$ " square-head) in the opening in the oil passage directly below the oil pump intake passage. If these two pipe plugs were removed, make certain they are reinstalled in the locations

described above or the counterweights of the crankshaft might strike the projecting head of the square-head plug.

### E-80. Install Tappets

Turn the engine upside down. Beginning at the rear end of the cylinder block, install the intake and exhaust valve tappets in the tappet bores in the cylinder block in the following order: one exhaust, two intake, two exhaust, two intake, and finally one exhaust valve tappet. Be sure that all tappets fit snugly in their respective bores.

### E-81. Install Camshaft and Thrust Plate

Lubricate all camshaft bearings and cam surfaces generously with clean, light engine oil. Carefully, so not to damage or score the camshaft front bearing, install the camshaft, locating it properly in the bearings. Do not allow the rear end of the camshaft to strike sharply against the expansion plug installed in the rear end of the bore.

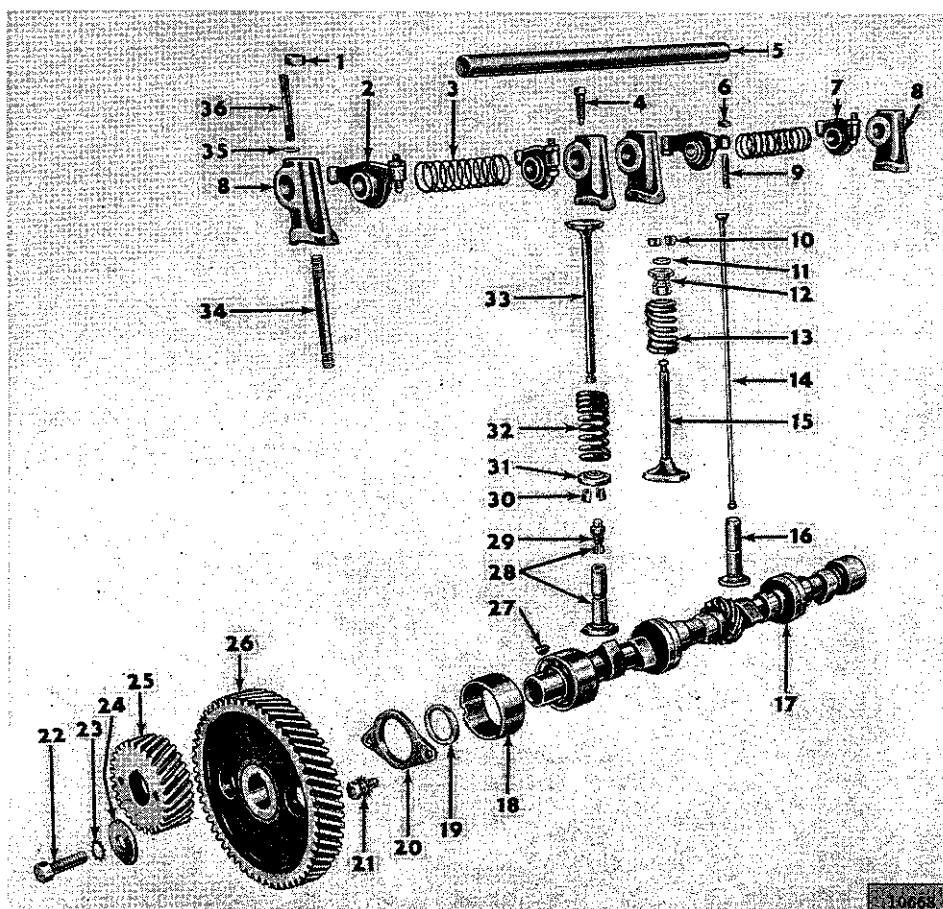


FIG. 122—VALVES, CAMSHAFT, AND TIMING GEARS

- 1—Nut
- 2—Left Rocker Arm
- 3—Rocker Arm Shaft Spring
- 4—Rocker Shaft Lock Screw
- 5—Rocker Shaft
- 6—Nut
- 7—Right Rocker Arm
- 8—Rocker Arm Shaft Bracket
- 9—Inlet Valve Tappet Adjusting Screw
- 10—Inlet Valve Upper Retainer Lock
- 11—Oil Seal
- 12—Inlet Valve Spring Upper Retainer

- 13—Inlet Valve Spring
- 14—Inlet Valve Push Rod
- 15—Inlet Valve
- 16—Inlet Valve Tappet
- 17—Camshaft
- 18—Camshaft Front Bearing
- 19—Camshaft Thrust Plate Spacer
- 20—Camshaft Thrust Plate
- 21—Bolt and Lockwasher
- 22—Bolt
- 23—Lockwasher
- 24—Camshaft Gear Washer

- 25—Crankshaft Gear
- 26—Camshaft Gear
- 27—Woodruff Key No. 9
- 28—Exhaust Valve Tappet
- 29—Tappet Adjusting Screw
- 30—Spring Retainer Lock
- 31—Roto Cap Assembly
- 32—Exhaust Valve Spring
- 33—Exhaust Valve
- 34—Rocker Shaft Support Stud
- 35—Washer
- 36—Rocker Arm Cover Stud

Install the camshaft thrust plate. Slide the thrust plate spacer onto the end of the camshaft with the beveled inner edge of the spacer facing the camshaft. If the same camshaft is being reinstalled, install any shims previously removed. These shims are placed between the camshaft shoulder and the spacer. Torque the thrust plate attaching bolts 20 to 26 lb-ft. [2,8 a 3,6 kg-m.].

End play of the camshaft is determined by running clearance between the rear face of the camshaft gear and the thrust plate. The standard clearance is .004" to .007" [0,102 a 0,178 mm.] as measured by a dial indicator. Should a check show too little end play, place a shim of suitable thickness between the camshaft shoulder and the spacer. Too much end play may be corrected by removing shims or dressing off the spacer a slight amount.

### E-82. Install Crankshaft and Bearings

Fit the three upper main bearings into their respective locations in the cylinder block. Fit the three lower main bearings into their respective bearing caps.

**NOTE:** It is possible to incorrectly install the front main bearing. The bearing is properly installed in the cap with the narrower of the two radial oil grooves toward the front edge of the cap. If this bearing is not properly installed, the oil grooves in the two halves of the bearing will not match at the parting line and premature failure of the bearing will result.

Lubricate all bearing surfaces generously with clean, light engine oil. Place the crankshaft in position in the cylinder block and install the main bearing caps. Torque the bolts 65 to 75 lb-ft.

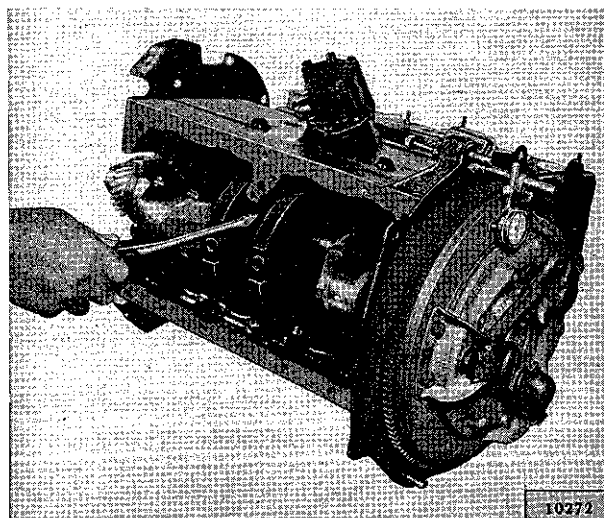


FIG. 123—GAUGING CRANKSHAFT END PLAY

[9,0 a 10,4 kg-m.] rotating the crankshaft after each bearing cap is tightened.

### E-83. Check Crankshaft End-Play

End play of the crankshaft is set by the running clearance between the crankshaft thrust washer and the front face of the front main bearing. The standard end play is .004" to .006" [0,102 a 0,152 mm.] which is controlled by .002" [0,051 mm.] shims placed between the thrust washer and the shoulder on the crankshaft. Check the end play with a dial indicator as shown in Fig. 123. If clearance is incorrect, adjustment is made by adding or removing shims.

Install the thrust washer with the beveled inner edge toward the front bearing.



FIG. 124—REAR BEARING CAP PACKING

**E-84. Install Crankshaft Timing Gear**

Install the woodruff key in the longer of the two keyways on the front end of the crankshaft. Install the crankshaft timing gear on the front end of the crankshaft with the timing mark facing out, away from the cylinder block. Align the keyway in the gear with the woodruff key and then drive or press the gear onto the crankshaft firmly against the thrust washer.

**E-85. Install Crankshaft Rear Bearing Seal**

When installing the crankshaft rear bearing seal around the crankshaft, apply a thin coat of light cup grease to both halves of the seal except for the ends which are already treated with sealing compound. When installing the rear main bearing cap in the crankcase, place a small amount of plastic-type gasket cement on both sides and face of the cap to prevent oil leakage. Insert the rubber packings shown in Fig. 124 into the holes between the bearing cap and the case. Do not trim these packings. The packings are of a predetermined length that will cause them to protrude approximately  $\frac{1}{4}$ " [6 mm.] from the case. When the oil pan is installed, it will force them tightly into the holes and effectively seal any opening between the bearing cap and the crankcase.

**E-86. Install Front End Plate**

Assemble the gasket to the front end plate making certain that it is positioned properly down to the bottom of the crankcase. Install the front end plate on the cylinder block and tighten in place.

**E-87. Install Flywheel**

Be sure the crankshaft flange and flywheel mating surfaces are clean to permit proper flywheel alignment. With the crankshaft in the cylinder block, place the flywheel on the mounting bolts in the crankshaft. When installing a new crankshaft or flywheel, replace the tapered dowel bolts with straight snug-fitting special bolts provided. Assemble the crankshaft and flywheel in proper relation; then install the straight bolts previously used and tighten securely. Next, use a  $\frac{35}{64}$ " [13,9 mm.] drill to enlarge the tapered holes. Ream the

holes with a  $\frac{1}{16}$ " [14,3 mm.] straight reamer and install the two special flywheel bolts with nuts and lockwashers in place of the two tapered dowel bolts formerly used. This procedure overcomes the necessity of reaming special tapered holes.

Tighten the nuts alternately and evenly until each is tightened 35 to 41 lb.-ft. [4,8 a 5,7 kg.-m.].

After installation check the run-out of the flywheel with a dial indicator attached to the engine plate as illustrated in Fig. 125. Mount the dial indicator with the contact button of the indicator resting against the clutch face of the flywheel. Set the indicator at zero and rotate the flywheel. Maximum allowable run-out is .008" [0,203 mm.] near the outer edge of the rear face of the flywheel.

With the flywheel housing installed temporarily, the alignment can be checked with a dial indicator. Without the clutch installed on the flywheel, a dial indicator can be mounted on one of the flywheel bolts. Set the dial indicator with the button resting against the rear face of the flywheel housing. Rotate the flywheel, noting the run-out on the indicator. Maximum allowable run-out is .005" [0,127 mm.]. Relocate the dial indicator so that the button is against the side of the rear opening to check the radial run-out. Rotate the flywheel and note the run-out which should not exceed .006" [0,152 mm.].

**E-88. Install Flywheel Housing**

Be certain that the mating surfaces of the clutch housing and cylinder block are clean and smooth. Place the flywheel housing in position and attach to the cylinder block and engine rear plate. The long bolts through the lugs on the engine crankcase and those below are installed with the nuts on the flywheel housing side. Install the other bolts from the rear except the screw used to attach the top side of the starting motor. Tighten securely.

**E-89. Install Clutch**

To install the clutch assembly with the engine out of the vehicle use a clutch plate aligning arbor. Place the clutch driven plate in position against the flywheel. Insert the arbor into the clutch driven plate and clutch shaft bushing and expand the arbor in the bushing to hold it in place. Hold the clutch pressure plate assembly in position against the clutch driven plate and install the attaching bolts and washers, tightening the bolts alternately and evenly. Remove the arbor.

**E-90. Install Valves and Springs**

Install an exhaust valve spring and exhaust valve spring retainer (Roto Cap) for each exhaust valve. Slip the top end of the spring onto the bottom end of the valve guide and, with a large screwdriver, snap the spring and retainer over the tappet adjusting screw. Make certain that the two closely wound coils of each spring are at the top (placed up to seat against the block). See Fig. 126.

Turn the crankshaft as necessary to bring each exhaust valve tappet to its lowest position. Using a valve spring lifter, compress each exhaust valve spring, while holding the valve down, so that the stem extends through the valve spring retainer far

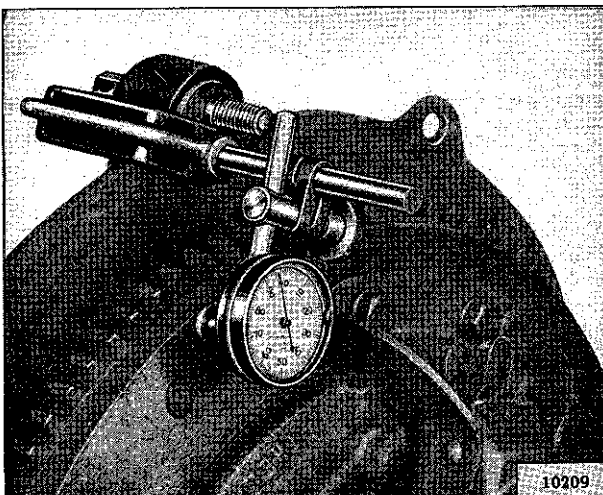


FIG. 125—CHECKING FLYWHEEL RUN-OUT

enough to permit installation of the valve spring locks. Heavy lubricating oil or grease placed on the inside surface of the valve locks will help to hold the locks on the valve stem until the valve spring lifter can be removed. When installation of exhaust valves is complete, remove any cloths used to block the valve compartment floor openings. Install the intake valves and springs in the cylinder head placing the ends of the springs having the closed coils down against the cylinder head.

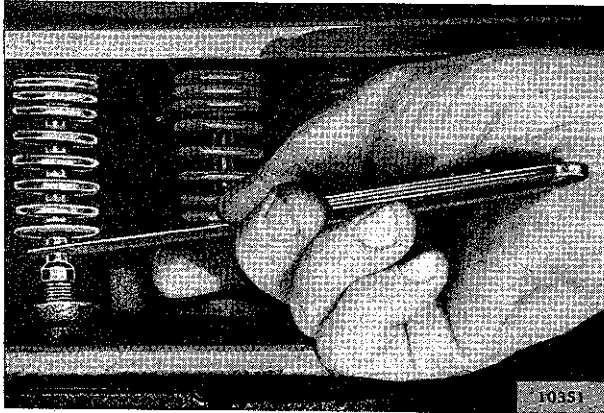


FIG. 126—VALVE TAPPETS AND SPRINGS

Be sure to install a new rubber oil seal ring on each intake valve stem before installing the retainer locks. With the retainer and spring compressed, position a seal ring on the valve stem just above the lock recess, then install the locks and release the spring.

Oil the valve stems. Insert all intake and exhaust valves in the valve guides from which they were removed. Adjust the valve tappets to the proper specified clearance of .016" [0,406 mm.] cold. Refer to Par. E-105, E-106, E-107, and specifications at the end of this section for specifications and adjustment procedure.

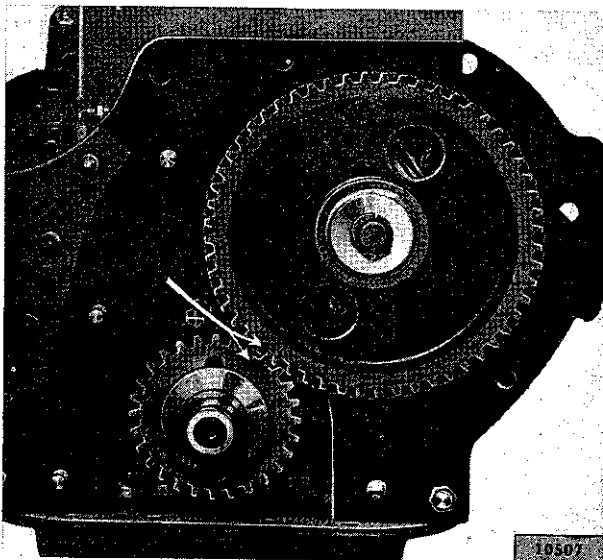


FIG. 127—TIMING GEARS

### E-91. Install Camshaft Timing Gear

Turn the camshaft or crankshaft as necessary so that the timing marks on the two gears will be together after the camshaft timing gear is installed. Refer to Fig. 127. Install the woodruff key in the keyway on the front end of the camshaft. Start the large timing gear on the camshaft with the wide hub of the gear facing out. Do not drive on the camshaft gear, or the camshaft may dislodge the plug at the rear of the cylinder block causing an oil leak. Install the camshaft gear retaining screw and torque it 30 to 40 lb.-ft. [4,1 a 5,5 kg.-m.] drawing the gear onto the camshaft in the process. Standard running tolerance between the timing gears is .000" to .002" [0 a 0,051 mm.] which should be checked with a dial indicator.

### E-92. Install Timing Gear Oil Jet

Install the timing gear oil jet in the tapped hole in the front of the cylinder block. Position the oil hole in the side of the oil jet so that it will direct the oil stream against the camshaft driven gear just ahead of the point of engagement with the crankshaft drive gear.

**NOTE:** A new timing gear oil jet entered production with engine S/N IT-82908. The earlier jet has a .070" [0,178 mm.] diameter aperture; the later jet has a .040" [0,102 mm.] aperture. The later jet reduces oil pressure variation at No. 1 connecting rod bearing. It is recommended that the .040" jet be installed in engines with serial numbers lower than above whenever it has been necessary to replace a scored or burned No. 1 connecting rod bearing.

### E-93. Install Oil Pump

The oil pump is driven from the camshaft by means of a spiral (worm) gear. The distributor, in turn, is driven by the oil pump by means of a tongue on the end of the distributor shaft which engages a slot in the end of the oil pump shaft. Because the tongue and the slot are both machined off center, the two shafts can be meshed in only one position. Since the position of the distributor shaft determines the timing of the engine, and is controlled by the oil pump shaft, the position of the oil pump shaft with respect to the camshaft is important.

Turn the crankshaft to bring together the timing marks on the crankshaft and camshaft gears. See Fig. 127. Install the oil pump mounting gasket on the pump. With the wider side of the shaft on top (nearer the top of the cylinder block), start the oil pump drive shaft into the opening in the left side of the cylinder block with the mounting holes in the body of the pump in alignment with the holes in the cylinder block. Insert a long-blade screwdriver into the distributor shaft opening in the opposite side of the block and engage the slot in the oil pump shaft. Turn the shaft so that the slot is positioned at when would be roughly the nine-thirty position on a clock face.

Remove the screwdriver and, looking down the distributor shaft hole with a flashlight, observe the position of the slot in the end of the oil pump shaft



to make certain it is properly positioned. Replace the screwdriver and, while turning the screwdriver clockwise to guide the oil pump drive shaft gear into engagement with the camshaft gear, press against the oil pump to force it into position. Remove the screwdriver and again observe the position of the slot. If the installation was properly made, the slot will be in a position roughly equivalent to eleven o'clock position on a clock face with the wider side of the shaft still on the top. If the slot is improperly positioned, remove the oil pump assembly and repeat the operation.

Coat the threads of the capscrews with gasket cement and secure the oil pump in place with two lockwasher-equipped capscrews installed through the body of the oil pump and into the cylinder block and one lockwasher-capscrew installed through the oil pump mounting flange.

#### E-94. Install Timing Gear Cover

Apply a thin coat of gasket paste to the timing gear cover. Position the gasket on the cover and carefully locate the cover on the front of the front mounting plate. Attach the cover and timing indicator and tighten the bolts.

#### E-95. Install Pistons and Connecting Rods

Before installing each piston and connecting rod assembly in the cylinder block, generously lubricate the entire assembly with engine oil. Space the ring gaps around the piston so that no two gaps are aligned vertically and are not located over the T-slot in the piston skirt. Insert the assembly in the correct cylinder with the connecting rod identifying number toward the camshaft side of the cylinder block. When installing each assembly, rotate the crankshaft so that the crankpin is in the down position. Fit a piston ring compressor tightly around the piston rings. Reach up from the bottom of the cylinder block and guide the end of the connecting rod over the crankshaft journal as the piston is tapped down into the cylinder bore with hammer handle.

Lubricate the connecting rod bearing surfaces generously with engine oil and install the bearing cap with the numbered side matched to the numbered side of the connecting rod. Torque the nuts evenly 35 to 45 lb-ft. [4,8 a 6,2 kg-m.]. The connecting rod cap nuts are locked with stamped nuts. Used stamped nuts should be discarded and replaced with new ones. These locking stamped nuts should be installed with the flat face toward the connecting rod nut. Turn the locking nut finger tight and then  $\frac{1}{8}$  turn more with a wrench. Refer to Par. E-36 for detailed information on fitting pistons and rings in the cylinder bores.

#### E-96. Install Crankshaft Pulley


Align the keyway in the pulley with the woodruff key installed in the crankshaft. Drive the pulley onto the crankshaft and secure it in place with the crankshaft pulley nut. Insert a block of wood between one of the counterweights on the crankshaft and the side of the cylinder block to prevent the crankshaft from turning, then tighten the nut.

#### E-97. Install Oil Pan

Before installing the oil pan, make a final internal inspection particularly making certain that the inside of the cylinder block is clean. Apply a thin coat of gasket paste on the oil pan. Place the new oil pan gasket in position. Set the oil pan in position on the cylinder block and install the oil pan. Torque the attaching bolts 9 to 14 lb-ft. [1,2 a 1,9 kg-m.]. Install the oil pan drain plug and gasket and tighten the plug securely.

#### E-98. Install Cylinder Head

Make certain that the entire top of the cylinder block assembly, the lower surface of the cylinder head, and the cylinder head gasket are clean. Blow all dirt or carbon out of the blind tapped bolt holes in the cylinder block before the cylinder head and gasket are installed. Use no sealer or other compound, and position the new cylinder head gasket **WITH THE CRIMPED EDGES OF THE GASKET METAL DOWN** (See Fig. 83). This gasket position allows a positive seal along the narrow surfaces of the cylinder head between the combustion chambers, and eliminates the possibility of burning combustion gases reaching an asbestos portion of the cylinder head gasket. Install the cylinder head on the cylinder block placing a piece of clean wood about 1" [25 mm.] thick between the block and head. Install the intake valve push rods moving the rocker arms to one side to make the installation. Remove the piece of wood and lower the head until the rocker arm ball ends

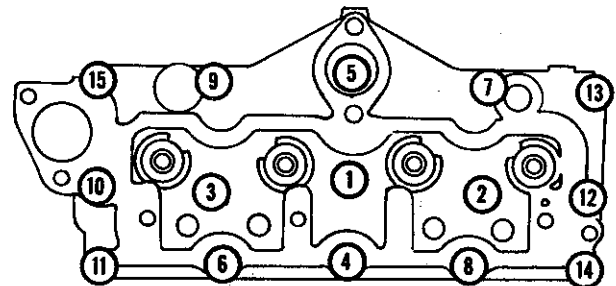

10102

FIG. 128—CYLINDER HEAD BOLT TIGHTENING SEQUENCE

enter the push rod sockets and then lower the head to seat on the gasket. Install the cylinder head bolts. Tighten the bolts with a torque wrench to 60 to 70 lb-ft. [8,3 a 9,7 kg-m.] in the sequence shown in Fig. 128. Do not overlook installing the cylinder head bolt in the intake manifold directly under the carburetor opening.

#### E-99. Install Rocker Arm Assembly

a. Insert ball ends of the intake valve push rods through the cylinder head and cylinder block and seat them in the cupped head of the intake valve tappets.

b. Install the rocker arm and shaft assembly on the four rocker arm shaft bracket studs. Tighten the two temporarily installed rocker arm cover studs.

**E-100. Install Spark Plugs**

Clean and adjust the spark plugs, setting the electrode gaps at .030" [0,762 mm.]. Install the plugs to prevent any foreign matter entering the combustion chambers during the remaining operations. Torque the spark plugs 25 to 35 lb-ft. [3,4 a 4,6 kg-m.].

**E-101. Install Manifold**

If manifold studs were removed for replacement, apply sealer on the stud threads before installing a new stud.

Make certain that no foreign objects are inside the manifold and that all passages are clear. Place a new set of manifold gaskets in position on the side of the cylinder block. Then, carefully slide the manifold onto the studs and against the cylinder block being careful not to damage the gaskets. Torque all manifold attaching nuts evenly 29 to 35 lb-ft. [4,0 a 4,8 kg-m.].

**E-102. Install Oil Filler Tube**

When installing the oil filler tube, be sure that the beveled lower end is away from the crankshaft. Place a piece of hard wood over the top of the tube to prevent damage to the cap gasket seat.

**E-103. Install Water Pump**

Make certain that the mating surfaces of the water pump and the cylinder block are clean and smooth. Install the gasket on the flange of the pump and install the pump in position on the cylinder block. Torque the water pump attaching bolts alternately and evenly 12 to 17 lb-ft. [1,7 a 1,3 kg-m.].

**E-104. Install Water Outlet Fitting**

Install the thermostat and the water outlet fitting. Torque the water outlet fitting attaching bolts 20 to 25 lb-ft. [2,8 a 3,4 kg-m.].

**E-105. Final Operations**

Before starting the engine, adjust the exhaust valve tappets to .016" [0,4064 mm.]. Set the intake valve rocker arm adjustments close to the standard .018" [0,4572 mm.] adjustment.

Start the engine and let it warm up to normal operating temperature. Then retorque all head bolts in the proper sequence.

**NOTE:** It is advisable to check the tightness of the head bolts again after 500 to 600 miles [800 a 960 km.] of normal operation.

Check all head bolts and the head gasket for leaks. Cement a new gasket on the rocker arm cover. Install the cover placing an oil seal then a flat washer and nut on each cover stud. Cement a new gasket on the valve cover. Install the cover and ventilator tube using a new gasket back of the tube and new copper ring gaskets under the attaching screw heads. Torque the valve tappet cover nuts 7 to 10 lb-ft. [1,0 a 1,4 kg-m.].

**E-106. VALVE ADJUSTMENT**

Proper valve adjustment is important to prevent burning of valves and poor engine performance. This adjustment consists of obtaining a specified lash in the valve mechanism. The exhaust valve tappets and the intake valve rocker arms should

be adjusted to the proper lash with the engine cold (at room temperature). Valve lash can be properly adjusted only when the tappet is on the heel or low portion of the cam.

**E-107. Valve Adjustment Procedure**

The exhaust valve tappets are adjusted by turning the adjusting screw in or out of the tappet as necessary to obtain the proper lash. Where special wrenches can be obtained, they should be used to facilitate the adjustment. The proper lash is .016" to .017" [0,406 a 0,432 mm.] between the end of the adjusting screw and the bottom of the exhaust valve.

Crank the engine over to close a valve and check the lash with a feeler gauge. To adjust, hold the tappet with one wrench and turn the adjusting screw, with the other. Check and adjust each of the tappets in proper sequence.

Adjust each intake valve by adjusting the rocker arm screw at the push rod to obtain .018" [0,457 mm.] lash between the rocker arm and the valve stem with tappet on the heel of the cam.

**E-108. Check Valve Timing**

To check the valve timing, carefully set the inlet valve rocker arm adjustment for No. 1 cylinder to .026" [0,6604 mm.] between the rocker arm and the valve stem. Rotate the crankshaft clockwise until the piston in No. 1 cylinder is ready for the intake stroke. The intake valve opens 9° before top center (BTC). Note the distance between the "TC" and "50°" marks on the indicator on the timing gear cover and estimate the 9° before top center position. With the crankshaft in this position, timing is correct if the rocker arm is just tight against the intake valve stem. Do not overlook resetting the rocker arm adjustment to the correct running clearance.

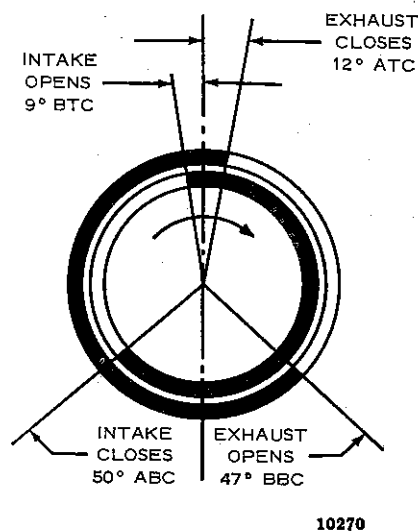


FIG. 129—VALVE TIMING

**E-109. OILING SYSTEM**

The engine oil pressure system is designed to provide adequate lubrication to all working parts of the engine. The gear-type oil pump is driven from the engine camshaft. The pump is provided with a



floating, screened intake that prevents the circulation of any sediment that might accumulate in the oil pan. By means of this pump, the main bearing journals and crankpins are efficiently lubricated through an oil gallery and passages in the cylinder block. Oil is forced under pressure to the main bearings and through the cheeks of the crankshaft to the connecting rod bearings. Oil is also force-fed to the camshaft bearings, timing gears, and intake valve rocker arms. The oil pressure is controlled by relief valve located in the oil pump. The valve is designed to open when excessive pressure develops in the system, relieving the pressure and returning the excess oil to the oil pan. The cylinder walls, piston pins, and tappets are supplied with oil from spurt holes in the connecting rods. A portion of the oil is continually passed through an oil filter which effectively removes any foreign matter suspended in the oil. A flanged section on the rear of the crankshaft acts as an oil slinger and, in combination with the rear main bearing upper and lower oil seal, prevents the leakage of oil from the rear end of the cylinder block. Leakage of oil from the front end of the cylinder block is controlled by the crankshaft oil slinger and the front oil seal installed in the timing gear cover. The oil pressure indicator light in the instrument panel and the oil level gauge or dip stick in the side of the engine provide a means for checking the oil pressure and oil level.

**NOTE:** As much as 4000 miles [6,400 km.] may be required for the chrome flash type compression rings to seat properly. During this piston ring run-in period, oil consumption may be higher than it was before new rings were installed. Oil consumption that is normal for the driving habits and type of operation involved should be evident at 4000 miles.

### E-110. Crankcase Ventilation

Some late model vehicles.

The crankcase ventilating system provides thorough, positive ventilation which reduces to a minimum the formation of sludge. The crankcase is ventilated by a sealed system. The system is actuated through a valve attached to the valve cover, which is connected by a tube to the intake manifold. Clean air is drawn into the oil filler tube and through a hose from the air cleaner. Any vapors

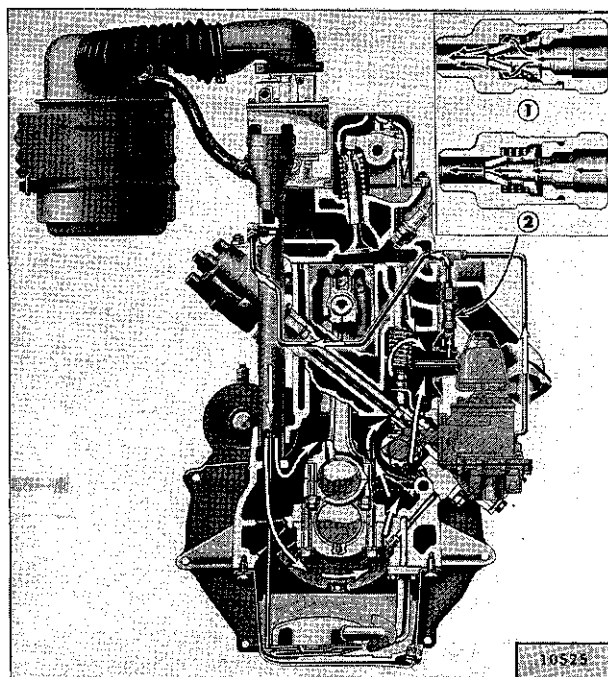


FIG. 130—CRANKCASE VENTILATION

1—Valve Open  
2—Valve Closed

in the crankcase are carried into the manifold and burned.

Be sure there are no air leaks at the tube connections between the air cleaner and the oil filler tube, and that the oil filler tube cap gasket is in good condition. Always keep the cap locked securely in place. When tuning the engine or grinding valves, remove the control valve and clean it thoroughly. If the valve is blocked with carbon, the ventilating system will not operate and, should the valve fail to seat, it will be impossible to make the engine idle satisfactorily.

### E-111. Oil Filter

The engine is equipped with a replaceable element type oil filter. This oil filter must be serviced periodically as outlined in the Lubrication Section. To replace the filter element remove the cover, lift out the old element, and install a new filter and gasket. The filter assembly may be replaced by detaching the oil lines at the case and removing the mounting bracket.

## SERVICE DIAGNOSIS

### Poor Fuel Economy

Ignition Timing Slow or Spark Advance Stuck  
 Carburetor Float High  
 Accelerator Pump Not Properly Adjusted  
 High Fuel Pump Pressure  
 Fuel Leakage  
 Leaky Fuel Pump Diaphragm  
 Loose Engine Mounting Causing High Fuel Level  
 in Carburetor  
 Low Compression  
 Valves Sticking  
 Spark Plugs Bad  
 Spark Plug Cables Bad  
 Weak Coil or Condenser  
 Improper Valve Tappet Clearance  
 Carburetor Air Cleaner Dirty  
 High Oil Level in Air Cleaner  
 Dragging Brakes  
 Front Wheels Out of Alignment  
 Tires Improperly Inflated  
 Inaccurate Odometer  
 Faulty Fuel Tank Cap  
 Clogged Muffler or Bent Exhaust Pipe

### Lack of Power

Low Compression  
 Ignition System (Timing Late)  
 Improper Functioning Carburetor or Fuel Pump  
 Fuel Lines Clogged  
 Air Cleaner Restricted  
 Engine Temperature High  
 Improper Tappet Clearance  
 Sticking Valves  
 Valve Timing Late  
 Leaky Gaskets  
 Muffler Clogged  
 Bent Exhaust Pipe  
 Defective Spark Plugs — Clean or Replace  
 Defective Breaker Points — Replace Points  
 Incorrect Breaker Point Gap — Reset Points  
 Defective Condenser or Coil — Replace  
 Loose Electrical Connections — Locate and Tighten  
 Broken Valve Spring — Replace Spring  
 Broken Piston or Rings — Replace  
 Defective Head Gasket — Replace Gasket  
 Cracked Distributor Cap — Replace Cap

### Low Compression

Leaky Valves  
 Poor Piston Ring Seal  
 Sticking Valves  
 Valve Spring Weak or Broken  
 Cylinder Scored or Worn  
 Tappet Clearance Incorrect  
 Piston Clearance too Large  
 Leaky Cylinder Head Gasket

### Burned Valves and Seats

Sticking Valves or too Loose in Guides  
 Improper Timing  
 Excessive Carbon Around Valve Head and Seat  
 Overheating  
 Valve Spring Weak or Broken  
 Valve Tappet Sticking  
 Valve Tappet Clearance Incorrect  
 Clogged Exhaust System

### Valves Sticking

Warped Valve  
 Improper Tappet Clearance  
 Carbonized or Scored Valve Stems  
 Insufficient Clearance Valve Stem to Guide  
 Weak or Broken Valve Spring  
 Valve Spring Cocked  
 Contaminated Oil

### Overheating

Inoperative Cooling System  
 Thermostat Inoperative  
 Improper Ignition Timing  
 Improper Valve Timing  
 Excessive Carbon Accumulation  
 Fan Belt too Loose  
 Clogged Muffler or Bent Exhaust Pipe  
 Oil System Failure  
 Scored or Leaky Piston Rings

### Popping-Spitting-Detonation

Improper Ignition  
 Improper Carburetion  
 Excessive Carbon Deposit in Combustion Chambers  
 Poor Valve Seating  
 Sticking Valves  
 Broken Valve Spring  
 Tappets Adjusted too Close  
 Spark Plug Electrodes Burned  
 Water or Dirt in Fuel  
 Clogged Lines  
 Improper Valve Timing

### Excessive Oil Consumption

Piston Rings Stuck in Grooves, Worn or Broken  
 Piston Rings Improperly Fitted or Weak  
 Piston Ring Oil Return Holes Clogged  
 Excessive Clearance, Main and Connecting Rod Bearings  
 Oil Leaks at Gaskets or Oil Seals  
 Excessive Clearance, Valve Stem to Valve Guide (Intake)  
 Cylinder Bores Scored, Out-of-Round or Tapered  
 Too Much Clearance, Piston to Cylinder Bore  
 Misaligned Connecting Rods  
 High Road Speeds or Temperature  
 Crankcase Ventilator Not Operating

### Bearing Failure

Crankshaft Bearing Journal Out-of-Round  
 Crankshaft Bearing Journal Rough  
 Lack of Oil  
 Oil Leakage  
 Dirty Oil  
 Low Oil Pressure or Oil Pump Failure  
 Drilled Passages in Crankcase or Crankshaft Clogged  
 Oil Screen Dirty  
 Connecting Rod Bent

## F4-134 ENGINE SPECIFICATIONS

MODEL:	ALL F4-134 MODELS	METRIC
<b>ENGINE:</b>		
Type.....	F-head	.....
Number of Cylinders.....	4	.....
Bore.....	$3\frac{1}{8}"$	79,37 mm.
Stroke.....	$4\frac{5}{8}"$	111,12 mm.
Piston Displacement.....	134.2 cu. in.	2199 cm <sup>3</sup>
Bore Spacing (center to center)		
1 and 2, 3 and 4.....	3.437"	8,729 cm.
2 and 3.....	4.938"	12,542 cm.
Firing Order.....	1-3-4-2	.....
Compression Ratio: 4WD		
Standard.....	6.9 to 1	6,9 a 1
Optional.....	7.4 to 1	7,4 a 1
Compression Ratio: 2WD		
Standard.....	7.4 to 1	7,4 a 1
Optional.....	7.8 to 1	7,8 a 1
Compression Pressure.....	120 to 130 psi.	8,4 a 9,1 kg-cm <sup>2</sup>
Horsepower (SAE).....	15.63	.....
Horsepower, 4WD (max. brake).....	72 @ 4000 rpm.	.....
Horsepower, 2WD (max. brake).....	75 @ 4000 rpm.	.....
Maximum Torque @ 2000 rpm.....	114 lb.-ft.	15,766 kg-m.
Idle Speed.....	600 rpm.	.....
Governor Speed (optional):		
Velocity.....	2200 to 3200 rpm.	.....
Centrifugal.....	1000 to 2600 rpm.	.....
<b>PISTONS:</b>		
Material.....	Aluminum Alloy	.....
Description.....	Cam Ground, T-Slot, Tin Plated	.....
Length.....	$3\frac{3}{4}"$	9,52 cm.
Diameter (near bottom of skirt).....	3.1225" to 3.1245"	7,9311 a 7,9362 cm.
Clearance Limits:		
Top Land.....	.018" to .021"	0,457 a 0,533 mm.
Skirt Top.....	.0021" to .0029"	0,0533 a 0,0736 mm.
Skirt Bottom.....	Selective Feeler Fit	.....
Ring Groove Depth:		
No. 1 and No. 2 Rings.....	.1575" to .151"	4,000 a 3,835 mm.
No. 3 Ring.....	.1675" to .161"	4,255 a 4,089 mm.
Ring Groove Width:		
No. 1 Ring.....	.0955" to .0965"	2,4257 a 2,4511 mm.
No. 2 Ring.....	.095" to .096"	2,413 a 2,438 mm.
No. 3 Ring.....	.1875" to .1885"	4,7625 a 4,7879 mm.
Piston Pin Hole Bore.....	.760" to .770"	19,304 a 19,558 mm.
Cylinder Bore — Standard.....	3.125" to 3.127"	7,9375 a 7,9425 cm.
— max. out of round.....	.005"	0,1270 mm.
— max. taper.....	.005"	0,1270 mm.
— max. rebore.....	.040"	1,0160 mm.
<b>PISTON RINGS:</b>		
Function:		
No. 1 and No. 2 Rings.....	Compression	.....
No. 3 Ring.....	Oil	.....
Material:		
No. 1 Ring.....	Cast Iron, Chrome-Plated Face	.....
No. 2 and No. 3 Rings.....	Cast Iron	.....
Width:		
No. 1 and No. 2 Rings.....	.0925" to .0935"	2,3380 a 2,3749 mm.
No. 3 Ring.....	.1860" to .1865"	4,5872 a 4,5882 mm.
Gap.....	.007" to .017"	0,1778 a 0,4318 mm.
Thickness:		
No. 1 and No. 2 Rings.....	.134" to .144"	0,3403 a 0,3657 mm.
No. 3 Ring.....	.115" to .125"	0,2821 a 0,3175 mm.
Side Clearance in Groove:		
No. 1 Ring.....	.002" to .004"	0,051 a 0,102 mm.
No. 2 Ring.....	.0015" to .0035"	0,038 a 0,088 mm.
No. 3 Ring.....	.001" to .0025"	0,025 a 0,063 mm.
<b>PISTON PINS:</b>		
Material.....	SAE 1016 Steel	.....
Length.....	2.781"	70,63 mm.
Diameter.....	.8119"	20,62 mm.
Type.....	Locked in Rod	.....
Clearance in Piston (selective Fit).....	.0001" to .0003"	0,0025 a 0,0076 mm.

## F4-134 ENGINE SPECIFICATIONS—(Continued)

MODEL:	ALL F4-134 MODELS	METRIC
<b>CONNECTING RODS:</b>		
Material .....	SAE 1141 Forged Steel	.....
Weight .....	32 oz.	907 gr.
Length (center to center) .....	9.187"	23,33 cm.
Bearing:		
Type .....	Removable	.....
Material .....	Steel-backed Babbitt	.....
Over All Length .....	1.089" to 1.099"	27,661 a 27,915 mm.
Clearance Limits .....	.001" to .0019"	0,025 a 0,483 mm.
End Play .....	.004" to .010"	0,102 a 0,254 mm.
Installation .....	From Above	.....
Bore:		
Upper .....	.8115" to .8125"	20,612 a 20,637 mm.
Lower .....	2.0432" to 2.0440"	51,8972 a 51,9176 mm.
<b>CRANKSHAFT:</b>		
Material .....	SAE 1040 Forged Steel	.....
End Thrust Taken By .....	Front Bearing	.....
End Play .....	.004" to .006"	0,101 a 0,152 mm.
Main Bearings:		
Type .....	Removable	.....
Material .....	Steel-backed Babbitt	.....
Clearance .....	.0003" to .0029"	0,0071 a 0,0736 mm.
Journal Diameter .....	2.333" to 2.334"	5,9268 a 5,9261 mm.
Bearing Length:		
Front .....	1.64"	41,66 mm.
No. 2 .....	1.72"	43,69 mm.
No. 3 .....	1.66"	42,16 mm.
Direction and Amount of Cylinder Offset .....	Right .125"	3,175 mm.
Crankpin Journal Diameter .....	1.9375"	42,2125 mm.
Flywheel Run Out (max.) .....	.005"	0,127 mm.
<b>CAMSHAFT:</b>		
Bearings:		
Material .....	Steel-backed Babbitt (Front Only)	.....
Number .....	4	.....
Clearance .....	.001" to .0025"	0,025 a 0,063 mm.
Journal Diameter:		
Front .....	2.1860" to 2.1855"	55,518 mm.
Front Intermediate .....	2.1225" to 2.1215"	53,898 mm.
Rear Intermediate .....	2.0600" to 2,0590"	52,311 mm.
Rear .....	1.6230" to 1.6225"	41,217 mm.
Bearing Diameter:		
Front .....	2.1870" to 2.1890"	55,5498 a 55,6006 mm.
Front Intermediate .....	2.125" to 2.126"	53,9750 a 54,0004 mm.
Rear Intermediate .....	2.0625" to 2.0635"	52,3875 a 52,4129 mm.
Rear .....	1.625" to 1.626"	41,2750 a 41,3004 mm.
End Play .....	.004" to .007"	0,101 a 0,178 mm.
Drive:		
Type .....	Helical Gear	.....
Crankshaft Gear .....	Cast Iron	.....
Camshaft Gear .....	Pressed Fiber; Steel Hub	.....

## F4-134 ENGINE SPECIFICATIONS (Continued)

MODEL:	ALL F4-134 MODELS	METRIC
<b>VALVE SYSTEM:</b>		
Valve Rotators.....	On Exhaust Valve	.....
Tappets:		
Clearance — Cold:		
Intake.....	.018"	0,461 mm.
Exhaust.....	.016"	0,406 mm.
Clearance for Timing (intake).....	.026"	0,6604 mm.
Over All Length:		
Intake.....	2 $\frac{3}{4}$ "	6,98 cm.
Exhaust.....	2 $\frac{1}{8}$ "	7,30 cm.
Stem Diameter.....	.6245" to .6240"	15,8623 a 15,8496 mm.
Clearance in Block.....	.0005" to .002"	0,0127 a 0,0508 mm.
Timing:		
Intake:		
Opens.....	9° BTC	.....
Closes.....	50° ABC	.....
Duration.....	239°	.....
Exhaust:		
Opens.....	47° BBC	.....
Closes.....	12° ATC	.....
Duration.....	239°	.....
Valve Opening Overlap.....	21°	.....
Valves:		
Intake:		
Material.....	SAE 5150 Steel	.....
Over All Length.....	4.781"	12,14 mm.
Head Diameter.....	2"	50,8 mm.
Angle of Seat.....	45°	.....
Stem Diameter.....	.3733" to .3738"	9,481 a 9,494 mm.
Stem-to-Guide Clearance.....	.0007" to .00022"	0,0178 a 0,0559 mm.
Lift.....	.260"	6,604 mm.
Exhaust:		
Material.....	Uniloy 2112	.....
Over All Length.....	5.5909"	150,089 mm.
Head Diameter.....	1.47"	37,34 mm.
Angle of Seat.....	45°	.....
Seat Insert Material.....	Eatonite EMS 58	.....
Stem Diameter.....	.371" to .372"	9,423 a 9,449 mm.
Stem-to-Guide Clearance.....	.0025" to .0045"	0,0635 a 0,1143 mm.
Lift.....	.351"	8,915 mm.
Springs — Intake:		
Free Length.....	1.97"	50,00 mm.
Pressure @ Length:		
Valve Closed.....	73 lb. @ 1.66"	33,1 kg. a 86,7 mm.
Valve Open.....	153 lb. @ 1.40"	69,4 kg. @ 35,7 mm.
Springs — Exhaust:		
Free Length.....	2.5"	63,5 mm.
Pressure @ Length:		
Valve Closed.....	53 lb. @ 2.11"	24 kg. a 53,5 mm.
Valve Open.....	120 lb. @ 1.75"	54.3 kg. a 44,4 mm.
<b>LUBRICATION SYSTEM:</b>		
Type of Lubrication:		
Main Bearings.....	Pressure	.....
Connecting Rods.....	Pressure	.....
Piston Pins.....	Splash	.....
Camshaft Bearings.....	Pressure	.....
Tappets.....	Splash	.....
Timing Gears.....	Nozzle	.....
Cylinder Walls.....	Nozzle	.....
Oil Pump:		
Type.....	Internal Rotor	.....
Drive.....	Camshaft Gear	.....
Minimum Safe Oil Pressure.....	6 psi. @ Idle	0,4 kg-cm <sup>2</sup>
Normal Oil Pressure.....	20 psi. @ 2000 rpm. (35 mph.)	1,4 kg-cm <sup>2</sup> [56 kph.]
Relief Valve Opens.....	35 psi. @ 2000 rpm.	2,5 kg-cm <sup>2</sup>
Oil Pressure Sending Unit.....	40 psi.	2,81 kg-cm <sup>2</sup>
Oil Intake.....	Electric	.....
Oil Filter System.....	Floating	.....
	Partial Flow	.....



## FUEL SYSTEM

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Accelerator and Linkage.....	F-58	Metering Rod.....	F-9
Air Cleaner.....	F-59	Pump.....	F-13
Carburetors.....	F-2	Assembly.....	F-15
Carburetors — Model L6-226		Circuits	
Carter WGD-2052SA — Double Throat	F-17	Choke.....	F-10
Adjustments.....	F-18	Float.....	F-4
Fast Idle.....	F-21	High Speed.....	F-8
Float.....	F-18	Low Speed.....	F-6
Metering Rod.....	F-20	Pump.....	F-12
Pump.....	F-19	Disassembly.....	F-14
Unloader.....	F-22		
Carter WCD-2204S — Double Throat	F-23	Fuel Tank Cap.....	F-60
Adjustments.....	F-25		
Fast Idle.....	F-35	Fuel and Vacuum Pump — L6-226.....	F-46
Float.....	F-28	Fuel Pump	
Metering Rod.....	F-33	Assembly.....	F-49
Pump.....	F-30	Disassembly.....	F-47
Unloader.....	F-36	Vacuum Pump.....	F-50
Assembly.....	F-25	Assembly.....	F-53
Disassembly.....	F-24	Disassembly.....	F-51
Carter YF-2467S — Single Throat.....	F-37		
Carburetors — Model F4-134.....	F-3	Fuel and Vacuum Pump — F4-134.....	F-39
Adjustments		Fuel Pump	
Fast Idle.....	F-11	Assembly.....	F-43
Float.....	F-5	Disassembly.....	F-41
Idle.....	F-7	Vacuum Pump.....	F-44
		Disassembly.....	F-45

**F-1. GENERAL**

The fuel system consists of the fuel tank, fuel lines, fuel pump, carburetor and air cleaner.

The most important attention necessary to the fuel system is to keep it clean and free from water.

It should be periodically inspected for leaks.

**CAUTION**—Whenever a vehicle is to be stored for an extended period, the fuel system should be completely drained, the engine started and allowed to run until the carburetor is emptied. This will avoid oxidization of the fuel, resulting in the formation of gum in the units of the fuel system. Gum formation is similar to hard varnish and may cause the fuel pump valves or the carburetor float valve to become stuck or the filter screen blocked. Acetone, obtainable in most drug stores, will dissolve gum formation. In extreme cases it will be necessary to disassemble and clean the fuel system, however, often one pint [6 liter] of acetone placed in the fuel tank with about one gallon [4,5 liters] of gasoline will dissolve any deposits as it passes through the system with the gasoline.

**F-2. CARBURETOR**

The carburetors that are covered in this section

and the vehicle model and serial numbers for which they are effective are all shown here:

Par.	Carburetor	Models	After Serial No.
F-3	YF-951S or SA	All F4-134 Models	
F-17	WGD-2052SA	Early L6-226 Models	
F-23	WCD-2204S	L6-226 4WD Pickup	654-EC2-14773
		L6-226 4WD Stake	654-ED2-10325
		L6-226 4x4 SW	654-FA2-12542
		L6-226 4x4 SD	654-RA2-10218
F-37	YF-2467S	L6-226 4WD	55268-31178
		L6-226 4x4	54168-23628
		L6-226 4x2	54167-12034

**F-3. Carter YF-951S and 951SA Carburetors**  
All F4-134 Models

This carburetor is covered in Par. F-4 through F-16.

The carburetor controls and vaporizes the fuel through five separate circuits: float circuit, low-speed circuit, high-speed circuit, choke circuit, and accelerating pump circuit. A description of the function and operation of each circuit provides an overall description of the carburetor.

For identification, the series (YF) is stamped on the body under the name Carter and the model is stamped on a flange protruding from the body.

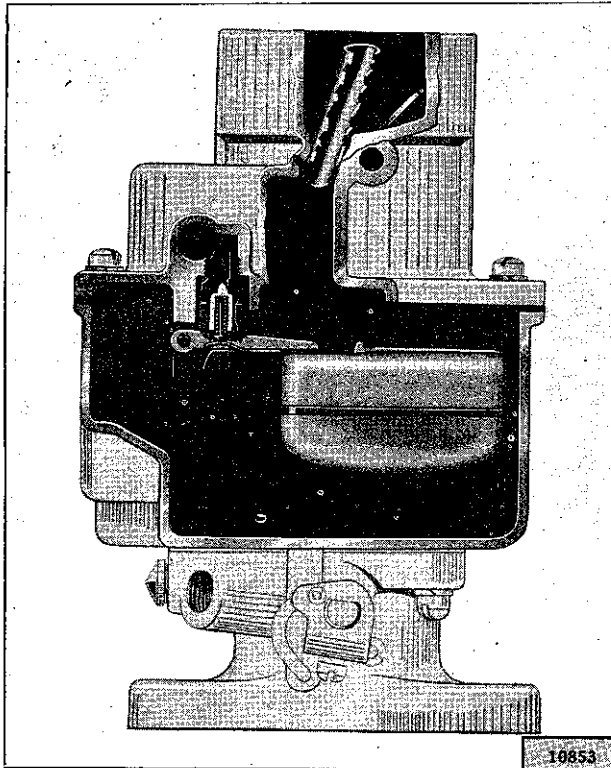


FIG. 131—THE FLOAT CIRCUIT

Conversion kits for changing earlier models to SA models are available. See Par. F-16. It is recommended that when a carburetor is converted that a tag be fashioned stamped with the new model number and installed under one of the air horn screws. Look for such a tag to determine if the carburetor has previously been converted.

**NOTE:** When checking for carburetor icing causes, also check the vacuum-pump-to-manifold vacuum line connector.

#### F-4. Float Circuit

The float circuit, Fig. 131, consists of a float, float pin, air horn gasket and the needle and seat

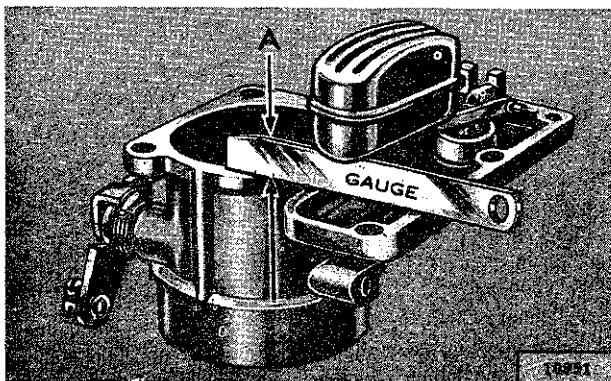


FIG. 132—FLOAT LEVEL GAUGING

assembly. These parts control the fuel level in the carburetor bowl, a supply being maintained for all circuits under all operating conditions. To prevent float vibration from affecting the fuel level, the inlet or float valve is spring loaded. Should the needle and seat become worn, they must be replaced with a matched set, including the spring, which is the only way they are supplied. When reinstalling the float be sure to install the float pin with the stop shoulder on the side away from the bore of the carburetor.

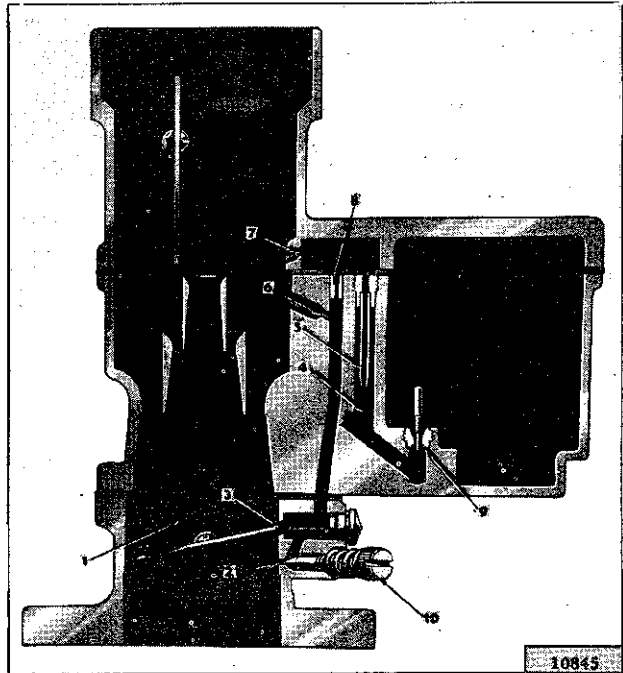


FIG. 133—THE LOW SPEED CIRCUIT

#### F-5. Float Adjustment

The float level must be accurately set to insure accurate metering of fuel in both the low and high speed jets. To set the float level remove the bowl cover assembly and invert it as shown in Fig. 132. Remove the bowl cover gasket and allow the weight of the float to rest on the needle and spring. Adjust the level by bending the float arm lip (not the arm) to provide the proper clearance between the float and cover as shown by gauge A. Clearance is  $\frac{5}{16}$ " [7.93 mm.] for YF-951SA carburetor (use Carter gauge T-109-107). Use care that there is no compression of the spring other than the weight of the float.

#### F-6. Low Speed Circuit.

Fuel for idle and early part throttle operation is metered through the low speed circuit. It is illustrated in Fig. 133.

Liquid fuel enters the idle well No. 4 through the metering rod jet No. 9. Low speed jet No. 5 measures the amount of fuel for idle and early part throttle operation. The air by-pass No. 7, economizer No. 8 and idle air bleed No. 6 are carefully calibrated orifices which serve to break up the liquid fuel and mix it with air as it moves through the passage to the idle port No. 3 and idle adjustment screw port No. 2.



### F-7. Idle Adjustment Screw Setting.

Turn screw one to two turns for normal opening. For richer mixture, turn screw out; for leaner mixture turn screw in. Do not idle engine below 600 rpm.

By-pass No. 7, economizer No. 8, idle port No. 3, idle adjustment screw port No. 2 and the bore of the throttle body flange No. 1 must be clean and free from carbon. Obstructions at any of the above points will cause poor low speed engine performance.

A worn or damaged idle adjustment screw No. 10 or low speed jet No. 5 should be replaced.

### F-8. High Speed Circuit

Numbers in parentheses refer to items in Fig. 134. Fuel for part-throttle and full-throttle operation is supplied through the high speed circuit, Fig. 130. Metering rod (2) and metering rod jet (10) control the amount of fuel admitted through nozzle (1) for high-speed operation. The lower end of metering rod (2) is calibrated to accurately meter the fuel required. As the rod is automatically raised and lowered in jet (10) the opening in the jet is varied to supply more fuel through the higher speed and power range. The metering rod is both mechanically and vacuum controlled and is attached to the metering rod arm (4).

During part-throttle operation, the vacuum in chamber (9) pulls diaphragm (8) down, holding metering rod arm (4) against pump lifter link (3). Movement of the metering rod is controlled by pump lifter link (3) attached to the carburetor

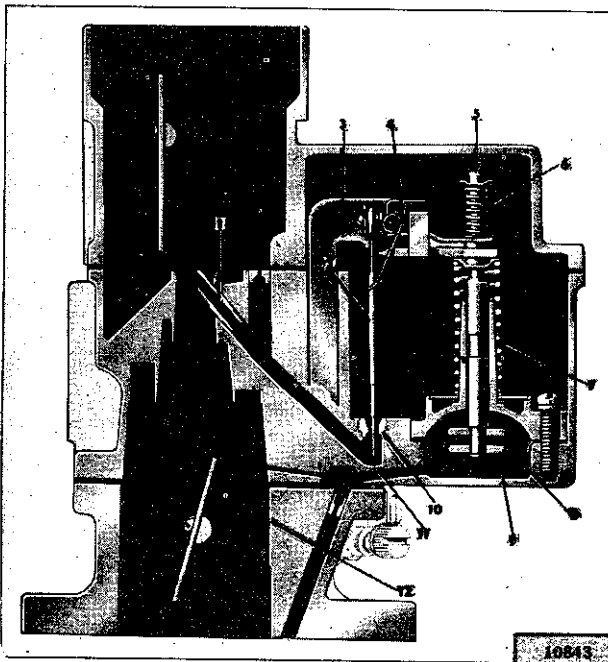


FIG. 134—THE HIGH SPEED CIRCUIT

- 1—Nozzle
- 2—Metering Rod
- 3—Pump Lifter Link
- 4—Metering Rod Arm Assembly
- 5—Diaphragm Shaft
- 6—Upper Pump Spring
- 7—Pump Diaphragm Spring
- 8—Diaphragm Assembly
- 9—Chamber
- 10—Metering Rod Jet

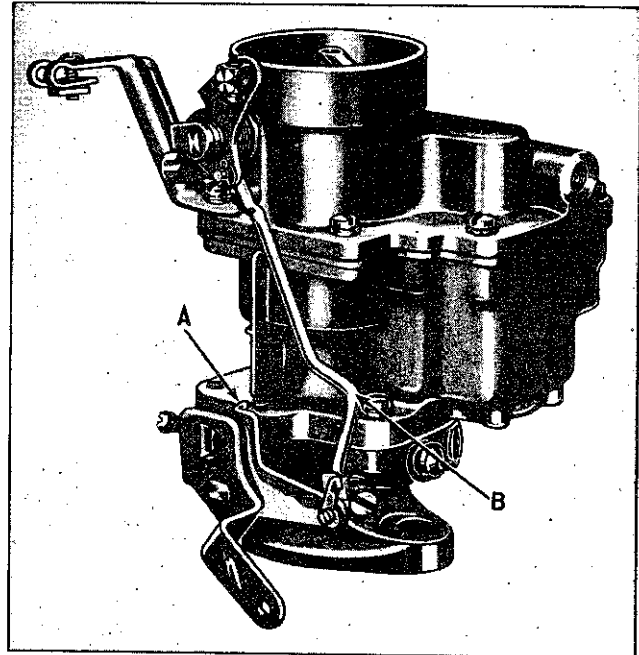


FIG. 135—CARBURETOR FAST IDLE

throttle shaft. At all times the vacuum in chamber (9) is strong enough to overcome the tension of pump diaphragm spring (7). Upper pump spring (6) serves as a bumper upon deceleration and as a delayed action spring on acceleration.

Under any operating condition, when the pump diaphragm spring (7) overcomes the vacuum in chamber (9) the metering rod (2) will move toward the wide-open throttle or power position.

Nozzle (1) is a pressed-in part and should not be removed.

### F-9. Metering Rod Adjustment

Metering rod adjustment is important and should be checked each time the carburetor is reassembled. Before adjustment is made, be sure the flat of metering rod arm (4) is parallel to the flat of pump lifter link (3) as shown in Fig. 134. With throttle valve seated in the bore of the carburetor at No. 12, press down on the upper end of diaphragm shaft (5) until the diaphragm bottoms in the vacuum chamber. The metering rod should now seat in casting at No. 11 with the metering rod arm flat against the pump lifter link. If the metering rod does not seat in the body casting, or seats before the metering rod arm makes flat contact with the pump lifter link, make adjustment by bending lip on metering rod arm (4).

### F-10. Choke Circuit

The choke circuit consists of a manually-operated choke valve, a fast-idle connecting rod, and a fast-idle arm. The spring-loaded choke valve is offset. When the choke valve is moved to a closed position for starting, Fig. 135, the fast-idle connector rod A revolves the fast-idle arm B. This increases the engine-idle speed to prevent stalling during the warm-up period. A connector-rod-return spring prevents partial closing of the choke valve.

### F-11. Fast Idle Adjustment

With the choke held in wide-open position, lip A (Fig. 135) on the fast-idle arm should contact the boss on the body casting. Adjust by bending the fast-idle link at offset B.

### F-12. Accelerating Pump Circuit

The accelerating pump circuit, Fig. 136, provides a measured amount of fuel for rapid acceleration and smooth engine operation when the throttle is opened at lower speeds. In operation, vacuum is applied to the underside of diaphragm (8) at all times when the engine is running. Lower and more uniform vacuum is provided by vacuum restriction (10) and vacuum bleed passage (11). When diaphragm (8) is in its maximum down position at low throttle because of high vacuum in chamber (9), the chamber above the diaphragm is full of fuel which has been admitted through intake passage (7).

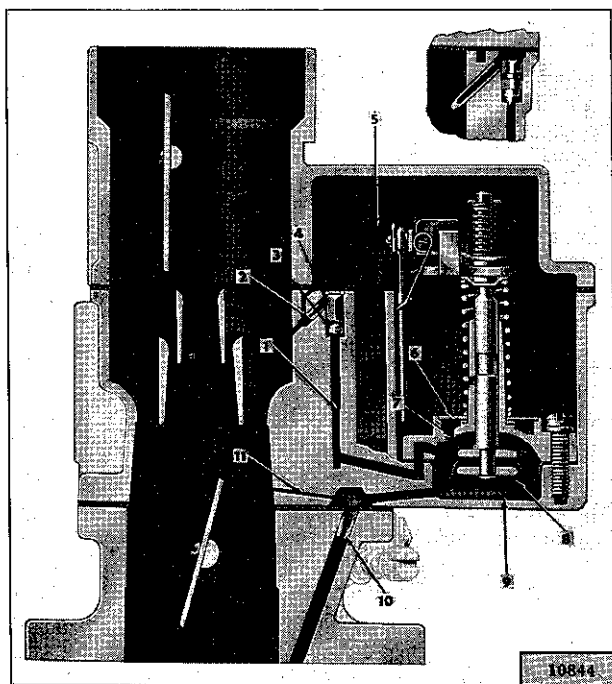


FIG. 136 — THE PUMP CIRCUIT

When the throttle is opened, vacuum in chamber (9), and diaphragm (8) is initially forced upward by the spring on the diaphragm shaft. The upward motion is transmitted to accelerator pump lifter (5) which is connected to the throttle. This movement forces fuel from the chamber above the diaphragm through discharge pump check valve (3) and discharge pump jet (2). This auxiliary discharge of fuel supplies engine requirements for quick acceleration and heavy loads. When the throttle is closed, the diaphragm is again pulled down by high vacuum and another measured charge of fuel enters the chamber above the diaphragm through intake passage (7) to be available for the next cycle of operation. Pump jet (shown in the insert drawing of Fig. 136) projects into the

air stream and is pressed into the carburetor body. This jet is permanently installed and should not be removed. Carburetor design makes it impossible to adjust the pump stroke.

### F-13. Accelerating Pump Maintenance

If engine acceleration is unsatisfactory, remove the pump diaphragm assembly. Check the diaphragm for wear or damage. Then remove the pump check weight and pump ball check. The pump ball check must seat, as a leak will cause poor acceleration. Inspect and replace all worn or damaged parts. Clean and blow out all passages with compressed air. When testing the pump for discharge volume when the carburetor is off the engine, approximately half of pump capacity will be discharged. Vacuum, when the engine is operating, controls the balance of discharge.

### F-14. Carburetor Disassembly

Numbers in parentheses refer to items in Fig. 137.


- a. Pry pin spring (44) and clevis clip (40) free and remove fast-idle connector rod (43).
- b. Remove air horn and bowl cover attaching screws and lockwashers (4 and 7). Remove choke tube clamp assembly (53, 54, 55, and 56).
- c. Remove air horn assembly (8) and gasket (14).
- d. Remove ball check valve retainer ring (46). Invert the unit and tap lightly to remove ball check valve retainer and ball check valve (45).
- e. Loosen the screw locking the throttle shaft arm (28) to the throttle shaft. Remove the throttle shaft arm and pump connector link (27).
- f. Remove diaphragm housing screws (20). Entire assembly can now be lifted out of the body. This assembly can easily be disassembled and reassembled if necessary.
- g. With the air horn in an upside-down position, remove pin (12) and float (13). Invert the air horn and catch needle pin (11) and needle pin spring (10).
- h. Carefully remove pump intake strainer housing using tip of knife blade.
- i. Remove metering rod jet (47). Remove low-speed jet (48).

**NOTE:** Do not remove pressed-in parts such as nozzle, pump jet, or antipercolator air bleed.

- j. Remove body flange attaching screws (29), body flange assembly (23), and gasket (24).
- k. Remove idle-adjustment screw (41), spring (34), idle port rivet plug (25), throttle lever assembly (37), washer (33), fast idle arm (32), and throttle shaft (39).
- l. Remove throttle shaft seal by prying out seal retainer.

**NOTE:** Do not remove pressed-in vacuum passage orifice.

- m. Remove choke valve screws (5) and choke valve (6). Unhook choke spring (3) and slide shaft (1) from housing.
- n. Wash all parts in carburetor cleaning solution and blow out passages with compressed air. Do not immerse diaphragm, pump check disc, or seals in cleaning solution. Inspect all parts for wear or damage. Always use new gaskets when reassembling.

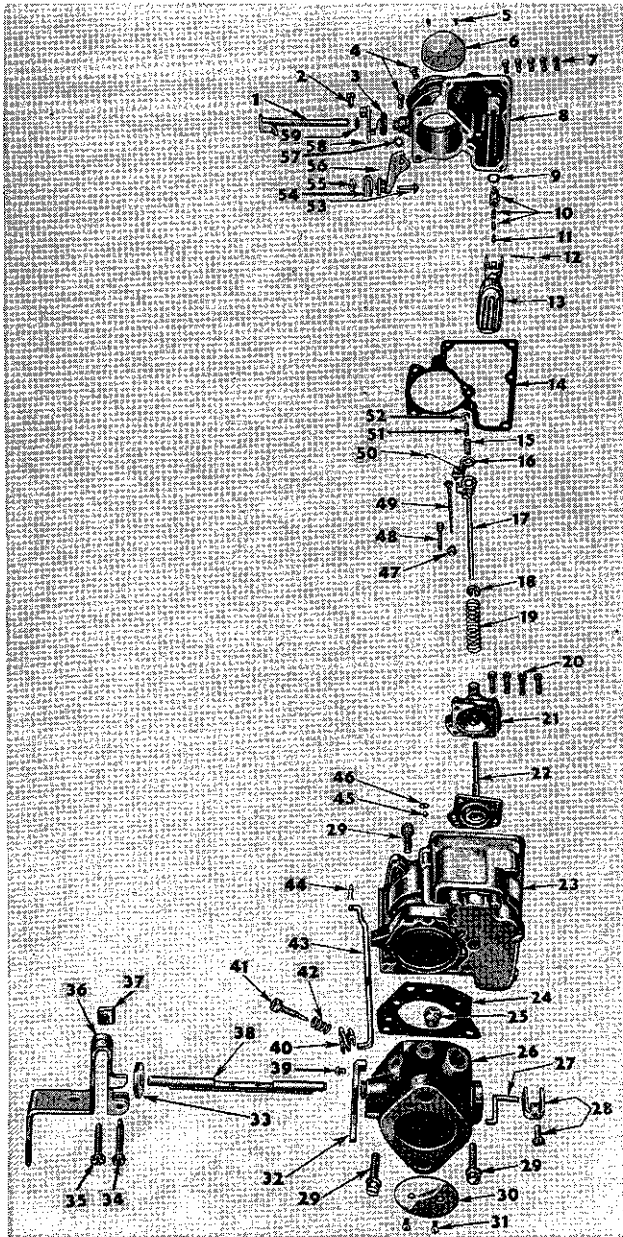FIG. 137—YF-951S OR YF-951SA  
CARBURETOR

- 1—Choke Shaft and Lever
- 2—Screw
- 3—Choke Lever Spring
- 4—Screw and Washer
- 5—Choke Valve Screw
- 6—Choke Valve
- 7—Screw and Washer
- 8—Air Horn
- 9—Needle Seat Gasket
- 10—Needle Spring and Seat
- 11—Needle Pin
- 12—Float Pin
- 13—Float
- 14—Gasket
- 15—Outer Pump Spring
- 16—Metering Rod Arm
- 17—Pump Link
- 18—Pump Spring Retainer
- 19—Vacuum Diaphragm Spring
- 20—Screw and Washer
- 21—Diaphragm Housing
- 22—Diaphragm
- 23—Body
- 24—Gasket
- 25—Idle Port Plug
- 26—Body Flange
- 27—Pump Link Connector
- 28—Throttle Shaft Arm
- 29—Screw and Washer
- 30—Throttle Valve
- 31—Throttle Valve Screw
- 32—Fast Idle Arm
- 33—Washer
- 34—Adjusting Screw
- 35—Screw
- 36—Throttle Lever
- 37—Lever Nut
- 38—Throttle Shaft
- 39—Body Flange Plug
- 40—Clevis Clip
- 41—Idle Adjusting Screw
- 42—Idle Screw Spring
- 43—Fast Idle Connector Rod
- 44—Pin Spring
- 45—Ball Check Valve
- 46—Ball Check Valve Retainer Ring
- 47—Metering Rod Jet
- 48—Low Speed Jet
- 49—Metering Rod
- 50—Metering Rod Spring
- 51—Inner Pump Spring
- 52—Pump Spring Retainer
- 53—Bracket Tube Screw
- 54—Throttle Tube Clamp
- 55—Tube Bracket Nut
- 56—Choke Tube Clamp
- 57—Lockwasher
- 58—Choke Lever
- 59—Retainer Ring

### F-15. Carburetor Assembly

To expedite reassembly, it is advisable to group all related parts before assembling.

- a. Install throttle shaft seal and retainer in flange casting.
- b. Install fast idle arm, washer, and lever assembly on throttle shaft. Slide shaft into place. Install throttle valve.
- c. Install idle port rivet plug. Install idle adjusting screw and spring.
- d. Attach flange assembly to body casting. Use new gasket.
- e. Install low-speed jet assembly.
- f. Install pump intake strainer in pump diaphragm

housing and carefully press into recess.

**CAUTION:** If strainer is even slightly damaged, a new one must be installed.

- g. Install pump diaphragm assembly in diaphragm housing. Install pump diaphragm spring (lower) and retainer.
- h. Install pump lifter link, meter rod arm, upper pump spring, and retainer.
- i. Install metering rod jet (no gasket used with this jet).
- j. Install diaphragm housing attaching screws in the diaphragm housing, making sure that the edges of the diaphragm are not wrinkled. Lower into place. Tighten screws evenly and securely.

k. Install throttle shaft seal dust seal, washer, and shaft seal spring.

l. Install pump connector link in the throttle shaft arm assembly. Install throttle shaft arm assembly on throttle shaft guiding connector link into pump lifter link hole.

**CAUTION:** Linkage must not bind in any throttle position. If binding occurs, loosen clamp screw in throttle arm, adjust slightly, and retighten screw.

m. Install pump check disc, disc retainer, and lock ring.

n. Install metering-rod-and-pin spring. Connect metering rod spring.

o. Adjust metering rod.

**NOTE:** Be sure flat of metering rod arm is parallel to flat of pump lifter link before proceeding with metering rod adjustment.

With the throttle valve seated, press down on upper end of diaphragm shaft. Metering rod should be seated in casting and metering rod arm flat against pump lifter link. If metering rod does not seat in body casting (check by pressing downward on metering rod) or seats before the metering rod arm makes flat contact with pump lifter link, raise or lower by bending the lip on metering rod arm.

p. Install needle-seat-and-gasket assembly needle, float, and float pin. The stop shoulder on the float pin must be on the side away from the bore of carburetor.

q. Set float level to specifications. Measure from machined surface of casting (gasket removed). Adjust by bending the lip which contacts needle.

r. Install air horn gasket and air horn assembly. Install attaching screws, lockwashers, and choke tube clamp assembly. Tighten center screws first.

s. Slide choke shaft and lever assembly into place. Connect choke lever spring. Install choke valve. Center valve by tapping lightly. Hold valve in place with fingers when tightening screws.

t. Install fast idle connector rod with offset portion of the rod at the top and pin spring at the outside. Install fast-idle connecting rod spring.

#### F-16. Correcting Acceleration Flat Spot

All F4-134 models

Using Carburetor Model YF-951S

Inasmuch as a flat spot on acceleration or low speed stumble can come from causes other than carburetor malfunction, it is recommended that engine tuning be thoroughly checked before attempting any actual carburetor work. Make sure that ignition, compression, and timing are correct and that fuel pump is supplying enough gas. Also, the F-head engine employs a water-heated intake manifold. Proper vaporization of the fuel depends on correct intake manifold temperature. Since this temperature is controlled by the cooling system thermostat, include an operational check of the

thermostat when diagnosing the stumble. Operating temperatures consistently below 155° F. can cause stumble.

If the stumble persists, a YF-951S carburetor can be converted to a YF-951SA carburetor by installing a special kit consisting of a pump discharge check needle, a metering rod, and a metering rod jet. If this kit is installed, the pump discharge check needle replaces the original ball, weight, and retainer and the small wire-type retainer used with the ball check assembly must not be reinstalled.

**NOTE:** All YF-951S carburetors produced prior to May, 1956, have a .025" [0,635 mm.] size pump discharge jet. Those produced later and all YF-951SA carburetors have the current .031" [0,787 mm.] size pump discharge jet. When installing the kit, the pump discharge jet size must be checked. If the carburetor being converted has a .025" jet, it must be opened to .031" by running a No. 68 drill through the jet as shown on Fig. 138. The jet must be drilled as it is a pressed-in part and cannot be replaced.

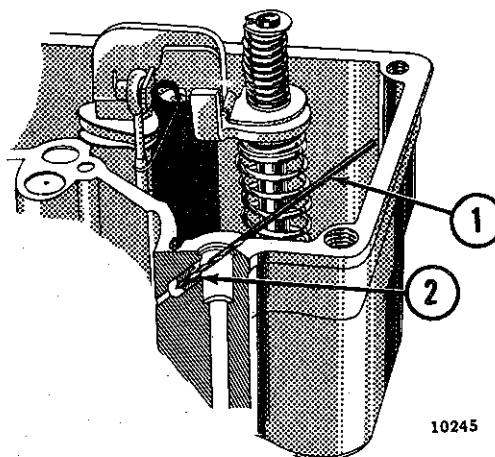


FIG. 138—DRILLING CARBURETOR JET

1—Drill (#68 size)

2—Accelerator Pump Discharge Jet

Upon completing the installation of the conversion kit, mark or tag the carburetor to indicate that it is a YF-951SA.

#### F-17. Carter WGD-2052SA Carburetor

Early L6-226 Models

This carburetor is covered in Par. F-18 through F-22.

Early production 1954 Model 6-226 utility vehicles were equipped with Carter Carburetor No. 2052S or SA. Some vehicles equipped with this carburetor may have a tendency to develop hard starting, flooding or high fuel consumption when operated in rugged off-the-road service or in extremely hilly terrain.

To correct these conditions, the manufacturer has made available a spring loaded needle and seat, Kit No. 25-173-S, which can be procured from any Carter Distributor. When this spring loaded needle and seat is installed in a 2052S carburetor, the float level setting must be changed to  $\frac{1}{32}$ " [5,5 mm.]

**F-18. Float Adjustment**

With bowl cover gasket removed, bowl cover inverted, and needle seated, there should be  $\frac{3}{32}$ " [7,14 mm.] between the top of float and bowl cover. Carter gauge T109-126 may be used. Adjust by bending float arm.

**F-19. Pump Adjustment**

Back out throttle lever set screw until throttle valves seat in bores of carburetor. Place Carter Universal Pump Travel Gauge, T109-117S inverted on edge of dust cover boss of bowl cover. Turn knurled knob of gauge until finger on gauge just touches top of plunger shaft. The distance from the dust cover boss on the top of the plunger shaft should be  $\frac{1}{2}$ " [12,7 mm.]. This is the distance from base to tip of finger on gauge. Adjust by bending throttle connector rod at upper angle.

**F-20. Metering Rod Adjustment**

The metering rods must be adjusted after the pump adjustment or when leaner than standard rods are installed. No metering rod gauges are necessary. With the throttle lever set screw backed out and throttle valves seated in bores of carburetor, press down on vacuumer link until metering rods bottom. With rods held in this position, remove metering rod arm until lip contacts vacuumer link. Hold in place and carefully tighten metering rod arm set screw.

**F-21. Fast Idle Adjustment**

With the thermostatic coil housing, gasket and baffle plate removed, crack throttle valve and hold choke valve closed. Then close throttle. There should now be .018" to .023" [0,457 a 0,584 mm.] clearance (Gauge T109-29) between throttle valve and bore of carburetor (side opposite idle port). Adjust by bending the choke connector rod at lower angle.

**F-22. Unloader Adjustment**

Must be made after fast idle adjustment. Hold throttle valve wide open and close choke valve as far as possible without forcing; there should now be  $\frac{3}{64}$ " [3,57 mm.] clearance between upper edge of choke valve and inner wall of air horn. Use Gauge T109-34. Adjust by bending arm on choke trip lever.

**F-23. Carter WCD-2204S****Double-throat Carburetor**

L6-226

4WD Pickup... 654-EC2-14773 to 55268-31178

L6-226

4WD Stake... 654-ED2-10325 to 55368-11162

L6-226 4x4 UW... 654-FA2-12542 to 54168-23628

L6-226 4x4 UD... 654-RA2-10218 to 54268-11543

Model WCD 2204S is a dual down-draft carburetor with climatic control designed especially for use on 6-226 utility vehicles. Disassembly and assembly procedures as well as adjustments are given below.

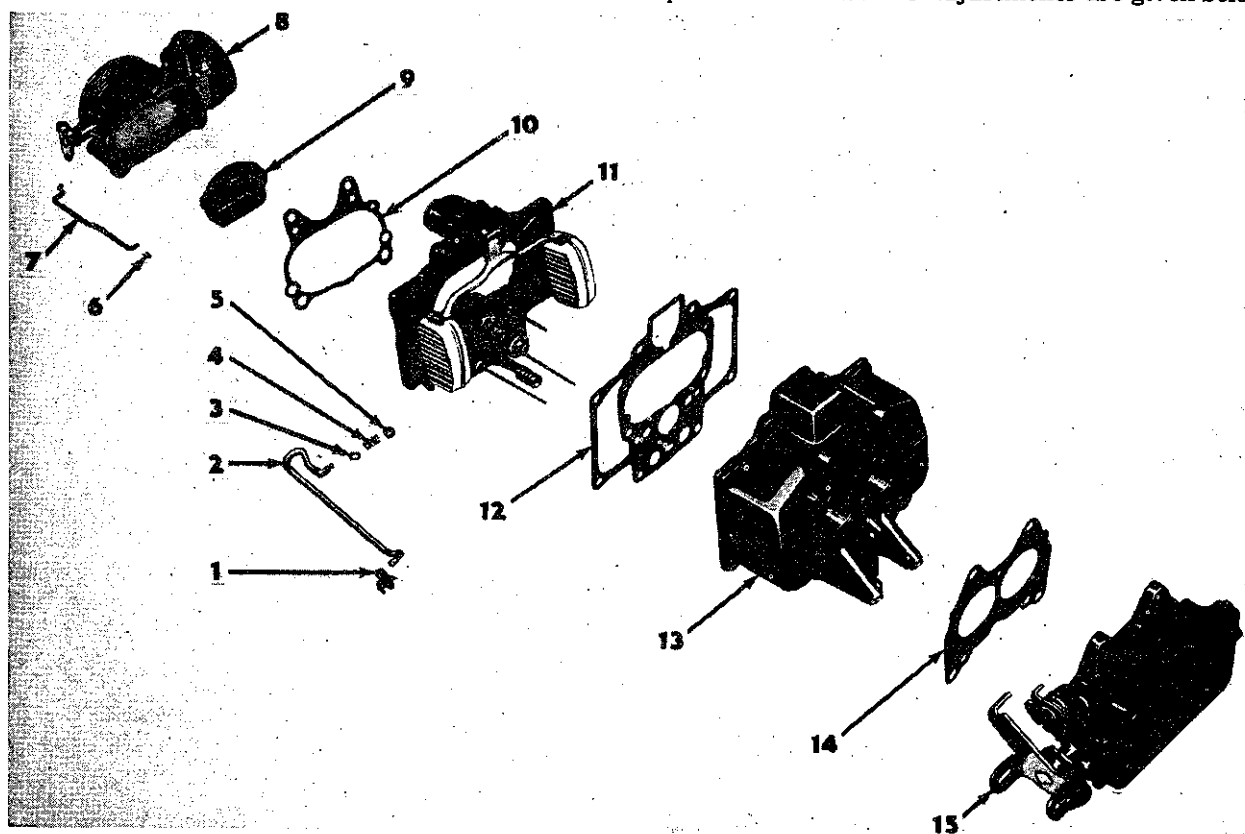


FIG. 139—WCD 2204S CARBURETOR

- 1—Throttle Connector Rod Retainer
- 2—Throttle Connector Rod
- 3—Connector Rod Washer
- 4—Connector Rod Spring
- 5—Connector Rod Spring Retainer
- 6—Pin Spring
- 7—Choke Connector Rod
- 8—Air Horn Assembly

- 9—Dust Cover
- 10—Air Horn Gasket
- 11—Bowl Cover Assembly
- 12—Bowl Cover Gasket
- 13—Body Assembly
- 14—Body Flange Gasket
- 15—Body Flange Assembly

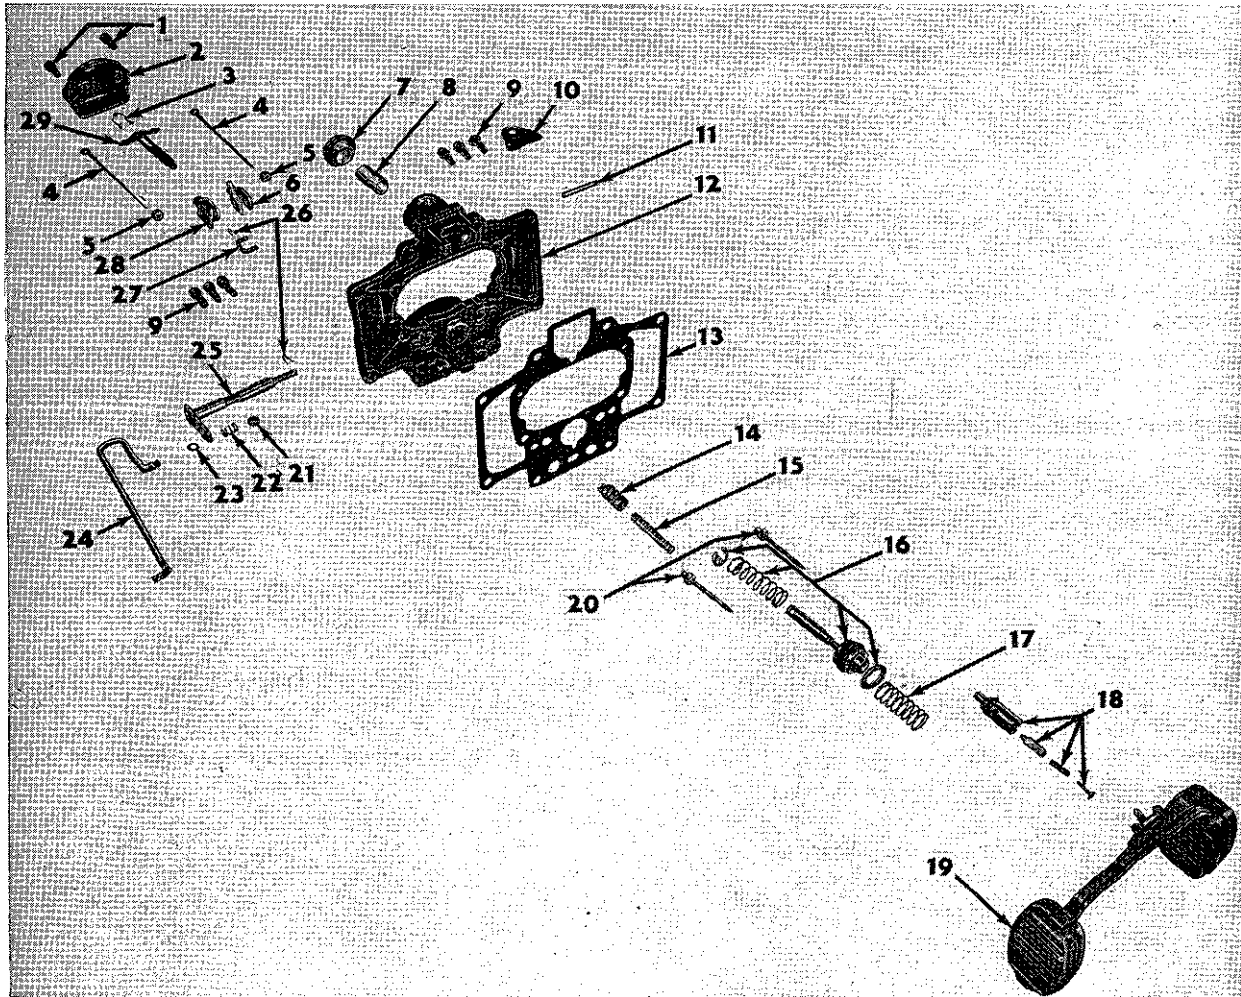


FIG. 140—2204S CARBURETOR BOWL COVER AND ATTACHING PARTS

- |                               |   |   |
|-------------------------------|---|---|
| 1—Attaching Screws            | 11—Float Lever Pin                                | 20—Low Speed Jets                                 |
| 2—Dust Cover                  | 12—Bowl Cover                                     | 21—Connector Rod Spring Retainer                  |
| 3—Metering Rod Spring         | 13—Bowl Cover Gasket                              | 22—Connector Rod Spring                           |
| 4—Metering Rods               | 14—Vacuum Piston                                  | 23—Washer   |
| 5—Metering Rod Washers        | 15—Vacuum Piston Spring                           | 24—Throttle Connector Rod                         |
| 6—Pump Arm and Screw Assembly | 16—Pump Plunger Rod, Spring and Retainer Assembly | 25—Pump Operating Lever and Countershaft Assembly |
| 7—Strainer Nut Assembly       | 17—Lower Pump Spring                              | 26—Pin Spring                                     |
| 8—Bowl Cover Strainer         | 18—Spring Loaded Needle and Seat Assembly         | 27—Pump Connector Link                            |
| 9—Bowl Cover Retaining Screws | 19—Float and Lever Assembly                       | 28—Metering Rod and Screw Assembly                |
| 10—Model Identification Tag   |   | 29—Vacuum Piston Link                             |

**F-24. Carter Carburetor 2204S—Disassembly**

- a. Remove air horn and climatic control assembly with all parts attached.
- b. Remove bowl cover with all parts attached.
- c. Remove body flange assembly and body flange gasket.
- d. Remove all parts from air horn and choke.
- e. Remove all parts from bowl cover.
- f. Remove all parts from carburetor body except nozzles. Do not, under any circumstances, attempt to remove nozzles from body casting.
- g. Remove all parts from body flange assembly. Check throttle shaft for wear, loose lever and throttle rod holes in lever for wear.
- h. Wash all parts in clean gasoline **except coil**

and housing assembly. Blow out all passages with compressed air and replace all worn or damaged parts.

**F-25. Carter Carburetor 2204S—Reassembly and Adjustments**

In these reassembly procedures, consult Figs. 139 thru 143.

To expedite reassembly, it is advisable to group all related parts before assembling.

**F-26. Idle Circuit**

- a. Install throttle shaft and lever assembly. Back out throttle lever adjusting screw.
- b. Install throttle valve. Small c in circle should



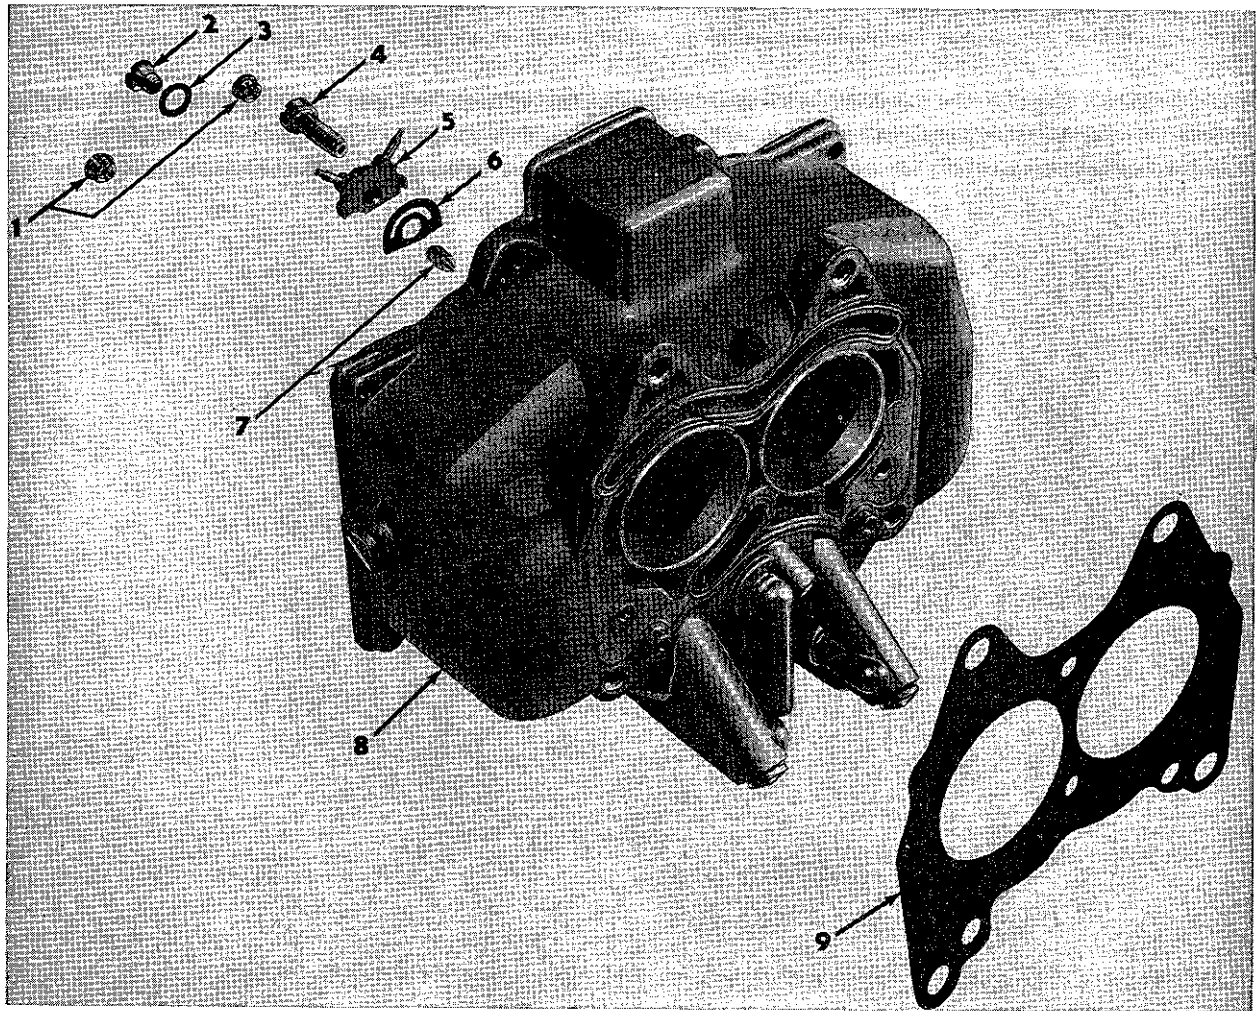


FIG. 141—2204S CARBURETOR BOWL AND ATTACHING PARTS

- 1—Main Metering Jets
- 2—Pump Passage Plug
- 3—Pump Passage Plug Gasket
- 4—Pump Jet Housing Attaching Screws
- 5—Pump Jet Housing

- 6—Pump Jet Housing Gasket
- 7—Pump Check Needle
- 8—Body
- 9—Body Flange Gasket

be toward idle port when viewing casting from manifold side. Center throttle valves by tapping lightly and hold in place with fingers before tightening screws. Always use new screws.

c. Install idle port rivet plugs, then idle adjustment screws and springs. Open adjustment screws 1 to 2 turns until a precise adjustment can be made with engine running.

d. Install low speed jet assemblies. No gaskets are used.

#### F-27. Pump Circuit

a. Install pump weight, new pump gasket, pump jet housing and pump jet housing screw.

b. Install pump spring and plunger assembly.

#### F-28. Float Circuit

a. Install bowl strainer gauze and nut and gasket assembly.

b. Install needle and seat assembly.

c. Install float and lever assembly.

#### F-29. Float Adjustments

Use Gauge T109-28

a. Lateral Adjustment. With bowl cover assembly inverted, bowl cover gasket removed and float tip resting on seated needle, place float gauge directly under float with notched portions of gauge fitted over edges of casting. Sides of floats should barely touch the vertical uprights of float gauge. Adjustment should be made by bending arms of floats.

b. Vertical adjustment. With float gauge in same position, floats should just clear the horizontal portion of gauge. Vertical distance between top of float and machined surface of casting must be  $\frac{3}{16}$ " [4.76 mm.]. Adjust by bending float arms.

c. Carefully remove float, install bowl cover gasket, then replace float.

#### F-30. High-speed Circuit

a. Assemble body flange assembly to body casting. Use new gasket.

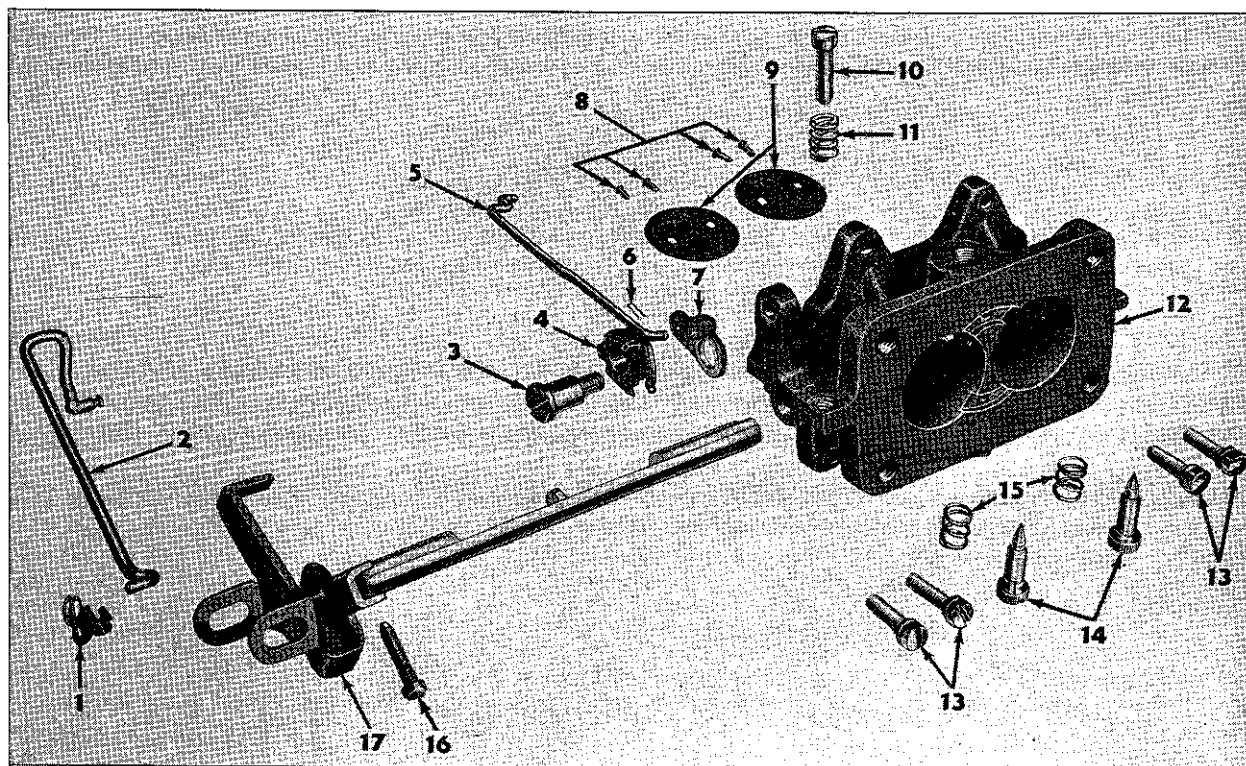


FIG. 142—2204S BODY FLANGE AND ATTACHING PARTS

- 1—Throttle Connector Rod Retainer
- 2—Throttle Connector Rod
- 3—Fast Idle Cam Attaching Screw
- 4—Fast Idle Cam
- 5—Choke Connector Rod
- 6—Pin Spring
- 7—Cam Trip Lever
- 8—Throttle Valve Attaching Screws
- 9—Throttle Valves

- 10—Throttle Lever Adjusting Screw
- 11—Throttle Lever Adjusting Screw Spring
- 12—Body Flange
- 13—Body Flange Attaching Screws
- 14—Idle Adjustment Screws
- 15—Idle Adjustment Screw Springs
- 16—Fast Idle Adjustment Screw
- 17—Throttle Shaft and Lever Assembly

b. Install metering rod jets. Jets must be installed snugly but not so tightly as to cause distortion.

c. Install vacuum piston link and metering rod spring. Start pump countershaft assembly.

d. Install pump arm and collar assembly, metering rod arm and screw assembly.

e. Install pump arm link on pump arm and plunger shaft.

f. Install vacuum piston and pin assembly, and vacuum piston spring on piston link.

g. Install body on bowl cover as assembled. Use new gasket.

h. Install throttle shaft lever and throttle connector rod. Do not forget throttle shaft washer.

i. Make pump adjustment. Adjust metering rods (See Par. F-33.).

j. Install nozzle passage rivet plugs.

### F-31. Pump Adjustment

Install pump connector link in outer hole (long stroke) of pump arm with ends extending away from countershaft arm. Back out throttle lever set screw until throttle valves seat in bores of carburetor. Be sure fast idle adjusting screw does

not hold throttle open. Place Universal pump travel gauge, T109-117S, inverted on edge of dust cover boss of bowl cover. Turn knurled nut of gauge until finger just touches upper end of plunger shaft. Number indicated on gauge should be 33. Hold the gauge vertical to insure correct reading. Adjust by bending the throttle connector rod at upper angle. Use Tool T109-213.

### F-32. Optional Adjustment

With the throttle valves seated in bores of carburetor, the distance from the top of the plunger shaft to the top of the dust cover boss should be  $1\frac{1}{32}$ " [8,73 mm.]. Adjust as mentioned above.

### F-33. Metering Rod Adjustment

The metering rods must be adjusted after the pump adjustment. No metering rod gauges are necessary. Procedure is as follows: With the throttle lever set screw backed out and throttle valves seated in the bores of carburetor, press down on vacuum link until metering rods bottom. With rods held in this position, revolve the metering rod arm until lip contacts the vacuum link. Hold in place and carefully tighten metering rod arm set screw.



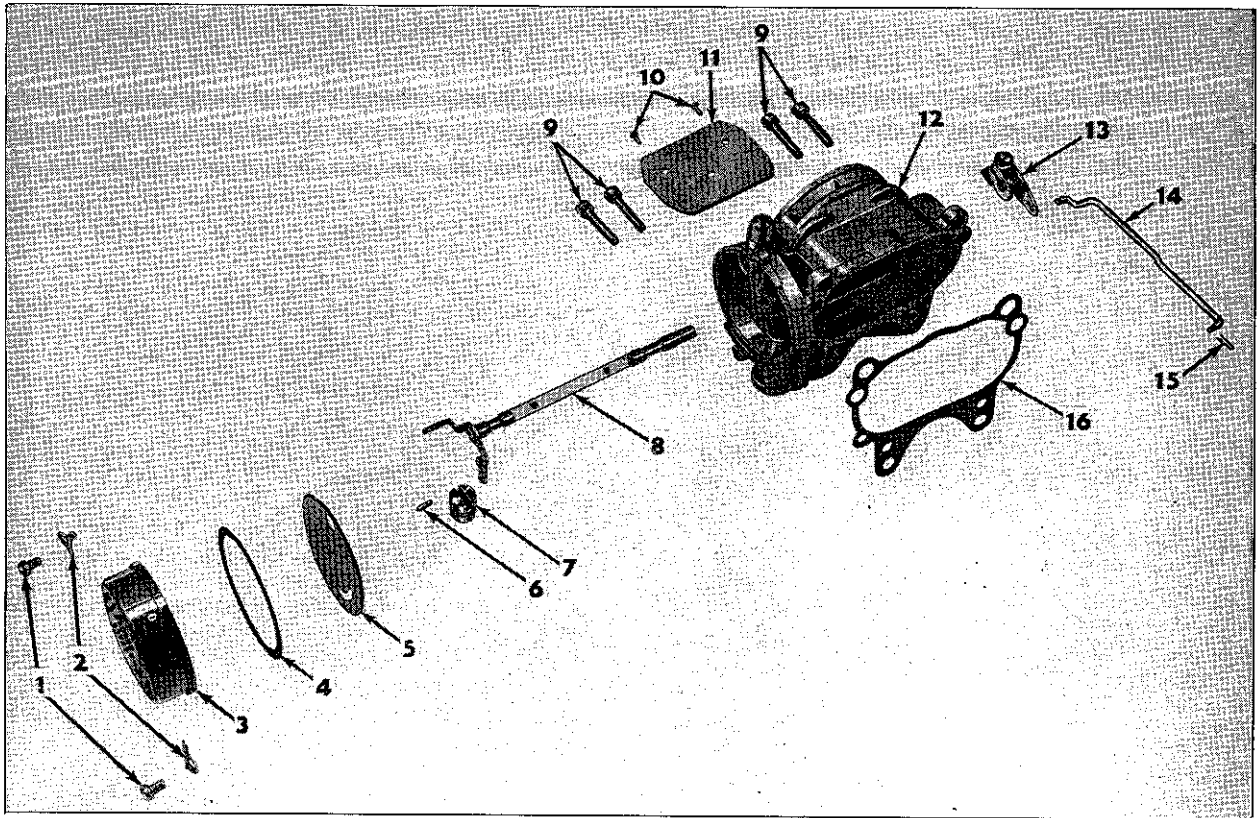


FIG. 143—2204S CARBURETOR AIR HORN AND ATTACHING PARTS

- 1—Coil Housing Attaching Screws
- 2—Coil Housing Retainers
- 3—Thermostatic Coil and Housing Assembly
- 4—Coil Housing Gasket
- 5—Choke Baffle Plate
- 6—Choke Piston Pin

- 7—Choke Piston
- 8—Choke Piston Lever, Link and Shaft Assembly
- 9—Air Horn Attaching Screws
- 10—Choke Valve Attaching Screws
- 11—Choke Valve

- 12—Air Horn
- 13—Choke Lever and Screw Assembly
- 14—Choke Connector Rod
- 15—Pin Spring
- 16—Air Horn Gasket

### F-34. Choke Circuit

- a. Install air horn casting.
- b. Install choke piston, lever, link and shaft assembly and piston.
- c. Install choke valve. Use new screws. Seat choke valve by tapping lightly. Hold in place with finger before tightening screws. Valve or shaft must not bind in any position.
- d. Install coil housing, baffle plate, and coil housing gasket.
- e. Install thermostatic coil and housing assembly. Install housing with indicator marks at bottom. Revolve housing clockwise and set indicator on index mark. Tighten attaching screws.
- f. Install choke lever and screw assembly and fast-idle connector rod.
- g. Install fast-idle cam assembly. Make fast-idle and unloader adjustments per Par. F-35.

### F-35. Fast Idle Adjustment

- a. Loosen choke lever clamp screw on choke shaft. Insert a .040" [1.01 mm.] feeler gauge (T109-193) between lip of fast idle cam and boss of flange casting. Hold choke valve tightly closed and take slack out of linkage by pressing choke lever toward closed position. Hold in place and tighten clamp screw.

- b. With choke valve tightly closed, tighten fast idle adjusting screw until there is .016" [0.406 mm.] opening (Gauge T109-29 may be used here) between throttle valve and bore of carburetor (side opposite idle port). Be sure fast-idle adjusting screw is on high step of cam while making this adjustment.

### F-36. Unloader Adjustment

With throttle wide open, there should be  $\frac{1}{8}$ " [3.17 mm.] (Gauge T109-36) clearance between the upper edge of choke valve and inner wall of air horn. Adjust by bending unloader lip on throttle shaft lever. Use bending Tool T109-41.

### F-37. Carter YF-2467S

#### Single-throat Carburetor

- L6-226 4WD Pickup after 55268-31178
- L6-226 4WD Stake after 55367-11162
- L6-226 4x4 UW after 54168-23628
- L6-226 4x4 UD after 54268-11543
- L6-226 4x2 UW after 54167-12034
- L6-226 4x2 UD after 54267-10508

YF-2467S is so similar to the Carter YF carburetor that no difficulty should be experienced with the disassembly, assembly or adjustment, if the instructions for the YF carburetor starting with Par. F-3 are followed.

The float adjustment and idle screw setting are performed in the same manner as explained in Par. F-5 except the distance between the top of float and the bowl cover (Fig. 132) should be  $\frac{3}{32}$ ". The idle screw setting (Fig. 133) is from  $1\frac{1}{2}$  to  $2\frac{1}{2}$  turns out for idle adjustment. For richer mixture turn screw out.

The metering rod jet size is .098" [2,48 mm.] in diameter.

Metering rod assembly and adjustment are the same as described in Par. F-9.

### F-38. FUEL AND VACUUM PUMPS

The fuel and vacuum pump used on L6-226 models is described starting with Par. F-46.

The fuel and vacuum pump used on F4-134 models is described starting with Par. F-39.

### F-39. Fuel Pump

All F4-134 Models.

The double-action fuel pump consists of a metal body, a rubber diaphragm, rocker arm, valves, springs, gaskets, and a glass sediment bowl complete with strainer. The metal pump body provides a working housing for the diaphragm, lever, valves, and springs. The fuel pump is mounted on the left side of the engine and is actuated by an eccentric on the camshaft. An air dome cast into the metal cover is to relieve the carburetor needle valve and the fuel pump diaphragm of excessive pressure when the carburetor needle valve is closed.

Tracing pump operation from the beginning, the camshaft eccentric forces the diaphragm up, overcoming spring pressure. This action creates a partial vacuum in the pump chamber. Fuel from the main tank is forced into the low-pressure pump chamber through the open disc valve. Incoming fuel supplies the force necessary to open the valve, which is little more than a one-way check valve. As the engine camshaft continues to rotate, spring pressure forces the diaphragm downward as the pump rocker arm follows the camshaft eccentric to its low spot. The downward action of the diaphragm closes the intake valve and forces fuel to the carburetor reservoir through the pump outlet valve. Both intake and outlet valves are one-way check valves opened and closed by fuel flow. No mechanical components are required in the control of valve operation.

Fuel is delivered to the carburetor only when the float needle is off its seat. When the fuel level in the carburetor bowl is high enough for the float to force the needle against its seat, pressure backs up to the fuel pump air dome and causes the diaphragm to stop pumping. In this position, the pump is said to be balanced because the pressure in the pump-to-carburetor line equals that of the diaphragm spring. In this way, fuel from the pump to the carburetor is always under pressure. The carburetor uses fuel, causing the float to drop and pull the carburetor needle valve off its seat. Pressure in the pump immediately drops as fuel is delivered to the carburetor reservoir. Almost instantaneously the diaphragm again starts operating to pump more fuel. The diaphragm can start and stop many times

in each mile of vehicle operation, but the pump actuating linkage is always in operation while the engine is running. The fuel pump incorporates a pulsator and pulsator chamber to dampen the effect of pump pressure pulsations on the carburetor needle valve. This prevents high fuel level in the reservoir that would result from the needle being jarred away from its seat. Also, operating economy would be affected because a high fuel level usually results in an over-rich mixture.

The actuating linkage has its own spring to ensure continuous contact of the lever to the camshaft eccentric.

### F-40. Sediment Bowl and Filtering Screen

Some AC models have a sediment bowl and filtering screen which is attached to the bottom of the pump by a wire clamp and thumb nut. The screen and sediment bowl should be cleaned at least twice yearly to prevent trouble due to a blocked screen or water freezing. The bowl should be washed and wiped dry and the screen dried and then cleaned with a stiff brush. When reassembling the bowl make certain that the cork gasket is not broken; reverse it and position it flat on the seat, then install the bowl and tighten the thumb nut securely. After cleaning, start the engine and carefully inspect the bowl for leakage.

### F-41. Disassembly

Remove the cover plate, gasket, and screen. Mark the two castings with a file to ensure positioning in the same relation upon assembly. Remove the screws attaching the fuel cover to the pump body. Remove the cover, diaphragm, and spring. Remove rocker arm pin, rocker arm, and rocker arm spring. Remove the valve plate screw and separate the valve plate retainer, valve gaskets, and valves.

### F-42. Cleaning and Inspection

Clean all parts in dry cleaning solvent and blow out with compressed air. Valves should not be removed from the valve housing assembly. Check all parts to see that they have not been cracked or broken and that screw threads have not been stripped or cross threaded. Refer to Par. F-54 for fuel pump testing.

### F-43. Assembly

Install valve gaskets, valves, valve plate retainer and secure them with the valve plate retainer screw. Make sure that the inlet and outlet valves are in their proper positions. Place the diaphragm spring retainer in position on the diaphragm pull rod and install diaphragm spring.

Position the diaphragm assembly in pump body and attach the cover to pump body, with file marks aligned, with the attaching screws. Do not draw the screws up tight. Install rocker arm spring, rocker arm spacers, rocker arm and rocker arm pin. With rocker arm positioned on the diaphragm rod, draw the pump body screws up evenly and securely. Install the filter screen, cork gasket and sediment bowl or cover plate and secure them firmly with the thumb screw on the bowl clamp or cover plate screw.

**F-44. Vacuum Pump**

All F4-134 Models.

The double-action fuel pump resembles two single-action pumps placed one above the other. A single fuel pump rocker arm actuates the two separate diaphragms. One diaphragm is part of the fuel delivery pump and operates as described in Par. F-39. The other diaphragm is part of the vacuum pump and operates as described here.

As the actuating lever forces the diaphragm upward against spring pressure, air is forced through the outlet port into the engine's intake manifold. On the return stroke, spring pressure forces the diaphragm downward, creating a partial vacuum and opening the inlet valve. In this manner, air is pumped out of the windshield wiper motor and into the intake manifold. When the wiper motor is shut off, manifold vacuum holds the diaphragm against its spring so that the full motion of the actuating lever is not accompanied by a complete up-and-down motion of the diaphragm.

When the windshield wiper motor is turned on, but manifold vacuum is greater than the vacuum created by the booster pump, air flows from the wiper motor through both valves of the vacuum booster. As manifold vacuum drops off as a result of the engine operating under low speed and high load, the vacuum created by the vacuum booster will be greater than engine intake manifold vacuum and the pump will operate the wiper motor when the wiper control switch is turned on.

**F-45. Disassembly**

Unscrew cover plate cap screw and remove cover plate, gasket, filter screen retainer and filter screen from vacuum pump body. Mark the two castings with a file and then unscrew the attaching screws from the vacuum pump body. Separate the vacuum pump body from the fuel pump body. Remove the vacuum diaphragm and spring.

Unscrew the valve plate screw and remove the valve plate retainer, the valves and valve gaskets. Wash all parts in cleaning solvent and blow out with compressed air. Inspect all parts and replace those worn or damaged, especially the gaskets. Assemble in reverse order of disassembly.

**F-46. Fuel and Vacuum Pump**

All L6-226 Models

The fuel pump is mounted on the lower left side of the engine block. It is operated by its cam lever contacting an eccentric on the engine camshaft. Upward movement of the pump diaphragm is accomplished by cam rotation against the lever which pulls the diaphragm upward and compresses the diaphragm spring. This action induces a low pressure within the fuel chamber, allowing fuel to be forced through the intake valve from the supply tank. As the cam continues to rotate, the cam lever allows the diaphragm spring to exert pressure on the diaphragm. This action forces fuel from the fuel chamber through the discharge valve to the carburetor.

The cam lever is of one piece construction, hinged by a full floating pin. One end of the lever contacts the camshaft eccentric and the other end is con-

nected to the diaphragm shaft so that camshaft action on the lever pulls the diaphragm up, but downward movement of the diaphragm is accomplished only through spring action. The pump delivers the fuel to the carburetor only when the fuel pressure in the outlet line is less than the pressure maintained by the diaphragm spring. If fuel is not needed in the carburetor, the carburetor needle valve is closed by the buoyance of the float and the pump builds up pressure until it overcomes the tension of the diaphragm spring. This stops the flow of fuel from the pump.

Two air domes are built integrally in the pump, an intake air dome and discharge air dome. A small pocket of air is maintained in the intake side of the pump body. This air is decompressed during the intake stroke, allowing atmospheric pressure on the fuel in the supply tank to force fuel to the pump in a steady flow. This provides a ready supply of fuel to the intake valve at all times. Another pocket of air built into the discharge side of the pump body is sealed from the fuel by a second diaphragm. This eliminates any possibility of air being absorbed by the outgoing fuel. The discharge air dome dampens pulsations in fuel pressure and allows the pump to provide a more constant supply of fuel during the pump intake cycle.

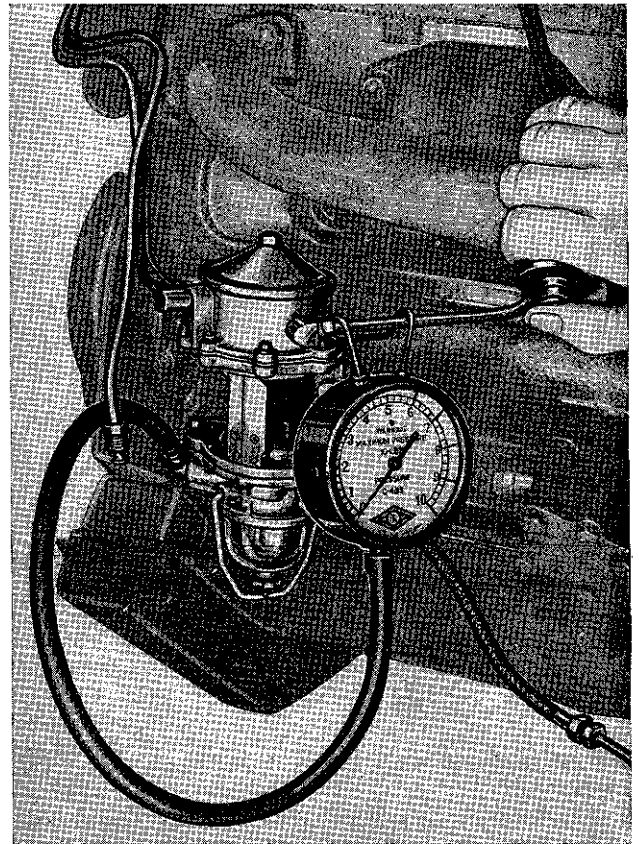


FIG. 144—FUEL PUMP PRESSURE TEST

**F-47. Disassembly**

Before disassembly, the outside of the pump should be washed with dry cleaning solvent and blown

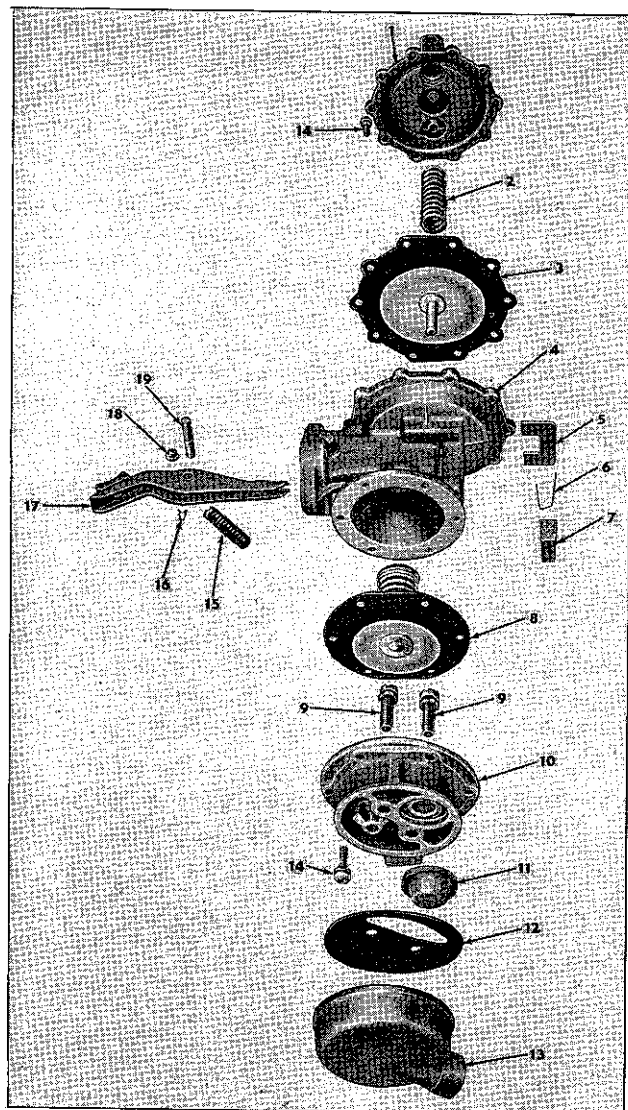


FIG. 145—FUEL AND VACUUM PUMP—  
L6-226 MODELS

- 1—Vacuum Valve Housing
- 2—Vacuum Diaphragm Spring
- 3—Vacuum Diaphragm
- 4—Pump Body
- 5—Breather Vent Plate
- 6—Filler Vent Breather Retainer Spring
- 7—Breather Vent Filler
- 8—Pump Diaphragm
- 9—Housing Cover Screw and Washer
- 10—Valve Housing
- 11—Fuel Strainer
- 12—Outlet Air Dome Diaphragm
- 13—Valve Housing Cover
- 14—Valve Housing Screw and Washer
- 15—Cam Lever Return Spring
- 16—Pin Retainer
- 17—Cam Lever and Shoe
- 18—Cam Lever Shaft Seal Plug
- 19—Cam Lever Pin

dry with compressed air to remove all dirt and grease.

- a. Mark pump body and valve housing with a file or hacksaw for reassembly in the same relative position.
- b. Remove cam lever return spring, Fig. 145, cam lever pin retainer, cam lever pin plug, and cam lever pin. The cam lever will now slide freely out of pump body.

c. Remove valve housing attaching screws. Separate the pump housing from the valve housing. Remove diaphragm assembly.

d. Remove the two cover attaching screws. Separate valve housing assembly from the valve housing cover. Remove outlet air dome diaphragm.

#### F-48. Cleaning and Inspection

Clean all parts in dry cleaning solvent and blow out with compressed air. Valves should not be removed from the valve housing assembly. Check all parts to see that they have not been cracked or broken and that screw threads have not been stripped or cross threaded. Refer to Par. F-54 for fuel pump testing.

#### F-49. Assembly

a. Assemble outlet air dome diaphragm on valve housing assembly. Install valve housing cover. The strainer should be installed before installing cover. Install attaching screws.

b. Install diaphragm assembly in pump housing.

c. Install valve housing assembly on pump housing with marks aligned. Start screws but do not tighten.

d. Install cam lever, cam lever pin, cam lever pin plug and cam lever pin retainer in pump body.

e. Flex diaphragm assembly to full-up position. Hold in place while tightening valve housing, attaching screws. Install cam lever return spring.

#### F-50. Vacuum Pump

All L6-226 Models

The vacuum section of the pump serves as a booster to the intake manifold vacuum to provide uniform windshield wiper operation at all engine speeds and loads. The booster diaphragm shaft is not attached to the cam lever. It is merely pushed up during vacuum pump operation. The vacuum booster may be serviced as a separate unit. See Fig. 145.

Under normal engine operation the vacuum booster diaphragm is held down by intake manifold vacuum. The booster operates only when needed (low intake manifold vacuum caused by acceleration, high speed or engine load). The decrease in vacuum in the booster air chamber allows the spring to push the diaphragm up. This induces sufficient vacuum in the air chamber to continue wiper operation. The return of the diaphragm is accomplished by the cam lever pushing up on the end of the diaphragm shaft.

#### F-51. Disassembly

a. Mark castings at vacuum diaphragm with file.

b. Remove the vacuum valve housing cover attaching screws Fig. 145, No. 14, and separate the vacuum valve housing cover No. 1, vacuum diaphragm spring (2) and the diaphragm assembly (3).

c. Pry the vacuum oil seal and breather vent plate (5) from body casting.

d. Remove the breather vent filter retaining spring (6) and the filter (7) from vacuum pump body.

#### F-52. Cleaning and Inspection

Wash the body casting and the valve cover assembly in cleaning solvent. Blow out with com-

pressed air. A new diaphragm assembly, oil seal, or vent filter must not be immersed in gasoline or cleaning solvent. Special care should be exercised when cleaning the valves. Do not attempt to remove the valves from the cover assembly.

#### F-53. Assembly

Assemble the parts in reverse order of disassembly. When installing the breather vent plate, stake it with a small chisel or punch. Align the file marks on the castings and tighten the diaphragm screws evenly and securely.

#### F-54. Fuel Pump Testing

Four tests are presented in following paragraphs to test for proper operation of the fuel pump. In addition, check the following:

- a. Check for secure mounting of the fuel pump. The rocker arm may be working the entire pump up and down, rather than just the pump diaphragms.
- b. Remove and clean the fuel sediment bowl.
- c. Check all fuel lines.

#### F-55. Volume Check

To measure fuel pump capacity (amount of fuel delivered in a given time) disconnect the pump-to-carburetor line at the carburetor end. Place the open end of the line in a suitable container. Start the engine and check as indicated in Par. C-14. Delivery should be as specified in Par. C-14.

#### F-56. Pressure Check

To measure fuel pump pressure (force of fuel delivery) disconnect the pump-to-carburetor line at the carburetor end. Plug a pressure gauge into the open end of this line. Start the engine and operate at normal idle speed. Pressure should be  $2\frac{1}{2}$  to  $3\frac{3}{4}$  psi. [0,716 a 0,264 kg-cm<sup>2</sup>] at 1800 rpm. and at 16" [406 mm.] above the outlet.

#### F-57. Vacuum Check

To measure fuel pump vacuum (pull of the pump at the inlet side) disconnect the pump-to-fuel-tank line at the fuel pump. Attach a vacuum gauge to the fuel pump inlet. Start the engine, accelerate to specified speed, and hold this engine speed while taking a gauge reading. Permissible gauge reading is 8" [203 mm.] of mercury [Hg] at 1200 rpm. and  $10\frac{1}{2}$ " [267 mm.] at 1800 rpm.

#### F-58. Vacuum Booster Check

To test the condition of the vacuum booster pump, disconnect both inlet and outlet lines at the pump. Attach a vacuum gauge to the windshield wiper connection at the pump. Start the engine, accelerate to 2000 rpm., and hold this engine speed while taking a gauge reading. Permissible gauge reading is 10" to 14" [254 a 356 cm.] of mercury [Hg].

#### F-59. Accelerator and Linkage

The accelerator linkage is properly adjusted when the vehicle leaves the factory however, in time component parts will become worn and require adjustment to maintain a smooth even control of engine speed.

Adjust the length of the throttle rod so that when the carburetor throttle valve is wide open the accelerator treadle will just strike the toe board or the overdrive kick-down switch. Tighten the lock nuts on the adjusting block. This adjustment is important on vehicles equipped with overdrive transmissions. See "Transmission" section.

#### F-60. Air Cleaner

Servicing of the air cleaner is properly taken care of as part of the periodic lubrication and servicing of the vehicle. For this reason, air cleaner servicing information is given in the Lubrication Section. Refer to and follow the instructions given there.

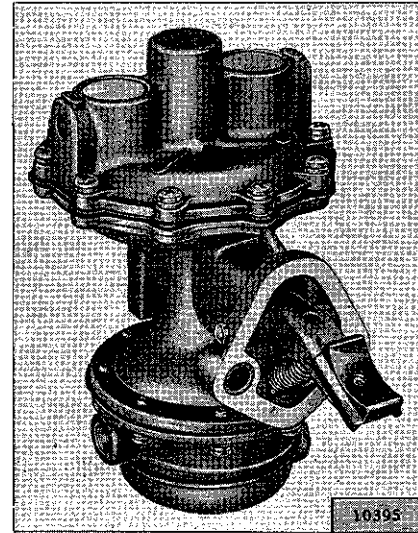


FIG. 146—FUEL AND VACUUM PUMP —  
L6-226 MODELS

#### F-61. Fuel Tank Cap

A pressure type fuel tank filler cap is used on all models. This is necessary to prevent fuel leakage from the cap vent opening when the vehicle is on a side slope. Two spring loaded relief valves which open when venting is required are built into the cap. The pressure valve opens as  $1\frac{1}{2}$  to  $2\frac{1}{2}$  psi. [0,105 a 0,176 kg-cm<sup>2</sup>] and the vacuum valve at  $\frac{3}{4}$  psi. [0,053 kg-cm<sup>2</sup>]. Should the pressure valve fail to open, pressure in the tank may force fuel by the carburetor inlet valve causing flooding. Failure of the vacuum valve may prevent flow of fuel to the carburetor. Should the valves fail to vent, install a new cap.

## FUEL SYSTEM SPECIFICATIONS

MODEL:	F4-134	L6-226
Carburetor:		
Make.....	Carter	Carter
Model.....	YF 951 SA	YF 2467 S
Flange Size.....	1 1/4" [3,17 cm.]	1 1/2" [3,81 cm.]
Primary Venturi.....	1 1/2" [8,73 mm.]	1 1/2" [8,73 mm.]
Secondary Venturi.....	1 1/4" [17,46 mm.]	1 1/4" [17,46 mm.]
Main Venturi.....	1 1/4" [3,17 cm.]	1 1/2" [3,33 cm.]
Float Setting.....	5/16" [7,93 mm.]	9/32" [7,13 mm.]
Gasoline Intake Needle Seat.....	No. 48 (.076") drill [1,93 mm.]	No. 46 (.081") drill [2,057 mm.]
Low Speed Jet Tube:		
Jet.....	No. 70 (.028") drill [0,711 mm.]	No. 70 (.028") drill [0,711 mm.]
By-Pass.....	No. 56 (.0465") drill [1,181 mm.]	No. 51 (.067") drill [1,701 mm.]
Idle Bleed.....	No. 56 (.0465") drill [1,181 mm.]	
Economizer.....	No. 54 (.055") drill [1,397 mm.]	No. 54 (.055") drill [1,397 mm.]
Idel Well to Bowl Bleed.....	No. 73 (.024") drill [0,609 mm.]	
Idle Port.....	.184" x .030" [5,67 x 0,76 mm.]	.190" x .040" [4,82 x 1,01 mm.]
Lower Port (for Idle Screw Adjustment)...	.0615" to .0655" dia. [1,56 a 1,66 mm.]	.0615" to .0655" dia. [1,56 a 1,66 mm.]
Set Idle Adjustment Screw.....	3/4 to 1 1/4 turns open	1 to 2 1/2 turns open
Main Nozzle Antipercolator		
Well Vent in Plug.....	No. 74 (.0225") drill [0,571 mm.]	No. 75 (.021") drill [0,533 mm.]
Metering Rod.....	.07325" x .0655" x .057" x .04725" [1,860 x 1,663 x 1,447 x 1,200 mm.]	.079" x .069" x .53" [2,006 x 1,752 x 1,346 mm.]
Metering Rod Jet.....	.0935" dia. [2,375 mm.]	.098" dia. [2,48 mm.]
Accelerating Pump:		
Pump Jet.....	No. 68 (.031") drill [0,787 mm.]	No. 70 (.028") drill [0,711 mm.]
Intake Passage.....	No. 72 (.025") drill [0,635 mm.]	
Intake Ball Check Seat.....		No. 40 (.098") drill [2,48 mm.]
Discharge Check Seat.....	No. 42 (.0935") drill [2,375 mm.]	No. 42 (.0935") drill [2,375 mm.]
Vacuum Restriction.....	No. 55 (.052") drill [1,320 mm.]	No. 55 (.052") drill [1,320 mm.]
Vacuum Passage (Diaphragm Bleed)...	No. 65 (.035") drill [0,889 mm.]	No. 56 (.0465") drill [1,181 mm.]
Pump Bleed.....		No. 75 (.021") drill [0,533 mm.]
Vacuum Spark Port.....	.054" to .056" dia. [1,371 a 1,422 mm.]	.125" x .041" [3,17 x 1,04 mm.]

MODEL	F4-134		L6-226	
Carburetor:				
Make.....	Carter	Carter	Carter	Carter
Model.....	YF-951S or SA	WGD-2052SA	WCD-2204S	YF-2467S
Flange.....	1 1/4" [3,17 cm.]	1 1/4" [3,17 cm.]	1 1/4" [3,17 cm.]	1 1/2" [3,81 cm.]
Primary Venturi.....	1 1/2" [8,73 mm.]	1 1/2" [8,73 mm.]	1 1/2" [8,73 mm.]	1 1/2" [8,73 mm.]
Main Venturi.....	1 1/4" [3,17 cm.]	1 1/4" [3,17 cm.]	1 1/4" [3,17 cm.]	1 1/2" [3,81 cm.]
Float Setting.....	5/16" [7,93 mm.]	See note	5/16" [4,76 mm.]	9/32" [7,13 mm.]
Fuel Intake.....	Vertical Spring Loaded	Vertical Spring Loaded	Vertical Spring Loaded	Vertical Spring Loaded
Idle Air Bleed.....	No. 56 Drill	No. 54 Drill	No. 55 Drill	No. 55 Drill
Idle Port.....	.184" x .030" [4,6 x 0,762 mm.]	.160" x .030" [4,06 x 0,762 mm.]	.156" x .030" [3,96 x 0,762 mm.]	.190" x .040" [4,82 x 1,01 mm.]
Low Speed Jet.....	No. 70 Drill	No. 70 Drill	No. 68 Drill	No. 70 Drill
Metering Rod.....	No. 75-806	No. 75-901	No. 75-1129	No. 75-1279
Jet Size.....	.096" [2,43 mm.]	.086" [2,18 mm.]	.086" [2,18 mm.]	.098" [2,48 mm.]
Accelerating Pump:				
Discharge Jet.....	No. 72 Drill	No. 74 Drill	No. 72 Drill	No. 70 Drill
Intake Ball Check.....	No. 72 Drill	No. 40 Drill	.115"-120" [2,9-3,0 mm.]	No. 40 Drill
Discharge Check.....		No. 50 Drill	No. 50 Drill	
Vacuum Restriction.....	No. 55 Drill			No. 55 Drill
Diaphragm Bleed.....	No. 65 Drill			No. 56 Drill
Vacuum Spark Port.....	.055" [1,39 mm.]	.045" [1,14 mm.]	.063" [1,6 mm.]	.125" x .041" [3,17 x 1,04 mm.]

NOTE: WGD-2052SA with solid needle: 9/32" [7,15 mm.]; with spring loaded needle: 7/32" [5,56 mm.].

	F4-134	L6-226
Air Cleaner:		
Make.....	Donaldson	AC
Model.....	E-6532	1552707
Type.....	Oil Bath	Oil Bath
Oil Capacity.....	1 1/4 pts. [0,591 ltrs.]	1 pt. [0,473 ltrs.]
Fuel Pump:		
Make.....	AC	Carter
Model.....	5594080	M957S
Pressure.....	2 1/2-3 3/4 lbs. @ 16" above outlet @ 1800 rpm. [0,176 a 0,264 kg-cm <sup>2</sup> @ 40,6 cm.]	3 1/2-5 1/2 lbs. @ 16" above outlet @ 1800 rpm. [0,246 a 0,385 kg-cm <sup>2</sup> @ 40,6 cm.]
Vacuum.....	10 1/2" Hg @ 1800 rpm. [26,67 cm.]	10 1/2" Hg @ 1800 rpm. [26,67 cm.]
Fuel Tank:		
Capacity.....	15 gals. [56,7 ltr.]	15 gals. [56,7 ltr.]
Location.....	Right Side Rear	Right Side Rear
Fuel Filter:		
Type.....	Filter Spool	Filter Spool
Location.....	Inside Fuel Tank	Inside Fuel Tank



## EXHAUST SYSTEM

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Exhaust Manifold Heat Control Valve.....	G-4	Manifold — L6-226.....	G-3
Heat Control Valve Overhaul.....	G-5	Muffler, Exhaust Pipe, Tail Pipe.....	G-6
Manifold — F4-134.....	G-2		

**G-1. GENERAL**

The exhaust system includes the manifolds, exhaust pipe, muffler, and tail pipe. Separate paragraphs describe the manifolds for F4-134 models and for L6-226 models with single- and double-throat carburetors.

models used a double-throat carburetor, later models used a single-throat carburetor. For effective serial numbers see Par. F-2. An exhaust manifold heat control valve as shown in Fig. 150 was added on later models and is described in separate paragraphs.

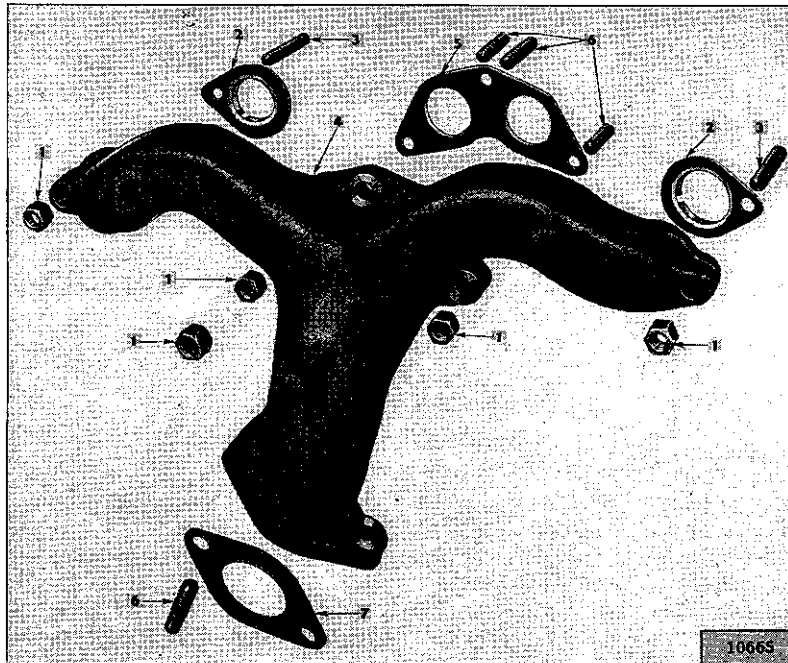


FIG. 147—MODEL F4-134  
EXHAUST MANIFOLD

- 1—Stud Nut
- 2—End Gasket
- 3—Stud
- 4—Manifold
- 5—Center Gasket
- 6—Stud
- 7—Gasket

**G-2. Manifolds****All F4-134 Models**

On F4-134 engines, the exhaust and intake manifolds are separate units. The intake manifold is cast as an integral part of the cylinder head and is completely water jacketed. This construction transfers heat from the cooling system to the intake riser and assists in vaporizing the fuel when the engine is cold.

With this construction, there is no heat control valve on the F-head engine and the only function of the exhaust manifold is to gather and direct the exhaust gases into the exhaust pipe. When assembling the manifold, Fig. 147, to the cylinder block new gaskets should be installed and the nuts drawn up evenly until they are tight to avoid leakage. Torque wrench reading 29 to 35 lb.-ft. [4,01 a 4,84 kg.-m.].

**G-3. Manifolds****All L6-226 Models.**

The exhaust manifolds used on Model L6-226 engines are shown in Fig. 148 and 149. Earlier

When installing manifolds use new gaskets. Have mating surfaces clean and smooth. If stud threads are badly coated or damaged clean up with a thread die, or replace studs. Proceed as follows:

a. Using a new gasket, assemble the intake and exhaust manifolds. Torque nuts securely 18 to 23 lb.-ft. [2,5 a 3,1 kg.-m.].

b. Place new manifold gasket and the manifold carefully over studs against cylinder block. Place clamps or washers over studs and start stud nuts. Starting at center and working toward ends tighten nuts carefully. Torque to 30 to 35 lb.-ft. [4,1 a 4,8 kg.-m.].

**G-4. Exhaust Manifold Heat Control Valve****Some L6-226 engines**

To improve the warm-up characteristics of the L6-226 engine, an exhaust manifold heat control valve was added in production and a kit is available for installing the valve on older engines. To assist in obtaining complete fuel vaporization when the cold engine is started, the heat control valve is open to direct exhaust gases through a chamber

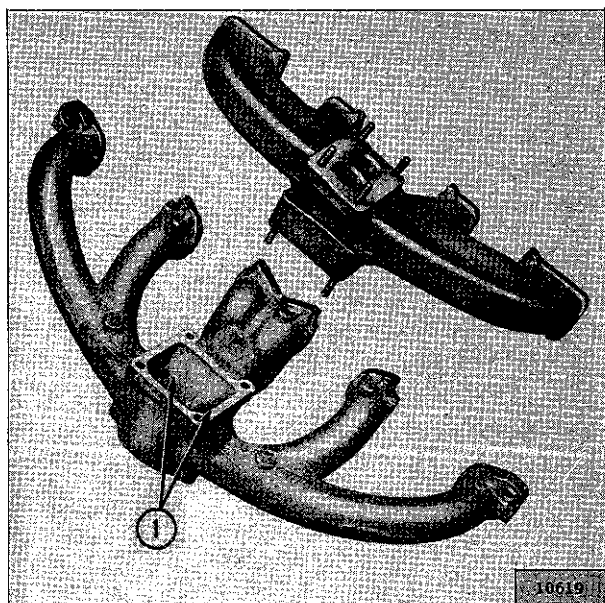


FIG. 148—MODEL L6-226 INTAKE AND EXHAUST MANIFOLD (Double-throat Carburetor)  
1—Heat Chamber Holes

surrounding a section of the intake manifold. As the engine warms up, a bimetallic element (thermostatic spring) that is sensitive to exhaust manifold temperature allows the heat control valve to close automatically and stop the flow of exhaust gases to the chamber.

The manifold heat control valve must operate freely without binding or excessive play. The thermostatic spring must hold the valve in open position to direct the hot exhaust gases to the intake manifold heat chamber when manifolds are cold. Each time the valve bushings are lubricated, proper operation of the valve should be checked as described in Par. B-28.

#### G-5. Heat Control Valve Overhaul

Worn bushings, misaligned shaft, or a broken or warped valve will require complete disassembly of the unit. Procedure:

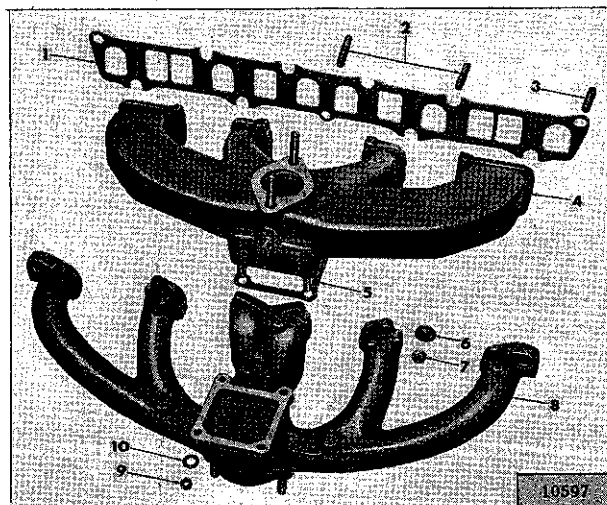


FIG. 149—MODEL L6-226 INTAKE AND EXHAUST MANIFOLD (Single-throat Carburetor)

- |                   |                    |
|-------------------|--------------------|
| 1—Gasket          | 6—Washer           |
| 2—Stud            | 7—Nut              |
| 3—Stud            | 8—Exhaust Manifold |
| 4—Intake Manifold | 9—Nut              |
| 5—Gasket          | 10—Washer          |

a. Loosen the counterweight screw. Remove the counterweight key and thermostatic spring from the valve shaft.

b. The valve is welded to the shaft. Cut the shaft and valve with an acetylene cutting torch at two points and remove.

c. Drive the shaft bushings out of the manifold and discard the bushings.

d. Press new shaft bushings into the manifold. To provide proper clearance for the valve, the distance between the inner ends of the two bushings must be between the limits of 2.902" to 2.910" [7,371 a 7,391 cm.]. Line ream the bushings .3080" to .3125" [7,823 a 7,937 mm.] inside diameter. Use a new shaft to check alignment of the bushings.

e. Press the flared washer (flared side facing out) on the slot end of the shaft to a point  $\frac{1}{32}$ " [0,79 mm.] past the slot.

f. Insert the shaft in the bushing and position

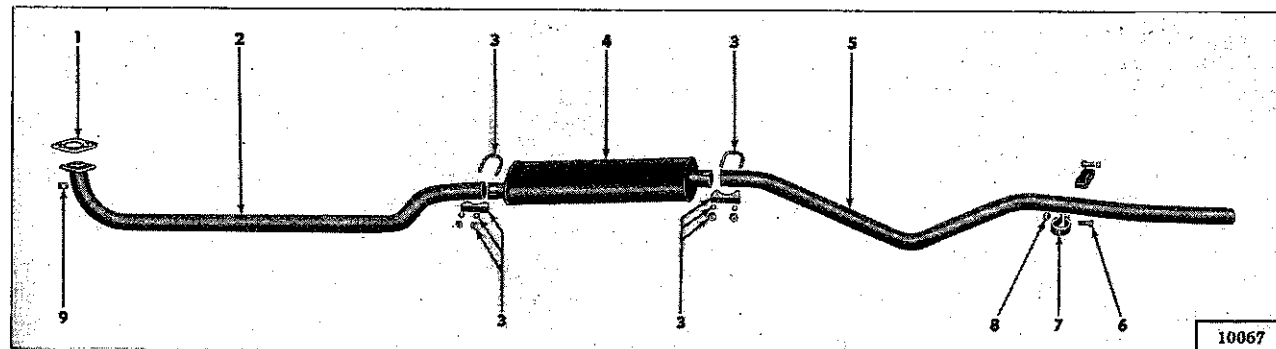


FIG. 150—EXHAUST PIPE, MUFFLER, AND TAIL PIPE  
(Typical for L6-226 Models)

- |                |         |
|----------------|---------|
| 1—Gasket       | 6—Bolt  |
| 2—Exhaust Pipe | 7—Clamp |
| 3—Clamp        | 8—Nut   |
| 4—Muffler      | 9—Nut   |
| 5—Tail Pipe    |         |



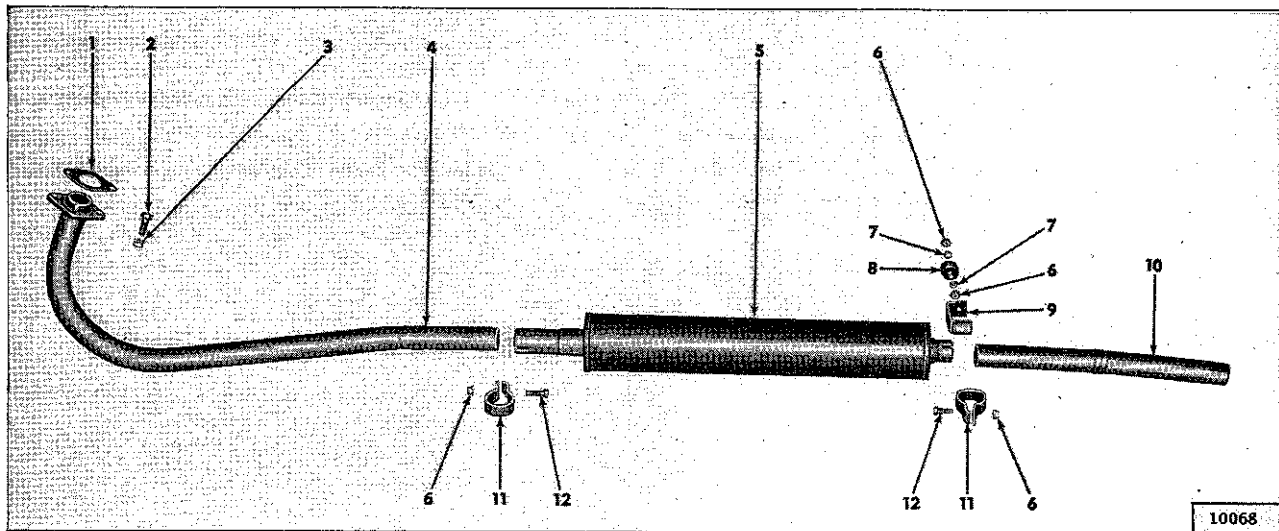


FIG. 151—EXHAUST PIPE, MUFFLER, AND TAIL PIPE  
(Typical for F4-134 Models)

- 1—Gasket
- 2—Bolt
- 3—Nut
- 4—Exhaust Pipe
- 5—Muffler
- 6—Nut

- 7—Washer
- 8—Insulator
- 9—Support Strap
- 10—Tail Pipe
- 11—Clamp
- 12—Bolt

the valve on the shaft using the tabs on the valve and the flat on the shaft to obtain correct location.

**g.** Arc weld the valve to the shaft. After welding, shaft and valve must rotate freely.

**h.** Rotate the valve until the slot in the end of the shaft is in a vertical position and the lower end of the valve contacts the inside of the manifold on the engine side. Install the spring with 180° wind-up with the inner tang of the spring in the slot in the shaft and with the outer tang bearing on the spring stop. The spring stop is a boss cast onto the intake manifold.

**i.** Install the counterweight key, counterweight, bolt, and nut. Tighten the nut.

**j.** Manually operate the valve to check for freedom of movement with absence of any binding. Be sure the valve in normal cold position (open) will direct hot gases into the heat chamber of the intake manifold.

#### G-6. Exhaust Pipe, Muffler, Tail Pipe

This system should be checked periodically and all loose or broken hangers and supports should be tightened or replaced. Also check for any dents or restrictions in the tail pipe or muffler as these can cause faulty engine performance.

Typical exhaust systems from the exhaust manifold to the tail pipe and including all attaching parts are shown in Fig. 150 and 151.

On Model F4-134 4x2 a change of muffler was made in production. The later muffler is 30<sup>5</sup>/<sub>8</sub>" [778 mm.]

long and the earlier muffler was 32" [813 mm.] long. The difference in length does not affect the interchangeability of the two mufflers. The newer muffler is recommended for all replacements.

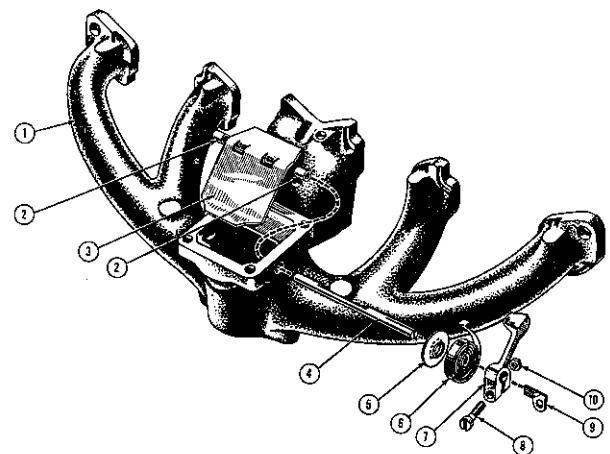


FIG. 152—L6-226 ENGINE  
EXHAUST MANIFOLD WITH HEAT CONTROL VALVE

- 1—Exhaust Manifold
- 2—Bushing
- 3—Valve
- 4—Shaft
- 5—Special Washer
- 6—Thermostatic Spring
- 7—Counterweight
- 8—Screw
- 9—Key
- 10—Nut

10287

## EXHAUST SYSTEM SPECIFICATIONS

	F4-134	L6-226
Muffler Type.....	Reverse Flow	Reverse Flow
Exhaust Pipe:		
Diameter.....	1 $\frac{5}{8}$ " [4,12 cm.]	2" [5,08 cm.]
Wall Thickness.....	.050" [1,27 mm.]	.065" [1,65 mm.]
Tail Pipe:		
Diameter.....	1 $\frac{1}{2}$ " [3,81 cm.]	2" [5,08 cm.]
Wall Thickness.....	.036" [0,914 mm.]	.049" [1,244 mm.]

## COOLING SYSTEM

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Antifreeze Solution.....	H-9	Hoses.....	H-8
Cooling System		Pressure Cap.....	H-4
Draining.....	H-3	Radiator.....	H-6
Filling.....	H-2	Thermostat.....	H-7
Cylinder Block.....	H-5	Water Pump — L6-226.....	H-15
Fan Belt.....	H-19	Water Pump — F4-134.....	H-11
Heat Indicator.....	H-10		

## H-1. GENERAL

The satisfactory performance of an engine is controlled to a great extent by the proper operation of the cooling system. The engine block is full length water jacketed which prevents distortion of the cylinder walls. Directed cooling and large water holes, properly placed in the cylinder head gasket cause more water to flow past the valve seats (which are the hottest parts of the block) and carry the heat away from the valves, giving positive cooling of valves and seats.

On the F-head engines, the intake manifold is cast as an integral part of the cylinder head and is completely water jacketed. This construction transfers heat from the cooling system to the intake riser and assists in vaporizing the fuel when the engine is cold.

It is recommended that the cooling system be flushed twice a year, preferably in the fall before antifreeze is added and in the spring when the antifreeze is drained.

Reverse flushing will aid greatly in removing rust and scale, especially when used with a flushing solution. A cleaning solution should be used to loosen the rust and scale before reverse flushing the cooling system.

Flushing is accomplished through the system in a direction opposite to the normal coolant flow. This action causes the water to get behind the corrosion deposits and force them out. To do this, remove the upper and lower radiator hoses. Then attach a drain hose at the top of the radiator. Attach a new piece of hose to the radiator outlet at the bottom and insert the flushing gun. Connect the water hose to the flushing gun to a water outlet and the air hose to an air line. Turn on the water and when the radiator is full, apply the air in short blasts, allowing the radiator to fill between blasts. Continue this flushing operation until the water runs clear through the top hose.

With the thermostat removed, attach a leadaway hose to the water hose inlet. Also attach a length of new hose to the water outlet connection at the top of the engine. Turn the water on and fill the water jacket and then apply air in short blasts. Continue this flushing until the water runs clear. Also do the hot water heater. Remove heater water outlet hose from heater core. Remove inlet from engine connections. Insert flushing gun and flush heater core. Care must be taken when applying air pressure to prevent damage to the core.

## H-2. Filling Cooling System

To fill the cooling system, remove the fill cap and fill the tank to the top. Replace the cap and run the engine at medium speed for approximately one minute. Remove the cap and recheck the coolant level. Add more coolant if necessary to bring the level back to the top of the tank. If the cooling system is filled when the engine is cold, recheck the coolant level after the engine has warmed up. This will ensure that the thermostat has opened allowing complete cooling system circulation.

The cooling system should be flushed twice a year and checked for leaks, preferably in the spring and fall at the time of changing the antifreeze. Always correct any cooling system leaks before installing antifreeze. A corrosion inhibitor should be used in the cooling system to prevent the formation of rust and scale. A quality-brand antifreeze containing a corrosion inhibitor should be used. When the antifreeze is drained in the spring, a corrosion inhibitor should be added with the water.

## H-3. Draining Cooling System

To completely drain the cooling system it is necessary to open the drain in the bottom of the radiator and also a drain on the side of the cylinder block (left side for L6-226 models; right side for F4-134 models). Remove the radiator cap to break any vacuum that may have developed. Should the cooling solution be lost from the system and the engine become overheated do not refill

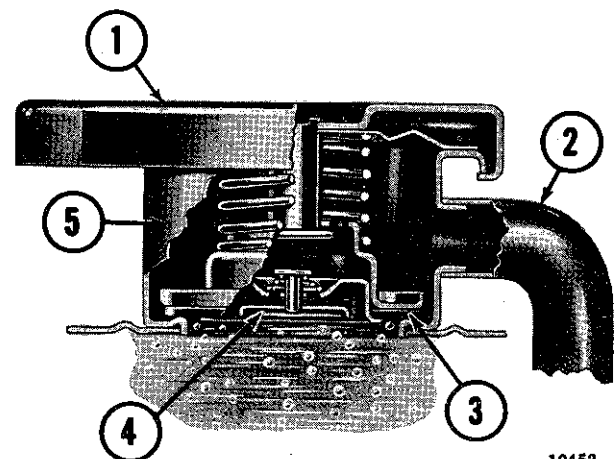


FIG. 153—RADIATOR PRESSURE CAP INSTALLED

- |                   |                        |
|-------------------|------------------------|
| 1—Pressurized Cap | 4—Vacuum Release Valve |
| 2—Overflow Tube   | 5—Radiator Neck        |
| 3—Pressure Seal   |                        |

the system immediately but allow the engine to cool or refill slowly while the engine is running. If cold solution is poured into the radiator while the engine is overheated there is danger of cracking the cylinder block and head.

#### H-4. Radiator Pressure Cap

All models are now equipped with pressure caps which reduce evaporation of cooling solution and make the engines more efficient by permitting slightly higher operating temperatures. When operating properly, the pressure cap permits pressure build-up in the cooling system during periods of severe heat load. This pressure increases the boiling point of the coolant and thus reduces overflow losses. The effectiveness of the cap is limited by its opening pressure and the boiling point of the coolant. The pressure cap employs a spring-loaded, rubber-faced pressure seal which presses against a seat in the radiator top tank. Spring pressure determines the opening pressure of the valve. A typical pressure cap is shown in Fig. 153.

**NOTE:** If a new cap is required, always install a cap of the same type and pressure rating specified. It should never be altered or replaced by a plain cap.

Early production vehicles were equipped with 7 lb. [0,50 kg-cm<sup>2</sup>] pressure caps; later vehicles with 9 lb. [0,63 kg-cm<sup>2</sup>] caps.

Current production Model L6-226 4WD and 4x4 vehicles are equipped with 13 lb. [0,91 kg-cm<sup>2</sup>] pressure caps; all others with the 9 lb. caps.

A vacuum release valve is employed to prevent undesirable vacuum build-up when the system cools down. The vacuum release valve is held against its seat under light spring pressure. Vacuum in the system is relieved by the valve which opens at  $\frac{1}{2}$  to 1 psi. [0,035 a 0,07 kg-cm<sup>2</sup>] vacuum.

Although the mechanism of the pressure cap requires no maintenance, the cap should be inspected periodically for cleanliness and freedom of operation. The pressure cap gasket and radiator filler neck seat should also be inspected to be sure they are providing a proper seal. If the rubber face of the valve is defective, a new cap should be installed. Filler neck reseating tools are commercially available to correct minor defects at the surface of the seat. Follow instructions of the reseating tool manufacturer.

**CAUTION:** Use extreme care in removing the radiator pressure cap. In overheated systems, the sudden release of pressure can cause a steam flash and this flash, or the loosened cap can cause serious personal injury.

To remove the radiator pressure cap when the engine coolant temperature is high or boiling, place a cloth over the pressure cap and turn counter-clockwise about  $\frac{1}{4}$  turn until the first (pressure release) stop is reached. Keep the cap in this position until all pressure is released. Then, push cap down and turn still further until cap can be removed. To install the pressure cap, place it in position and turn it clockwise as far as it will go.

#### H-5. Cylinder Block

Any coolant leaks at the engine block water joints are aggravated by pump pressure in the water

jacket and by pressure developed in the cooling system when the pressure cap is in place. Small leaks showing up only as moist spots often cannot be detected when the engine is hot except by the appearance of rust, corrosion, and dye stains where leakage evaporated. Also, expansion and contraction of the engine block resulting from extreme temperature changes can aggravate leaks. For these reasons, when checking for coolant leaks inspect the block when it is cold and while the engine is running.

A leaking drain cock that cannot be closed should be replaced. Leaking core-hole expansion plugs should be replaced.

If tightening gasketed joints will not correct leakage, install new gaskets. Use a sealing compound where recommended.

#### H-6. Radiator

Maintenance of the radiator consists of keeping the exterior of the radiator core clean, the interior free from rust and scale, and the radiator free from leaks. The exterior of the radiator core should be cleaned and the radiator inspected for leaks each 1000 miles [1,600 km.] of normal service of the vehicle. If the vehicle is subjected to considerable off-the-road operation, this interval should be each 1000 miles or 30 days, whichever interval occurs first. Cleaning should be performed by blowing out with air stream or water stream directed from the rear of the radiator. A visual inspection is not sufficient as the accumulation of small particles of foreign material on core surfaces can restrict cooling without closing the core openings.

Radiator leakage occasionally results from corrosion perforation of the thin metal but most leakage results from mechanical failure of soldered joints when too much strain has been put on the joint. Fractures occur most often at the joint where the radiator inlet and outlet pipes are attached to the tanks. When the seams break, the entire soldered joint is exposed and can corrode, but breakage rather than corrosion is the primary cause of seam leakage.

**NOTE:** A cracked filler-neck-to-tank seam can be caused by an improperly installed hood prop. Refer to Par. T-17 concerning the hood prop.

Examine the radiator carefully for leaks before and after cleaning. Cleaning may uncover points of leakage already existing but plugged with rust. White, rusty, or colored leakage stains indicate previous radiator leakage. These spots may not be damp if water only or methyl-alcohol-base anti-freeze is in the cooling system since such coolants evaporate readily. An ethylene-glycol-base anti-freeze shows up existing leaks as it does not evaporate.

When the pressure cap opens, the sudden surge of vapor or liquid must blow out through the overflow pipe. If the overflow pipe is dented or clogged the pressure caused by obstruction may cause damage to the radiator or hose connections in the cooling system. To remove clogging material, run a flexible wire through the overflow pipe.

#### H-7. Thermostat

The cooling system is designed to provide adequate cooling under most adverse conditions. However,

it is necessary to employ some device to provide quick warming and to prevent overcooling during normal operation. Automatic control of engine operating temperature is provided by a water flow control thermostat installed in the water outlet on top of the L-head engine cylinder head and at the front of the F-head engine cylinder head. The thermostat is a heat-operated valve. It should always be maintained in working order and the vehicle should never be driven without one installed as there would then be no control of engine temperature. The temperature at which the thermostat opens is preset and cannot be altered. The standard thermostat is designed to start opening at 165°F. [74°C.] and be fully open at 188°F. [86°C.]. The optional high-temperature thermostat is designed to start opening at 180°F. [82°C.] and be fully open at 202°F. [94°C.].

**NOTE:** Whenever a high-temperature thermostat is installed (one having a start-to-open rating of at least 180°F. [82°C.]) the only antifreeze recommended for the cooling system is ethylene-glycol base (so-called "permanent").

When the thermostat is not operating properly, the engine may run too hot or too cold. Overheating may damage the thermostat so that its valve will not function properly. Rust can also interfere with thermostat operation. To test the thermostat, place it in water heated approximately 25°F. [17°C.] above the temperature stamped on the thermostat valve. Submerge the bellows completely and agitate the water thoroughly. The valve should open fully. Next, place the thermostat in water heated approximately 10°F. [11°C.] below the temperature stamped on the thermostat valve. Submerge the bellows completely and agitate the water thoroughly. The valve should close completely. If the thermostat fails either of these tests, it should be replaced with a new one of the same type and rating.

#### H-8 Radiator Hoses and Heater Hoses

Air, heat, and water deteriorate radiator and heater hoses in two ways: by hardening or cracking which destroys flexibility and causes leaks; by softening and swelling which produces lining failure and hose rupture. Examine hoses spring and fall for possible need of replacement or tightening. If hoses are collapsed, cracked, or indicate a soft condition on the inside they should be replaced.

When installing hose, clean the pipe connections and apply a thin layer of nonhardening sealing compound. Hose clamps should be properly located over the connections to provide secure fastening. The pressurized cooling system pressure can blow off improperly installed hoses.

On a vehicle with belt-driven governor installed, inspect to see that the belt is not cutting into the radiator hoses. If this condition should be found to exist, clamp the hose or hoses involved away from any possible interference with the governor belt.

#### H-9. Antifreeze Solutions

When water freezes it expands approximately 9% in volume. When water, confined in a cooling system, freezes it exerts tremendous pressures causing

serious damage. To prevent freezing, antifreeze is added to the water which lowers the freezing point of the coolant. The two antifreezes commonly used today have either a methanol or ethylene glycol base, and contain corrosion inhibitors. Methanol is usually cheaper than ethylene glycol and slightly less quantity is needed for the same protection. However, methanol will evaporate with the water when the vehicle is operated at warmer temperatures, and must be replaced. Ethylene glycol will not evaporate at normal operating temperatures, and any evaporation losses need only be replaced with water. Methanol solution is injurious to vehicle finishes. Should any be spilled on the vehicle, it should be washed off immediately with a good supply of cold water without wiping or rubbing. Under ordinary conditions, ethylene glycol is not injurious to vehicle finish. A table in the specifications data at the end of this section gives the protection obtained by the addition of various amounts of both methanol and ethylene glycol. Antifreeze should be drained and discarded in the spring, the cooling system flushed and refilled with water and a corrosion inhibitor. In the fall, a fresh filling of antifreeze should be used. Although the old antifreeze has freeze protection, the corrosion inhibitors in the antifreeze are no longer effective in protecting the cooling system from corrosion. Before installing antifreeze, inspect the cooling system to be sure it is clean, leak-proof, and otherwise in proper operating condition. Drain the cooling system. See Par. H-3. Pour in 3 quarts [3 ltr.] of clean water, add the required quantity of antifreeze, then add clean water to within 1" [2.54 cm.] of the top of the overflow pipe to allow for expansion when hot. Run the engine until it is warm. Then check the solution level and antifreeze protection.

**WARNING:** Drinking ethylene glycol antifreeze or its solutions can be harmful or fatal. Do not use antifreeze containers for food or beverages.

#### H-10. Heat Indicator

The heat indicator is operated electrically and is connected by a single wire to a sealed bulb sending unit mounted in the right rear of the cylinder head.

#### H-11. Water Pump

All F4-134 Models.

The information for the water pumps used on these models is covered in Par. H-11 through H-14. The water pumps used on these models are basically the same. Minor changes have been made in the seals and in the shape of the impellers; otherwise, the disassembly and assembly procedure outlined below applies to all models covered here.

The water pump on these models employs a centrifugal impeller. Double row ball bearings Fig. 154, No. 2 are integral with the shaft and are packed at assembly with a special high melting point grease which will last the life of the bearing. The bearing is sealed to retain the lubricant and prevent dirt and dust from entering. The bearing and shaft are retained in the pump body by the bearing retaining spring. The pump seal bears against the seat on the pump body and the inside of the impeller,

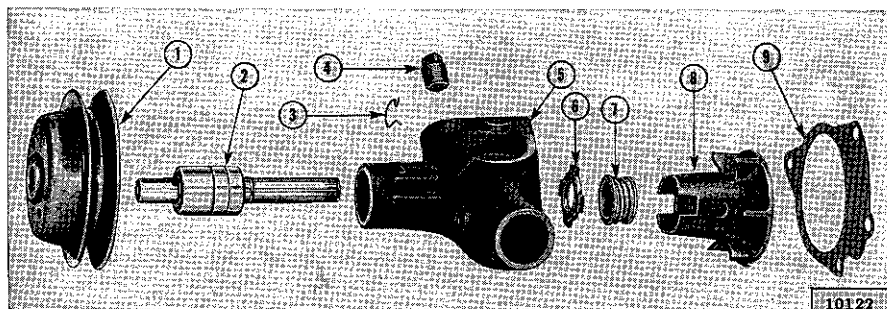


FIG. 154—WATER PUMP—MODEL FC-150

- 1—Fan and Pump Pulley
- 2—Bearing and Shaft
- 3—Bearing Retainer Spring
- 4—Pipe Plug
- 5—Pump Body
- 6—Seal Washer
- 7—Pump Seal
- 8—Impeller
- 9—Gasket

maintaining a constant pressure against both and preventing water leakage. A drain hole in the bottom of the pump body precludes any water seepage past the seal from entering the bearing. The impeller and the pulley are pressed on the shaft under high pressure.

### H-12. Water Pump Inspection

Check the water pump for leaks, and excessive end play or looseness of the shaft in the pump. A quick way to check is to work the fan blades up and down by hand. If any play is noticed, this indicates that the bearings are rough. Rough bearings should be checked to see if the water pump should be replaced or rebuilt.

### H-13. Water Pump Disassembly

- a. Remove the fan belt, fan blades, and fan pulley.
- b. Remove the bolts attaching the water pump to the block. Remove the pump.
- c. Remove the bearing retainer spring.
- d. Remove the pump impeller and pulley with a suitable puller.
- e. Remove the pump seal, bearing and shaft, and bearing slinger.

### H-14. Assembling Water Pump

Before assembling the water pump, examine water seal seat in the pump body and should it be rough, install a new pump body.

To reassemble the unit, insert the long end of the shaft (2) into the pump body from the front end until the outer end of the bearing is flush against the front end of the pump body. Position the water seal on shaft flush against the ground seat in the water pump body. Place the impeller on an arbor press and press the long end of the shaft into the impeller until the end of the shaft is flush with the hub of the impeller.

Support the assembly on the impeller end of the shaft and press the pulley hub on the shaft until the shaft end is flush with the pulley hub. Move the shaft in the pump body to align the retaining wire grooves in the bearing and pump body and place the bearing retaining wire in position.

### H-15. Water Pump

All L6-226 Models.

The information for the water pump used on these models is covered in Par. H-15 through H-18.

This pump, Fig. 159, is a centrifugal impeller type of large capacity having a hardened and ground shaft supported by sealed, life-time lubricated ball

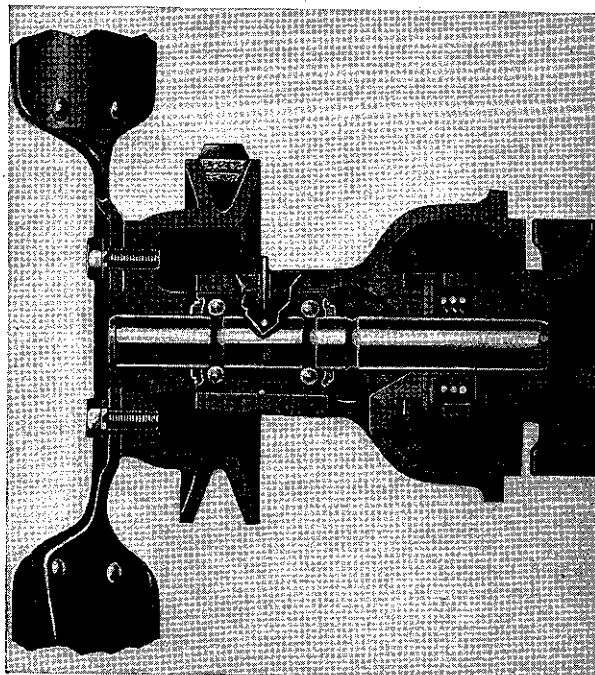


FIG. 155—WATER PUMP—MODEL F4-134



FIG. 156—WATER PUMP IMPELLER PULLER

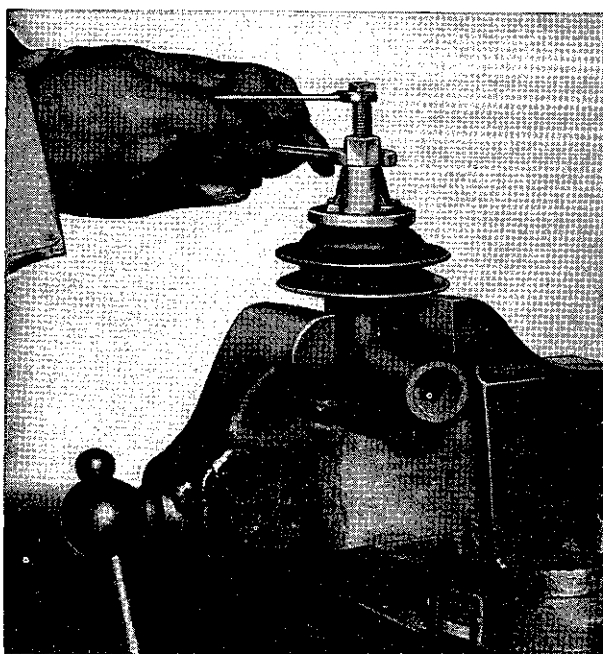


FIG. 157—WATER PUMP FAN HUB PULLER

bearings. The shaft also has a brass sleeve extending through the seal to protect against corrosion. The fan pulley hub and the cast iron impeller are both pressed onto the pump shaft. The pump seal is a self-contained unit pressed into the pump body. Its carbon composition graphite impregnated seal washer is held by the spring in contact with the finished face of the impeller hub.

#### H-16. Pump Removal

- a. Drain cooling system.
- b. Disconnect hose at pump inlet.
- c. Detach the generator adjusting link (fan belt tension adjuster) from the pump by removing pump bolt.
- d. Remove fan belt.
- e. Remove remaining pump mounting bolts.
- f. Lift out pump.

#### H-17. Pump Overhaul

It is recommended that either the special tools mentioned below or an arbor press be available before overhauling the water pump. Proceed as follows:

- a. Remove fan belt and pulley from pulley hub.
- b. Remove pump to block gasket from pump cover.
- c. Remove pump cover and gasket from pump body.
- d. Remove pump impeller from pump shaft. Use an arbor press to push the shaft from both the impeller and housing after first removing the bearing retainer ring.

- e. If the impeller puller has been used and pump shaft is still in housing, remove retainer ring and drive or press the shaft from housing.
- f. Check pump shaft for free turning and for bearing play. If wear is evident, replace shaft and bearing assembly.
- g. Press or drive the complete seal unit from the pump body.
- h. Inspect the seal seat surface on the pump impeller. If the impeller hub seat surface is rough or scored, the impeller should be replaced. Apply a small amount of fine graphite or oil to the seat before assembling pump. Always install a new seal or new seal washer.
- i. Press the pump seal assembly carefully into the bore in pump housing. Apply oil or graphite to the face of the carbon impregnated seal washer. Use suitable seal driver against seal to prevent distortion when driving the seal.
- j. Press pump shaft and bearing assembly into pump housing, carefully, just far enough for insertion of retainer ring. Insert ring.
- k. Press impeller onto pump shaft until it is flush with shaft end.
- l. Press the fan pulley hub onto the pump shaft, supporting the pump on the impeller end.


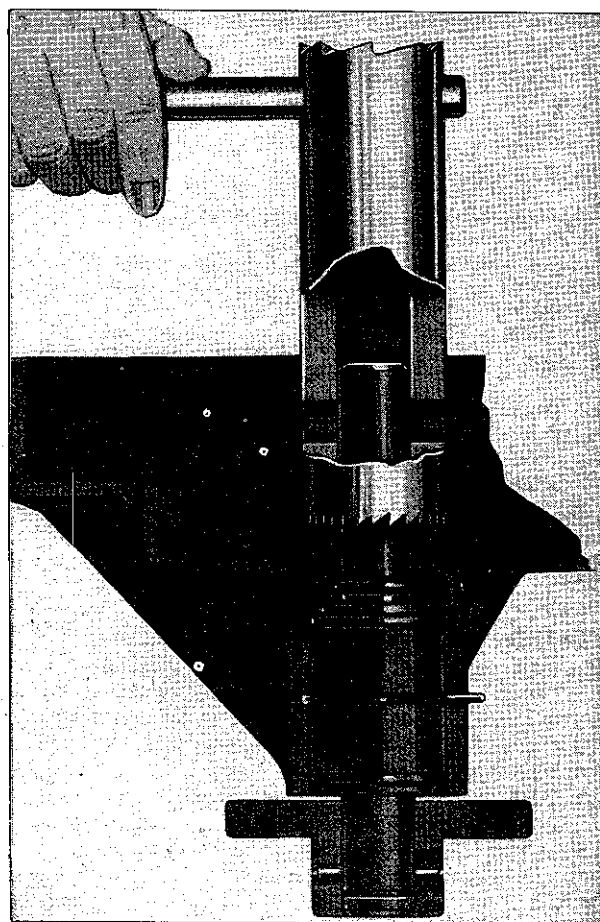


FIG. 158—WATER PUMP HOUSING SEAT REFACER

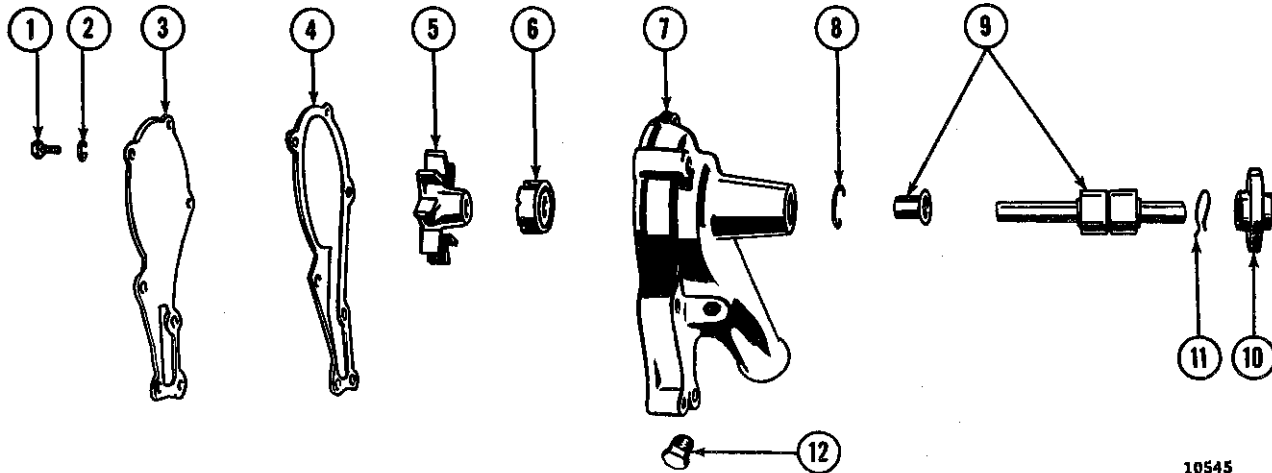

10545

FIG. 159—WATER PUMP—MODEL FC-170

1—Bolt  
2—Lockwasher  
3—Cover  
4—Gasket

5—Impeller  
6—Seal  
7—Body  
8—Snap Ring

9—Drive Shaft and finger  
10—Pulley hub  
11—Retainer  
12—Plug

**NOTE:** To secure alignment of the fan pulley with the generator and crankshaft pulleys, the hub must be pressed on the shaft so that the fan mounting face of the hub is  $5\frac{1}{32}$ " [13,25 mm.] from the rear face of the rear cover plate.

**m.** Install cover gasket and cover. Use new cover gasket.

### H-18. Pump Installation

Install the pump assembly on the engine as follows:

**a.** Place pump in position on engine using a new pump to cylinder block gasket. Install pump mounting bolts.

**b.** Install fan pulley and fan on pump.

**c.** Install fan belt and adjust as described in Par. H-19.

**d.** Install hose at water pump inlet. Fill the cooling system.

### H-19. Fan Belt

The fan and generator are belt driven by a V-belt. The drive of the V-belt is on the sides of the V. A fan belt that is too tight will cause rapid wear of the generator and water pump bearings. If the belt is too loose, it may slip preventing the water pump from properly cooling the engine or the generator from properly charging the electrical circuit. The fan belt is properly adjusted when it can be deflected  $\frac{1}{2}$ " [13 mm.] with strong thumb pressure applied midway between the fan and generator pulleys. Check this adjustment and inspect the condition of the fan belt at each engine lubrication period. It is good preventive maintenance to replace a badly frayed, worn, or cracked fan belt before it breaks in operation.

To replace the fan belt, loosen the attaching bolts at each generator brace-to-engine mounting and pivot the generator toward the engine to gain slack needed to install the new belt. Remove the old belt. Position the new belt over the fan pulley, over the crankshaft pulley, then over the generator pulley. Pull the generator away from the engine until belt tension is firm. Then tighten the generator mounting bolts and check the tension as indicated above. Reset the generator as necessary for correct belt tension. Finally, torque the generator mounting bolts 25 to 35 lb-ft. [3,4 a 4,8 kg-m.].

### H-20. Engine Overheating

An engine will not be damaged by high coolant temperatures unless the coolant boils. The pressurized cooling system used on these vehicles raises the boiling point of the coolant. The following table lists the boiling point of water and antifreeze solutions at atmospheric pressure and at 9 and 13 pounds pressure as used in these cooling systems.

System Pressure	Methyl Alcohol	Water	Ethylene Glycol
None	179°F. [81,5°C.]	212°F. [100°C.]	223°F. [106,1°C.]
9 psi. [0,637 kg-cm <sup>2</sup> ]	202°F. [94,4°C.]	236,5°F. [113,5°C.]	248,5°F. [120,2°C.]
13 psi. [0,914 kg-cm <sup>2</sup> ]	209,5°F. [98,6°C.]	245°F. [118,3°C.]	257,5°F. [125,2°C.]

The antifreeze solutions listed protect to -20°F. [-28,9°C.]. Should overheating be encountered, and the fault is believed to be in the cooling system, check the cooling system for the following:

**a.** Proper coolant level. See Filling Cooling System Par. H-2.

**b.** Poor air flow. Check for dirty radiator core. (See Radiator Par. H-6). Check for faulty belt pulley operation, worn or loose fan belt, or damaged fan. Clean, repair, replace or adjust as necessary.

**c.** Foaming coolant. Check for air leaks at water pump, hose connection and filler cap. Tighten, repair or replace as necessary.



d. Surging or "after boil." Check pressure cap and replace if valves or gasket are faulty. Install lower temperature thermostat, if necessary.

e. External leaks. Check the following for leaks: Hoses and clamps, water pump, radiator, head gasket, core plugs and drain cocks, as well as the cylinder head or block for cracks.

f. Internal leaks. Check for faulty head gasket, cracked cylinder head or block.

g. Poor coolant flow. Check hose condition, water pump, fan belt, and repair or replace as necessary. Be sure radiator by-pass hose valve is open on L6-226 models. Inspect block for rust or scale, and clean and flush the system, if necessary.

h. Be sure a thermostat is installed. See Thermostat Par. H-7.

i. Check the temperature gauge.

## SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Overheating</b>	
Lack of Water . . . . .	Refill Radiator
Thermostat Inoperative . . . . .	Replace
Water Pump Inoperative . . . . .	Overhaul or Replace
Incorrect Ignition or Valve Timing . . . . .	Set Timing
Excessive Piston Blowby . . . . .	Check Pistons, Rings and Cylinder Walls
Fan Belt Broken . . . . .	Replace
Radiator Clogged . . . . .	Reverse Flush
Air Passages in Core Clogged . . . . .	Clean With Water and Air Pressure
Excessive Carbon Formation . . . . .	Remove
Muffler Clogged or Bent Exhaust Pipe . . . . .	Replace
<b>Loss of Cooling Liquid</b>	
Loose Hose Connections . . . . .	Tighten
Damaged Hose . . . . .	Replace
Leaking Water Pump . . . . .	Replace
Leak in Radiator . . . . .	Remove and Repair
Leaky Cylinder Head Gasket . . . . .	Replace
Crack in Cylinder Block . . . . .	} Small Crack Can Be Closed with Radiator Sealer
Crack in Cylinder Head . . . . .	

## ANTIFREEZE CHART

ANTIFREEZE			PROTECTION TO TEMPERATURE SHOWN			
Quarts U.S.	Quarts Imperial	Liters	Methyl Alcohol		Ethylene Glycol	
			Fahr.	Cent.	Fahr.	Cent.
<b>11-Quart System</b>						
2	1 $\frac{2}{3}$	2	13°	10,5°	18°	- 7,6°
3	2 $\frac{1}{2}$	2 $\frac{3}{4}$	0°	-17,7°	8°	-13,3°
4	3 $\frac{1}{3}$	3 $\frac{3}{4}$	-18°	-27,7°	- 6°	-21,1°
5	4 $\frac{1}{4}$	4 $\frac{3}{4}$	-38°	-38,8°	-23°	-30,5°
6	5	5 $\frac{2}{3}$	....	....	-47°	-43,8°
<b>12-Quart System</b>						
2	1 $\frac{2}{3}$	2	15°	- 9,5°	19°	- 7,2°
3	2 $\frac{1}{2}$	2 $\frac{3}{4}$	3°	-16,1°	10°	-12,2°
4	3 $\frac{1}{3}$	3 $\frac{3}{4}$	-12°	-24,4°	0°	-17,7°
5	4 $\frac{1}{4}$	4 $\frac{3}{4}$	-31°	-35,0°	-15°	-26,1°
6	5	5 $\frac{2}{3}$	-50°	-45,5°	-34°	-36,6°
<b>13-Quart System</b>						
2	1 $\frac{2}{3}$	2	16°	- 8,9°	21°	- 6,1°
3	2 $\frac{1}{2}$	2 $\frac{3}{4}$	6°	-14,4°	13°	-10,5°
4	3 $\frac{1}{3}$	3 $\frac{3}{4}$	- 8°	-22,2°	3°	-16,1°
5	4 $\frac{1}{4}$	4 $\frac{3}{4}$	-23°	-30,5°	-10°	-23,3°
6	5	5 $\frac{2}{3}$	-40°	-40,0°	-25°	-31,6°
7	5 $\frac{3}{4}$	6 $\frac{1}{2}$	....	....	-44°	-42,2°

## COOLING SYSTEM SPECIFICATIONS

	F4-134	L6-226
<b>Radiator Cap:</b>		
Location.....	Under Hood	Under Hood
Relief Valve Pressure.....	7 psi. [0,5 kg-cm <sup>2</sup> ]	13 psi. [0,91 kg-cm <sup>2</sup> ]
4x4.....		7 psi. [0,5 kg-cm <sup>2</sup> ]
4WD.....		
<b>Thermostat:</b>		
Type.....	Choke	Choke
Starts to Open:		
Standard.....	165°F. [74°C.]	165°F. [74°C.]
High Temperature.....	180°F. [82°C.]	180°F. [82°C.]
<b>Water Pump:</b>		
Type.....	Centrifugal	Centrifugal
Location.....	Front of Cylinder Block	Front of Cylinder Block
Drive.....	V-Belt	V-Belt
Bearing.....	Ball	Ball
Radiator Type.....	Cellular	Cellular
<b>Cooling System Capacity:</b>		
Without Heater.....	11 qt. [10,5 ltr.]	12 qt. [11,5 ltr.]
With Heater.....	12 qt. [11,5 ltr.]	13 qt. [12,5 ltr.]
<b>Fan:</b>		
Number of Blades.....	4	4
Spacing.....	90°	76° and 104°
Diameter.....	15" [38,1 cm.]	18" [45,7 cm.]
Ratio: Fan to Crankshaft.....	1.19 to 1	.954 to 1
Bearing.....	Water Pump	Water Pump
<b>Drive Belt:</b>		
Angle of V.....	38°	36°
Length.....	42.625" [108 cm.]	41" [104 cm.]
Width.....	.688" [1,747 cm.]	.438" [1,112 cm.]

## ELECTRICAL SYSTEM

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Battery.....	I-2	Overdrive Electrical Controls.....	I-74
Directional Signals.....	I-72	Primary Circuit.....	I-66
Distributor		Regulator—Current-Voltage.....	I-22
Cap.....	I-6	Circuit Breaker.....	I-23
Condenser.....	I-8	Current Regulator.....	I-25
Governor.....	I-10	Inspection.....	I-26
Points.....	I-9	Test.....	I-27
Removal—L6-226.....	I-5	Voltage Regulator.....	I-24
—F4-134.....	I-4	Quick Checks.....	I-28
Rotor.....	I-7	Secondary Circuit.....	I-67
Generator.....	I-14	Spark Plugs.....	I-13
Armature.....	I-17	Starting Motor.....	I-43
Assembly.....	I-21	Assembly.....	I-55
Brushes.....	I-19	Disassembly.....	I-49
Disassembly.....	I-16	Drive.....	I-57
Field Coils.....	I-18	Maintenance.....	I-44
Maintenance.....	I-15	Switch—Main Light.....	I-64
Headlamps.....	I-68	—Starting.....	I-59
Headlamp Aiming.....	I-69	—Stoplight.....	I-65
Ignition System.....	I-3	Timing—Ignition—L6-226.....	I-12
Indicators and Gauges.....	I-62	—F4-134.....	I-11
Lighting System.....	I-63		

## I-1. GENERAL

Early production vehicles were all equipped with 6-volt electrical systems. Later domestic production vehicles were all changed to 12-volt electrical systems. For a quick check to see which system the vehicle has, look at the battery. As the electrical circuits remain the same, the wiring diagrams represent both 6- and 12-volt wiring. However, bulbs and electrical components are not always interchangeable and a replacement item of the correct voltage rating must be secured. Refer to Par. I-73. Use caution around the higher voltage of the 12-volt system as accidental short circuits are more capable of damaging electrical units. Also, arcs around the 12-volt battery are more apt to ignite any gas that may be escaping from it. In the following paragraphs will be found information about the battery, distributor, coil, generator, voltage regulator and starting motor. These units, with the connecting wires, make up the engine electrical system. The wiring diagram will show the different circuits of the engine electrical system and the various units which make up those circuits. With plastic-covered wiring harnesses use only rubber-insulated wiring clips.

## I-2. Battery

The battery acts as a storage reservoir of electrical energy produced by the generator. To store sufficient energy for operation of the electrical system (starter, lights, etc.) when the generator is not producing, the battery and battery wiring must receive regular attention. The principle attention is to maintain the electrolyte at the correct level, regularly check with a hydrometer and maintain the cable connections tight and clean. Also be sure the battery is held snugly in position to avoid damage due to bouncing.

At each 1,000 miles [1,600 km.] or when the vehicle is lubricated, check the battery condition with a hydrometer.

A hydrometer reading of 1.260 indicates that the battery is fully charged. Should the reading fall below 1.225 it will be necessary to recharge or replace the battery. Unless the cause of the battery discharge is definitely known it is advisable to load test each cell to check for an internal short. A shorted battery will not hold a charge and must be repaired or replaced.

After testing with the hydrometer check the electrolyte level adding distilled water to maintain the solution  $\frac{3}{8}$ " [10 mm.] above the plates. Avoid over filling. Do not fail to replace the filler caps and tighten them securely.

Check the battery cable connections at the battery terminals to be sure they are tight and clean. When replacing the battery cable clamp down over the battery post, make sure the clamp is positioned so that the entire post is contacted by the cable clamp. A clamp that is not completely seated acts to restrict the current-carrying capacity of the cable.

Copper sulphate which builds up on the terminals may be quickly removed by using a strong solution of baking soda and water. After cleaning, coat the terminals with grease to reduce formation of sulphate. The negative terminal is grounded by a cable bolted to the frame or body. Be sure a good tight connection is made at this point.

If the terminal connections of the engine ground cable, which connects the front engine support plate with the frame, are loose or dirty, hard starting or failure to start may result. Check the connection of the ground cable as a part of each vehicle inspection and each tune-up.

# ELECTRICAL SYSTEM


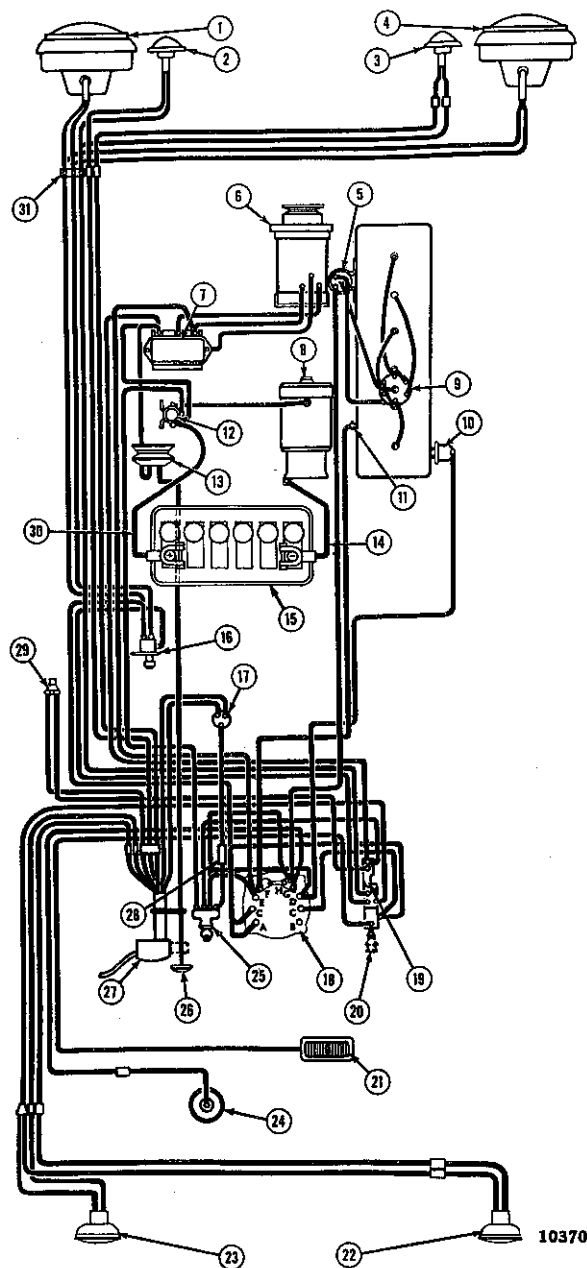


FIG. 160—WIRING DIAGRAM—L6-226 4WD

- 1—Headlight, Left
- 2—Parking Light, Left
- 3—Parking Light, Right
- 4—Headlight, Right
- 5—Ignition Coil
- 6—Generator
- 7—Voltage Regulator
- 8—Starter Motor
- 9—Distributor
- 10—Oil Gauge Sender
- 11—Heat Indicator Plug
- 12—Starter Solenoid
- 13—Horn

- 14—Negative Cable
- 15—Battery
- 16—Dimmer Switch
- 17—Directional Signal Flasher
- 18—Instrument Cluster
- A—Upper Beam Light
- B—Auxiliary
- C—Instrument Light
- D—Oil Pressure Indicator
- E—Charging Indicator
- F—Temperature Gauge
- G—Fuel Gauge
- H—Instrument Voltage Regulator

- 19—To Light Switch
- 20—Light Switch
- 21—Dome Light
- 22—Tail and Stop Light, Right
- 23—Tail and Stop Light, Left
- 24—Fuel Tank Gauge
- 25—Ignition Switch
- 26—Horn Button
- 27—Directional Signal Switch
- 28—Directional Signal Fuse
- 29—Stop Light Switch
- 30—Positive Cable
- 31—Junction Block

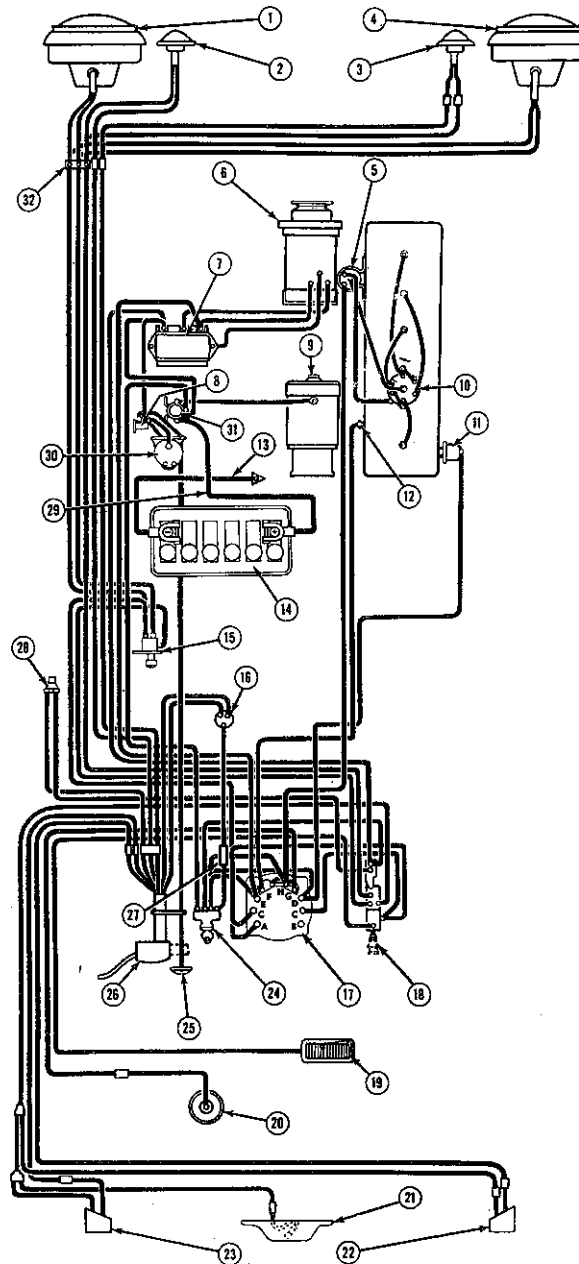

10707


FIG. 161—WIRING DIAGRAM—L6-226 4x4 AND 4x2

- 1—Left Headlamp
- 2—Left Parking and Signal Lamp
- 3—Right Parking and Signal Lamp
- 4—Right Headlamp
- 5—Ignition Coil
- 6—Generator
- 7—Voltage Regulator
- 8—Horn Relay
- 9—Starting Motor
- 10—Ignition Distributor
- 11—Oil Pressure Signal Switch
- 12—Temperature Sending Unit
- 13—Battery Ground Cable

- 14—Battery
- 15—Headlamp Dimmer Switch
- 16—Directional Signal Flasher
- 17—Instrument Cluster
  - A—Upper Beam Indicator
  - B—Turn Signal Indicator
  - C—Instrument Lights
  - D—Oil Pressure Indicator
  - E—Charging Indicator
  - F—Temperature Gauge
  - G—Fuel Gauge
  - H—Instrument Voltage Regulator
- 18—Main Light Switch
- 19—Dome Light

- 20—Fuel Gauge Tank Unit
- 21—License Plate Lamp
- 22—Right Tail and Stop Lamp
- 23—Left Tail and Stop Lamp
- 24—Ignition and Starter Switch
- 25—Horn Button
- 26—Directional Signal Switch
- 27—Directional Signal Fuse
- 28—Stop Light Switch
- 29—Battery Positive Cable
- 30—Horn
- 31—Starting Motor Solenoid
- 32—Junction Block

# ELECTRICAL SYSTEM

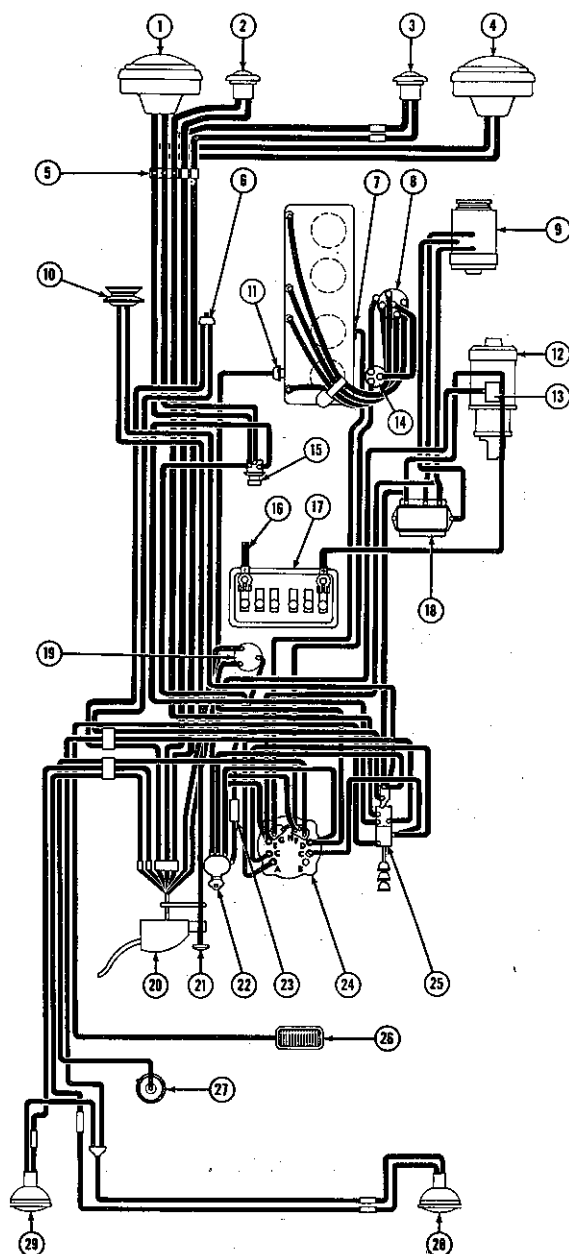

10711

FIG. 162—WIRING DIAGRAM—F4-134 4WD

- 1—Left Headlamp
- 2—Left Parking and Signal Lamp
- 3—Right Parking and Signal Lamp
- 4—Right Headlamp
- 5—Junction Block
- 6—Stop Light Switch
- 7—Oil Pressure Signal Switch
- 8—Ignition Distributor
- 9—Generator
- 10—Horn
- 11—Temperature Sending Unit
- 12—Starting Motor
- 13—Starting Motor Solenoid Switch

- 14—Ignition Coil
- 15—Foot Dimmer Switch
- 16—Battery Ground Cable
- 17—Battery
- 18—Voltage Regulator
- 19—Directional Signal Flasher
- 20—Directional Signal Switch
- 21—Horn Button
- 22—Ignition and Starter Switch
- 23—Directional Signal Fuse
- 24—Instrument Cluster

- A—Upper Beam Indicator
- B—Turn Signal Indicator
- C—Instrument Lights
- D—Oil Pressure Indicator
- E—Charging Indicator
- F—Temperature Gauge
- G—Fuel Gauge
- H—Instrument Voltage Regulator
- 25—Main Light Switch
- 26—Dome Light
- 27—Fuel Gauge Tank Unit
- 28—Right Tail and Stop Lamp
- 29—Left Tail and Stop Lamp

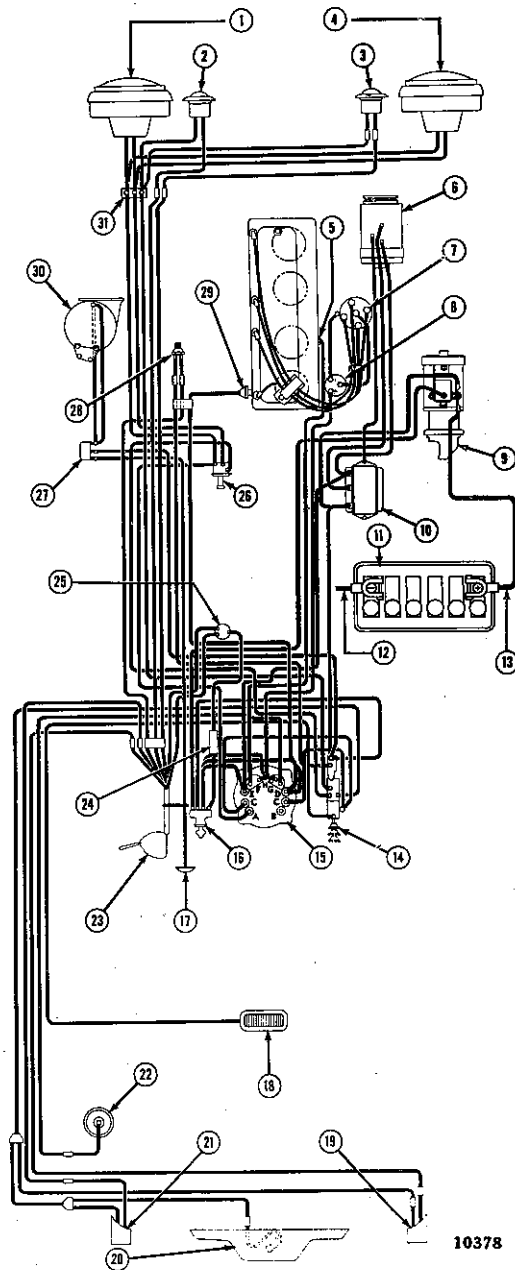


FIG. 163—WIRING DIAGRAM—F4-134 4x4 AND 4x2

- 1—Left Headlamp
- 2—Left Parking and Signal Lamp
- 3—Right Parking and Signal Lamp
- 4—Right Headlamp
- 5—Temperature Sending Unit
- 6—Generator
- 7—Ignition Distributor
- 8—Ignition Coil
- 9—Starting Motor
- 10—Voltage Regulator
- 11—Battery
- 12—Battery Ground Cable
- 13—Battery Positive Cable

- 14—Main Light Switch
- 15—Instrument Cluster
  - A—Upper Beam Indicator
  - B—Turn Signal Indicator
  - C—Instrument Lights
  - D—Oil Pressure Indicator
  - E—Charging Indicator
  - F—Temperature Gauge
  - G—Fuel Gauge
  - H—Instrument Voltage Regulator
- 16—Ignition and Starter Switch
- 17—Horn Button
- 18—Dome Light

- 19—Right Tail and Stop Lamp
- 20—License Plate Lamp
- 21—Left Tail and Stop Lamp
- 22—Fuel Gauge Tank Unit
- 23—Directional Signal Switch
- 24—Directional Signal Fuse
- 25—Directional Signal Flasher
- 26—Headlamp Dimmer Switch
- 27—Horn Relay
- 28—Stop Light Switch
- 29—Oil Pressure Signal Switch
- 30—Horn
- 31—Junction Block

### I-3. IGNITION SYSTEM

**NOTE:** Although Auto-Lite equipment is standard on Willys utility vehicles, at the start of 1954 production a few utility vehicles were equipped with Delco-Remy distributors and starting motors. However, if replacement of a Delco-Remy unit becomes necessary, the unit should be replaced with a like Delco-Remy unit and not with an Auto-Lite unit. See Par. I-73.

The power in an internal combustion engine is derived from burning a fuel and air mixture in the engine cylinders under compression. To ignite these gases a spark is made to jump a small gap in the spark plug within each combustion chamber.

The ignition system furnishes this spark. The spark must occur in each cylinder at exactly the proper time and the spark in the various cylinders must follow each other in sequence of firing order. To accomplish this the following units are required:

- a. The battery, which supplies the electrical energy;
- b. The ignition coil, which transforms the battery low tension current to high tension current which can jump the spark plug gap in the cylinders under compression;
- c. The distributor, which delivers the spark to the proper cylinders and incorporates the mechanical breaker, which opens and closes the primary circuit at the exact time;
- d. The spark plugs, which provide the gap in the engine cylinders;
- e. The wiring, which connects the various units;
- f. The ignition switch, which controls the battery current when it is desired to start or stop the engine.


### I-4. Distributor Removal

All F4-134 Models

The distributor is mounted on the right side of the engine and is operated by a coupling on the oil pump shaft which is driven by a spiral gear on the camshaft.

To remove the distributor assembly the following procedure should be followed:

- a. Remove high-tension wires from the distributor cap terminal towers, noting the order in which they are assembled to ensure correct reassembly. No. 1 spark plug terminal tower is in the 5 o'clock position. Starting with this tower, the wires are installed in a counterclockwise direction in firing order. See Fig. 166 or 167.
- b. Remove the primary lead from the terminal post at the side of the distributor.
- c. Unlatch the two distributor cap springs and remove the cap.
- d. Note the position of the rotor in relation to the base. This should be remembered to facilitate re-installing and timing.
- e. Remove the screw holding the distributor to the crankcase and lift the assembly from the engine.

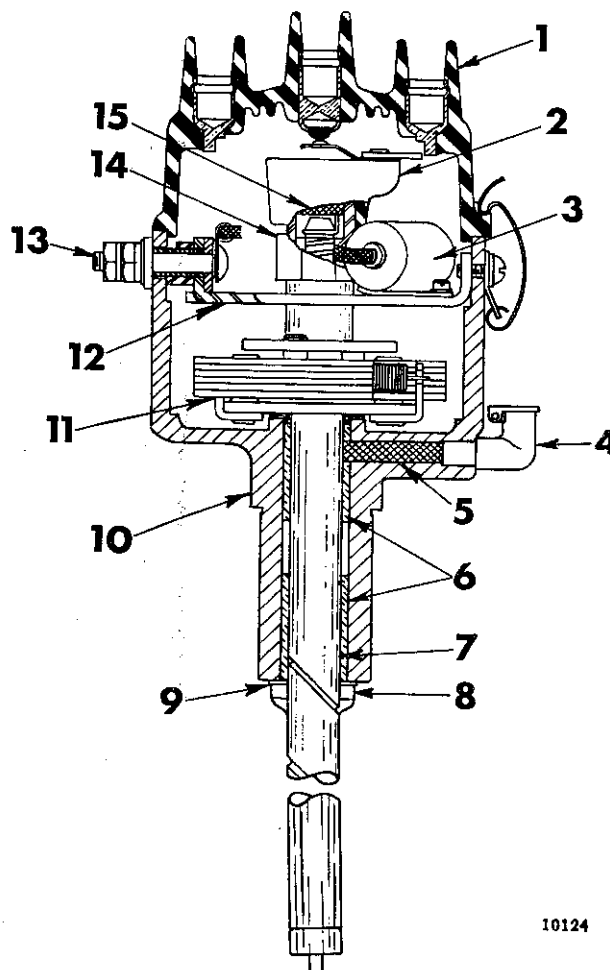

10124

FIG. 164—DISTRIBUTOR

- |                           |                          |
|---------------------------|--------------------------|
| 1—Cap                     | 9—Thrust Washer          |
| 2—Rotor                   | 10—Base                  |
| 3—Condenser               | 11—Governor Weight       |
| 4—Oiler                   | 12—Breaker Plate         |
| 5—Felt Wick (Cam Sleeves) | 13—Primary Terminal Stud |
| 6—Absorbent Bearing       | 14—Cam and Stop Plate    |
| 7—Drive Shaft             | 15—Felt Wick             |
| 8—Drive Shaft Collar      |                          |

### I-5. Distributor Removal

All L6-226 Models

This distributor is mounted on top of the cylinder

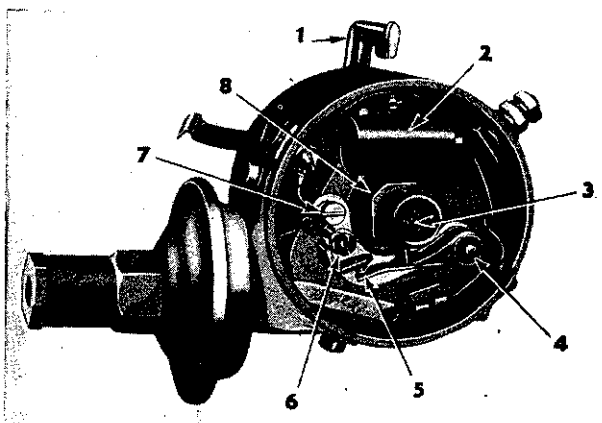


FIG. 165—DISTRIBUTOR COMPONENTS

- |                     |                         |
|---------------------|-------------------------|
| 1—Oiler             | 5—Distributor Points    |
| 2—Condenser         | 6—Adjustment Lock Screw |
| 3—Lubricating Wick  | 7—Adjusting Screw       |
| 4—Breaker Arm Pivot | 8—Breaker Cam           |



head. The drive consists of a short distributor shaft which meshes with an off-set slot in the top of the main drive shaft. This main drive shaft is driven by the oil pump. To remove this distributor, disconnect the vacuum tube and the low tension cable (which leads to the coil) and remove the distributor cap. Remove the bolt and lockwasher that hold the advance arm to the adapter. Lift out the distributor.

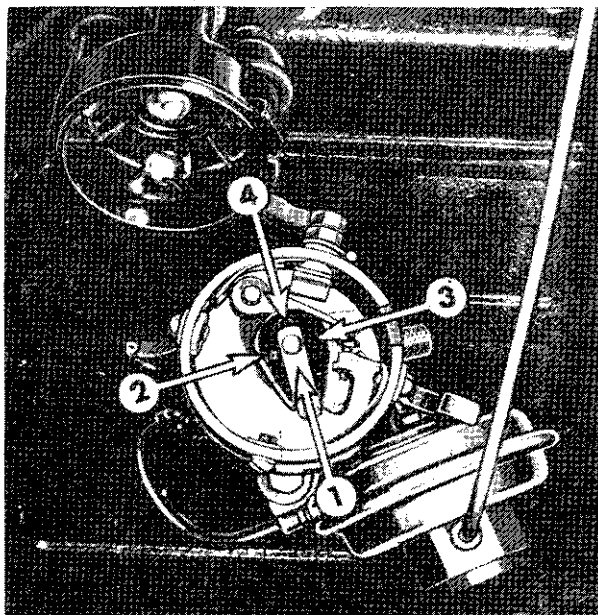


FIG. 166—FIRING POSITIONS — FOUR CYLINDER

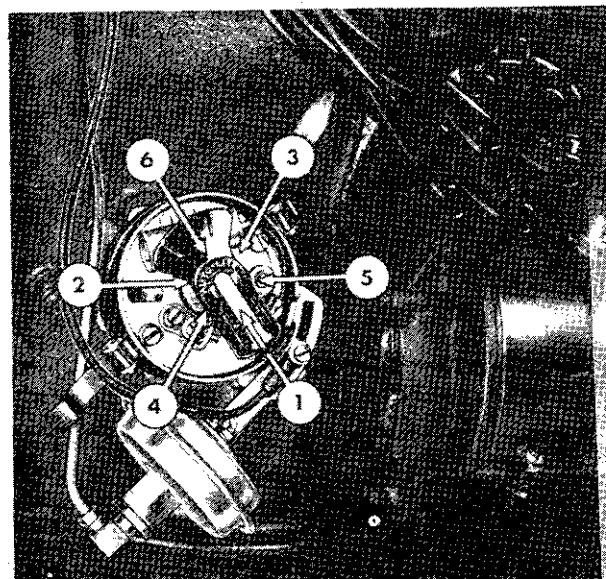


FIG. 167—FIRING POSITIONS—SIX CYLINDER

#### I-6. Distributor Cap

The distributor cap should be inspected for cracks, carbon runners and evidence of arcing. If any of these conditions exist, the cap should be replaced. Clean any corroded high tension terminals.

#### I-7. Rotor

Inspect the rotor for cracks or evidence of excessive burning at the end of the metal strip.

After a distributor rotor has had normal use the end of the rotor will become burned. If burning is found on top of the rotor, it indicates the rotor is too short and needs replacing. Usually when this condition is found, the distributor cap segment will be burned on the horizontal face and the cap will also need replacing.

#### I-8. Condenser

The condenser prolongs the life of the distributor points by preventing arcing at the contacts. It also provides a hotter spark by creating a reverse surge of current which rapidly breaks down the magnetic field of the coil by demagnetizing the core. Should the condenser be leaky a weak spark will be experienced.

Check the condenser lead for broken wires or frayed insulation. Clean and tighten the connections on the terminal posts. Be sure the condenser is mounted firmly on the distributor for a good ground connection.

Should a condenser tester be available the condenser capacity should check from .21 to .25 microfarads. In the absence of a tester check by substituting a new condenser.

#### I-9. Distributor Points

The contact points should be checked for burning and build-up of metal. If build-up does not exceed  $\frac{1}{64}$ " [about 0.4 mm.] file or grind the points clean, bend into perfect closing alignment.

The contact points should be clean and not burned or pitted. The contact gap should be set at .020" (.508 mm.), measured with a wire gauge. After adjusting, tighten the lock and recheck the gap. If new contacts are installed they should be aligned to make contact at the center of the contact surfaces. Bend the stationary contact bracket to be sure of proper alignment and then recheck the gap.

The contact spring pressure is very important and should be between 17 and 20 ounces (.482-.567 kg.) Check with a spring scale hooked on the breaker arm at the contact and pull in a line at right angles to the breaker arm. Make the reading just as the points separate. This pressure should be within the above limits for if it is too low, missing will occur at high speeds and if too high the cam, block and points will wear rapidly. Adjust the point pressure by loosening the stud holding the end of the contact arm spring and slide the end of the spring in or out as necessary. Retighten the stud and recheck the pressure.

#### I-10. Governor Mechanism

Distributors equipped with vacuum type spark advance control are also equipped with centrifugal control. The centrifugal unit governs the spark advance proportionate to engine speeds giving maximum advance for power at high engine

speeds. Under some operating conditions however, greater advance is required at lower engine speed to provide better operation and greater fuel economy. Under these conditions the vacuum control advances the spark in proportion to the vacuum in the carburetor throat. Should the throttle be fully opened for power, vacuum drops in the carburetor throat so that the vacuum control retards the spark timing and the centrifugal governor correctly adjusts the advance for maximum power requirements.

Check the vacuum chamber and connecting tube for leaks and clean the linkage and clamps.

Inspect the distributor shaft bearing in the housing and replace if worn. Check the friction spring mounted on the end of the shaft at the drive coupling and replace it if worn or damaged.

### I-11. Setting Ignition Timing

All F4-134 Models.

If the engine crankshaft has been rotated with the distributor cap off, remove all the spark plugs except No. 1. Rotate the crankshaft until the No. 1 piston is coming up on the compression stroke. Remove No. 1 spark plug and rotate the crankshaft slowly until the 5° before top center mark on the flywheel is in the center of the timing hole or, on later four-cylinder engines, the 5° before top center mark on the timing gear cover is in alignment with the mark on the crankshaft pulley.

Oil the distributor to cylinder block bearing surface and install the distributor on the cylinder block. Mount the rotor on the distributor shaft and turn the shaft until the rotor points toward No. 1 spark plug terminal tower position (when cap is installed) with the contact points just breaking.

Move the rotor back and forth slightly until the driving lug on the end of the shaft enters the slot cut in the oil pump gear and slide the distributor assembly down into place. Rotate the distributor body until the contact points are just breaking. Install the hold-down screw being sure the body is free to oscillate in the mounting socket for vacuum spark advance control. The late type distributor housing does not turn in the mounting socket as advance and retard is controlled through an arm which extends through the housing and rotates the plate.

Connect the primary wire from the coil to the distributor. Install the spark plugs. Install the spark plug wires placing them in the distributor cap terminal towers starting with No. 1 and installing in counter-clockwise direction in the firing sequence which is 1-3-4-2 for four-cylinder engines. Fig. 166. Start the engine and run it until thoroughly warm and then recheck the timing with a neon timing light. When using the neon light disconnect the vacuum tube otherwise the distributor may advance slightly resulting in a false setting. Do not fail to reconnect the tube.

Accelerate the engine and check the automatic advance action by noting the movement of the timing indicator mark.

### I-12. Setting Ignition Timing

All L6-226 Models.

The procedure for setting the ignition timing on 6-226 models is given in Section C.

### I-13. Spark Plugs

Clean and gap spark plugs as described in Par. C-3. Inspect them for excessive burning and erosion of electrodes, blistering of porcelain at the firing tip, black deposits, or fouling. These conditions indicate that the plugs have not been operating at the correct temperature.

**NOTE:** Prolonged idling just before removing and checking the plugs should be avoided as it may produce false indications.

Spark plug operating temperatures may have been too hot, too cold, or normal as described.

a. At too hot a temperature, the tip of the insulator will show dark spots and blisters after fairly short service. As high-temperature operation is continued, the whole insulator nose will discolor, showing fused and blistered deposits near the electrode as well as considerable erosion and burning of the electrodes. After extreme service, the porcelain itself may be fused, cracked, and blistered at the tip. The electrodes will show extreme erosion and burning and possibly even surface cracking.

**NOTE:** If such cracking appears on certain plugs after fairly short service, it may be caused by water leaks in the associated cylinders.

b. At too cold a temperature plug operation, in the early stages, will result in a dull black sooting of the plug. This condition frequently is found in new vehicles during the break-in period and is no indication of trouble in this case. As the condition progresses, black deposits of oil and carbon build up on the base of the shell and on the insulator until, in extreme cases, the space between insulator and shell may be almost completely filled. Excessive electrode erosion will seldom be found in cases of cold plug operation. These indications can be produced by the use of an excessively rich air-fuel mixture and the carburetor should be checked if this condition is suspected. Fouling will also be caused by leaking rings or intake valve guides that permit excessive oil to reach the combustion chambers. The use of a hotter plug will help burn away some of this fouling but the mechanical condition of the engine should be corrected.

c. In normal temperature operation the plug will accumulate grayish-tan to reddish-brown deposits with fairly uniform discoloration of the insulator nose and slight, localized electrode erosion. If the insulator shows any blotches, blisters, irregular discoloration, etc., look for hot-plug symptoms. Too hot or too cold plug operation may be caused by the use of plugs of other than the specified heat rating but if the plugs are as specified a hotter or colder plug may be desirable. However, under- or over-heating is usually caused by factors other than the type of spark plugs and the cause should be determined before changing plugs. The design of

the engine calls for plugs equivalent to Champion J-8 (as installed in production) though any factor that consistently affects engine operating temperature may cause this requirement to change. Overheating may be caused by insufficient tightening of the plug in the head, which interferes with the flow of heat away from the firing tip. If this is the case, the plug gasket will show very little flattening. Over-tightening, in turn, will produce too easy a heat flow path and result in cold plug operation. This will be evident by excessive flattening and deformation of the gasket. Prevailing temperatures, condition of the cooling system, and air-fuel mixture can affect the engine operating temperature and should be taken into consideration.

#### I-14. GENERATOR

The generator is an air-cooled, two-brush unit which cannot be adjusted to increase or decrease output.

It is rated at either 12 volts, 30-amp. capacity on later vehicles or 6 volts on earlier vehicles. Par. I-1 explains the change to the 12-volt system.

The 6-volt generators are rated at either 35-amp. capacity or 45-amp. capacity. A 45-amp. generator and voltage regulator were placed in production in place of the former 35-amp. generator and regulator. For replacement, voltage regulator and generator must be matched. Otherwise, either a loss of ampere capacity or a burned out generator will result. The 45-amp. units went into production with the vehicle serial numbers listed below:

Model	Serial Number
All L6-226 Models	Start of production
F4-134 4WD Pickup	453-EC2-17878
Stake	453-ED2-10293
F4-134 4x4	453-FA2-13341
F4-134 4x2	Utility Wagon 453-AA2-12481
	Utility Delivery 453-CA2-11065

The service procedures and tests are the same for all units except where noted and are given in Par. I-15 through I-21.

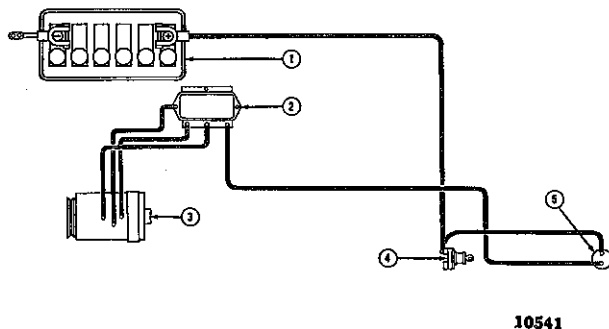


FIG. 168—CHARGING CIRCUIT

- 1—Battery
- 2—Voltage Regulator
- 3—Generator
- 4—Starter Switch
- 5—Charge Indicator

#### I-15. Generator Maintenance

A periodic inspection should be made of the charging circuit. The interval between these checks will

vary depending upon type of service. Dust, dirt and high speed operation are factors which contribute to increased wear of bearings and brushes.

Under normal conditions a check should be made each 6,000 miles (9600 km.).

A visual inspection should be made of all wiring, to be sure there are no broken or damaged wires. Check all connections to be sure they are tight and clean.

Should the commutator be rough or worn the armature should be removed and the commutator turned and undercut. See Par. I-17.

The brushes should slide freely in their holders. Should they be oil soaked or if they are worn to less than one-half their original length they should be replaced. When new brushes are installed they should be sanded to provide full contact with the commutator. Generators should not be checked for output until the brushes are seated.

Brush spring tension is important. High tension causes rapid brush and commutator wear while low tension causes arching and reduced output. Test the tension with a spring scale. The tension is 35 to 53 oz. [0,992 a 1,502 kg.] for the 6-volt generators and 18 to 36 oz. [0,510 a 1,020 kg.] for the 12-volt generators.

#### I-16. Dismantling Generator

Due to the fact that the regulator and battery are part of the generator circuit, and the generator output is extremely low when the battery is fully charged, it is advisable to check the generator circuit to determine definitely if the generator is at fault. Should this check prove that no current is passing to the battery, the fault must be localized either in the generator or regulator. Two tests to localize the trouble are given in Par. I-26b.

If it is definitely determined that trouble exists within the generator, which necessitates dismantling, remove the generator support bolts which will permit removing the generator assembly from the engine.

On 6-volt generators, remove the generator band. To facilitate removal of the commutator end plate and avoid damage to the brushes, the tension of the springs should be released from the brushes. Use a wire hook to lift the brush spring and at the same time pull the brushes partly out of the brackets. Let the spring down against the sides of the brushes to hold them up in the brackets.

On all generators, remove the two frame screws in the commutator end plate and remove the end plate assembly.

Next pull the armature and drive head complete from the generator housing. Remove the generator pulley from the armature by removing the nut and washer. Do not lose the Woodruff key when the pulley is removed. After this, remove the drive end head assembly which includes the oil seal and bearing. To remove the bearing, remove the three screws and lockwashers in the grease retainer and remove the retainer and felt washer, after which, remove bearing, oil guard and felt washer.

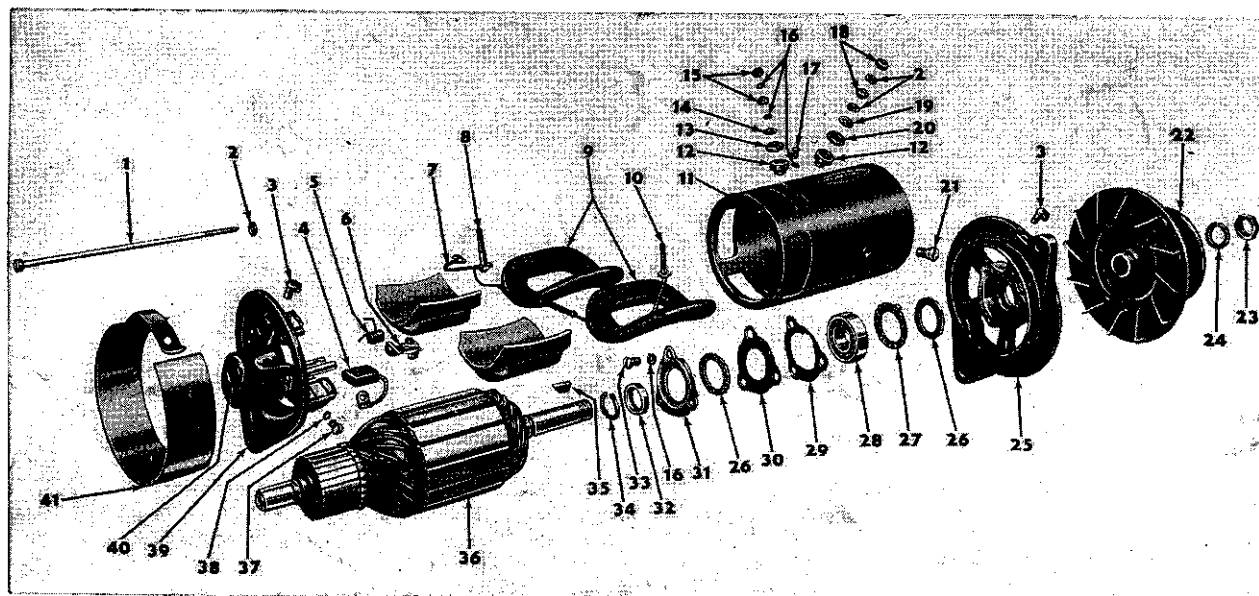


FIG. 169—TYPICAL GENERATOR

- |                             |                      |                         |
|-----------------------------|----------------------|-------------------------|
| 1—Thru Bolt                 | 15—Hex Nut           | 29—Outer Retainer       |
| 2—Lockwasher                | 16—Lockwasher        | 30—Inner Retainer       |
| 3—Oiler                     | 17—Ground Screw      | 31—Bearing Retainer     |
| 4—Brush Set                 | 18—Hex Nut           | 32—Felt Washer Retainer |
| 5—Brush Spring              | 19—Washer            | 33—Retainer Screw       |
| 6—Brush Arm                 | 20—Insulating Washer | 34—Snap Ring            |
| 7—Lead                      | 21—Pole Shoe Screw   | 35—Woodruff Key         |
| 8—Stud                      | 22—Drive Pulley      | 36—Armature             |
| 9—Left and Right Field Coil | 23—Shaft Nut         | 37—Brush Lead Screw     |
| 10—Stud                     | 24—Lockwasher        | 38—Lockwasher           |
| 11—Dowel Pin                | 25—Drive End Head    | 39—Commutator End Head  |
| 12—Insulating Bushing       | 26—Felt Washer       | 40—Bearing              |
| 13—Insulating Washer        | 27—Gasket            | 41—Band Cover           |
| 14—Washer                   | 28—Ball Bearing      |                         |

### I-17. Armature

If the commutator is rough or worn, turn it down in a lathe. After turning, the mica insulation between the segments should be undercut to a depth of  $\frac{1}{32}$ " [0,8 mm.].

To test the armature for a ground, connect one prod of a test lamp to the core or shaft (not on bearing surface) and touch each commutator segment with the other prod. If the lamp lights, the armature segment is grounded and the armature must be replaced.

To test for short in armature coils, a growler, Fig. 170, is necessary. Place the armature on the growler and lay a thin steel strip on the armature core. The armature is then rotated slowly by hand and if a coil is shorted, the steel strip will vibrate. Should a coil be shorted the armature must be replaced.

If precision test equipment is available, the customary accurate tests can be made in accordance with instructions furnished with the testing equipment.

### I-18. Field Coils

Inspect the field coils for chafed wires and using test lamp prods check for both open and grounded circuits. To test for open coil, connect the prods to the two leads from each coil. If the lamp fails to light, the coil is open and must be repaired or replaced.

To test for ground, place one prod on ground and the other on the field coil terminal. If a ground is present the lamp will light and the coil must be repaired or replaced.

If accurate test equipment is available, check the field coils for current draw which should be within the limits of 1.60 to 1.78 amperes at 6 volts for both coils (6-volt generators) or 1.2 to 1.3 amperes at 10 volts for both coils (12-volt generator).

A shorted coil will of course show a much higher draw, while an open coil will show no draw. In either case the generator output will be below normal.

To replace a field coil, disconnect the field terminals, use a heavy screwdriver to remove the field pole piece screws, then the coils together with the pole pieces may be removed. When replacing the coils, set the pole piece screws by staking with a center punch.

### I-19. Brushes

For service information regarding brushes see Par. I-20.

### I-20. Brush Holders

With test prods check the insulated brush holder to be sure it is not grounded. Touch the brush holder with one prod and the end plate with the other prod. If the lamp lights, a grounded brush holder is indicated.

Inspect the brush holders for cracks, distortion and improper alignment. The brushes should slide freely and should be in perfect alignment with the commutator segments.

### I-21. Assembling Generator

Install the felt grease retainer and washer in the drive end head. Check the bearing to be sure it is clean and fill it one-half full with a high melting point grease. Install the bearing and also install the inside felt washer and attach the bearing retainer with the lockwashers and screws. Place the drive end head over the front end of the armature shaft. Install the Woodruff key in the armature shaft and install the drive pulley, being sure the key is in position. Secure in position with the washer, nut and cotter pin.

Place the assembly on end so it rests on the pulley with the commutator end up.

#### 6-volt Generator:

Place generator housing and field coils assembly in position, turning front end bracket so the dowel pin in housing enters hole in end head. Place commutator end plate, including brushes held in a raised position, on shaft and connect field coils. Install the long frame screws. Seat the brushes with 00 sandpaper and install cover band.

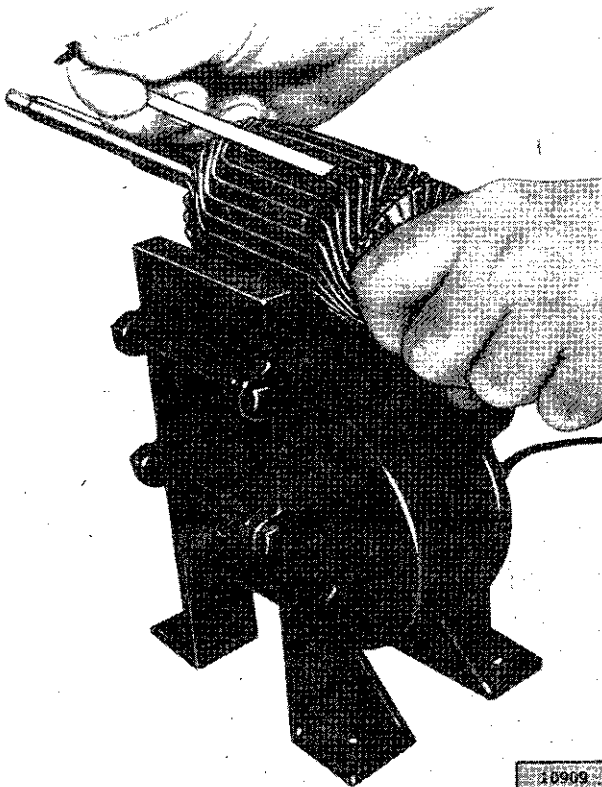


FIG. 170—GROWLER

#### 12-volt Generator:

While holding brushes clear of commutator with the thumbs, place generator housing and field coils assembly in position, turning front end bracket so the dowel pin in housing enters hole in

end head. Place commutator end plate on shaft and install long frame screws.

When reinstalling the generator on the engine, the bracket bolt torque wrench reading is 20 to 25 lb-ft. [2,8 a 3,4 kg-m.] for L6-226 models and 25 to 35 lb-ft. [3,4 a 4,8 kg-m.] for F4-134 models.

### I-22. CURRENT-VOLTAGE REGULATORS

For replacement, voltage regulator and generator must be matched for voltage and capacity, polarity, and common source of manufacture. Otherwise, either a loss of ampere capacity or a burned out generator will result.

These regulators are used with shunt type generators and have three units each with a separate function to perform. These units are the circuit breaker unit, the voltage regulator unit, and the current limiting regulator unit.

### I-23. Circuit Breaker

It consists of an electromagnet and a set of contacts. The contacts are mounted with one on a stationary bracket, and the other on a movable armature which is controlled by the electromagnet. The movable contact is mounted on a spring arm so that as the contacts open and close a slight wiping action is produced.

The electromagnet of the circuit breaker has two windings, one, the shunt coil which is connected across the generator output like a voltmeter and the other a series coil connected in series with the generator output like an ammeter. These two coils are wound in the same direction so that when the generator is charging the battery, the magnetism of the series coil increases the total magnetism. When the battery discharges back through the generator, the magnetism of the series coil is reversed and the magnetism of the two coils is opposed. This results in a decreased pull on the armature and spring action opens the contacts.

The sequence of operation of the circuit breaker is as follows:

When the generator is not running, the contacts are open. When the generator is started, the voltage builds up at the armature terminal and in the shunt coil and as soon as it reaches the value for which the circuit breaker is calibrated, there is sufficient magnetism created by the shunt coil to pull down the armature, closing the contacts which automatically connects the generator to the battery. With the contacts thus closed the current in the series coil is flowing from the generator to the battery or in the same direction as the current in the shunt coil, so that the pull on the armature is increased by the magnetism of the series coil.

When the engine is stopped and the generator loses speed, the voltage falls, and as soon as the generator voltage drops below the battery terminal voltage, the current flows from the battery to the generator, reversing the direction of current in the series coil so that the magnetism created by the series coil opposes and reduces the magnetism of the shunt coil. This reduces the pull on the armature to a point where spring action opens the contacts.

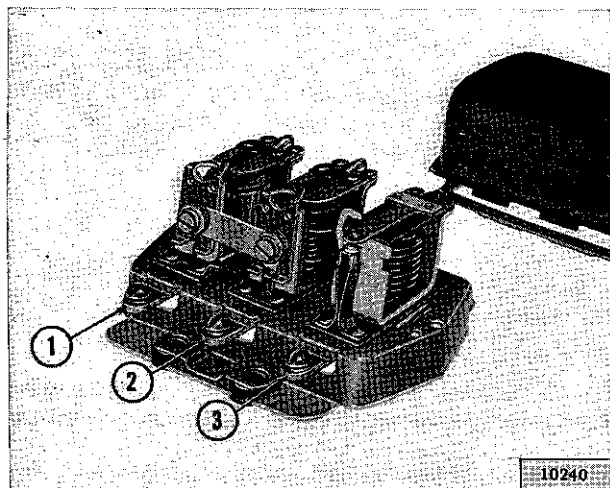


FIG. 171—AUTO-LITE VOLTAGE REGULATOR

- 1—"ARM" Terminal  
2—"FLD" Terminal  
3—"BAT" Terminal

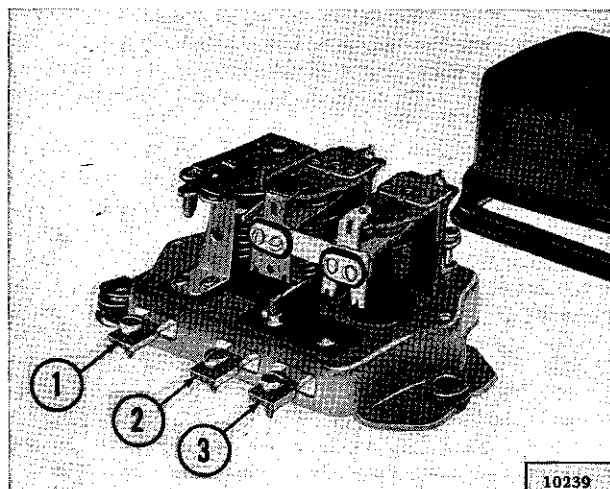


FIG. 172—DELCO-REMY VOLTAGE REGULATOR

- 1—"BAT" Terminal  
2—"ARM" Terminal  
3—"FLD" Terminal

### I-24. Voltage Regulator

The function of the voltage regulator is to hold the generated voltage at a predetermined value as long as the circuit values allow the voltage to build up to the operating voltage.

The electromagnet of the voltage regulator unit has a winding of many turns of fine wire and is connected across the charging circuit so that the system voltage controls the amount of magnetism.

The contacts of the voltage regulator unit are connected in the generator field circuit so that the field circuit is completed through the contacts when they are closed and through a resistor when the contacts are opened.

When the voltage rises to a predetermined value there is sufficient magnetism created by the regulator winding to pull the armature down. This opens the contacts and inserts resistance in the field cir-

cuit of the generator thus reducing the field current. The generated voltage immediately drops, which reduces the pull on the armature to the point where the spring closes the contacts. The output again rises and the cycle is repeated.

These cycles occur at high enough frequencies to hold the generated voltage at a constant value and will continue as long as the voltage of the circuit is high enough to keep the voltage regulator unit in operation. With the addition of a current load great enough to lower the battery voltage below the operating voltage of the unit, the contacts will remain closed and the generator will maintain a charging rate as limited by its speed or the current limiting regulator.

Due to the effect of heat on the operating characteristics of regulator windings it is necessary to compensate for the changes in coil resistance when the regulator is operating under varying temperature conditions. This is accomplished through the use of a nickel iron magnetic by-pass on the voltage regulator unit. This shunt by-passes some of the magnetic flux when the unit is cold and allows most of the flux to act on the armature when the unit is hot. Thus when the coil is hot and not as efficient, the magnetic shunt reduces the amount of flux needed to vibrate the armature.

The compensation is usually more than enough to offset the changes in regulator coil resistance due to heat. The excess compensation allows the regulator to operate at higher voltages under cold operating conditions than under hot conditions. This is necessary as it requires a higher voltage to charge a battery with its internal resistance increased by low temperatures.

### I-25. Current-Limiting Regulator

The function of the current-limiting regulator is to limit the output of the generator to its maximum safe output.

The electromagnet of the current regulator unit consists of a winding of heavy wire that is connected in series with the generator output. When the generator output reaches a predetermined value, the current in the winding produces enough magnetism to overcome the spring tension and pull the armature down. This opens the contacts and inserts resistance in the field circuit of the generator. With the field current reduced by the resistance, the generator output falls and there is no longer enough magnetism to hold the contacts open. As soon as the spring closes the contacts, the output rises and the cycle is repeated. These cycles occur at high enough frequencies to limit the output to a minimum fluctuation.

### I-26. Preliminary Inspection

**a. Wiring** — Check the wiring to see that it is properly connected to the generator.

**b. Generator Performance** — Make sure the generator operates correctly without the regulator in the circuit. Remove the armature and battery leads from the regulator and connect an ammeter between them. Remove the field lead from the regulator and while operating at idle speed touch the

field lead to the regulator base. Increase the speed slowly noting the charging rate.

**CAUTION:** Do not increase the output above the rated output of the generator.

If the generator output will not build up inspect the wiring harness for shorts and opens and remove the generator for an overhaul. To check the generator circuit when a suitable ammeter is unavailable, Fig. 168, disconnect the armature cable at the regulator. Connect one lead of a 6-12v test lamp to the regulator terminal marked "armature" and with the engine running, ground the other lead. Should the test light fail to burn there is a fault either in the generator or regulator. To localize the fault, disconnect both the "Field" and "Armature" cables at the generator. Connect a wire from the "Field" terminal to ground and use a 60 watt, 110 volt test lamp to ground the "Armature" terminal. If the generator is charging satisfactorily the test lamp will glow at approximately 1500 rpm. engine speed and the fault will be definitely localized in the regulator.

**c. Incorrect Regulator** — Make sure the regulator is the correct type for use with the generator.

**d. Battery** — Check the specific gravity and terminal voltage of the battery. If the battery is not up to specifications substitute temporarily for test purposes a fully charged battery of the same type and capacity.

**e. High Resistance Connections** — Inspect the wiring between the generator, regulator and battery for broken wires and high resistance connections. Pay special attention to the ground connections at all three units. Connect a reliable ammeter with 1-ampere graduations in series with the regulator B terminal and the lead removed from this terminal. Run the generator at a medium speed and turn on the lights or accessories until the ammeter shows a 10-ampere charging rate. At this charging rate measure the voltage drop between the following points using an accurate voltmeter graduated in .1-volt divisions. The voltmeter should not show a reading above the maximum noted.

Generator "A" terminal to regulator "A" terminal — .1-volt maximum.

Generator "F" terminal to regulator "F" terminal — .05-volt maximum.

Battery terminal to regulator "B" terminal — .1-volt maximum.

Regulator ground screw to generator frame — .03-volt maximum.

Regulator ground screw to battery ground post — .03-volt maximum.

Generator frame to battery ground post — .03-volt maximum.

## I-27. Test Procedure

**a. Circuit Breaker** — Connect an ammeter in series between the regulator B-terminal and the lead wire removed from that terminal. Connect a voltmeter between the regulator A-terminal and the regulator mounting base. Position a thermometer about 2" [5 cm.] from the regulator cover but mak-

ing sure it does not come in contact with the regulator. Disconnect the field lead from the regulator F terminal and insert a variable resistance (3 amp. — 50 ohm capacity) between the lead and the regulator terminal. Run the generator at about 1000 generator rpm. Insert all the resistance in the field circuit, then slowly reduce the resistance noting the voltage reading just before the change caused by the closing of the circuit breaker. Increase the charging rate to the figure specified for the regulator being tested then reduce the charging rate by inserting resistance in the field circuit. Note the voltmeter and ammeter reading just before the circuit breaker opens and the ammeter reading drops to zero. The closing voltage and the opening voltage or current should be within the limits specified. An accurate method for noting the exact instant of the opening or closing of the circuit breaker is to connect a headphone (2000 ohms or higher) to the battery and armature terminals of the regulator. When the contacts open or close a click will be heard in the headphone. To adjust the closing voltage change the armature spring tension by bending the hanger at the lower end of the spring. Increase the spring tension to raise the closing voltage or decrease the tension to lower the voltage. To adjust the opening voltage raise or lower the stationary contact keeping the contacts perfectly aligned. Increasing the contact gap lowers the opening voltage. Change the contact gap by expanding or contracting the stationary contact bracket, keeping the contacts aligned. Do not adjust the gap between the contacts to less than the specified minimum.

**b. Voltage Regulator** — Connect the ammeter as in step a. Connect the voltmeter between the regulator B-terminal and the regulator base. Remove the variable resistance from the field circuit. Run the generator at half output for 15 minutes to bring the regulator to normal operating temperature. Keep the cover on the regulator during the warm-up period and also when taking readings.

Stop the engine then restart it and bring it up to approximately 2500 generator rpm. Adjust the amperage to half maximum output by turning on lights or accessories and then note the voltmeter reading. This reading should be within the limits specified for the voltage regulator operation. To adjust the operating voltage change the armature spring tension by bending the hanger at the lower end of the armature spring. After each adjustment stop the engine then restart it. Bring it up to speed and adjust the current before taking a reading. In order to obtain an accurate indication of the operation of the voltage regulator unit connect a headphone (2000 ohms or higher) between the F terminal and ground to pick up the sound of the opening and closing of the contacts. The clicks should be regular and clear without irregularities or missing. If the tone is not clear and regular remove the regulator cover and inspect the contacts. The contacts should be flat and not burned excessively and should be aligned to make full face contact. If the contacts need cleaning refer to paragraph d for the method.

**c. Current Regulator** — Connect the regulator and the test equipment as in step b. Running the



generator at approximately 300 generator rpm., turn on lights and accessories so that the generator must charge at maximum rate. The ammeter should give a reading within the limits specified.

To adjust opening amperage, change the armature spring tension by bending the hanger at the lower end of the armature spring. After each adjustment, stop the engine, then restart it. Bring the engine up to speed and take an ammeter reading. Keep the cover on the regulator when taking these readings.

Connect a headphone (2000 ohms or higher) between the regulator F-terminal and ground to pick up the sound of opening and closing of the contacts. Clear, regular clicks should be heard over the headphones; they should not be irregular or missing. If the tone is not clear and regular remove the regulator cover and inspect the contacts. The contacts should be flat and not burned excessively and should be aligned to make full face contact. If the contacts need cleaning refer to paragraph d. below for the method.

**d. Contacts**—Inspect the contacts on all three units. In normal use the contacts will become grayed. If the contacts are burned or dirty or if they are not smooth, file the contacts with a #6 American, Swiss cut, equalling file. Move the file parallel and lengthwise to the armature. File just enough so that the contacts present a smooth surface toward each other. It is not necessary to remove every trace of pitting. After filing, dampen a piece of linen or lintless bond tape in refined carbon tetrachloride and draw the tape between the contacts. Repeat with a dry piece of tape. Use clean tape for each set of contacts.

**e. Recheck**—Operate the unit at half maximum output for five minutes with the cover on the regulator. Repeat the testing procedure for all units as described in a, b, c above. Be sure cover is on regulator when taking readings.

## I-28. QUICK CHECKS

### I-29. Low Charging Rate with a Fully Charged Battery

A fully charged battery and a low charging rate indicates normal regulator operation.

A further check of the regulator operation can be made by using the starting motor for 5 to 10 seconds with the ignition switch in the "off" position. Then start the engine and operate at a generator speed of 2500 to 3000 R.P.M. The charging rate should rise to its maximum value then taper off to a minimum charge as the battery becomes charged.

### I-30. High Charging Rate with a Fully Charged Battery

This is usually an indication that the voltage regulator is not operating correctly. The high voltage will cause the battery to gas excessively and will shorten the life of the ignition contacts and, in general, will have a detrimental effect on all connected load.

Connect an ammeter in series with the regulator

"B" terminal and the lead removed from the terminal. Run the generator at a medium speed and perform the following operation. After each test is completed reconnect whatever leads have been opened.

### I-31. Test One

Disconnect the field lead at the generator.

**a.** Output drops to zero—shorted field circuit in regulator or in the wiring harness. See test 2.

**b.** Output does not drop—shorted field circuit in generator. Inspect generator.

### I-32. Test Two

Disconnect the field lead at the regulator.

**a.** Output drops to zero—shorted field in regulator. See test 3.

**b.** Output does not drop—shorted wiring harness. Repair or replace wiring harness.

### I-33. Test Three

Remove the regulator cover and hold the voltage regulator contacts open.

**a.** Output drops to zero—regulator contacts sticking, regulator out of adjustment, or regulator inoperative. Check operation (test 5), check for high resistance (test 4), and clean contacts per instructions in Par. I-36.

**b.** Output does not drop—shorted field circuit in the regulator. Clean the regulator contacts and inspect the regulator visually for incorrect wiring between units and shorted leads.

### I-34. Test Four

Operate the units at 10 amperes output and measure the voltage drop from the regulator base to the generator frame.

**a.** Voltage reading below .03 volts—ground circuit is satisfactory. See test 5.

**b.** Voltage reading above .03 volts—Inspect ground circuit for poor connections and eliminate the high resistance. See test 5.

### I-35. Test Five

Connect a headphone from the regulator field terminal to the base and hold the current regulator contacts closed.

**a.** A steady beat is heard—voltage regulator operating. Reset regulator as in the operation test, Par. I-27.

**b.** An unsteady beat is heard—dirty or sticking contacts. Clean contacts per instructions in Par. I-36.

**c.** No beat is heard—inoperative voltage regulator unit. Adjust regulator operation as in the operation test. If the regulator cannot be adjusted within limits, remove for overhaul.

### I-36. Cleaning of Contacts

Clean the voltage regulator contacts with a #6 American Swiss cut equalling file. File lengthwise and parallel to the armature and then clean the contacts with clean linen tape. First draw a piece of tape that has been wet with carbon tetrachloride between the contacts then follow with dry tape. Reset the regulator operation as in the operation test, Par. I-27.



### I-37. Low Battery and a Low or No Charging Rate

Check all wiring for loose connections, frayed insulation and high resistance connections and correct any fault.

Make sure the generator operates correctly without the regulator in the circuit. Remove the "A" and "B" leads from the regulator and connect an ammeter between them. Remove the field lead from the regulator and while operating at idle speed touch the field lead to the regulator base. Increase the speed slowly noting the charging rate. Do not increase the output above the rated output of the generator. If the generator output will not build up, inspect the wiring harness for shorts and opens and remove the generator for an overhaul.

Connect an ammeter between the battery lead and the regulator "B" terminal. Connect the field lead to the regulator "F" terminal and connect the armature lead to the regulator "A" terminal. Connect a voltmeter from the regulator "A" terminal to the regulator base. Operate the generator at a medium speed and perform the following tests:

#### I-38. Test Six

Read the voltmeter.

- a. Voltage builds up—open series circuit. See test 7.
- b. Voltage does not build up—regulator out of adjustment, field circuit open, grounded series circuit. See test 8.

#### I-39. Test Seven

Remove the regulator cover and with the generator operating at a medium speed hold the circuit breaker contacts closed.

- a. Ammeter shows no charge—open circuit breaker shunt winding, incorrect setting of circuit breaker, or dirty contacts. Clean contacts and reset circuit breaker as in Par. I-27a. If the circuit breaker cannot be set, the shunt coil is open and the regulator should be removed for overhaul.
- b. No generator output—clean the circuit breaker contacts and try the test again. If there is still no charge the series windings are open and the regulator should be removed for overhaul.

#### I-40. Test Eight

Run the generator at idle speed and momentarily connect a jumper from the F terminal to the regulator base.

- a. Voltage builds up—open field circuit or regulator out of adjustment. See test 9.
- b. Voltage does not build up—grounded series circuit. Remove regulator for overhaul.

#### I-41. Test Nine

Operate at a medium speed with the jumper removed. Remove the regulator cover and hold the voltage regulator contacts closed.

- a. Voltage builds up—voltage regulator contacts burned or dirty or incorrect regulator setting. Clean the contacts and adjust the regulator as in Par. I-27.
- b. Voltage does not build up—clean contacts and

repeat test. If the voltage still does not build up, see test 10.

#### I-42. Test Ten

Remove the regulator cover and hold the current regulator contacts closed.

- a. Voltage builds up—current regulator contacts burned or dirty or incorrect regulator setting. Clean the contacts and adjust the regulator as in Par. I-27.
- b. Voltage does not build up—clean the contacts and repeat the test. If the voltage still does not build up remove the regulator for an overhaul.

### I-43. STARTING MOTOR

The starting motor is similar in construction to the generator, but the design of the parts is different due to it being necessary for the starting motor to handle a large amount of current for short intervals. Both motor and generator require a frame, field coils, armature and brushes.

Fig. 174 illustrates a typical starting motor, the internal construction of which is representative of all the motors used on the models discussed here. There are some differences in starting switch control and flywheel drive mechanism which are covered separately. Also the 12-volt starting motor has no band cover, item 3.

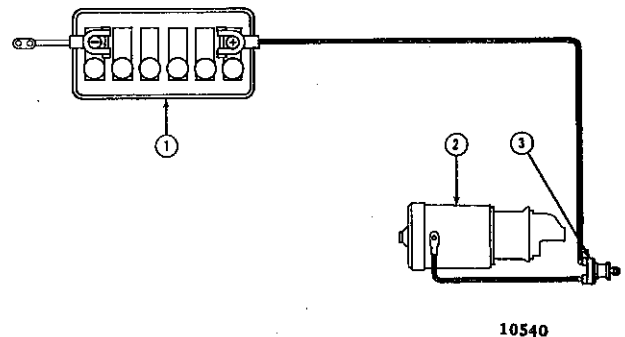


FIG. 173—STARTING CIRCUIT

- 1—Battery
- 2—Starting Motor
- 3—Starter Switch

### I-44. Maintenance Procedure

A periodic inspection should be made of the starting circuit. While the interval between these checks will vary according to the type of service, it should, under normal conditions, be made every 500 hours of operation. At this check the following points should be inspected.

### I-45. Wiring

Inspect the starting circuit to make sure that all connections are clean and tight. Check for worn or damaged insulation on the wires. Perform a voltage-loss test to make sure there is no loss of starting motor efficiency resulting from high resistance connections. Voltage loss from the battery terminal to the starting motor terminal should not exceed .30 volts for each 100 amperes. Voltage loss between the battery ground post and the starting motor frame should not exceed .10 volts for each 100 amperes. If the voltage loss is greater

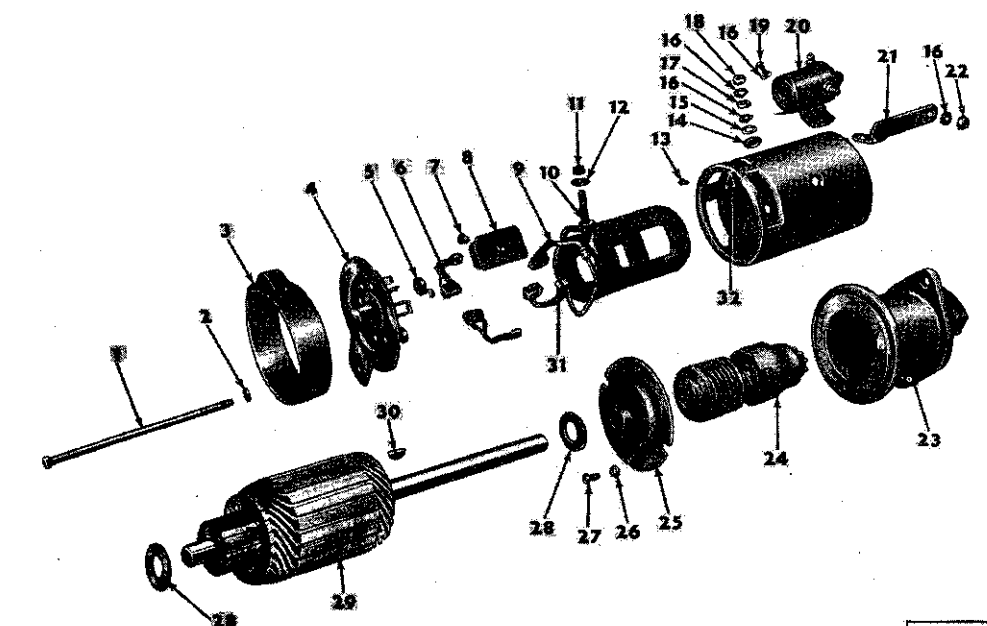


FIG. 174—TYPICAL STARTING MOTOR

- 1—Thru Bolt
- 2—Lockwasher
- 3—Band Cover
- 4—Commutator End Head
- 5—Brush Spring
- 6—Brush Set
- 7—Pole Shoe Screw
- 8—Pole Shoe
- 9—Field Coil Assembly
- 10—Terminal Stud
- 11—Insulator Bushing

- 12—Insulator Washer
- 13—Ground Screw
- 14—Insulator Washer
- 15—Plain Washer
- 16—Lockwasher
- 17—Terminal Stud Nut
- 18—Terminal Stud Nut
- 19—Switch Mounting Screw
- 20—Solenoid Switch
- 21—Connector
- 22—Nut

- 23—Pinion Housing
- 24—Bendix Drive
- 25—Bronze Bearing
- 26—Lockwasher
- 27—Screw
- 28—Thrust Washer
- 29—Armature
- 30—Woodruff Key
- 31—Equalizer
- 32—Dowel Pin

than these limits, measure the voltage loss over each part of the circuit until the resistance causing the voltage loss is located and corrected.

#### I-46. Commutator

Sluggish starting motor operation may be caused by a dirty commutator or worn brushes. If the commutator is dirty or discolored, it can be cleaned on 6-volt starting motors with 00 sandpaper. Blow the sand out of the motor after cleaning. The commutator on 12-volt starting motors cannot be cleaned while the starting motor is mounted on the engine and it will be necessary to remove it and proceed as for an overhaul. Should the commutator in any starting motor be rough or worn, it should be removed for cleaning and reconditioning.

#### I-47. Brushes

The brushes should slide freely in their holders and make full contact on the commutator. Worn brushes should be replaced.

#### I-48. Overhaul Procedure

At periodic intervals the starting motor circuit should be thoroughly checked and the motor removed from the engine for cleaning and checking.

#### I-49. Disassembly

To remove the starting motor from the engine, disconnect the leads and cover the battery lead with a short piece of hose to prevent short circuiting. Remove the flange bolts holding the starting

motor to the flywheel housing. Remove the starting motor from the vehicle.

Each part of the starting motor should be removed, cleaned, and inspected for evidence of wear or damage. The Bendix Drive should be cleaned and inspected for evidence of wear or a distorted spring. Bearings should be checked for proper clearance and fit. All insulation should be free of oil and in good condition. The armature, field coils, and brushes should be checked for good ground and lack of open circuits.

#### I-50. Brushes

The brushes should slide freely in their holders and make full contact on the commutator. Worn brushes should be replaced.

Check brush spring tension with a spring scale. Hook the scale under the brush spring near the brush and pull on a line parallel with the side of the brush. Take the reading just as the spring leaves the brush. It is important that the brush spring tension be kept within the limits specified at the end of this section. If the tension is too low, there will be a loss of efficiency from poor brush contact. Too great a tension will cause excessive brush and commutator wear. To change the tension, twist the spring at the holder with long-nosed pliers.

Worn brushes should be replaced.

Brushes that are soldered to the field coil should be unsoldered and the loop in the field coil lead

should be opened. Insert the new brush pigtail to its full depth in the loop. The new brush lead should be tightly clinched in the terminal and then soldered to make a strong, low-resistance connection.

#### I-51. Commutator

Check the commutator for wear and discoloration. If the commutator needs cleaning, use 00 sandpaper and afterward make sure all the sand is removed. If the commutator is rough or worn, it should be turned down in a lathe until all roughness is gone. Remove tool marks by sanding with 00 sandpaper. Undercut the mica segments to a depth of  $\frac{1}{32}$ " [0.79 mm.] in an undercutting fixture. After undercutting, check the armature on a growler, Fig. 170. The procedure for this check is given in Par. I-52.

#### I-52. Armature

Visually inspect the armature for mechanical defects before checking for shorted or grounded coils. Use a set of test probes for testing armature circuits. To test the armature for grounds, touch one point of the test probes to a commutator segment and touch the other point to the core or shaft. Do not touch the points to the bearing surface or to the brush surface as the arc formed will burn the smooth finish. If the lamp lights, the coil connected to the commutator segment is grounded.

To test for shorted armature coils, a growler as shown in Fig. 170 is necessary. The armature is placed against the core and a steel strip is held on the armature. The growler is then energized and the armature rotated slowly by hand. If a shorted coil is present, the steel strip will become magnetized and will then vibrate.

#### I-53. Field Coils

Using test probes, check the field coils for both ground and open circuits. To test for ground, place one probe on the motor frame or pole piece and touch the other probe to the field coil terminals. If a ground is present, the lamp will light.

To test for open circuits, place the probes on the field coil terminal and on an insulated brush. If the light does not light, the coil is open circuited.

#### I-54. Brush Holder Inspection

Using test probes, touch the insulated brush holder with one probe and a convenient ground on the commutator end head with the other probe. If the lamp lights, it indicates a grounded brush holder.

#### I-55. Assembly of Starting Motor

When assembling absorbent bronze bearings, always use the proper arbor designed to give the proper bearing fit. Soak the bearing in oil before assembling in the bearing bore.

Brushes should be correctly installed and connected as outlined in Par. I-50 in order to be sure of proper starting motor efficiency.

Soak the bearings in oil and give the bearing seats a light coating of oil.

#### I-56. Bench Test

Check the starting motor for free-running voltage and current within specifications. To test, connect the starting motor to a battery, ammeter, and voltmeter. If the current is too high, check the bearing alignment and end play to make sure there is no binding or interference.

Use a spring scale and torque wrench and check the stall torque to see that the motor is producing its rated cranking power. The stall torque will be the product of the spring scale reading and the length of the arm in feet. If the torque is not up to specifications, check the seating of the brushes on the commutator and the internal connection of the starting motor for high resistance.

Check the Bendix Drive for correct operation. The Bendix Drive pinion should shift satisfactorily when the starting motor is operated under no-load condition.

#### I-57. Bendix Folo-Thru Drive

The Bendix Folo-Thru drive is designed to overcome premature demeshing of the drive pinion from the flywheel ring gear until a predetermined engine speed is reached. See Fig. 175.

No repairs or adjustments are possible on this drive and a complete new unit must be installed if trouble develops.

#### I-58. Lubrication of Folo-Thru Drive

A periodic cleaning and relubrication of the drive is advisable, the frequency of which will depend on the type of service to which the vehicle is subjected and the locale of operation.


Remove the starting motor from the engine and take off the outboard housing. The pinion and barrel assembly will be in the demeshed position on the screwshaft. *Do not* move it forward *until after* that portion of the armature shaft ahead of the pinion has been cleaned. If accidentally rotated to the outer end of the screwshaft it will lock in that position and cannot be forced back.

Do not disassemble the drive for any reason.

Do not dip or wash the drive in any cleaning solution.

Do not remove the drive from the armature shaft.

Remove excess oil, grease or foreign matter from the armature shaft by wiping it with a clean cloth.

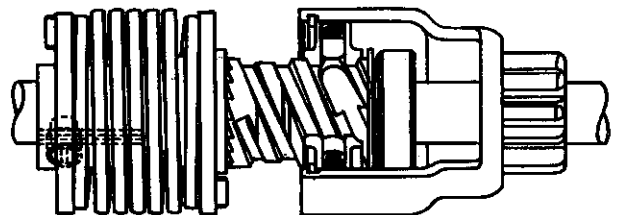

10859

FIG. 175—BENDIX FOLO-THRU DRIVE

Dampen the cloth with kerosene if necessary. A light film of SAE 10 oil may then be applied to the shaft.

Now rotate the pinion and barrel assembly to the fully extended position, thereby exposing the screw-shaft triple threads. Use a cloth dampened with kerosene to wipe them clean. *Do not use gasoline or any commercial cleaner.* If the dirt is thick and gummy, apply the kerosene with a small brush. Tilt the starting motor so that a small amount will run under the control nut. Relubricate with a thin film of SAE 10 oil. Use SAE 5 at extremely low temperatures.

Reassemble the starting motor to the engine with the drive in the extended position. Carefully mesh the pinion with the flywheel ring gear before tightening the starter motor mounting bolts. It may require a slight rotation of the pinion to index it into the ring gear. When the engine starts the drive pinion will automatically demesh from the ring gear and return to its normal position.

### I-59. Starting Switch

Should a starting motor fail to deliver maximum power the fault may be due to voltage drop at the starting switch contacts due to corrosion or burning. Check the switch by comparing the voltage at the battery terminals and that at the starting switch terminals. The voltage drop should not exceed .05 volts per 100 amperes. When checking a solenoid type switch, the contacts should be closed electrically to simulate actual conditions of operation.

Should it be impossible to file the switch contact plates to obtain a clean full surface contact the switch should be replaced.

The switch is an electrically controlled starting switch with the control connected to the ignition switch. This starting switch is a solenoid-type which electrically closes the circuit between the battery and the starting motor. When the ignition key is turned to the extreme right, a contact is made which energizes the solenoid winding and closes the circuit. The solenoid is spring loaded and the circuit is opened when the ignition key is allowed to return to the "Ignition On" position. No repairs or adjustments can be made on this switch and if trouble develops in one it must be replaced by a new switch.

**NOTE:** On early production L6-226 models equipped with dual horns, interference may develop between the starter solenoid "hot" terminal and the lowest point of the dual horn assembly. The condition may be corrected by rotating the solenoid bracket 90° about its rear mounting bolt and attaching the front mounting bolt in its new top location. The battery and cables to the solenoid terminals should be disconnected while relocating the solenoid bracket.

### I-60 Ignition Switch

The ignition switch serves both to energize the ignition system and engage the starter switch. With the key in the vertical position, the electrical system is OFF. Turning the key to the left energizes only the instruments and auxiliary equipment such

as radio and heater. Turning the key to the right energizes the ignition system and auxiliary equipment. Turning the key "hard right" engages the starter switch. To remove the lock cylinder from the switch, first turn the key to the left (ignition-auxiliary) position. Then insert a short piece of wire or a paper clip into the lock release hole in the switch body. Pressing in on the wire will compress the lock cylinder retainer, allowing the cylinder to be removed. Either part, the lock cylinder or the switch unit, may be replaced as needed.

Two switches that are interchangeable have been used in production. Early switches were held in place by a bezel and tension spring. Later switches are held in place by a threaded bezel nut. Lock cylinders are not interchangeable between these two switches. Early lock cylinders were  $1\frac{1}{32}$ " [31 mm.] long. Later lock cylinders are  $1\frac{17}{32}$ " [39 mm.] long. Be sure to get the correct replacement when changing lock cylinders.

### I-61. Replacing Fuse

Check with specifications and use the correct size fuse. A fuse with too small an amperage will blow on ordinary current. A fuse with too large an amperage will let too much current flow, which may damage the wiring or set fire to the vehicle. When installing a fuse, be sure fuse clips in the fuse receptacle are clean. If they are not, wipe them clean and bright with emery cloth. Be sure receptacle clips hold fuse tightly to avoid poor contact. If the fuse turns easily in the clips, remove the fuse, squeeze the clips tighter together, and then reinstall the fuse.

### I-62. Indicators and Gauges

Early production vehicles are equipped with four gauges (fuel, oil, ammeter, and temperature). Later production vehicles are equipped with two gauges (fuel and temperature) and two indicators (oil pressure and battery charge). A voltage regulator maintains a constant voltage to the gauges. On early production vehicles, the voltage regulator is mounted at the rear of the instrument panel; on later production vehicles, on the rear of the instrument cluster. On current production vehicles, the voltage regulator is integral with the fuel gauge.

The fuel gauge is connected by a single wire to a float-and-slide-rheostat sending unit in the fuel tank. The temperature gauge is connected by a single wire to a sealed bulb unit mounted in the rear of the cylinder head. The oil pressure indicator (or gauge) is connected by a single wire to a diaphragm-type unit located at the rear of the cylinder block. The battery charge indicator lamp is lit when energy is being supplied by the battery; the lamp goes out when the required energy is supplied by the generator.

Should trouble develop in the gauges, first check the regulator (fuel gauge on current production vehicles). If the voltage to the regulator is below 10 volts in a 12-volt system or 5 volts in a 6-volt system low gauge readings will result. Voltage in excess of 16 volts in a 12-volt system or 8 volts in a 6-volt system will not affect gauge readings but may result in premature wear of the regulator

contacts. If the voltage to the regulator is within the above limits, check the electrical connections to the regulator (or fuel gauge), especially the ground connection. If the readings of all the gauges is too high, or they all read too low, replace the regulator (or fuel gauge).

If the temperature gauge or heat indicator in the instrument cluster have failed, the cause may originate from the jumper bar shorting out against the instrument case. Check the jumper bar between the temperature gauge and heat indicator at the rear of the instrument case. On later production vehicles, the jumper bar is covered with an insulating sleeve to protect it from shorting out against the instrument case. If the jumper bar does not have this sleeve, either install one or wrap the bar with plastic electrical tape to half an inch [1 cm.] from each end. When installing the jumper bar, be sure the curved segment is closest to the fuel gauge.

Should only one of the gauges register incorrectly, disconnect the lead wire at the sending unit. Connect a new fuel tank unit to the lead wire and ground the unit. With the ignition switch on and the float in the empty position, the gauge should have a zero reading. With the float in the full position, the gauge should read at the top of the scale. Correct readings from these tests indicate the gauge and lead wire are in good working order. If the readings are still incorrect, use a substitute lead wire and repeat the tests. Correct readings now indicate that the lead wire is at fault and should be replaced. Should the gauge readings be incorrect, replace the gauge.

If the regulator and gauges test correctly, the sending unit is inoperative and should be replaced by a new one.

Should a new fuel tank unit not be available for testing, use a 6-12v., 1 c.p. test light in its place. When the gauge is operating correctly, the pointer will move three-quarters or more across the dial.

If the oil pressure indicator does not indicate correctly, first check the light bulb. Next, check all connections and lead wires. If, after all possible defects are corrected, the indicator light does not go on and off properly, then diaphragm type unit in the cylinder block should be replaced.

Do not attempt to repair any of the gauges, sending units or the regulator; replacement is the only procedure.

### I-63. Lighting System

The wiring of the lighting systems is shown in wiring diagrams which indicate the various units in relation to the position in which they are found. Wires in the various circuits are of different colors or are marked by tracers to assist in checking individual circuits.

### I-64. Main Light Switch

This switch is a dual functioning unit having two push-pull positions and a rotary action. When pulled out to the first position, the front parking and tail lights are turned on. When pulled all the way out to the second position, the headlights and tail lights are turned on. Rotating the switch to

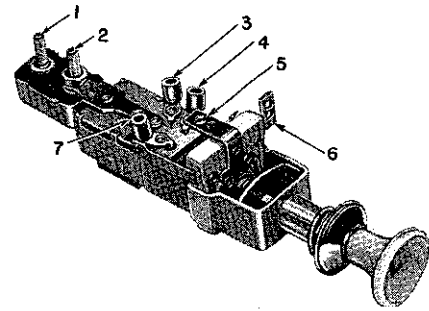


FIG. 176—MAIN LIGHT SWITCH

- 1—Battery
- 2—Auxiliary
- 3—Parking Lights
- 4—Headlights
- 5—Dome Light
- 6—Instrument Panel Lamp
- 7—Rear Lights

the right dims the instrument cluster lighting. The switch may be removed from the instrument panel by first loosening the set screw in the control knob and removing the knob. The retaining nut may then be removed and the switch removed through the rear of the instrument panel. The light switch shown is in Fig. 176.

### I-65. Stop Light Switch

The stop light switch is of the diaphragm type and is located in the front end of the master brake cylinder. Should the switch become inoperative, it is necessary to install a new one. Fig. 178 shows the wiring of the stop light circuit.

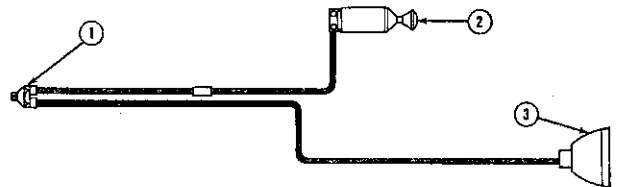


FIG. 178—STOP LIGHT CIRCUIT

10610

- 1—Stop Light Switch
- 2—Light Switch
- 3—Tail Light

### I-66. PRIMARY CIRCUIT

Before testing the primary circuit, make certain that the battery is satisfactory or install a fully charged battery for the primary circuit tests. Also, check the starter motor for excessive voltage drop and check the starter motor itself for excessive draw.

a. Measure the voltage at the coil primary terminals while cranking the engine with the starter motor. If the voltage is less than  $4\frac{1}{2}$  volts with 6-volt system or 9 volts with 12-volt system the trouble will be found in the primary circuit. If there is no voltage at all, check for a break in the primary circuit, possibly in the coil primary winding.

b. To check the primary circuit, turn the ignition on, turn the engine until the points are closed, and then measure the voltage drop across each portion of the circuit with a voltmeter.

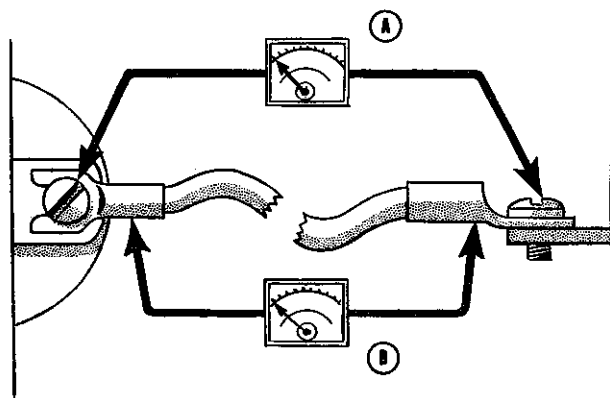


FIG. 179—VOLTAGE DROP TEST

A—RIGHT WAY—Voltmeter indicating drop across wire and connections.

B—WRONG WAY—Voltmeter indicating drop across wire only. Does not show bad connections.

**NOTE:** Most voltage drops will be found at the connections of wires to terminals as dirt, oxidation, etc. can cause excessive resistance at these points. Measure voltage drops in wires as shown in Fig. 179 to take this into account.

c. Connect the voltmeter from the battery cable terminal on the starter solenoid to the battery terminal of the coil primary. If the voltmeter reads more than 0.2 volt, perform the checks given in steps d, e, and f following.

d. Connect the voltmeter from the solenoid terminal to the battery terminal of the ignition switch. If the voltmeter reads more than .05 volt, check and clean the connections at solenoid, light switch, and ignition switch.

e. If the voltmeter reading in step d is less than .05 volt, connect the voltmeter from the battery terminal to the ignition terminal on the ignition switch. If the voltage drop is more than 0.1 volt, repair or replace the ignition switch.

f. If the voltage drop in step e is not more than 0.1 volt, connect the voltmeter from the ignition terminal of the ignition switch to the battery terminal of the coil primary. If the voltmeter reads more than .05 volt, clean and tighten the connections and check again. If the voltmeter again reads more than .05 volt, replace the wire.

g. Connect the voltmeter from the distributor primary terminal on the coil to the coil terminal on the distributor. Voltage drop should not exceed .05 volt. Clean and tighten connections if necessary.

h. Connect the voltmeter from the coil terminal on the distributor to a clean, paint-free spot on the distributor body. The reading should not exceed .05 volt. If more, it indicates excessive resistance through the points or in the distributor internal connections. Clean and align the points and make

sure the breaker arm connection to the primary terminal as well as the stationary contact point mounting in the body is clean and tight.

i. Open the points and check the voltmeter. It should read close to peak voltage. Low voltage indicates that a circuit through the distributor (a short) exists while the points are open.

j. Disconnect the condenser lead and open the points. A jump to full voltage indicates a short in the condenser. Replace the condenser. If there is no jump to full voltage, overhaul or replace the distributor.

k. With the points closed, connect the voltmeter from a clean, paint-free spot on the distributor body to the negative post of the battery. The voltage drop should be practically zero, a hardly readable deflection on the voltmeter. If the voltmeter registers a voltage drop, perform the checks in steps l and m following.

l. Check for voltage drop in the battery ground cable. Clean the battery post, cable terminals, and contact surface on the bellhousing, or on body if a noticeable deflection of the voltmeter occurs.

m. Check for any voltage drop between the distributor body and a clean, paint-free spot on the cylinder block. If there is any voltage drop, remove the distributor and clean the mounting surfaces of distributor body and cylinder block.

## I-67. SECONDARY CIRCUIT

If satisfactory ignition is not obtainable with correct point gap and tension; satisfactory condenser; sufficient primary voltage; and correctly cleaned, gapped, and installed spark plugs; the secondary circuit should be investigated.

a. Test the coil. Bring the coil up to operating temperature using the coil heat feature of a coil tester, if available. Refer to the coil tester manufacturer's instructions for specific hook-ups for performing the checks given in steps b, c, and d following.

b. Connect the positive lead of the tester to the battery terminal of the coil primary winding. Connect the tester ground lead to the coil tower. Measure the resistance of the secondary winding. If the resistance is more than 20,000 ohms, a fault in the secondary winding is indicated.

c. Check for a grounded secondary by touching the tester ground lead to the coil cover. If resistance is not over 100,000 ohms, the secondary is grounded to the cover.

d. If the secondary winding is satisfactory, measure the primary current draw in accordance with the instructions of the test equipment manufacturer.

e. Check the secondary circuit for leakage. With the coil primary in the circuit with the breaker unit of the tester, connect a long, high-tension test lead to the coil tower. Check the secondary circuit for leakage by performing the checks given in steps f, g, h, and i following.

**NOTE:** In the following tests, a slight sparking and meter deflection will usually be seen just as contact is made. This is caused by capacitance and does not indicate defective insulation.

**f. Check distributor cap.** Remove the coil lead from the cap and touch the test lead to the center contact inside the cap. If the meter reading drops when the contact is touched or if sparking is seen, a leakage path is present between the center contact and one of the plug towers. This leakage path will be in the form of a crack or carbon track in the cap. Disconnect the spark plug wires from the cap one at a time and test each plug contact with the high-voltage lead and with all other plug wires connected. Any sparking or meter drop indicates that a leakage path exists between that particular contact and an adjacent one. Testing the adjacent contacts will determine which pair is at fault.

**g. Check distributor rotor.** Touch the test lead to the spring contact in the center of the distributor rotor. Any leakage in the rotor insulation between the contact and the shaft will cause a drop in the meter reading and usually sparking will be seen.

**h. Check spark plug wires.** Disconnect the spark plug wires from the plugs and test the plug terminal of each. The meter reading should not drop below the open secondary value (value before making contact). If it does or if a large spark occurs when the test lead and the plug wire are separated, there is a break in the insulation on that wire.

**i. Check the coil tower insulation.** Remove the high-tension test lead from the coil tower and touch the ground lead of the coil tester to several points around the base of the tower. Any sparking or deflection of the meter indicates a leakage path in the tower insulation.

### I-68. Head Lamps

Each sealed beam head lamp can only be replaced as a complete unit. Either 5000-series (current production) or the newer 6000-series sealed beam units may be used. However, both headlamps on a vehicle should be of the same series as the method of aiming each series is different. If the two lamps cannot be matched as to series, aim each lamp

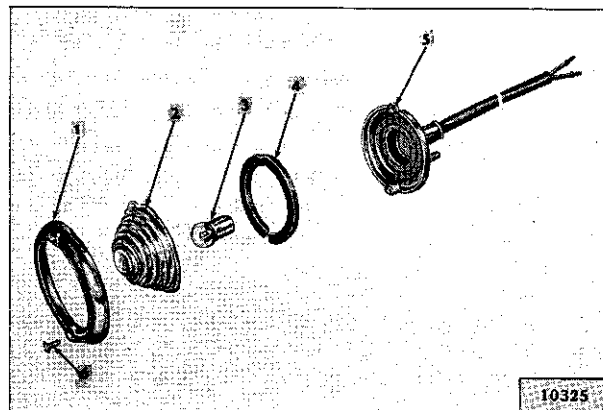


FIG. 180—PARKING LIGHT

- 1—Bezel
- 2—Lens
- 3—Bulb
- 4—Gasket
- 5—Housing and Cable
- 6—Screw

according to the instructions for aiming that series given below.

**NOTE:** 6000-series lamps have a figure "2" molded into the glass at the top of the lens, whereas 5000-series lamps do not have any figure. Series refers to the lamp trade numbers; for example, trade number 5400S is a 5000-series lamp.

### I-69. Head Lamp Aiming

All 5000-series lamps must be aimed on the high beam. All 6000-series lamps must be aimed on the low beam. Lamps may be aimed either with mechanical aimers or by using a screen. If mechanical aimers are used, follow instructions supplied with the aiming equipment. If a screen is to be used, preparation for aiming is as follows:

**a. Locate the vehicle in a darkened area with a level floor area and with a screen (may be a wall) having a nonreflecting white surface. A reference line should be marked on the floor 25 feet [7.62 m.] away from and parallel to the screen. Position the vehicle perpendicular to the screen and with the front head lamps directly over the reference line.**

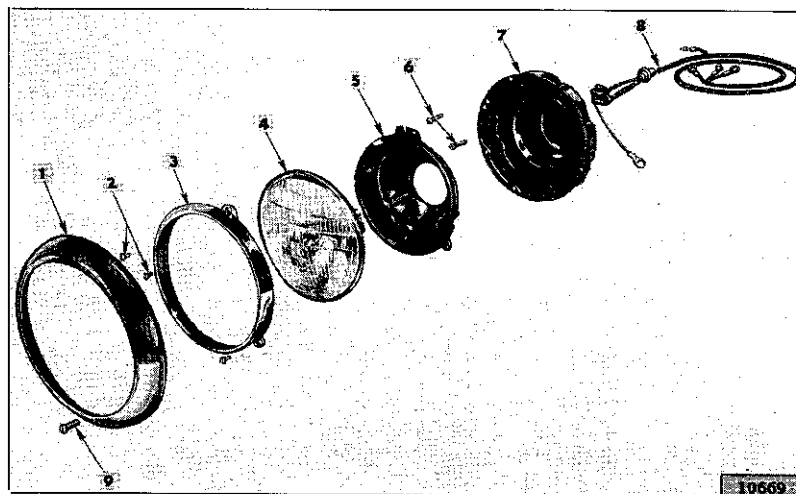


FIG. 181—HEAD LAMP

- 1—Door
- 2—Retaining Screw
- 3—Retaining Ring
- 4—Sealed Beam Unit
- 5—Mounting Ring
- 6—Adjusting Screw
- 7—Housing
- 8—Wires
- 9—Door Screw

- b. Locate the middle tape on the screen so that it is aligned with the center line of the vehicle.
- c. Equalize all tire pressures.
- d. Rock the vehicle from side to side to equalize springs and shock absorbers.
- e. Measure the distance between vehicle head lamp centers. Then, position marker tapes vertically on the screen to the right and left of the middle tape at half this distance.
- f. Measure the distance from the center of each lamp to the surface on which the vehicle rests. Position a marker tape horizontally on the screen to cross the vertical tapes (at the measured height for 6000-series lamps; 2" [50,8 mm.] lower than this height for 5000-series lamps) of each lamp center respectively.
- g. Remove the head lamp doors.
- h. Clean the head lamps.

#### I-70. Aiming 5000-series Head Lamps

- a. Turn the headlights on high beam. Cover the lamp not being aimed. Be sure to use the horizontal reference line on the screen that is 2" lower than the vehicle lamp height.
- b. Turn the vertical aiming screw, located at the top of the lamp housing, counterclockwise until the lamp beam is considerably lower than the horizontal reference line on the screen. Then, turn the same screw clockwise until the center of high intensity coincides with the reference line. See Fig. 182.

**NOTE:** Always bring the beam into final position by turning both aiming screws clockwise so that the unit is held under proper tension when the operation is complete.

- c. Turn the horizontal aiming screw, located on the side of the lamp housing, counterclockwise until the beam is off. Then, turn the same screw clockwise until the center of high intensity is equally divided by the vertical reference line. See Fig. 182.
- d. Cover the lamp that has been aimed and aim the other lamp using the same procedure.
- e. Carefully reinstall the head lamp doors.

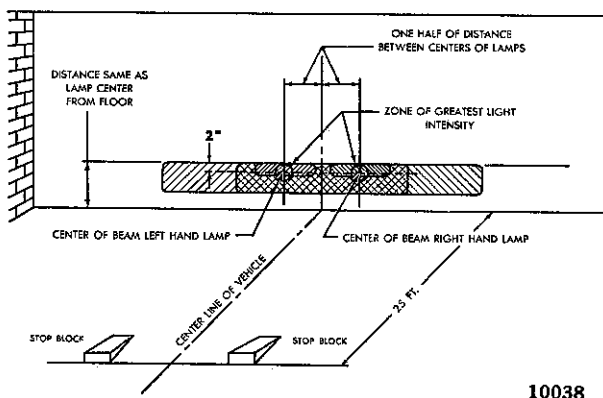


FIG. 182—HEADLIGHT AIMING CHART FOR 5000-SERIES LAMPS

#### I-71. Aiming 6000-series Head Lamps

- a. Turn the headlights on low beam. Cover the lamp not being aimed. Be sure to use the horizontal reference line on the screen that is the same dimension as the vehicle lamp height.
- b. Turn the vertical aiming screw counterclockwise until the lamp beam is considerably lower than the horizontal reference line on the screen. Then, turn the screw clockwise until the top edge of the high intensity area is even with the horizontal line. See Fig. 183.

**NOTE:** Always bring the beam into final position by turning both aiming screws clockwise so that the unit is held under proper tension when the operation is complete.

- c. Turn the horizontal aiming screw counterclockwise until the beam is off. Then, turn the same screw clockwise until the left edge of the high intensity area is 2" [50,8 mm.] to the right of the lamp center line. See Fig. 183.
- d. Cover the lamp that has been aimed and aim the other lamp using the same procedure.
- e. Carefully reinstall the head lamp doors.

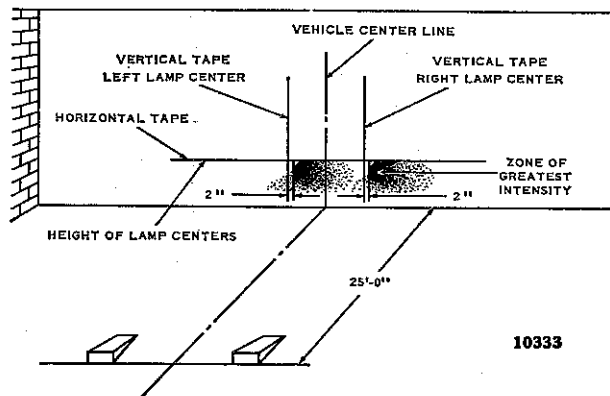


FIG. 183—HEADLIGHT AIMING CHART FOR 6000-SERIES LAMPS

#### I-72. Directional Signals

Fig. 184 shows the wiring of a composite directional signal circuit. The most frequent causes of failure in the directional signal system are loose connections and burned-out bulbs. A flashing rate approximately twice the normal rate usually indicates a burned-out bulb in the circuit. When trouble in the signal switch is suspected it is advisable to make the following test to definitely locate the trouble before going to the effort of removing the signal switch. If, for example, the right rear stop light and right front parking light are inoperative and switch failure is indicated, first put the control lever in neutral position. Then disconnect the wire to the right side circuit and touch it to or bridge it to the L terminal, thus bypassing the signal switch. If the right side circuit lights, the signal switch is inoperative and must be replaced.



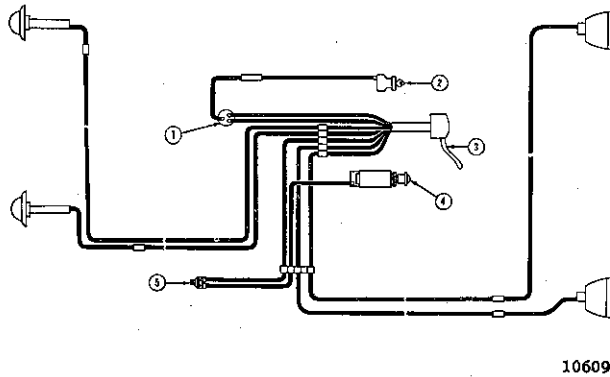


FIG. 184—DIRECTIONAL SIGNAL CIRCUIT

- |                   |                     |
|-------------------|---------------------|
| 1—Flasher         | 4—Light Switch      |
| 2—Ignition Switch | 5—Stop Light Switch |
| 3—Control         |                     |

### I-73. Major Electrical Component Replacement

**Auto-Lite and Delco-Remy Components**  
With the exception of the generator and voltage regulator, Auto-Lite and Delco-Remy electrical components may be intermixed on a particular vehicle as an approved production practice. No attempt should be made to convert to a complete Auto-Lite or Delco-Remy system. Auto-Lite components should be replaced by Auto-Lite components and Delco-Remy components should be replaced by Delco-Remy components insofar as availability of replacement components will allow. In those cases, however, where a component is being replaced with one produced by the other manufacturer, the following points should be noted.

**a. Generator** — If an Auto-Lite generator is being installed in place of a Delco-Remy generator, in addition to replacing the voltage regulator (see caution below) a different support bracket will have to be installed. It is not practical to change from an Auto-Lite to a Delco-Remy generator as a different engine front plate is required.

**CAUTION:** Do not intermix an Auto-Lite and a Delco-Remy generator and voltage regulator. Generator and voltage regulator must be either both Auto-Lite components or both Delco-Remy components.

**b. Voltage Regulator** — When an Auto-Lite voltage regulator is installed as a replacement for a Delco-Remy regulator, in addition to replacing the generator (see caution below) the adapter plate used with the Delco-Remy installation is discarded. As the terminals (BAT, FLD, etc.) are in a different location on the Auto-Lite regulator as opposed to the Delco-Remy regulator, identify the wires as they are removed so they may be reinstalled on the proper terminals of the new regulator. (See Fig. 171 and 172).

**CAUTION:** Do not intermix an Auto-Lite and a Delco-Remy generator and voltage regulator. Generator and voltage regulator must be either both Auto-Lite components or both Delco-Remy components.


**c. Distributor** — When an Auto-Lite distributor replaces a Delco-Remy distributor on an L6-226 engine the oil pump gear must be rotated one tooth in a clockwise direction (as viewed from the top of the engine) before the distributor is installed. This will allow the No. 1 lead to remain at the front, and the spark advance unit position will be essentially the same, so the original vacuum line can be used. When a Delco-Remy distributor is installed in place of an Auto-Lite distributor, the oil pump gear must be rotated one tooth in a counter-clockwise direction.

In the case of the F4-134 engine Auto-Lite and Delco-Remy distributors can be interchanged with no special provisions.

**d. Starting Motor** — No special instructions are required for interchanging Auto-Lite and Delco-Remy starting motors.

### I-74. Overdrive Electrical Controls

There are no adjustments provided for the sealed electrical units. Replace any defective unit. Three separate electrical circuits automatically

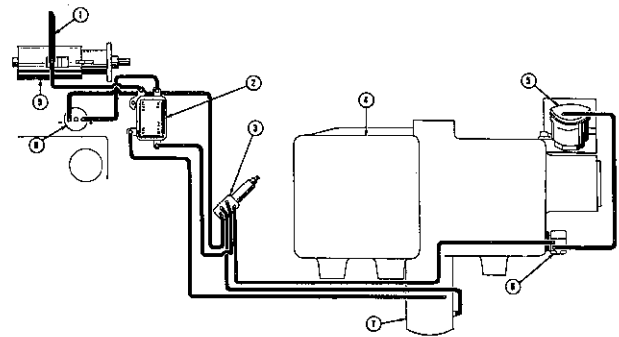

10623

FIG. 185—OVERDRIVE WIRING DIAGRAM

- |                                     |
|-------------------------------------|
| 1—Battery to Starting Motor Cable   |
| 2—Relay                             |
| 3—Transmission O. D. Control Switch |
| 4—Transmission Assembly             |
| 5—Governor                          |
| 6—Overdrive Switch                  |
| 7—Solenoid                          |
| 8—Ignition Coil                     |
| 9—Starting Motor                    |

control the overdrive. They are identified by letters A, B, and C on the overdrive wiring diagram, Fig. 185. Wire coverings are color-coded differently for each circuit to assist in tracing the individual circuits. Circuit A energizes the governor and controls the relay. Circuit B serves to momentarily short out the ignition circuit in conjunction with the kickdown switch. Circuit C energizes the solenoid.

**a.** The governor is a centrifugal switch which closes to complete circuit A at a governor speed of 840 rpm. (approximately 29 mph. [46.7 kph.] vehicle speed). The switch opens at a governor speed of 680 rpm. (approximately 24 mph. [38 kph.] vehicle speed), which opens circuit A.

**b.** Some vehicles are equipped with a rail switch (see Par. K-16). When the overdrive control button is pushed IN, the switch is closed to complete circuit A. When the control button is pulled

OUT, the switch is opened, opening circuit A. On vehicles not equipped with a rail switch, circuit A is routed directly to the governor.

c. When circuit A is completed by the governor reaching cut-in speed, the relay closes. This energizes circuit C and a heavy current momentarily passes through the solenoid. The circuit is protected against this current by a 20-ampere fuse mounted on the relay. Should this fuse burn out, the overdrive will not function.

d. The kickdown switch (Transmission O.D. Control Switch in Fig. 185) is mechanically operated by the accelerator pedal. See Par. K-19. Operation of the kickdown switch opens circuit A, in turn opening the relay and circuit C and de-energizing the solenoid. Operation of the switch also momentarily provides a direct ground for the ignition

coil primary circuit through circuit B. Grounding the primary circuit causes the engine to miss about three consecutive firings, thereby relieving the torque and allowing disengagement of the solenoid pawl from the sun gear.

### I-75. Kickdown Switch Replacement

Overdrive kickdown switches are coated in production with an electrical insulating compound for protection during wet weather. Service replacement kickdown switches are not coated because the coating must be applied after the harness is attached to the switch. When replacing an overdrive kickdown switch, after installation coat the switch terminal connections and the first two inches [5 cm.] of the harness from the terminals with electrical insulating spray or coating.

## SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Battery Discharged:</b>	
Shorted Cell in Battery.....	Replace Battery
Short in Wiring.....	Check Wiring Circuit
Generator Not Charging.....	Inspect Generator and Fan Belt
Loose or Dirty Terminals.....	Clean and Tighten
Excessive Use of Starter.....	Tune Engine
Excessive Use of Lights.....	Check Battery
Insufficient Driving.....	Recharge Battery
Low Regulator Setting.....	Correct Setting
Stuck Cut-out in Regulator.....	Correct
Low Electrolyte Level in Cells.....	Add Distilled Water
<b>Generator:</b>	
Low Charging Rate—	
Dirty Commutator.....	Clean Commutator
Poor Brush Contact.....	Repair or Install New Brushes
Regulator Improperly Adjusted.....	Adjust
High Resistance in Charging Circuit.....	Clean and Tighten Terminals
Ground Strap Engine to Frame Broken.....	Replace
Loose or Dirty Terminals.....	Clean and Tighten
Slipping Generator Belt.....	Adjust Belt
Worn Out Brushes.....	Install New Brushes
Weak Brush Spring Tension.....	Replace
Out of Round Commutator.....	Repair
Fails To Charge—	
Open Charging Circuit.....	Correct
Sticking Brushes.....	Repair or Replace
Dirty or Burned Commutator.....	Clean Commutator
Grounded Commutator.....	Repair
Open Circuit in Field.....	Repair
Weak Soldering on Armature.....	Repair
Grounded Wiring.....	Repair
Defective Regulator.....	Replace Regulator
Too High Charging Rate—	
Regulator Improperly Adjusted.....	Adjust or Replace
Short in Armature.....	Replace
Grounded Field-to-regulator Wire.....	Correct
Shorted Cell in Battery.....	Replace Battery
<b>Starting Motor:</b>	
Slow Starter Speed—	
Discharged Battery or Shorted Cell.....	Recharge or Repair
Ground Strap Engine to Frame.....	Clean Terminals and Tighten
Loose or Dirty Terminals.....	Clean and Tighten
Dirty Commutator.....	Clean with No. 00 Sandpaper
Worn Out Brushes.....	Install New Brushes
Weak Brush Spring Tension.....	Replace
Poor Brush Contact.....	Repair or Install New Brushes
Worn Bearings.....	Replace
Burned Starter Switch Contacts.....	Replace Switch
Will Not Turn Engine—	
Open Circuit at Starter.....	Correct
Solenoid Open or Stuck.....	Replace Solenoid
Starter Switch Defective.....	Replace Switch
Starter Drive Broken or Stuck.....	Repair or Replace
Battery Discharged.....	Recharge Battery

## SERVICE DIAGNOSIS—Continued

SYMPTOMS	PROBABLE REMEDY
<b>Distributor:</b>	
Hard Starting—	
Distributor Points Burned or Pitted.....	Clean Points or Replace (Adjust)
Breaker Arm Stuck on Pivot Pin.....	Clean and Lubricate
Breaker Arm Spring Weak.....	Replace
Points Improperly Adjusted.....	Adjust .020"
Spark Plug Points Improperly Set.....	Adjust .030"
Spark Plug Wire Terminals in Distributor	
Cap Corroded.....	Clean
Loose Terminals.....	Check Circuit
Loose or Dirty Terminals on Ground Strap—	
Engine to Frame.....	Clean and Tighten
Condenser Faulty.....	Replace
Improper Ignition Timing.....	Set Timing
<b>Lights:</b>	
Burn Dim—	
Loose or Dirty Terminals.....	Clean and Tighten
Leak in Wires.....	Check Entire Circuit for Broken Insulation
Poor Switch Contact.....	Install New Switch
Poor Ground Connection.....	Clean and Tighten
Aim Headlamp Beams.....	Use Aiming Chart
<b>Horn Fails to Sound</b>	
Broken or Loose Electrical Connection.....	Check Wiring and Connections at Horn Button and Battery—Clean and Tighten.
Battery Low or Dead.....	Check Battery.
Contact Points Burned or Broken Off.....	Replace Parts Necessary.
<b>Horn Sounds Unsatisfactory Tone</b>	
Poor Electrical Connection.....	Check Connections at Horn, Horn Button, Battery.
Battery Low.....	Check with Hydrometer.
Loose Cover and Bracket Screws.....	Tighten Bracket Bolts at Horn.
Voltage at Horn too High or too Low.....	Check with Voltmeter.

## ELECTRICAL SYSTEM SPECIFICATIONS

MODEL:	L6-226		F4-134	
	12-Volt	6-Volt	12-Volt	6-Volt
<b>BATTERY:</b>				
Make.....	Auto-Lite	Auto-Lite	Auto-Lite	Auto-Lite
Model.....	11-HS	1M-100	11-HS	1M-100
Plates per Cell.....	9	15	9	15
Ampere-Hour Rating.....	50	100	50	100
Terminal Ground.....	Negative	Negative	Negative	Negative
Specific Gravity:				
Fully Charged.....	1.260	1.260	1.260	1.260
Recharge at.....	1.225	1.225	1.225	1.225
Height.....	9 $\frac{7}{32}$ " [23,4 cm.]	8 $\frac{5}{8}$ " [21,9 cm.]	9 $\frac{7}{32}$ " [23,4 cm.]	8 $\frac{5}{8}$ " [21,9 cm.]
Length.....	10 $\frac{15}{64}$ " [26,6 cm.]	8 $\frac{23}{32}$ " [22,1 cm.]	10 $\frac{15}{64}$ " [26,6 cm.]	8 $\frac{23}{32}$ " [22,1 cm.]
Width.....	6 $\frac{25}{32}$ " [17,2 cm.]	7" [17,7 cm.]	6 $\frac{25}{32}$ " [17,2 cm.]	7" [17,7 cm.]
Battery Location.....	Under Hood Left Side	Under Hood Left Side	Under Hood Left Side	Under Hood Left Side
<b>GENERATOR (Auto-Lite):</b>				
Make.....	Auto-Lite	Auto-Lite	Auto-Lite	Auto-Lite
Model—Early.....	GJP-7202-B	GGW-4801-EN	GJP-7202-A	GGW-4801-D
Model—Late.....	GJP-7402-B	GGW-7404-B	GJP-7402-A	GGW-7404-A
Ground Polarity.....	Negative	Negative	Negative	Negative
Controlled Output.....	35 amp.	45 amp.	35 amp.	45 amp.
Control.....	CV Regulator	CV Regulator	CV Regulator	CV Regulator
Ratio — Generator to Crankshaft:				
Revolutions.....	1.75 to 1	1.75 to 1	1.5 to 1	1.5 to 1
Cut-in Engine rpm.....	758	758	883	883
Rotation; Drive End.....	Clockwise	Clockwise	Clockwise	Clockwise
Armature End Play.....	.003" to .010" [0,076 a 0,254 mm.]	.003" to .010" [0,076 a 0,254 mm.]	.003" to .010" [0,076 a 0,254 mm.]	.003" to .010" [0,076 a 0,254 mm.]
Brushes.....	2	2	2	2
Brush Spring Tension.....	18 to 36 oz. [0,5 a 1 kg.]	18 to 36 oz. [0,5 a 1 kg.]	18 to 36 oz. [0,5 a 1 kg.]	18 to 36 oz. [0,5 a 1 kg.]
Bearing — Drive End.....	Ball	Ball	Ball	Ball
Bearing — Commutator End.....	Bronze	Bronze	Bronze	Bronze
<b>GENERATOR (Delco):</b>				
Make.....	Delco	Delco	Delco	Delco
Model.....	1102096	1102811	1102096	1102811
Type.....	Shunt (Ventilated)	Shunt (Ventilated)	Shunt (Ventilated)	Shunt (Ventilated)
Rotation; Drive End.....	Clockwise	Clockwise	Clockwise	Clockwise
Armature; End Play.....	.005" [0,127 mm.]	.005" [0,127 mm.]	.005" [0,127 mm.]	.005" [0,127 mm.]
Brushes.....	2	2	2	2
Brush Spring Tension.....	28 oz. [0,7 kg.]	28 oz. [0,7 kg.]	28 oz. [0,7 kg.]	28 oz. [0,7 kg.]
Bearing Drive End.....	Ball	Ball	Ball	Ball
Bearing; Commutator End.....	Bronze	Bronze	Bronze	Bronze
<b>REGULATOR (Auto-Lite):</b>				
Make.....	Auto-Lite	Auto-Lite	Auto-Lite	Auto-Lite
Model—Early.....	VRX-6009-B	VBE-6105-A	VRX-6009-B	VBE-6105-A
Model—Late.....	VBO-4201E-4A	VBO-4601-C	VBO-4201E-4A	VBO-4601-C
Type.....	Vibrator	Vibrator	Vibrator	Vibrator
Cutout Relay Closing Voltage @ Generator rpm.....	12.6 to 13.6 @ 1325	6.3 to 6.8 @ 1000	12.6 to 13 @ 1325	6.3 to 6.8 @ 1000
Reverse Current to Open.....	3 to 5 amp.	4 to 6 amp.	3 to 5 amp.	4 to 6 amp.
Regulated Voltage.....	14.3 to 14.7	7.1 to 7.3	14.3 to 14.7	7.1 to 7.3
Regulated Current.....	39 amp. max.	49 amp. max.	39 amp. max.	49 amp. max.
<b>REGULATOR (Delco):</b>				
Make.....	Delco	Delco	Delco	Delco
Model.....	1972029	1972063	1972029	1972063
Type.....	Vibrator	Vibrator	Vibrator	Vibrator
Cutout Relay Closing Voltage.....	11.8 to 13.5	5.9 to 6.7	11.8 to 13.5	5.9 to 6.7
Regulated Voltage.....	13.8 to 14.8	6.9 to 7.4	13.8 to 14.8	6.9 to 7.4
Regulated Current.....	27 to 33	42 to 47	27 to 33	42 to 47

## ELECTRICAL SYSTEM SPECIFICATIONS—Continued

MODEL:	L6-226		F4-134	
	12-Volt	6-Volt	12-Volt	6-Volt
<b>STARTING MOTOR</b>				
(Auto-Lite):	12-Volt	6-Volt	12-Volt	6-Volt
Make	Auto-Lite	Auto-Lite	Auto-Lite	Auto-Lite
Model—Early	MDM-6006	MCH-6210	MDM-6005	MCH-6203
Model—Late	MDU-7003	MCH-6210	MDU-7004	MCH-6215
Rotation — Drive End	Clockwise	Clockwise	Clockwise	Clockwise
Engine Cranking Speed	200 rpm. @ room temperature	185 rpm.	200 rpm. @ room temperature	185 rpm.
Armature End Play	.005" min. [0,127 mm.]	.005" to .030" [0,127 a 0,762 mm.]	.005" min. [0,127 mm.]	.005" to .030" [0,127 a 0,762 mm.]
Brushes	4	4	4	4
Brush Spring Tension	31 to 47 oz. [0,9 a 1,3 kg.]	42 to 53 oz. [1,19 a 1,5 kg.]	31 to 47 oz. [0,9 a 1,3 kg.]	42 to 53 oz. [1,19 a 1,5 kg.]
Bearings	3 Bronze	3 Bronze	3 Bronze	3 Bronze
Lock Test:				
Temperature	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]
Amps. (max.)	280	335	280	335
Volts	4.0	2.0	4.0	2.0
Stall Torque (min.)	6.2	6.0	6.2	6.0
No Load Test:				
Temperature	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]
Amps. (max.)	50	65	50	65
Volts	10	5	10	5
RPM. (min.)	5300	4300	5300	4300
Control Switch	Solenoid	Solenoid	Solenoid	Solenoid
Drive:				
Type	Bendix Folo-Thru	Bendix Folo-Thru	Bendix Folo-Thru	Bendix Folo-Thru
Pinion Meshes	Front	Front	Front	Front
No. of Teeth — Pinion	9	9	9	9
No. of Teeth — Flywheel	130	130	129	129
Flywheel Tooth Face Width	.500" [12,7 mm.]	.500" [12,7 mm.]	.375" [9,5 mm.]	.375" [9,5 mm.]
<b>STARTING MOTOR (Delco):</b>				
Make	12-Volt Delco	6-Volt Delco	12-Volt Delco	6-Volt Delco
Model	1107747	1108078	1107746	1108077
Rotation — Drive End	Clockwise	Clockwise	Clockwise	Clockwise
Engine Cranking Speed	185 rpm.	185 rpm.	185 rpm.	185 rpm.
Armature End Play	.005" to .050" [0,127 a 1,27 mm.]	.005" to .050" [0,127 a 1,27 mm.]	.005" to .050" [0,127 a 1,27 mm.]	.005" to .050" [0,127 a 1,27 mm.]
Brushes	4	4	4	4
Brush Spring Tension	24 oz. min. (680 gr.)	35 oz. min. (992 gr.)	24 oz. min. (680 gr.)	35 oz. min. (992 gr.)
Bearings	3 Bronze	3 Bronze	3 Bronze	3 Bronze
Lock Test:				
Temperature	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]
Amps.	435	600	435	600
Volts	5.8	3.0	5.8	3.0
Torque	10.5 lb.-ft. [1,4 kg-m.]	15 lb.-ft. [2,0 kg-m.]	10.5 lb.-ft. [1,4 kg-m.]	15 lb.-ft. [2,0 kg-m.]
No Load Test:				
Temperature	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]	70°F. [21°C.]
Amps.	75	60	75	60
Volts	10.3	5.0	10.3	5.0
RPM (min.)	6900	6000	6900	6000
<b>COIL:</b>				
Make	12-Volt Auto-Lite	6-Volt Auto-Lite	12-Volt Auto-Lite	6-Volt Auto-Lite
Model—Early	CAG 4002-A	CAL 4001-A	CAG 4002-A	CAL 4001-A
Model—Late	200564	200488	200564	200488
Amperes:				
Engine Stopped	2.8-2.9 @ 12.5V	5 @ 6.3V	2.8-2.9 @ 12.5V	5 @ 6.3V
Engine Idling	2.8-2.9	2.5	2.8-2.9	2.5

**ELECTRICAL SYSTEM SPECIFICATIONS — Continued**

MODEL:	L6-226		F4-134	
	12-Volt	6-Volt	12-Volt	6-Volt
<b>DISTRIBUTOR (Auto-Lite):</b>				
Make .....	Auto-Lite	Auto-Lite	Auto-Lite	Auto-Lite
Model—Early .....	IAT-4206B	IAT-4206B	IAT-4204A	IAT-4204A
Model—Late .....	IAT-4404A	IAT-4404A	IAT-4405	IAT-4405
Type Advance .....	Centrifugal	Centrifugal	Centrifugal	Centrifugal
Firing Order .....	1-5-3-6-2-4	1-5-3-6-2-4	1-3-4-2	1-3-4-2
Breaker Point Gap .....	.020" [0,508 mm.]	.020" [0,508 mm.]	.020" [0,508 mm.]	.020" [0,508 mm.]
Breaker Arm Tension .....	17 to 20 oz. [482 a 567 gr.]	17 to 20 oz. [482 a 567 gr.]	17 to 20 oz. [482 a 567 gr.]	17 to 20 oz. [482 a 567 gr.]
Cam Angle .....	39°	39°	42°	42°
Max. Auto Advance .....	7.5° @ 1700 rpm.	7.5° @ 1700 rpm.	11° @ 1700 rpm.	11° @ 1700 rpm.
Max. Vacuum Advance .....	5° @ 15" hg. [38 cm.]	5° @ 15" hg. [38 cm.]	6° @ 14" hg. [35 cm.]	6° @ 14" hg. [35 cm.]
Condenser Capacity .....	.21 to .25 mfd.	.21 to .25 mfd.	.21 to .25 mfd.	.21 to .25 mfd.
<b>DISTRIBUTOR (Delco):</b>				
Make .....	Delco	Delco	Delco	Delco
Model .....	1110249	1110249	1110255	1110255
Spark Advance; Centrifugal:				
Start .....	0° @ 375 rpm.	0° @ 375 rpm.	0° @ 425 rpm.	0° @ 425 rpm.
Maximum .....	5° to 7° @ 1300 rpm.	5° to 7° @ 1300 rpm.	10° to 12° @ 1950 rpm.	10° to 12° @ 1950 rpm.
Spark Advance Vacuum				
Start .....	0° @ 10" Hg [25 cm.]	0° @ 10" Hg [25 cm.]	0° @ 5" Hg [12 cm.]	0° @ 5" Hg [12 cm.]
Maximum .....	5° @ 15" Hg [38 cm.]	5° @ 15" Hg [38 cm.]	6° @ 14" Hg [35 cm.]	6° @ 14" Hg [35 cm.]
Breaker Gap .....	.022" [0,599 mm.]	.022" [0,599 mm.]	.022" [0,599 mm.]	.022" [0,599 mm.]
Cam Angle .....	31° to 37°	31° to 37°	25° to 34°	25° to 34°
Breaker Arm Tension .....	19 to 23 oz. [538 a 652 gr.]	19 to 23 oz. [538 a 652 gr.]	19 to 23 oz. [538 a 652 gr.]	19 to 23 oz. [538 a 652 gr.]
Condenser Capacity .....	.2 mfd.	.2 mfd.	.2 mfd.	.2 mfd.
<b>TIMING:</b>				
Crankshaft .....	5° BTC @ Idle	5° BTC @ Idle	5° BTC @ Idle	5° BTC @ Idle
Mark Location .....	Vibration Damper	Vibration Damper	Crankshaft Pulley	Crankshaft Pulley
Firing Order .....	1-5-3-6-2-4	1-5-3-6-2-4	1-3-4-2	1-3-4-2
<b>SPARK PLUGS:</b>				
Make and Model .....	Auto-Lite A7 Champion J8	Auto-Lite A7 Champion J8	Auto-Lite A7 Champion J8	Auto-Lite A7 Champion J8
Thread .....	14 mm.	14 mm.	14 mm.	14 mm.
Thread Reach .....	3/8" [9,5 mm.]	3/8" [9,5 mm.]	3/8" [9,5 mm.]	3/8" [9,5 mm.]
Gap .....	.030" [0,762 mm.]	.030" [0,762 mm.]	.030" [0,762 mm.]	.030" [0,762 mm.]
<b>LAMP BULB</b>				
<b>TRADE NUMBERS:</b>				
Volts .....	12	6	12	6
Headlights .....	6012	6006	6012	6006
Parking Lights .....	67	63	67	63
Park and Directional Signal .....	1176	1158	1176	1158
Stop, Tail, and Dir. Signal .....	1034	1158	1034	1158
License (Wagon) .....	67	63	67	63
Indicator Lamps:				
Headlight Beam .....	53	51	53	51
Directional Signal .....	53	51	53	51
Charge .....	53	51	53	51
Oil Pressure .....	53	51	53	51
Instrument Lamp .....	57	55	57	55
Dome Lamp .....	1003	87	1003	87
Radio Dial Lamp .....	1891	44	1891	87
Flasher, Directional Signal .....	524	P229D	524	P229D
Fuse Data:				
Directional Signal .....	SFE 9	SFE 14	SFE 9	SFE 14
Overdrive .....	SFE 14	SFE 20	SFE 14	SFE 20
Heater .....	SFE 9	SFE 14	SFE 9	SFE 14
Radio .....	ABC 7 1/2	SFE 9	AGC 7 1/2	SFE 9





## SECTION J

## CLUTCH

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Heavy-Duty Clutch.....	J-2	Assembly and Adjustment.....	J-13
Clutch Pedal Adjustment.....	J-3	Installation.....	J-14
Reconditioning.....	J-4	BORG & BECK CLUTCH.....	J-15
Clutch Adjustment.....	J-5	Disassembly.....	J-16
AUBURN CLUTCH.....	J-6	Inspection.....	J-17
Disassembly.....	J-7	Assembly and Adjustment.....	J-18
Inspection.....	J-8	CLUTCH DISC.....	J-19
Assembly and Adjustment.....	J-9	CRANKSHAFT PILOT BUSHING.....	J-20
Installation.....	J-13	FLYWHEEL CLUTCH SHAFT BUSHING.....	J-21
ROCKFORD CLUTCH.....	J-10	TROUBLE SHOOTING.....	J-22
Disassembly.....	J-11	Clutch Control Adjustment Rod Breaking.....	J-23
Inspection.....	J-12	Vehicle Vibrations.....	J-24

## J-1. GENERAL

The clutch for L6-226 Models is of either Auburn or Borg & Beck manufacture. The clutch for F4-134 Models is of either Auburn or Rockford manufacture. The Borg & Beck clutch is made with either nine or six springs; the Rockford clutch has six; and the Auburn clutch has three. All clutches are single-plate and dry-disc type. Models L6-226 4WD and 4x4 are equipped with a 10" [25,4 cm.] driven plate; Model L6-226 4x2

has a 9 $\frac{1}{4}$ " [23,5 cm.] driven plate; all F4-134 Models have an 8 $\frac{1}{2}$ " [21,6 cm.] driven plate.

The driven plates of all models are built with spring center vibration neutralizers and have two flexible facings which provide smooth engagement of the engine power. The reconditioning and adjustment procedures which follow include all the above mentioned clutches. The clutch pedal adjustments are also given for each model. Specifications for all clutches are found at the end of this section.

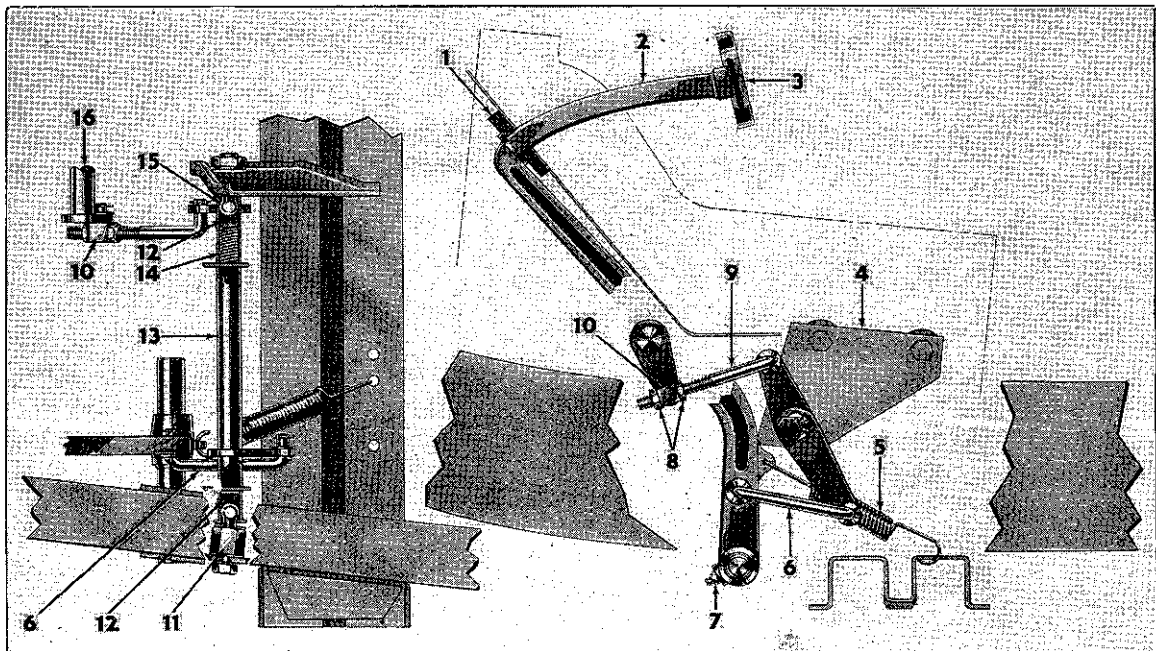


FIG. 186—CLUTCH CONTROL—L6-226 MODELS

- |                       |                             |
|-----------------------|-----------------------------|
| 1—Pedal Grommet       | 9—Upper Adjusting Rod       |
| 2—Clutch Pedal        | 10—Adjusting Trunnion       |
| 3—Pedal Pad           | 11—Ball Nut                 |
| 4—Cross Shaft Support | 12—Felt Pad                 |
| 5—Retracting Spring   | 13—Cross Shaft              |
| 6—Lower Control Link  | 14—Spring                   |
| 7—Lubrication Fitting | 15—Clutch Control Ball Stud |
| 8—Lock Nuts           | 16—Release Shaft            |

### J-2. Heavy-Duty Clutch

An 8½" [216 mm.] diameter clutch is standard equipment on all F4-134 model vehicles covered by this manual. A heavy-duty 9¼" [235 mm.] diameter clutch is available for installation on these vehicles when desired.

### J-3. Clutch Pedal Adjustment

As the clutch facings wear the free pedal travel diminishes. When sufficient wear occurs to cause the pedal to rest against the toe board it is necessary

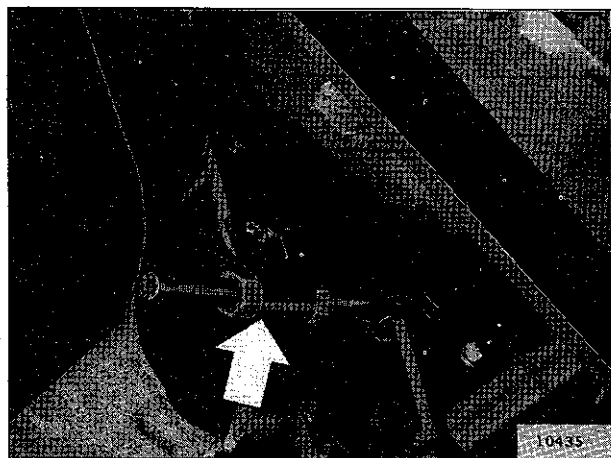


FIG. 187—CLUTCH ADJUSTMENT—L6-226 MODELS

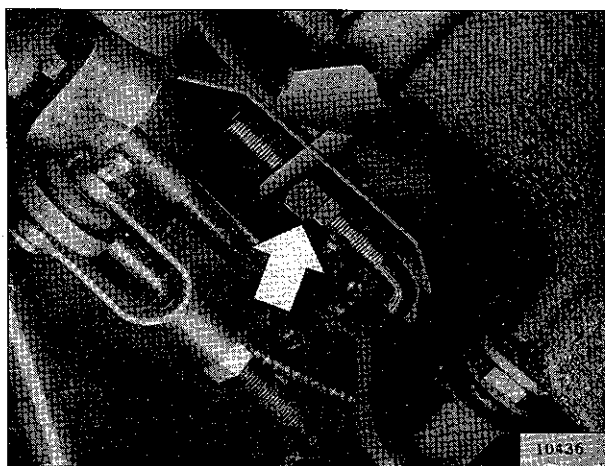


FIG. 188—CLUTCH ADJUSTMENT F4-134 MODELS

to adjust the free travel.

**NOTE:** Some older 'Jeep' vehicles may develop side movement of the clutch and brake pedals resulting from wear of the pedals, shafts, and bushings. One way to compensate for this wear is to install a pedal slack adjuster kit.

Correct clearance on all models is 1" (25.4 mm.). This clearance is essential to disengage the clutch

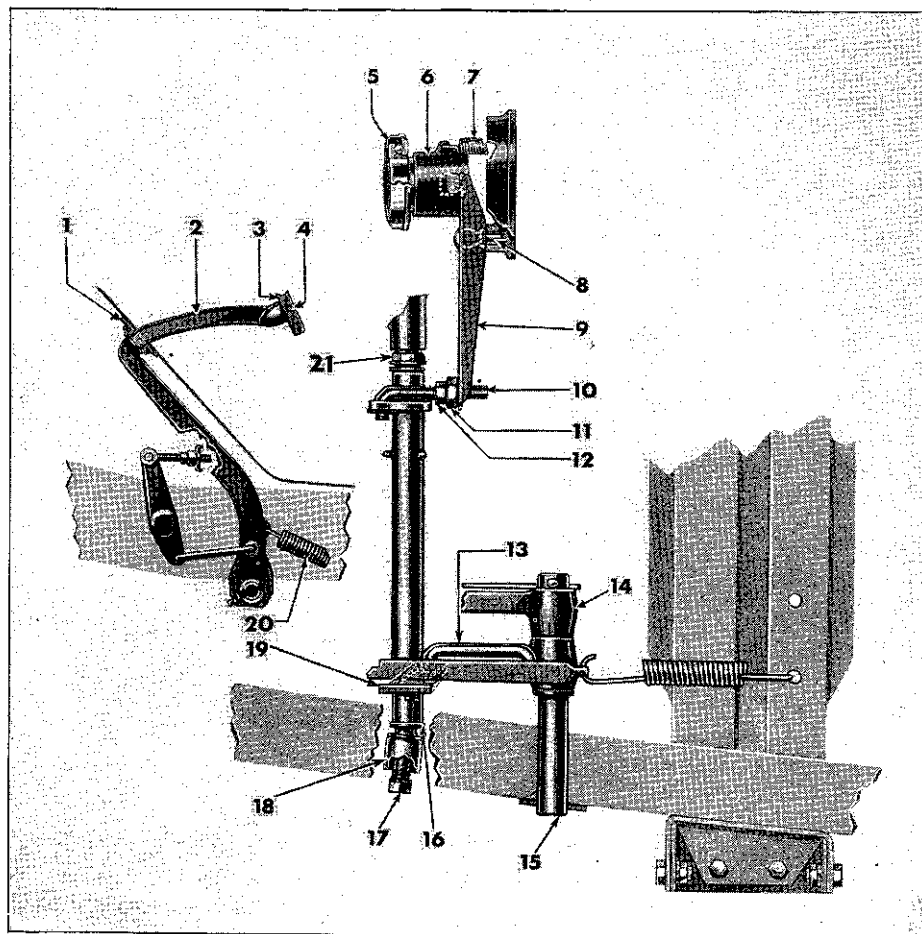


FIG. 189—CLUTCH CONTROL  
Models F4-134 4WD and 4x4

- 1—Pedal Grommet
- 2—Clutch Pedal
- 3—Pedal Pad
- 4—Pedal Pad Cover
- 5—Clutch Release Bearing
- 6—Release Bearing Carrier
- 7—Release Bearing Carrier Spring
- 8—Clutch Lever Fulcrum
- 9—Clutch Control Lever
- 10—Control Rod
- 11—Control Rod Nut
- 12—Lock Nut
- 13—Clutch Control Lever Link
- 14—Brake Pedal
- 15—Pedal Shaft
- 16—Dust Seal
- 17—Ball Stud Bolt
- 18—Ball Stud
- 19—Control Cross Shaft and Lever
- 20—Retracting Spring
- 21—Ball Stud

release bearing and prevent unnecessary wear and possible clutch slippage. When adjusted as outlined above there is a safe clearance of approximately  $\frac{1}{16}$ " (1.59 mm.) between the clutch release bearings and the clutch fingers.

On L6-226 models, Fig. 186, to adjust the clutch pedal free travel, loosen the two lock nuts on the pedal adjusting rod, Fig. 187. Turn the nuts forward to increase or backward to decrease the free travel. After pedal free travel of 1" (25.4 mm.) is established, tighten both lock nuts against the adjusting trunnion, being careful not to change the adjustment.

On all models as shown in Figs. 189 and 190, with the exception of the L6-226 models, the adjustment is made at the threaded connection between the clutch control lever and the clutch control tube lever. To increase the free travel, loosen the locknut No. 12, and screw adjusting nut No. 11 forward then tighten the locknut. See Fig. 188.

#### J-4. Reconditioning

When it is necessary to recondition the clutch, follow the procedure outlined in the "Transmission"

section for the removal of the transmission or transmission and transfer case from the vehicle. Note that labor will be saved on all F4-134 Models if the engine is removed from the chassis without the bell housing. Then remove the clutch from the flywheel.

On L6-226 Models equipped with the split bell housing, it is advisable to disconnect both front and rear propeller shafts, pull the transmission and transfer case to the rear sufficiently to clear the shaft from the clutch, remove the bottom pan from the bell housing and remove the clutch from the flywheel with the engine still in the vehicle.


Mark both the pressure plate and the flywheel so that the assembly may be installed in the same position after the repairs are completed. When removing the clutch from the flywheel, loosen the screws attaching the pressure plate to the flywheel in sequence, a little at a time, to prevent distortion of the clutch bracket.

#### J-5. Clutch Adjustment

The procedures for clutch adjustment given in Par. J-7 thru J-13 require the use of a clutch rebuilding and adjusting fixture. If this fixture is

FIG. 190—CLUTCH CONTROL  
Model F4-134 4x2


1. Pedal Grommet
2. Clutch Pedal
3. Pedal Pad
4. Pedal Pad Cover
5. Release Bearing
6. Bearing Carrier
7. Carrier Retracting Spring
8. Release Lever Fulcrum
9. Control Lever
10. Upper Control Rod
11. Control Rod Adjusting Nut
12. Control Rod Lock Nut
13. Control Tube Ball Stud
14. Control Tube Spring
15. Lower Control Rod
16. Brake Pedal
17. Pedal Retracting Spring
18. Frame End Ball Stud
19. Dust Seal
20. Outer Control Tube and Lever
21. Inner Clutch Control Rod
22. Inner Control Tube and Lever

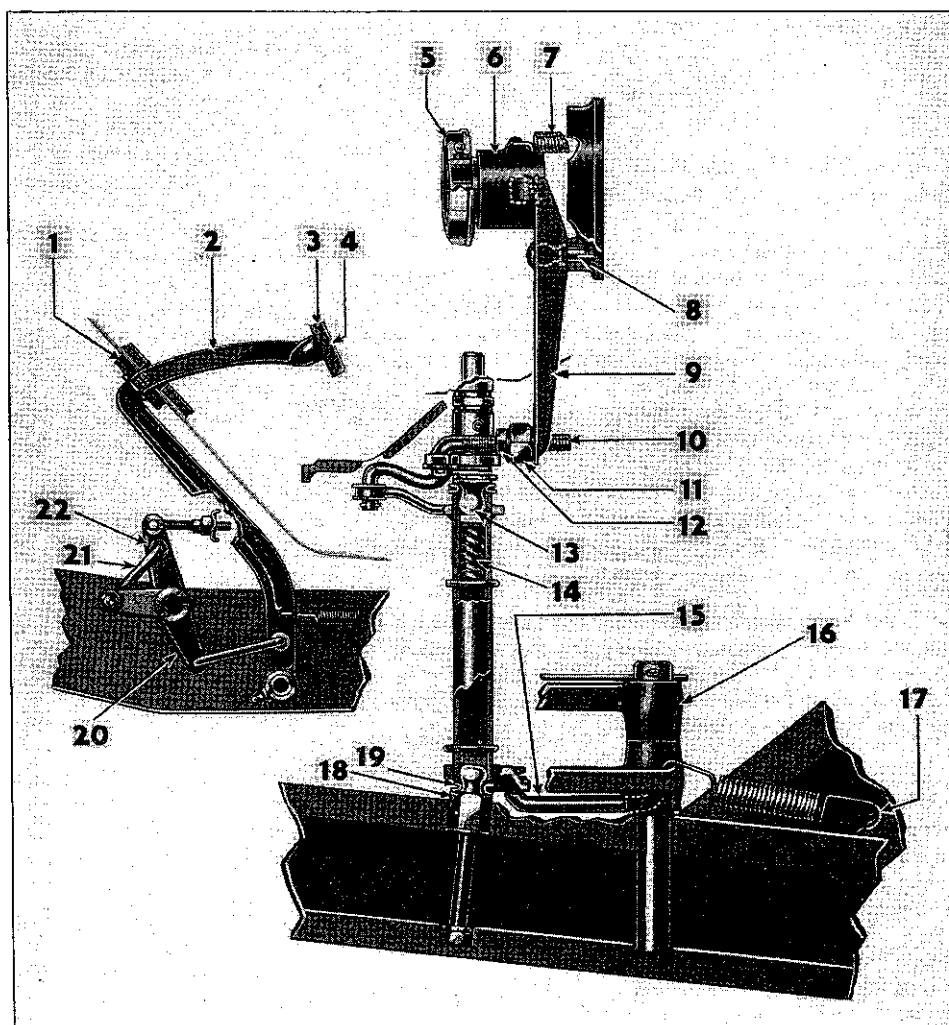

not available, the following procedure may be used. Using a piece of flat bar stock, make a gauge as shown in Fig. 191. Using steel bar stock (round or square) any size from  $\frac{1}{2}$ " [12,7 mm.] to  $1\frac{1}{2}$ " [38,1 mm.] and make three each spacers .285" [7,24 mm.], .305" [7,74 mm.], and .310" [7,87 mm.] thick. Utilize the gauge and spacers as indicated below:

Model Application	Clutch	Spacer Thickness	Gauge Length
F4-134 All	917181	.305	$1\frac{15}{16}$ "
F4-134 All	906467	.310	$1\frac{15}{16}$ "
F4-134 All	922071	.285	$1\frac{15}{16}$ "
F4-134, L6 226 4x2	907821	.285	$1\frac{15}{16}$ "
L6-226 4x2	K733581	.285	$1\frac{15}{16}$ "
L6-226 4x4, 4WD	917262	.285	$1\frac{15}{16}$ "
L6-226 4x4, 4WD	917257	.285	2"

Attach the clutch to the flywheel with the proper thickness spacers inserted at points under the clutch levers. Using the gauge length as indicated in the above chart, adjust the three lever adjusting screws until the release bearing contact on the face of the three levers contact the shoulder of the gauge.

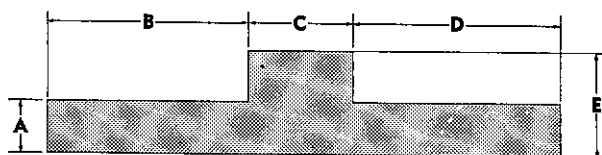

10347

FIG. 191—GAUGE FABRICATING DIMENSIONS

A— $\frac{1}{2}$ " [12,7 mm.]  
 B— $1\frac{15}{16}$ " [55,23 mm.]  $\pm .010$ "  
 C—1" [25,4 mm.]  
 D—2" [50,8 mm.]  $\pm .010$ "  
 E—1" [25,4 mm.]

## J-6. AUBURN CLUTCH

For clutch installation, see Par. J-14.


### J-7. Disassembly

- Place cover support plate (part of fixture) and clutch on a clutch rebuilding and adjusting fixture. Mark pressure plate and pressure plate cover with prick punch to assure alignment in the original position when assembling.
- Place fixture compression plate on centering screw so that it rests evenly on all three pressure plate levers (Fig. 192).
- Install and tighten nut against compression washer to relieve pressure at the heel of levers.
- Remove pressure plate lever clip, adjusting screw, lock nut and flat washer from heel of each lever.
- Carefully back off fixture compression nut all the way until pressure plate springs are no longer compressed. Remove fixture compression plate.
- Remove pressure plate springs and lift pressure plate cover from pressure plate.

### J-8. Inspection

After clutch is disassembled, inspect each part for wear and replace if necessary. Check pressure plate for warpage and for scored surface. Check each pressure plate spring using a spring testing fixture and a torque indicating wrench. See "Clutch Specifications" for correct spring pressure.

When using the recommended spring checking fixture, the "pounds" pressure is obtained by

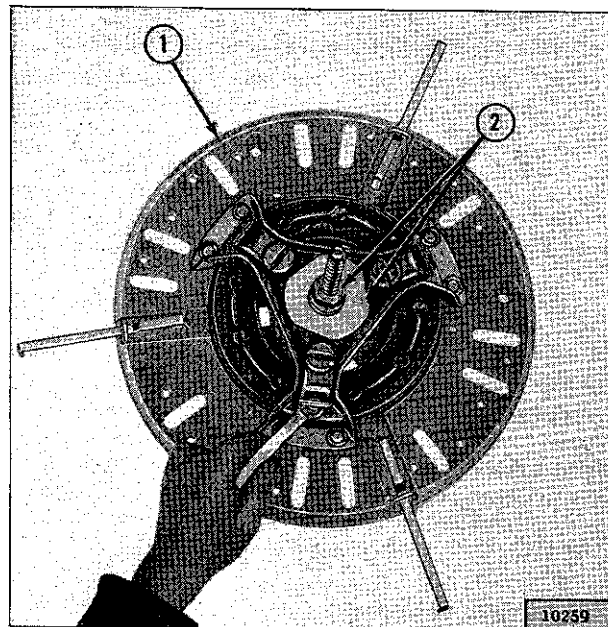

10259

FIG. 192—DISASSEMBLING AUBURN CLUTCH


1—Clutch Fixture  
 2—Compression Plate and Nut

multiplying the torque wrench reading (in "foot-pounds") by two.

### J-9. Assembly and Adjustment

Proper assembly and adjustment of the clutch is as follows:

- Place pressure plate and pressure plate cover on a clutch rebuilding and adjusting fixture. Make sure punch marks made during disassembly are lined up.
- Install pressure plate springs under levers on the pressure plate cover.
- Press down on the toe of each lever and insert a fixture support block under the heel of each lever to hold springs in place.

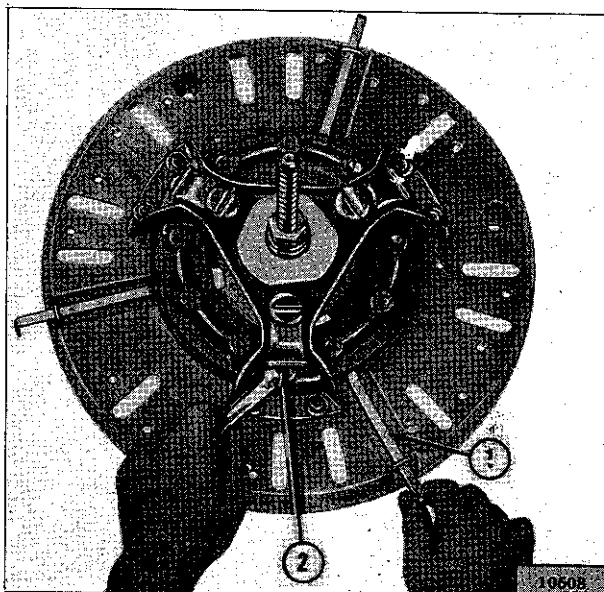

10608

FIG. 193—ADJUSTING LEVERS ON AUBURN CLUTCH

1—Fixture Feeler Blade  
 2—Adjusting Screw

- d. Install fixture compression plate and nut and tighten down as far as possible.
- e. Remove support blocks from under levers and install clutch adjusting screws, washers, locknuts and pressure plate lever clips. Tighten adjusting screws into pressure plate as far as possible. Apply Lubriplate sparingly to all contact and pivot surfaces of levers.
- f. Back off and remove fixture nut and compression plate.
- g. Lift clutch off fixture, remove cover support plate and place clutch back on fixture.
- h. Install fixture thickness spacers on the fixture centering screw.
- i. Install compression plate, self-aligning washer, thrust washer and nut. Tighten nut to its full extent to properly position pressure plate levers.
- j. Install and tighten bolts holding cover plate to fixture.
- k. Adjust pressure plate levers by turning lever adjusting screws, Fig. 193, until each of the three fixture feeler blades have the same slight drag or "feel" when pushed in and out. Tighten lock nuts.
- l. Remove clutch from fixture. The assembly is now ready for installation.

#### J-10. ROCKFORD CLUTCH

Overhaul of the six-spring Rockford clutch is accomplished on the same type of clutch rebuilding and adjusting fixture as used for the three-spring Auburn clutch repair. Procedures for disassembly, inspection, and assembly of the Rockford clutch are given in the following paragraphs.

#### J-11. Disassembly

The six-spring clutch pressure plate, pressure plate cover, springs, and levers can be completely disassembled for inspection or repairs as follows:

- a. Place clutch on a clutch rebuilding and adjusting fixture. Mark pressure plate and pressure plate cover with a prick punch to ensure realignment in original position when assembling.

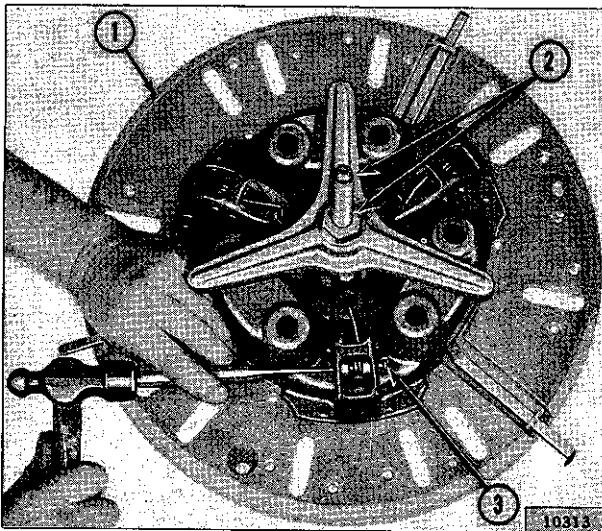


FIG. 194—DISASSEMBLING ROCKFORD CLUTCH

- 1—Clutch Fixture
- 2—Compression Spider and Nut
- 3—Outer Pin

- b. Place compression spider and nut on fixture centering screw. Tighten nut to relieve clutch spring pressure.
- c. Remove retainer ring from outer pin on each lever. Drive out the outer pins only as shown in Fig. 194.
- d. Carefully back off compression spider and nut all the way until pressure plate springs are no longer compressed. Remove spider and nut.
- e. Lift off pressure plate cover and levers from pressure plate.

#### J-12. Inspection

After the clutch is disassembled, inspect each part for wear and replace if necessary. Check pressure plate for warpage and for scored surface. Check each pressure plate spring using a spring testing fixture and a torque indicating wrench. See Clutch Specifications for correct spring pressure.

When using the recommended spring checking fixture, the "pounds" pressure is obtained by multiplying the torque wrench reading (in "foot-pounds") by two.

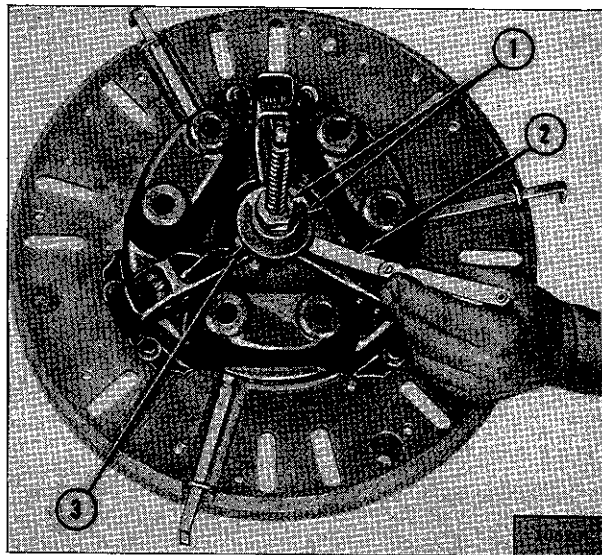


FIG. 195—ADJUSTING LEVERS ON ROCKFORD CLUTCH

- 1—Compression Plate and Nut
- 2—Feeler Blade
- 3—Adjusting Screw

#### J-13. Assembly and Adjustment

Proper assembly and adjustment of the clutch is as follows:

- a. Place pressure plate on a clutch rebuilding and adjusting fixture. Position springs on pressure plate.
- b. Assemble levers to pressure plate cover and position on pressure plate and springs. Align prick punch marks made during disassembly.
- c. Install compression spider and nut to fixture. Tighten to compress clutch springs.
- d. Install and tighten bolts to hold pressure plate cover against fixture. Remove compression spider and nut.
- e. Install outer pins and retainer rings to each lever.
- f. Sparingly apply Lubriplate to all contact and pivot surfaces of levers.

g. Place fixture thickness spacers on fixture centering screw. Install the fixture compression plate and nut. Tighten nut until compression plate contacts the spacer.

h. Adjust the three lever adjusting screws until a .002" [0,051 mm.] feeler blade has a slight drag between the compression plate and each adjusting screw. See Fig. 195.

i. Remove compression plate and nut. Remove bolts holding pressure plate cover to fixture. Remove pressure plate assembly.

#### J-14. Clutch Installation

Auburn and Rockford

##### a. Inspect Pilot Bushing in Flywheel

Inspect the transmission drive pinion shaft pilot bushing which is pressed into the center of the flywheel. If the bushing is worn or damaged, it should be removed, using a pilot bushing remover. Screw the tapered end of the tool into the damaged bushing, allowing the tool to cut its own threads until a solid grip is obtained. Insert the puller screw and rotate it until bushing is forced out of flywheel. Fig. 196.

To install a new bushing, slide the bushing onto the end of a pilot bushing installing and burnishing tool and insert the bushing into flywheel. A soft hammer can be used against the tool to help drive the bushing in place. When the tool is removed (by tightening the cap and pressure nut as shown in Fig. 197), the bushing will be burnished to correct size. Apply a small amount of lubricant to the bushing bore.

b. Before the clutch disc is installed, it should be carefully inspected for warpage. If grease or oil is evident on the friction facings, the facings should be replaced and the cause of oil accumulation cor-

rected. Excessively worn facings should also be replaced with factory recommended parts.

c. The clutch release bearing and sleeve are attached to the front facing of the transmission case by a spring. Check the bearing and sleeve for evidence of grease leaks from within the bearing or for wear and looseness. Replace parts if necessary.

d. To assemble the clutch to the flywheel, first put a small amount of light cup grease in the flywheel clutch shaft bushing, install the driven plate, with short end of hub toward the flywheel, then place the pressure plate assembly in position. With a clutch plate aligning arbor or a spare clutch shaft, align the driven plate splines leaving the arbor in position while tightening the pressure plate screws evenly.

Next, assemble the bell housing to the engine or reinstall the engine. Make sure that the clutch release bearing carrier return spring is hooked in place. For the balance of the assembly reverse the operations that were used in disassembly, referring to the instructions given in the "Transmission" section. Finally adjust the clutch control cable so there is 1½" [38,1 mm.] free pedal travel.

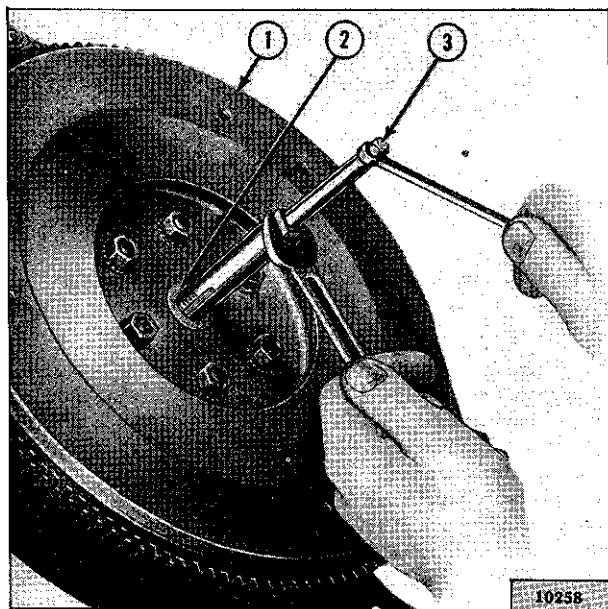


FIG. 196—REMOVING PILOT BUSHING FROM FLYWHEEL

1—Flywheel  
2—Pilot Bushing  
3—Pilot Bushing Remover

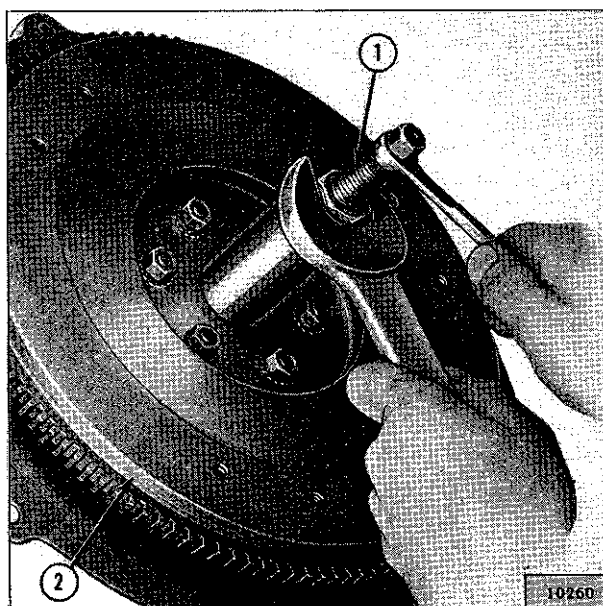


FIG. 197—INSTALLING PILOT BUSHING TO FLYWHEEL

1—Pilot Bushing Installing and Burnishing Tool  
2—Flywheel

#### J-15. BORG & BECK CLUTCH

This clutch, as used in Willys vehicles has either nine or six springs. Procedures for disassembly, inspection, assembly and adjustment of both the nine and six spring clutches follow:

##### J-16. Disassembly

Install the clutch on the fixture. Mark the cover and pressure plate with a prick punch to assure alignment in the original position when assembling.

a. Install the three-legged spider (Fig. 198, No. 1) so that it rests directly against the top of the clutch pressure plate cover.



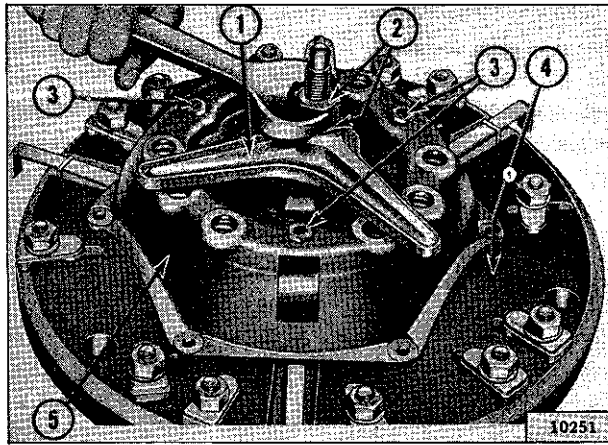


FIG. 198—DISASSEMBLING BORG AND BECK CLUTCH

- 1—Three-legged Spider
- 2—Plain Washer and Nut
- 3—Eyebolt Nuts
- 4—Clutch Rebuilding and Adjusting Fixture
- 5—Pressure Plate Assembly

- b. Install the plain washer and nut on the fixture (2), and tighten down the nut to relieve the spring load on the pressure plate eyebolt nuts.
- c. Remove the pressure plate lever eyebolt nuts (3).
- d. Release and remove the fixture nut and washer. Lift off the pressure plate cover exposing the springs, levers and pressure plate for inspection or replacement (Fig. 199).
- e. Remove the pressure plate struts, levers, lever pins and the eyebolts from the pressure plate.
- f. Remove the pressure plate lever springs from the cover.

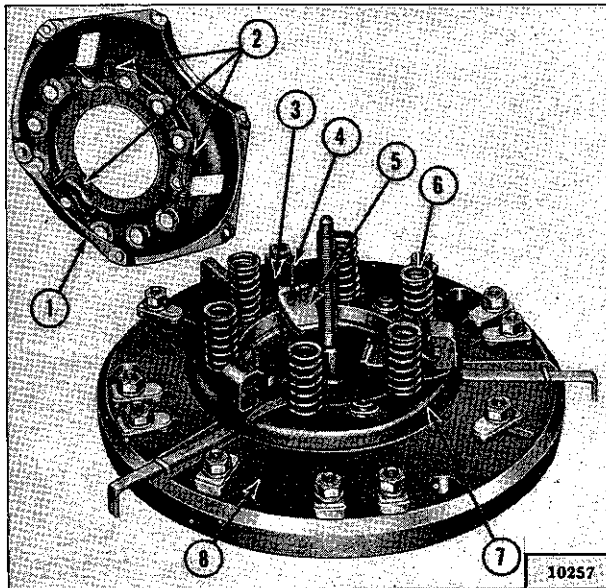


FIG. 199—SIX-SPRING CLUTCH COVER PLATE REMOVED

- 1—Cover
- 2—Lever Springs
- 3—Strut
- 4—Eyebolt
- 5—Lever
- 6—Springs
- 7—Pressure Plate
- 8—Clutch Rebuilding and Adjusting Fixture

### J-17. Inspection

Determine if the pressure plate is scored or warped—if so it should be replaced. Check the clutch pressure plate springs, using a spring testing fixture.

When using the recommended spring checking fixture, the "pounds" pressure is obtained by multiplying the torque wrench reading (in "foot-pounds") by two.

### J-18. Assembly and Adjustment

Proper assembly and adjustment of the clutch is as follows:

- a. Assemble the clutch pressure plate on a fixture.
- b. Assemble the eyebolts, lever pins, pressure plate levers and struts on the pressure plate (Fig. 200). Install the six pressure plate springs on the pressure plate as shown in Fig. 199. Apply Lubriplate to all contact and pivot surfaces of the eyebolts, lever pins and levers.

If working on a six spring pressure plate do not install adjacent to each other, install them as shown in Fig. 199. Apply Lubriplate to all contact and pivot surfaces of the eyebolts, lever pins and levers.

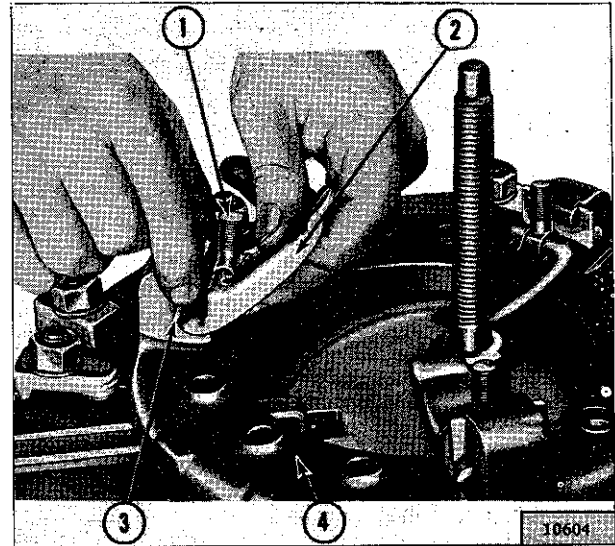


FIG. 200—ASSEMBLING LEVERS ON CLUTCH PRESSURE PLATE

- 1—Eyebolt
- 2—Lever
- 3—Strut
- 4—Pressure Plate

- c. Install the three lever springs in the cover. Set the cover in place on the pressure plate, aligning the prick punch marks on the cover and plate to assure proper balance.

- d. Position the pressure plate and cover on a fixture so that the pressure plate levers are directly over the feeler blades of the fixture (A, Fig. 201). Install the three-legged spider, washer, and nut on the fixture centering screw and tighten down until the cover is seated on the fixture base and the three eyebolts protrude above the cover.

- e. Install the three nuts on the eyebolts.

- f. Install the fixture clamps to the clutch cover and tighten down to hold the cover securely to the fixture. Release and remove the nut, washer and spider.

g. Install the thickness spacer (B, Fig. 201), compression plate (C), self-aligning washer (D), plain washer (E), and the nut on the centering screw of the fixture.

h. Tighten the compression nut its full extent to properly position the pressure plate levers.

i. Adjust the pressure plate levers (G, Fig. 201) by turning the eyebolt nuts down until each of the three feelers (A) has the same slight drag or "feel" when pushed in or out. When the proper adjustment is made, stake the bolt and nut (H, I, and J, Fig. 201) and remove the clutch from the fixture. The clutch assembly is now ready for installation.

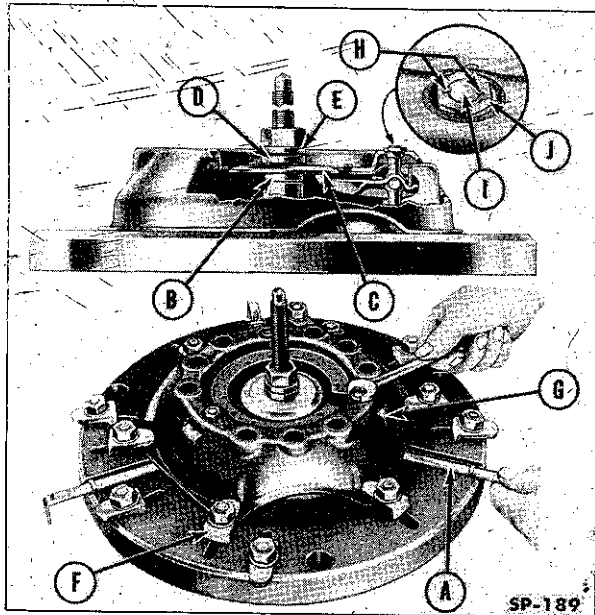


FIG. 201—ADJUSTING PRESSURE PLATE LEVERS

### J-19. CLUTCH DISC

The clutch discs for the nine or six spring clutches are designed for operation with their respective clutches. However, the disc assemblies may be interchanged. Difference in general appearance of the discs may be noted in the method of housing the six torque dampening springs and in the hub design.

After removal of the clutch assembly, the disc should be inspected. The presence of grease or oil on the friction facing will cause the clutch to chatter and grab during engagement and possibly slip at higher speeds. If this condition is evident, the facings or disc assembly should be replaced and the cause of oil accumulation corrected. Excessively worn facings should be replaced. Only factory recommended facings and disc assemblies should be used for replacement. The clutch disc must be installed with the long end of the hub toward the transmission.

### J-20. CRANKSHAFT PILOT BUSHING

All L6-226 Models

Inspect the pilot bushing. Replace it if worn or damaged. Remove the old bushing with a clutch

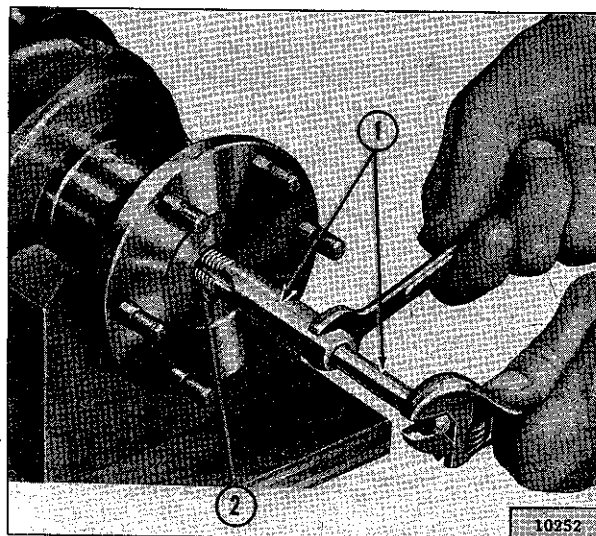


FIG. 202—REMOVING CRANKSHAFT PILOT BUSHING—L6-226 MODELS

1—Puller  
2—Crankshaft Pilot Bushing

shaft pilot bushing remover as shown in Fig. 202. Install the new bushing with a clutch shaft pilot bushing burnisher and driver. Place the bushing on the driving pilot end of the tool. Drive into place in the crankshaft using a soft mallet. The bushing will contract slightly, holding the tool in place. Hold the driving pilot with a wrench and tighten the sleeve nut to remove the pilot as shown in Fig. 203. The rings of the tool will burnish the bushing to a smooth finish as the nut and cup of the tool are turned out and removed. After burnishing, apply a small amount of lubricant to the bushing bore.

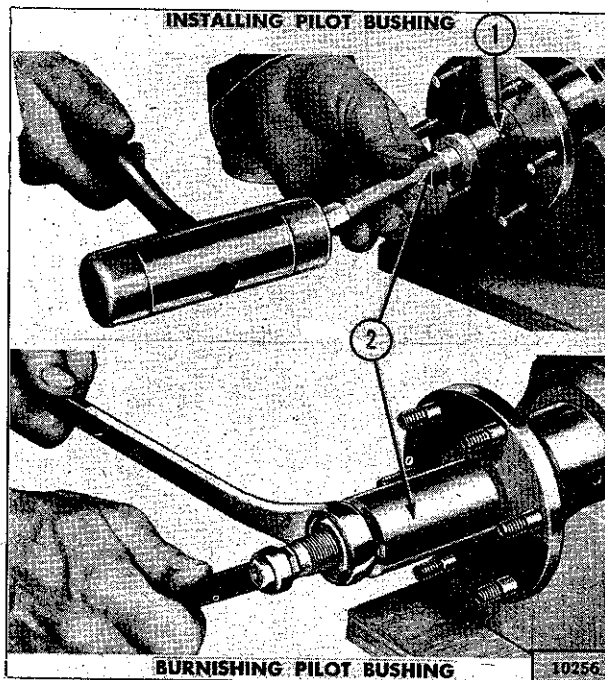


FIG. 203—INSTALLING AND BURNISHING CRANKSHAFT PILOT BUSHING—L6-226 MODELS

1—Crankshaft Pilot Bushing  
2—Driver and Burnisher



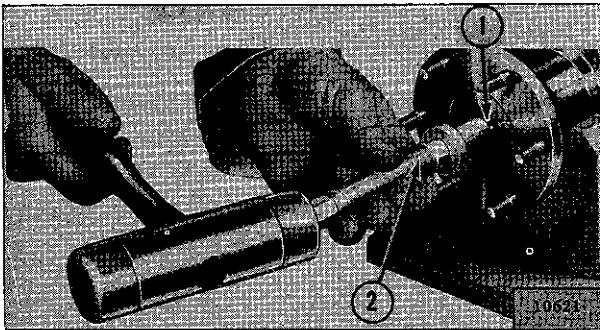


FIG. 203A—INSTALLING PILOT BUSHING  
L6-226 MODELS

1—Crankshaft Pilot Bushing  
2—Driver

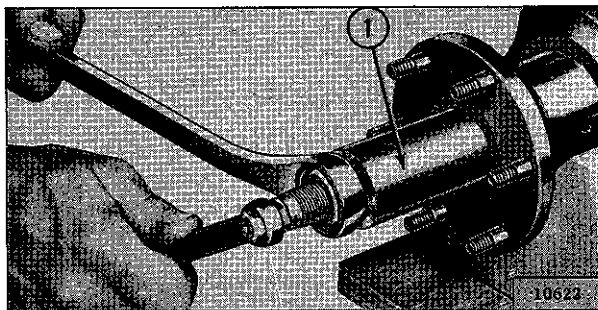


FIG. 203B—BURNISHING PILOT BUSHING  
L6-226 MODELS

1—Burnisher

## J-21. FLYWHEEL CLUTCH SHAFT BUSHING

All F4-134 Models

Inspect the flywheel clutch shaft bushing which is pressed into the center of the flywheel. If the bushing is worn or damaged, it should be removed, using a pilot bushing remover. Screw the tapered end of the tool into the damaged bushing, allowing the tool to cut its own threads until a solid grip is obtained. Insert the puller screw and rotate it until bushing is forced out of flywheel. Fig. 196.

To install a new bushing, slide the bushing onto the end of a pilot bushing installing and burnishing

tool and insert the bushing into flywheel. A soft hammer can be used against the tool to help drive the bushing in place. When the tool is removed by tightening the cap and pressure nut, as shown in Fig. 197, the bushing will be burnished to correct size. After burnishing, apply a small amount of lubricant to the bushing bore.

## J-22. TROUBLE SHOOTING

### J-23. Clutch Control Adjusting Rod Breaking Models L6-226 4WD and 4x4

Under conditions of unusual operation, repeated breaking of the clutch control adjusting rod may occur. This condition may be corrected as follows:

- Remove and discard the clutch control adjusting rod assembly.
- Using a hand brake adjusting rod 642316, extend the  $\frac{3}{8}$ " [9,525 mm.] thread all the way to the yoke end.
- Remove the jam nuts and adjusting link guide from a clutch control adjusting link 212764 and install them on the hand brake adjusting rod modified in step b.
- Install the converted adjusting link on the vehicle using two  $\frac{3}{8}$ " x  $1\frac{1}{4}$ " [9,525-31,75 mm.] clevis pins and two  $\frac{3}{32}$ " x  $\frac{3}{4}$ " [2,38-19 mm.] cotter pins. Lubricate the clevis pins before assembling. Position the link with the yoke end pointing upward.
- Adjust clutch pedal free play.

### J-24. Vehicle Vibrations

All F4-134 Models

See also Service Diagnosis in the Rear Axle Section and Body Section for other possible causes.

With some F4-134 vehicles a vibration may occur particularly upon deceleration or partial deceleration. It is especially noticeable between 33 and 45 mph. [53 a 72 kph.] when traveling downhill. This vibration is caused by changes in friction characteristics of the clutch driven disc hub and can usually be reduced to normal by use of clutch driven disc Part No. 919870.

## SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Slipping:</b>	
Improper Pedal Adjustment.....	Adjust Pedal Free Travel
Weak Pressure Springs.....	Replace
Lining Oil Soaked.....	Install New Driven Plate
Worn Linings or Torn Loose from Plate .....	Install New Driven Plate
Burned Clutch.....	Replace
<b>Grabbing or Chattering:</b>	
Gummy or Worn Linings.....	Install New Driven Plate
Loose Engine Mountings.....	Tighten
Scored or Broken Pressure Plate.....	Install New Pressure Plate
Improper Clutch Finger Adjustment.....	Readjust
Clutch Plate Crimp or Cushion Flattened Out...	Replace Driven Plate
<b>Dragging:</b>	
Too Much Pedal Play.....	Adjust
Improper Finger Adjustment.....	Readjust
Pressure Plate Binds in Bracket.....	Adjust
Warped Pressure or Driven Plate.....	Replace
Torn or Loose Clutch Facing.....	Replace
<b>Rattling:</b>	
Broken or Weak Return Springs in Driven Plate	Replace
Worn Throw-Out Bearing.....	Replace
Fingers Improperly Adjusted.....	Readjust
Worn Driven Plate Hub of Transmission Main Gear Shaft.....	Replace
Pilot Bushing in Flywheel Worn.....	Replace

## CLUTCH SPECIFICATIONS

MODEL:	L6-226 4WD L6-226 4x4	L6-226 4x2
Pressure Plate:	Auburn or Borg & Beck Single Dry Plate	Auburn or Borg & Beck Single Dry Plate
Type:		
Number of Springs:	3	3
Auburn:	6 or 9	6 or 9
Borg & Beck:		
Rockford:		
Spring Pressure:		
3 springs:	220 to 230 lbs. at 1 $\frac{1}{16}$ " [91,6 a 104,3 kg.-39,6 mm.]	239 to 264 lbs. at 1 $\frac{1}{16}$ " [108,4 a 119,7 kg.-46 mm.]
6 springs:	160 lbs. at 1 $\frac{1}{16}$ " [72,5 kg.-33,3 mm.]	239 to 251 lbs. at 1 $\frac{1}{2}$ " [108,4 a 113,8 kg.-38,1 mm.]
9 springs:	155 to 165 lbs. at 1 $\frac{1}{2}$ " [70,3 a 74,8 kg.-38,1 mm.]	155 to 165 lbs. at 1 $\frac{1}{2}$ " [70,3 a 74,8 kg.-38,1 mm.]
Total Plate Pressure:	1400 lb. [635 kg.]	1366 lb. [620 kg.]
Driven Plate:		
Make:	Borg & Beck	Borg & Beck
Facings:	Woven-Moulded	Woven-Moulded
Diameter:	10" [25,4 cm.]	9 $\frac{1}{4}$ " [23,4 cm.]
Thickness:	.125" [3,17 mm.]	.125" [3,17 mm.]
Torque Capacity:	230 lb.-ft. [31,8 kg.-m.]	216 lb.-ft. [29,9 kg.-m.]
Clutch Release Bearing:	Prelubricated Sealed Ball Bearing	Prelubricated Sealed Ball Bearing
Clutch Shaft Bushing:		
Location:	In Flywheel	In Flywheel
Material:	Bronze Graphite	Bronze Graphite
Size:	.631" I.D. [16,02 mm.]	.631" I.D. [16,02 mm.]
Clutch Pedal Adjustment:	1" [2,54 cm.]	1" [2,54 cm.]

MODEL:	All F4-134 Models	F4-134 Optional
Pressure Plate:	Auburn or Rockford Single Dry Plate	Auburn Single Dry Plate
Type:		
Number of Springs:	3	3
Auburn:	6	
Borg & Beck:		
Rockford:		
Spring Pressure:		
3 springs:	220 to 230 lbs. at 1 $\frac{1}{16}$ " [91,6 a 104,3 kg.-39,7 mm.]	160 to 176 lbs. at 1 $\frac{1}{16}$ " [72,5 a 79,8 kg.-46 mm.]
6 springs:	190 to 210 lbs. at 1.156" [86,1 a 95,2 kg.-29,3 mm.]	
9 springs:		
Total Plate Pressure:	1140 lb. [517 kg.]	890 lb. [404 kg.]
Driven Plate:		
Make:	Borg & Beck	Borg & Beck
Facings:	Woven-Moulded	Woven-Moulded
Diameter:	8 $\frac{1}{2}$ " [21,6 cm.]	9 $\frac{1}{4}$ " [23,4 cm.]
Thickness:	.132" to .138" [3,43 mm.]	.125" [3,17 mm.]
Torque Capacity:	165 lb.-ft. [19,4 kg.-m.]	145 lb.-ft. [20,0 kg.-m.]
Clutch Release Bearing:	Prelubricated Sealed Ball Bearing	Prelubricated Sealed Ball Bearing
Clutch Shaft Bushing:		
Location:	In Flywheel	In Flywheel
Material:	Bronze Graphite	Bronze Graphite
Size:	.628" I.D. [15,9 mm.]	.628" I.D. [15,9 mm.]
Clutch Pedal Adjustment:	1" [2,54 cm.]	1" [2,54 cm.]



## TRANSMISSION AND OVERDRIVE

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Overdrive:		Transfer Case.....	K-22
Control Operation.....	K-15	Disassembly.....	K-24
Description.....	K-14	Front Bearing Cap.....	K-25
Disassembly.....	K-20	Installation.....	K-28
Operation		Overhaul.....	K-27
O.D. Disengaged.....	K-17	Rear Bearing Cap.....	K-26
O.D. Engaged.....	K-18	Removal.....	K-23
Kick-Down Switch.....	K-19	Transmission — 4-Wheel-Drive Models	
Rail Switch.....	K-16	Disassembly.....	K-4
Reassembly.....	K-21	Overhaul.....	K-5
Remote Control:		Reassembly.....	K-6
Adjustment.....	K-7	Removal.....	K-2
Reassembly.....	K-9	Transmission — 2-Wheel-Drive Models	
Removal.....	K-8	Disassembly.....	K-11
Separate Transmission-Transfer Case.....	K-3	Overhaul.....	K-12
		Reassembly.....	K-13
		Removal.....	K-10

**K-1. GENERAL**

All vehicles covered in this manual are equipped with three-speed synchromesh-type transmissions with synchronized second- and high-speed gears. Separate repair procedures for transmissions for 4-wheel-drive vehicles and for 2-wheel-drive vehicles are included in this section of the manual. All 4-wheel-drive vehicles are also equipped with a transfer case attached to the rear of the transmission. See Section L of this manual for repair procedures for the transfer case. Some 2-wheel-drive vehicles are equipped with an overdrive (optional equipment) attached to the rear of the transmission. Overdrive repair procedures are given at the end of this section of the manual beginning with Par. K-14.

All 4-wheel-drive vehicles are equipped with a cane-type shift mounted on top of the transmission. All 2-wheel-drive vehicles are equipped with a remote control shift mounted on the steering wheel column. For adjustment and repair procedures for the remote control, see Par. K-7.

The transmission is attached to the rear face of the flywheel bell housing and is supported on a rubber insulator at the frame center cross member which forms the rear engine support.

**K-2. Transmission Removal****All 4-Wheel-Drive Models**

**NOTE:** The transfer case may be removed from the vehicle without removing the transmission. For this procedure, refer to Par. K-3.

The following transmission removal sequence applies in general to all 4-wheel-drive vehicles covered by this manual. Minor differences between models will not affect the procedure.

- Drain the transmission and transfer case. Replace the drain plugs.
- Remove the transmission access cover from the floor pan.
- Remove the shift lever and shift housing as-

sembly from the transmission. Remove the gasket.

**d.** Remove the set screw from the transfer case shift lever pivot pin (Fig. 223, No. 21). Remove the pivot pin, shift levers, and shift lever springs.

**e.** If vehicle is equipped with power take-off, remove the shift lever plate screws and lift out the lever.

**f.** Disconnect the front and rear propeller shafts from the transfer case, following the procedure outlined in Section L of this manual.

Should the vehicle be equipped with a power take-off, disconnect the transfer case end of the power-take-off drive shaft.

**g.** Disconnect the speedometer cable at the transfer case.

**h.** Disconnect the front and rear hand brake cables at the hand brake lever mounted on the frame cross member.

**i.** Place jacks under the transmission and engine, protecting the engine oil pan with a block of wood.

**j.** Remove nuts holding rear mounting to frame cross member.

**k.** Remove transfer case snubbing rubber bolt nut at cross member.

**l.** Remove bolts holding frame center cross member to frame side rail and remove cross member.

**m.** Remove bolts holding transmission to flywheel bell housing.

**n.** Force transmission to right to disengage clutch control lever tube ball joint.

**o.** Lower jacks under engine and transmission; slide transmission and transfer case assemblies toward rear of vehicle until the clutch shaft clears the bell housing.

**p.** Lower jack under transmission. Remove transmission and transfer case as an assembly from under the vehicle.

**q.** For the separation of the transmission and transfer case, refer to Par. K-3.

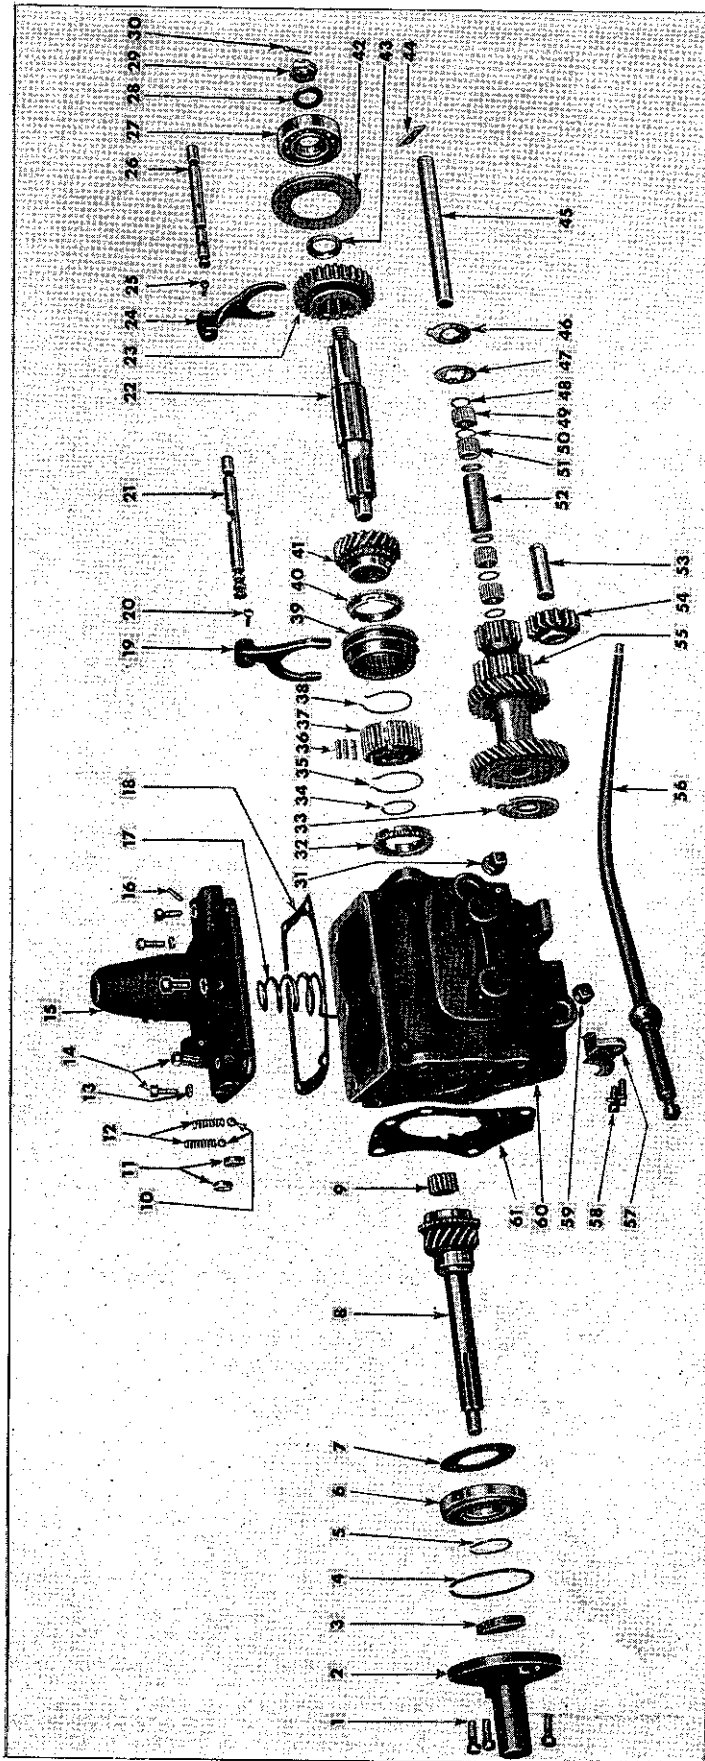


FIG. 204—TRANSMISSION—4 WHEEL DRIVE MODELS

- 1—Bearing Retainer Bolt
- 2—Bearing Retainer
- 3—Bearing Retainer Oil Seal
- 4—Bearing Snap Ring
- 5—Main Drive Gear Snap Ring
- 6—Main Drive Gear Bearing
- 7—Front Bearing Washer
- 8—Main Drive Gear
- 9—Pilot Roller Bearing
- 10—Poppet Ball
- 11—Shift Rail Cap
- 12—Poppet Spring
- 13—Lockwasher
- 14—Shift Housing Bolt
- 15—Shift Housing
- 16—Interlock Plunger
- 17—Shift Lever Spring
- 18—Shift Housing Gasket
- 19—High and Intermediate Shift Fork
- 20—Shift Fork Pin

- 21—High and Intermediate Shift Rail
- 22—Mainshaft
- 23—Sliding Gear
- 24—Low and Reverse Shift Fork
- 25—Shift Fork Pin
- 26—Low and Reverse Shift Rail
- 27—Rear Bearing
- 28—Mainshaft Washer
- 29—Mainshaft Nut
- 30—Cotter Pin
- 31—Filler Plug
- 32—Blocking Ring
- 33—Front Countershaft Thrust Washer
- 34—Clutch Hub Snap Ring
- 35—Synchronizer Spring
- 36—Synchronizer Plate
- 37—Clutch Hub
- 38—Synchronizer Spring
- 39—Clutch Sleeve
- 40—Blocking Ring

- 41—Second Speed Gear
- 42—Rear Bearing Adapter
- 43—Bearing Spacer
- 44—Lock Plate
- 45—Countershaft
- 46—Rear Countershaft Thrust Washer
- 47—Rear Countershaft Thrust Washer
- 48—Countershaft Bearing Washer
- 49—Countershaft Bearing Rollers
- 50—Countershaft Bearing Washer
- 51—Countershaft Bearing Rollers
- 52—Countershaft Bearing Spacer
- 53—Reverse Gear Shaft
- 54—Reverse Idler Gear
- 55—Countershaft Gear Set
- 56—Shift Lever
- 57—Oil Collector
- 58—Oil Collector Screw
- 59—Drain Plug
- 60—Transmission Case
- 61—Bearing Retainer Gasket

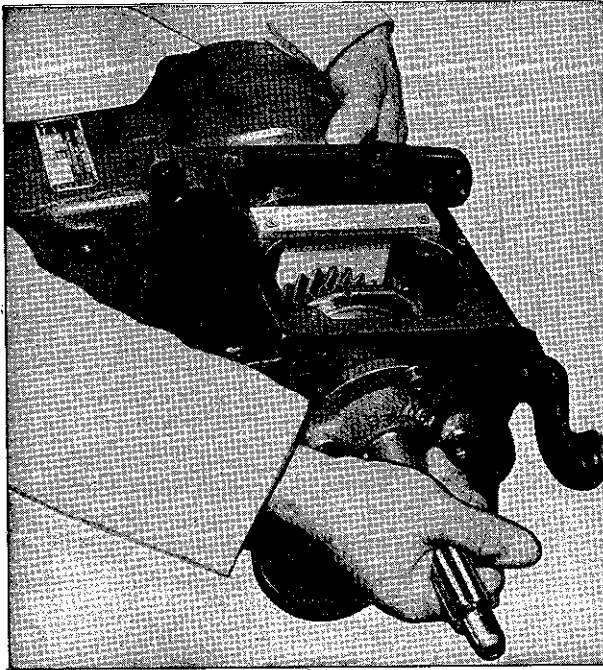


FIG. 205—MAINSHAFT RETAINING PLATE W-194

### K-3. Separating Transmission and Transfer Case

a. Remove the six screws and lockwashers attaching the transfer case rear cover (Fig. 223, No. 5) and remove the cover. Or, should the vehicle be equipped with a power take-off, remove the power take-off shift unit which replaces the cover.

b. Remove cotter pin, nut, and washer which hold the transfer case main drive gear on the rear end of the transmission mainshaft. If possible at this point, remove the main drive gear. If not possible, see Par. d and e below.

c. Remove the transmission-to-transfer-case screws.

d. Separate the transfer case from the transmission. When separating the two units, use care that the transmission mainshaft bearing, which bears in both housings, remains in the transmission housing. To separate the two units if the transfer case main drive gear was not removed in Par. b above, follow the procedure in Par. e below.

e. Install transmission mainshaft retaining plate, tool W-194, as shown in Fig. 205 to prevent the mainshaft from pulling out of the transmission

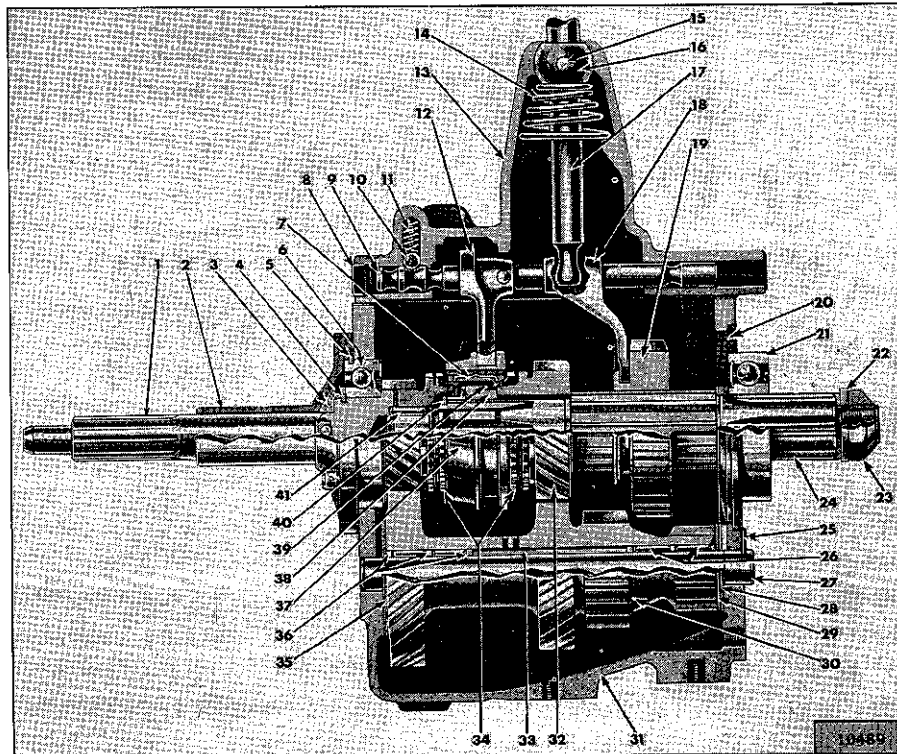


FIG. 206—THREE SPEED TRANSMISSION

- |   |  |   |
|---|--|---|
| 1—Main Drive Gear                           | 15—Control Lever Housing Pin             | 29—Countershaft Thrust Washer Rear—Bronze     |
| 2—Main Drive Gear Bearing Retainer          | 16—Control Lever Fulcrum Ball            | 30—Countershaft Gears                         |
| 3—Main Drive Gear Bearing Retainer Oil Seal | 17—Gear Shift Lever                      | 31—Transmission Case                          |
| 4—Main Drive Gear Snap Ring                 | 18—Shift Fork—Low and Reverse            | 32—Main Shaft Second Speed Gear               |
| 5—Main Drive Gear Bearing Snap Ring         | 19—Sliding Gear—Low and Reverse          | 33—Countershaft Bearing Spacer                |
| 6—Main Drive Gear Bearing                   | 20—Main Shaft Bearing Adapter            | 34—Synchronizer Blocking Ring                 |
| 7—Synchronizer Shifting Plate               | 21—Main Shaft Bearing                    | 35—Countershaft Thrust Washer Front—Bronze    |
| 8—Shift Rail Cap                            | 22—Main Shaft Washer                     | 36—Countershaft Bearing Washer                |
| 9—Shift Rail—High and Intermediate          | 23—Main Shaft Nut                        | 37—Intermediate and High Speed Clutch Sleeve  |
| 10—Shift Rail Poppet Ball                   | 24—Main Shaft                            | 38—Intermediate and High Clutch Hub           |
| 11—Shift Rail Poppet Spring                 | 25—Idler and Countershaft Lock Plate     | 39—Synchronizer Spring                        |
| 12—Shift Fork—High and Intermediate         | 26—Countershaft Gear Bearing Rollers     | 40—Intermediate and High Clutch Hub Snap Ring |
| 13—Control Housing                          | 27—Countershaft Thrust Washer Rear—Steel | 41—Main Shaft Pilot Bearing Roller            |
| 14—Control Lever Support Spring             | 28—Countershaft                          |   |

case. Should this tool be unavailable, loop a piece of wire around the mainshaft directly back of the mainshaft second-speed gear. Install the transmission shift housing right and left front attaching screws part way into the transmission case. Twist the wire and attach each end to one of the screws. Draw the wire tightly. With the mainshaft securely in place, support the transfer case and, with a rawhide mallet or brass drift and hammer, tap lightly on the end of the mainshaft to loosen the gear and separate the two units.

#### K-4. Transmission Disassembly All 4-Wheel-Drive Models

**NOTE:** Numbers in parentheses refer to items shown in Fig. 204.

- a. Drain the lubricant and clean the outside of the case with cleaning solvent.
- b. Remove the shift housing and gasket from the top of the transmission.
- c. If the transfer case is attached, separate it from the transmission as outlined in Par. K-3.
- d. Remove the three screws and washers attaching the front main drive gear bearing retainer (2) to the transmission. Remove the retainer and gasket (61).
- e. Remove the two socket-head screws from the front end of the transmission case. These screws support the oil collector (57) inside the case.
- f. Tap lightly on the front end of the countershaft to loosen the lock plate (44). Remove the lock plate from slots cut in the rear ends of the countershaft and reverse idler shaft.

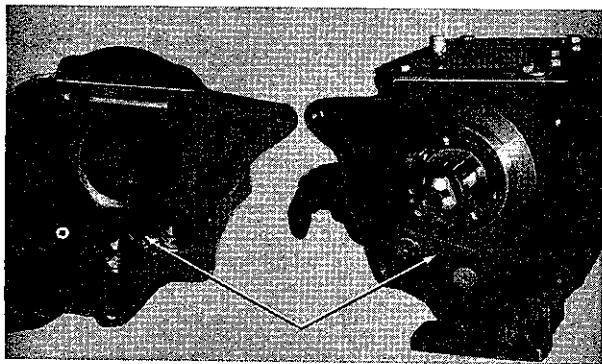


FIG. 207—SHAFT LOCK PLATE

g. Using special tool No. W-166 (Fig. 208) or a brass drift, drive the countershaft (45) toward the rear of the case and remove it. The countershaft gear set (55) will drop to the bottom of the transmission case. If the special tool is used, the needle bearings (49 and 51) will remain in the countershaft gear hub and the gears and bearings may later be removed as an assembly.

h. Remove the mainshaft rear bearing adapter (42).

i. Remove the mainshaft from the case. The mainshaft assembly with the gears still in place may be removed through the rear bearing adapter opening.

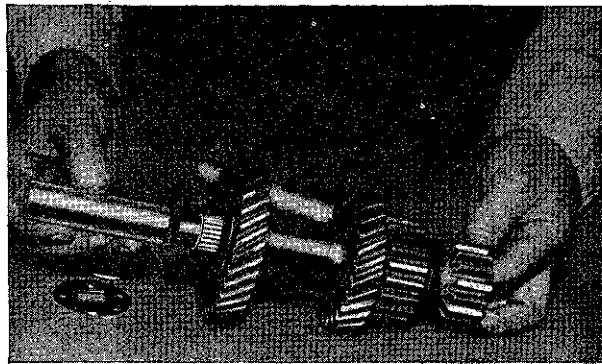


FIG. 208—COUNTERSHAFT GEAR BEARING ARBOR

j. Drive the main drive gear (8) into the case enough to remove the oil collector. Remove the oil collector.

k. Remove the main drive gear.

l. Remove the countershaft gear set and the three thrust washers. Remove the washers, needle bearings, and spacer from the assembly.

m. Remove the reverse idler shaft and gear by driving the shaft into the case using a brass drift.

#### K-5. Transmission Overhaul

- a. Wash the transmission case thoroughly inside and outside with cleaning solvent.
- b. Check bearing and shaft bores. Inspect the case for cracks. Check the front and rear faces and dress off any burrs with a fine mill file. If cracks are found or the bores are not true, replace the case.
- c. Clean and inspect all gears for cracks, chipped or cracked teeth, or excessive wear of the teeth.
- d. Inspect all bushings and bearings for wear or damage.
- e. Check first and reverse sliding gear for freedom of movement on the mainshaft.
- f. Check the clutch sleeve to see that it slides freely on the hub.
- g. Check the condition of the bearing retainer oil seal.

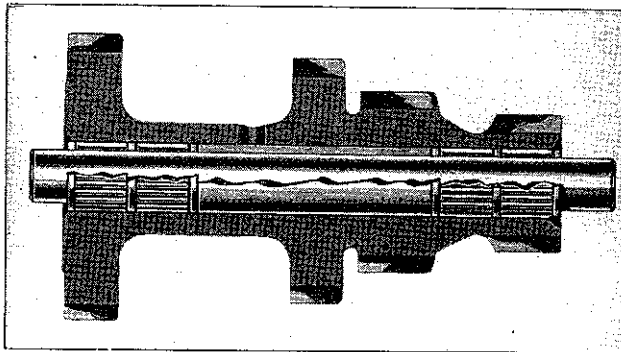


FIG. 209—COUNTERSHAFT GEAR BEARINGS

#### K-6. Transmission Reassembly All 4-Wheel-Drive Models

**NOTE:** Numbers in parentheses refer to items shown in Fig. 204.



Assemble the unit in the reverse order of disassembly, noting the following points.

**a.** On early production F4-134 4x4 Models, the countershaft gear assemblies included only four washers. No washers were installed at the ends of the spacer. On later production F4-134 4x4 vehicles and all other 4-wheel-drive vehicles, a shorter spacer and the two additional washers shown in Fig. 209 were used. When a transmission of the earlier type is disassembled, change to the shorter spacer and add the two washers upon reassembly.

**b.** Assemble the spacer (52), six washers (48 & 50), and four countershaft needle bearings (49 & 51) in the countershaft gear hub, using special tool (W-193 for F4-134 models and W-166 for L6-226 models) with loading sleeve as shown in Fig. 208 & 209. Place the spacer inside the hub and insert the special tool in the spacer. Place a washer at each end of the spacer and load a set of bearing rollers at each end. Then add a washer, a set of bearing rollers, and finally another washer at each end to complete the assembly. Place the countershaft gear assembly in the case but do not install the countershaft until the mainshaft and main drive gear are installed.

**c.** The countershaft gear set, when assembled in the case, should have .012" to .018" [0,305 a 0,457 mm.] end play. This clearance is obtained by selective thickness of the rear steel thrust washer (46) which is available in .0555" and .0625" [1,410 a 1,587 mm.] thickness.

**d.** To assemble the countershaft gear set in the case, first install the large bronze thrust washer (33) at the front of the case with the lip of the washer entered in the slot of the case. Use heavy grease to hold this washer in position. Next, install the steel thrust washer (46) at the rear of the case. Start the countershaft into the case just enough to hold this washer in place. Be sure the thrust washers are correctly positioned. Then position the bronze-faced washer (47) against the rear end of the gear and place the gear in its running position. Tap the countershaft through the countershaft gear set and the case, forcing out the special tool.

**e.** When assembling the mainshaft gears, the low and reverse sliding gear is installed with the shift shoe groove toward the front of the transmission.

**f.** The sequence of assembly of the synchronizer unit is shown in Fig. 210. First install the two springs in the high and intermediate clutch hub (37) with the spring tension opposed. Place the right lipped end of one spring in a slot of the hub and place the spring in the hub. Turn the hub around and make exactly the same installation with the other spring, starting with the same slot. Install the three synchronizer shifting plates (36) in the three slots in the hub with the smooth side of the plates out. Hold the plates in position and slip the second and direct speed clutch sleeve (39) over the hub with the long beveled edge toward the long part of the clutch hub. Install the two blocking rings (40) one on each side of the hub. Install the completed assembly on the mainshaft

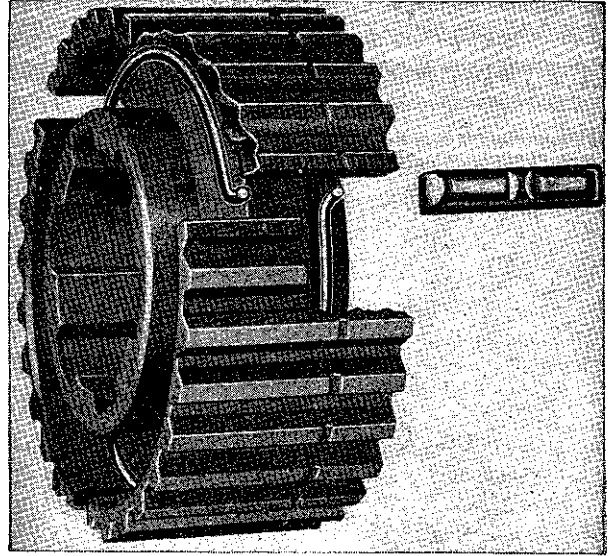


FIG. 210—SYNCHRONIZER SPRINGS

with the beveled edge of the clutch sleeve toward the front end of the shaft.

**g.** When installing the mainshaft, use care that the needle bearing rollers (9) in the main drive gear (8) are correctly positioned. Use heavy grease to hold them in position for assembly.

**h.** Attach the transfer case to the transmission before the unit is installed in the vehicle. When doing this, use care that the countershaft and reverse idler shaft lock plate shown in Fig. 190 is correctly positioned in the recess in the transfer case housing. Three 1½" long [29 mm.] screws and two 1" long [25 mm.] screws are used to attach the transfer case housing to the transmission housing. Install the 1" long screws in the lower left and lower right mounting holes.

### K-7. Transmission Remote Control Adjustment

#### All 2-Wheel-Drive Models

**a.** If the shift is not smooth and positive, first disconnect the transmission shift rods from the remote control levers. Check and correct any binding of the remote control shaft on steering column. Check operation of remote control levers and clutches as outlined in paragraph K-9, and correct as necessary. Reconnect the transmission shift rods to the remote control levers.

**b.** Two holes are provided in the second-and-high shift lever. This lever is mounted on the lower end of the remote control shift shaft. On L6-226 models, the second-and-high shift rod should be assembled in the outer hole. On F4-134 models, the second-and-high shift rod should be assembled in the inner hole. Check for correct installation of the shift rod for difficult shifting will occur if the rod is installed in the wrong hole.

**c.** Shift to neutral position. Disconnect shift rods from shift levers at transmission by removing clevis pins (Fig. 211, No. 21). Insert a short piece of snug fitting ¼" [6,35 mm.] rod (No.

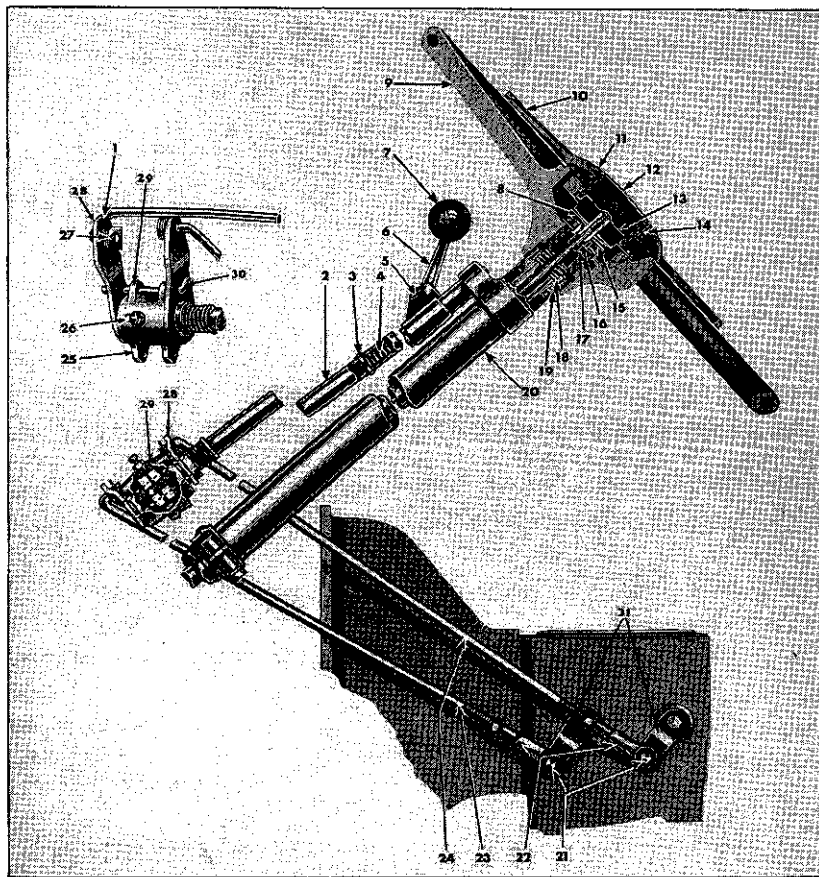


FIG. 211—TRANSMISSION REMOTE CONTROL

- 1—Low and Reverse Lever and Clutch
- 2—Shaft Assembly
- 3—Screw
- 4—Cross Shift Bias Spring
- 5—Lever Fulcrum Pin
- 6—Shift Lever
- 7—Shift Lever Ball
- 8—Horn Button Ground Spring
- 9—Steering Wheel
- 10—Horn Ring
- 11—Horn Button
- 12—Horn Button Emblem
- 13—Horn Button Contact Cup
- 14—Horn Button Snap Ring
- 15—Steering Wheel Nut
- 16—Horn Button Spring
- 17—Horn Button Spring Cup
- 18—Steering Column Bearing Spring
- 19—Steering Column Bearing Assembly
- 20—Steering Column Bearing and Bracket
- 21—Clevis Pin
- 22—Adjusting Yoke
- 23—Control Rod—Second and High
- 24—Control Rod—Low and Reverse
- 25—Cross Shift Bracket Assembly
- 26—Lubricating Fitting
- 27—Shift Rod Anti-Rattle Spring
- 28—Gear Shift Lever
- 29—Housing
- 30—Rod
- 31—Control Lever

30) through the gearshift levers and housing as shown in the inset drawing. This places the clutch and shift lever assemblies in neutral position. Adjust each shift rod yoke (22) so a clevis pin (21) may be freely inserted through clevis and shift lever. Secure the clevis pins. Remove the  $\frac{1}{4}$ " rod. Road test vehicle.

d. If difficulty is still experienced with the shift from first to second gear, or if transmission hangs in first gear while attempting to shift to second gear, shorten the low and reverse shift rod one turn at a time (usually three full turns are required) until an improvement is obtained.

e. If normal shifting cannot be obtained with the above adjustments, inspection of the transmission will be required, especially the transmission shifting mechanism, as outlined in paragraph K-12h.

### K-8. Removal of Remote Control

a. Remove the shift rods (Fig. 211, No. 23 & 24) from the transmission and from the clutch levers (28).

b. Remove gearshift lever fulcrum pin (5) and the shift lever (6).

c. Remove plates on the floor panel at the steering column.

d. Remove the damper which secures the shaft to the instrument panel brace.

e. Remove the two screws holding remote control housing (29) to the steering column and lift the

housing from the positioning pin.

f. Remove the assembly down through the floor panel.

g. Remove the lower clutch and shift lever (1) from the housing by turning counterclockwise.

h. Remove the housing from the upper clutch and shift lever in the same manner.

i. Wash all parts in a cleaning solution.

### K-9. Reassembly of Remote Control

a. Check clearance of shift dog which engages in slot of clutches, and if clearance is greater than .009" [0,2286 mm.], replace the worn parts.

b. Assemble upper clutch and lever assembly (28) into the housing (29) making sure the alignment hole in the housing faces toward the engine. Turn the upper lever assembly in as far as it will go, and then back off approximately one turn until the hole in the lever aligns with the hole in the housing.

c. Assemble the lower clutch and lever assembly (1) into the housing until faces of clutches contact, then back off, not more than half a turn, until the alignment hole in the lever is in line with the hole in the housing. If the holes cannot be aligned in a half turn or less, it will be necessary to grind off the face of the lower clutch square with the axis, grinding not to exceed .015" [0,397 mm.]. Backing off not more than half a turn from face-to-face contact gives the proper clearance of .015" to .031" [0,397 a 0,794 mm.] between the two clutches.

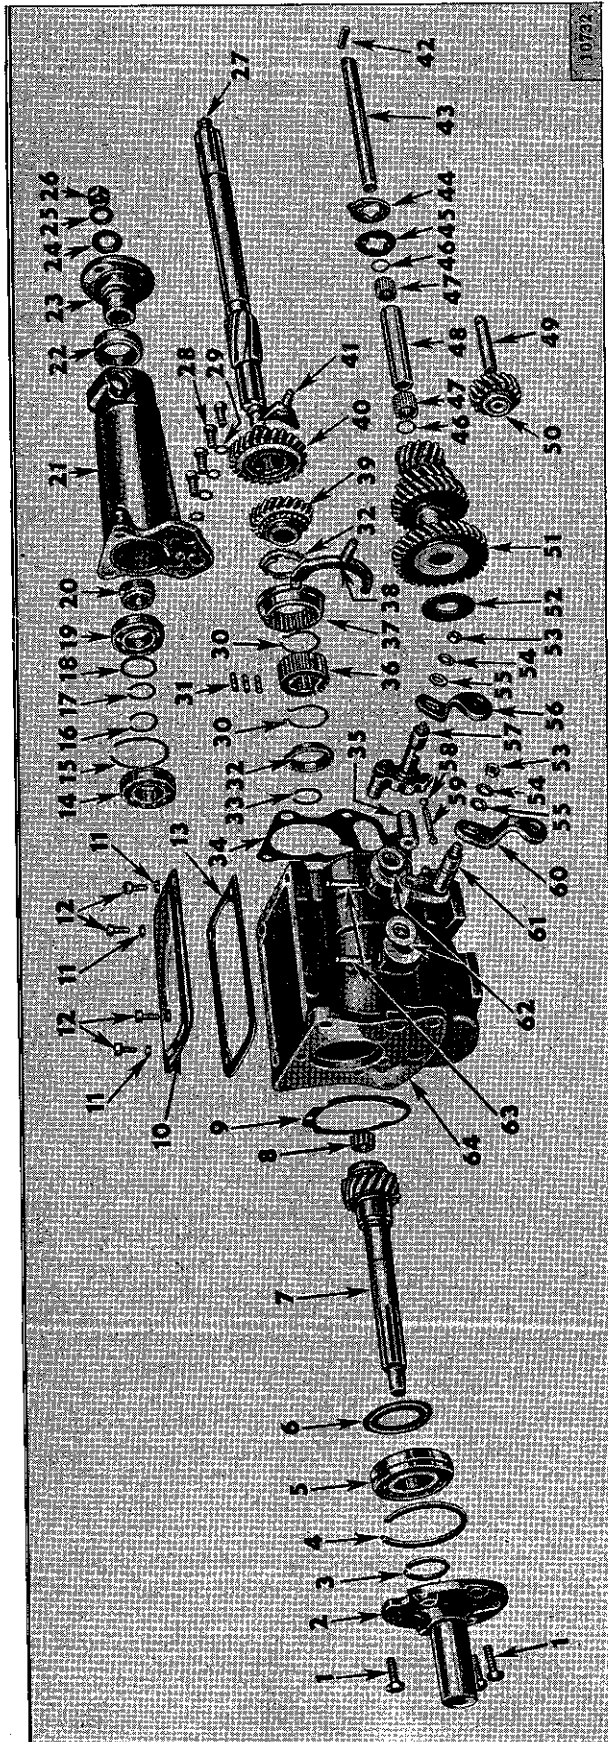


FIG. 212—STANDARD TRANSMISSION—2-WHEEL DRIVE—WITHOUT OVERDRIVE

- |                              |                                |                                      |  |
|------------------------------|--------------------------------|--------------------------------------|--|
| 1—Main Bearing Retainer Bolt | 17—Rear Bearing Snap Ring      | 33—Clutch Hub Snap Ring              | 49—Reverse Idler Gear Shaft            |
| 2—Main Bearing Retainer      | 18—Rear Bearing Washer         | 34—Rear Bearing Retainer Gasket      | 50—Reverse Idler Gear                  |
| 3—Main Drive Gear Snap Ring  | 19—Rear Mainshaft Bearing      | 35—Interlock Sleeve                  | 51—Countershaft Gear                   |
| 4—Bearing Snap Ring          | 20—Speedometer Drive Gear      | 36—Clutch Hub                        | 52—Thrust Washer                       |
| 5—Main Drive Gear Bearing    | 21—Rear Bearing Retainer       | 37—Clutch Sleeve                     | 53—Control Lever to Shaft Nut          |
| 6—Oil Baffle                 | 22—Mainshaft Oil Seal          | 38—High and Intermediate Shift Fork  | 54—Lever to Shaft Lockwasher           |
| 7—Main Drive Gear            | 23—Coupling Flange             | 39—Second Speed Gear                 | 55—Lever to Shaft Washer               |
| 8—Pilot Bearing Rollers      | 24—Mainshaft Washer            | 40—Low and Reverse Gear              | 56—Low and Reverse Control Lever       |
| 9—Bearing Retainer Gasket    | 25—Mainshaft Nut Lockwasher    | 41—Low and Reverse Shift Fork        | 57—Low and Reverse Shift Lever         |
| 10—Case Cover                | 26—Mainshaft Nut               | 42—Idler and Countershaft Lock Plate | 58—Poppet Ball                         |
| 11—Case Cover Bolt Gasket    | 27—Mainshaft                   | 43—Countershaft                      | 59—Poppet Spring                       |
| 12—Case Cover Bolt           | 28—Rear Bearing Retainer Bolt  | 44—Thrust Washer                     | 60—High and Intermediate Control Lever |
| 13—Case Cover Gasket         | 29—Retainer Bolt Lockwasher    | 45—Thrust Washer                     | 61—High and Intermediate Shift Lever   |
| 14—Rear Main Shaft Bearing   | 30—Synchronizer Spring         | 46—Countershaft Bearing Shift Spacer | 62—Shift Shaft Oil Seal                |
| 15—Rear Bearing Snap Ring    | 31—Synchronizer Shifting Plate | 47—Countershaft Bearing Rollers      | 63—Shift Lever Shaft Pin               |
| 16—Mainshaft Snap Ring       | 32—Blocking Ring               | 48—Countershaft Bearing Long Spacer  | 64—Transmission Case                   |

d. Assemble the unit to the steering post. Reinstall and adjust the remote control rods (23 & 24).

e. After assembly, if the shift dog catches on the edge of the slot in the clutch when moving the lever up and down, disconnect the shift rod (23) at the transmission end and either lengthen or shorten it slightly.

### K-10. Transmission Removal

#### All 2-Wheel-Drive Models

The following sequence of removal covers the transmission and overdrive. To remove a standard transmission without overdrive, follow the same procedure, disregarding operations listed for the overdrive.

a. Disconnect the remote control shift rods (Fig. 211, No. 23 & 24) from the control levers (31).

b. Disconnect the two wires from the solenoid (Fig. 215, No. 54). Tag the wires and terminals for reassembly.

c. Disconnect the two wires from the overdrive rail switch (Fig. 215, No. 38) if the vehicle is equipped with this switch. Tag the wires and terminals for reassembly.

d. Disconnect the propeller shaft front universal joint at the transmission or overdrive as outlined in section M of this manual.

e. Disconnect the speedometer cable at the transmission or overdrive. Have available an ordinary cork of the correct size to close the cable attaching opening to prevent leakage of lubricant.

f. Disconnect the overdrive control cable and conduit.

g. Remove the rubber mounted saddle support at the rear end of the overdrive. Use care not to lose the spacers.

h. Remove the overdrive governor assembly.

i. Place a jack under the flywheel bell housing and raise the jack sufficiently to be tight under the housing.

j. Remove the frame cross member with the rubber insulators attached.

k. Place a jack under the engine to support the engine when the transmission is removed. Protect the engine oil pan with a block of wood.

l. Thread out the screws attaching the transmission to the bell housing as far as possible and yet support the weight of the transmission. Pull the transmission back to the bolt heads which will provide approximately  $\frac{3}{4}$ " [1,905 mm.] opening between the two housings. This will relieve pressure on the clutch release fork in the bell housing. Insert a long screw driver through the opening in the side of the bell housing and pry the clutch release fork from engagement with the clutch release bearing carrier.

m. Remove the transmission attaching screws. Pull the transmission back until the clutch shaft clears the bell housing. Remove the assembly with the clutch release bearing carrier mounted in the main drive gear bearing retainer.

### K-11. Transmission Disassembly

#### All 2-Wheel-Drive Models

The following sequence covers disassembly of the transmission only. For disassembly of the overdrive see Par. K-20.

a. Remove the four screws from the transmission case cover (Fig. 212, No. 10). Remove the cover and gasket.

b. Drain the lubricant from the housing. Wash the assembly with cleaning solvent.

c. Remove the screws from the front main bearing retainer (2) and remove retainer.

d. Shift the transmission into low gear.

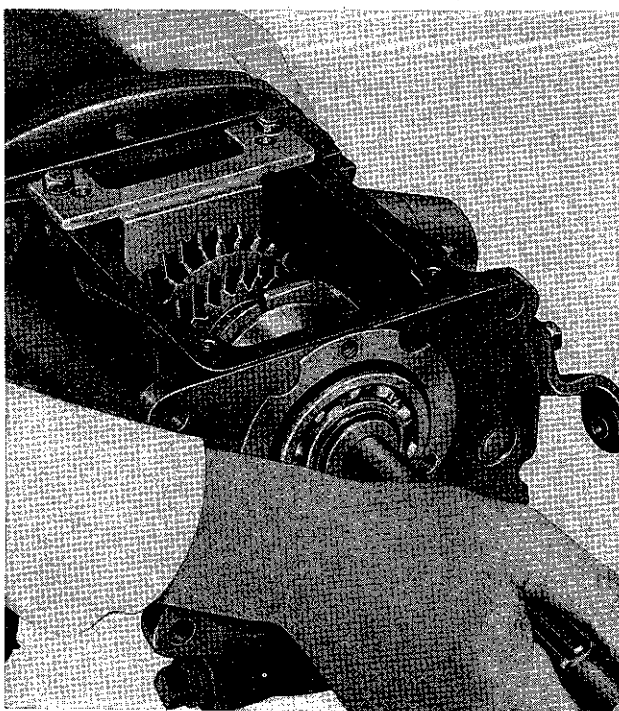


FIG. 213—MAINSHAFT RETAINING PLATE

e. Install transmission mainshaft retaining plate, tool W-194, Fig. 213, to prevent the mainshaft from pulling out of the transmission case. Should this tool be unavailable, loop a piece of wire around the mainshaft directly back of the low-speed sliding gear (40). Install the transmission cover right- and left-front attaching screws in the transmission case. Twist the wire and attach one end to each of the two screws. Draw the wire tightly.

f. Remove nut (26) which attaches the companion flange to the mainshaft. Remove washer (24) and lockwasher (25). Hold the companion flange with special tool C-3281, Fig. 261. Remove the companion flange with puller tool W-172.

g. Remove the screws attaching the rear bearing retainer (21) to the transmission case. Remove the retainer and gasket.

h. Remove oil seal (22) speedometer drive gear (20) and rear shaft bearing (19) from the bearing retainer.

i. Remove tool W-194 or the wire installed in Par. e above.

j. Slide the mainshaft to the rear until the rear bearing (14) is clear of the case. The mainshaft may then be shifted to the side of the case sufficiently for removal of the shifting forks (38 & 41).

k. Remove the lock plate (42) from the ends of the idler shaft and countershaft.

l. Using special tool (W-193 for Model F4-134 or W-166 for Model L6-226) or a brass drift, drive out the countershaft (43) toward the rear. The countershaft gear set will drop to the bottom of the transmission case. If the special tool is used, the needle bearings (47) will remain in the countershaft gear hub, and the gears and bearings may later be removed as an assembly.

m. Remove the main drive gear (7) with bearing through the front of the case. Note that this gear cannot be removed when the countershaft gears are in position. Take care, when removing this gear, not to misplace the thirteen needle bearing rollers (8) in the gear end of the shaft.

n. Remove the mainshaft snap ring (16) the mainshaft bearing snap ring (15) and the mainshaft bearing (14) which is grooved, from the mainshaft.

o. Remove the snap ring (33) from the mainshaft. Then remove the clutch hub and synchronizer assembly through the top of the case.

p. Remove the mainshaft (27) low and reverse sliding gear (40) and second-speed gear (39) as one unit through the top of the case.

q. Remove the countershaft gear set (51) through the top of the case. Take care not to misplace the bearing rollers (47) at each end of the spacer, the two rear thrust washers (44 & 45), the front thrust washer (52), or the short spacers or washers (46).

r. Using a soft drift, drive the reverse idler shaft (49) out the rear of the case. Remove the reverse idler gear.

## K-12. Transmission Overhaul

### All 2-wheel-drive Models

a. Wash the transmission case thoroughly inside and outside with cleaning solvent.

b. Check bearing and shaft bores. Inspect the case for cracks. Check the front and rear faces and dress off any burrs with a fine mill file. If cracks are found or the bores are not true, replace the case.

c. Clean and inspect all gears for cracks, chipped or cracked teeth, or excessive wear of the teeth.

d. Inspect all bushings and bearings for wear or damage.

e. Check first and reverse sliding gear for freedom of movement on the mainshaft.

f. Check the clutch sleeve to see that it slides freely on the hub.

g. Check the condition of the bearing retainer oil seal.

h. With the transmission case empty, the interlock sleeve and poppet assembly should be carefully checked. Should this assembly be too long, it will be impossible to shift gears and if it is too short, it will fail to function as an interlock to prevent

shifting into two gears at one time.

Locate the second-and-high shift lever for second-gear position and the other shift lever for neutral position. Use a feeler gauge to measure clearances as shown in Fig. 214 between the ends of the interlock sleeve and the notched surface of each shift lever. Clearance must be from .001" to .007" [0,025 a 0,178 mm.] on each side of the interlock sleeve.

To obtain correct clearance, interlock sleeves are available for selective fits. The different lengths can be identified by a letter at the end.

1.287"	[326,9 cm.]	— etched C
1.291"	[327,9 cm.]	— etched B
1.295"	[328,9 cm.]	— etched A
1.299"	[329,9 cm.]	— no mark
1.303"	[331,0 cm.]	— etched D

Should an interlock sleeve need replacing, proceed as follows:

First drive out the taper retaining pins (63) from the bottom of the shift lever bosses. Remove the nuts (51) and washers (52 & 55) from the control levers and remove levers. Push the shift levers into the case to remove them and then remove the sleeve, poppet ball, and spring. Check the oil seals carefully for oil leakage and replace if necessary.

i. If it is evident that a minimum clearance of .001" to .007" cannot be obtained between the end of the interlock sleeve and shift levers, even though the longest sleeve has been installed, remove the original interlock pin from the shift lever poppet spring. Replace the original interlock pin with a transfer case intermediate gear needle bearing roller, Part No. 809294, which has been ground to a length of .780" [19,8 mm.]. The installation of this modified roller should ensure positive engagement of the ball at each end of the interlock sleeve in the respective detents of the shifting levers as the transmission is shifted through the shift pattern. Assemble the transmission to where shift action can be checked. If it is apparent that the improvised pin is too long and is causing a bind when shifting is attempted, reduce its length a little at a time from the .780" dimension until a smooth shift action with a positive ball and detent engagement is obtained. Install this improvised pin only when the longest interlock sleeve does not provide the desired minimum clearance.

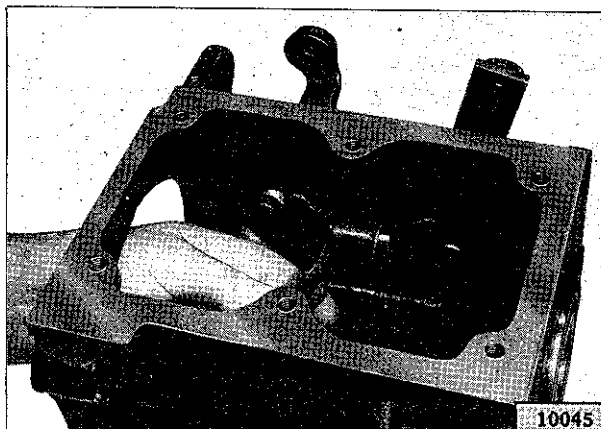


FIG. 214—INTERLOCK SLEEVE CLEARANCE



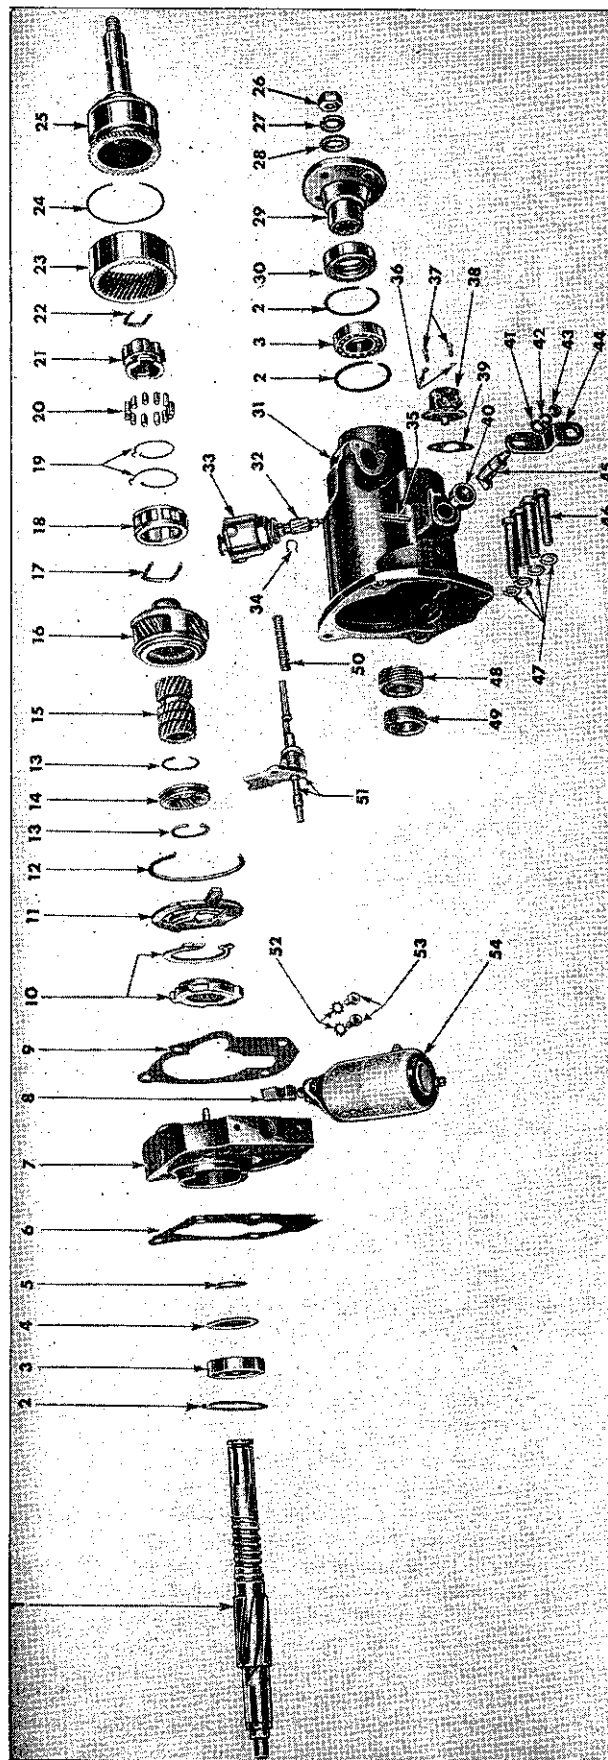


FIG. 215—TRANSMISSION OVERDRIVE—EXPLODED VIEW

- |                                  |                              |                               |                                       |
|----------------------------------|------------------------------|-------------------------------|---------------------------------------|
| 1—Transmission Mainshaft         | 15—Sun Gear                  | 28—Mainshaft Washer           | 41—Control Lever Washer               |
| 2—Mainshaft Bearing Snap Ring    | 16—Planetary Gear Cage       | 29—Coupling Flange            | 42—Control Lever Lockwasher           |
| 3—Mainshaft Bearing              | 17—Roller Retainer Clip      | 30—Mainshaft Oil Seal         | 43—Control Lever Nut                  |
| 4—Mainshaft Oil Baffle           | 18—Freewheel Roller Retainer | 31—Housing                    | 44—Control Lever                      |
| 5—Mainshaft Snap Ring            | 19—Roller Retainer Spring    | 32—Governor Driven Gear       | 45—Control Shaft                      |
| 6—Adapter to Transmission Gasket | 20—Freewheel Roller          | 33—Governor                   | 46—Housing to Transmission Bolt       |
| 7—Overdrive Housing Adapter      | 21—Freewheel Cam             | 34—Driven Gear Retaining Ring | 47—Housing to Transmission Lockwasher |
| 8—Sun Gear Pawl                  | 22—Cam Retainer Clip         | 35—Control Shaft Pin          | 48—Speedometer Drive Gear             |
| 9—Housing to Adapter Gasket      | 23—Overdrive Ring Gear       | 36—Rail Switch Lockwasher     | 49—Governor Drive Gear                |
| 10—Bolt Ring and Gear Plate      | 24—Ring Gear Snap Ring       | 37—Rail Switch Screw          | 50—Shift Retractor Spring             |
| 11—Overdrive Cover Plate         | 25—Mainshaft                 | 38—Rail Switch                | 51—Shift Rail and Fork                |
| 12—Cover Plate Snap Ring         | 26—Mainshaft Nut             | 39—Rail Switch Gasket         | 52—Solenoid Lockwasher                |
| 13—Sun Gear Snap Ring            | 27—Mainshaft Lockwasher      | 40—Control Shaft Oil Seal     | 53—Solenoid Bolt                      |
| 14—Sun Gear Shifting Collar      |                              |                               | 54—Solenoid                           |

flange to the overdrive mainshaft. Hold companion flange with special Tool No. C-3281, as shown in Fig. 267.

**h.** Remove the companion flange with special puller (Tool No. W-172) as shown in Fig. 224.

**i.** Drive the overdrive control shaft taper pin (35) from the overdrive housing, driving it up from the bottom.

**j.** Pull out on the overdrive control shaft (45) to disengage control shaft from the shaft rail. The overdrive housing cannot be removed from the transmission until the shaft is free of the rail.

**k.** Remove the four cap screws (46) which hold the overdrive housing and housing adapter to the transmission. Pull the overdrive housing to the rear, and at the same time, push forward on the overdrive mainshaft to prevent the mainshaft from coming off with the housing. Remove the overdrive housing and gasket.

**l.** Remove the speedometer drive gear (48) and the governor gear (49) from the mainshaft. These gears can be removed by inserting a brass rod through the rear of the housing and tapping them loose. Remove them through the front of the housing.

**m.** Remove the overdrive mainshaft (25) and ring gear (23) as an assembly by pulling to the rear and rocking back and forth. Hold one hand under the freewheeling unit to catch the twelve rollers (20) which will drop out as the mainshaft is removed. To remove the ring gear from the mainshaft, loosen the gear by removing the snap ring.

**n.** Remove the cam retainer clip (22) from the freewheeling cam and transmission mainshaft. Remove the freewheeling cam (21) and overdrive pinion cage (16) as an assembly by pulling to the rear.

**o.** Remove the roller retaining clip (17) holding the freewheeling cam to pinion cage and separate the two assemblies. No further disassembly of the pinion cage should be attempted.

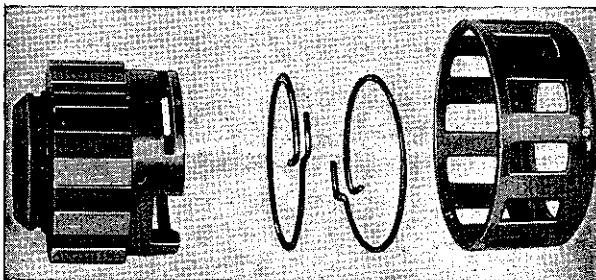


FIG. 216--FREEWHEELING CAM RETAINER

**p.** Examine the freewheeling cam and retainer assembly thoroughly before disassembly. See Fig. 216 and 217. The roller retainer springs (19) place a tension on cam (21), holding the cam in a counter-clockwise position when viewing the cam from the rear. Also, the high part of the ramps of the cam are under the roller openings of the retainer, forcing the rollers outward. The hooked ends of the two retainer springs extend to the right (still

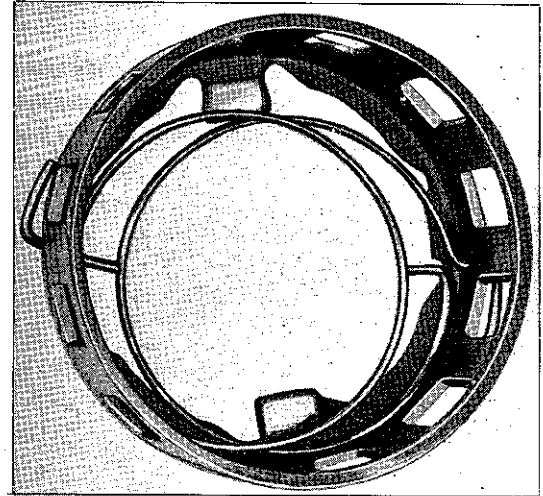


FIG. 217--FREEWHEELING CAM RETAINER WITH SPRINGS ASSEMBLED

view from the rear) of the holes in the roller retainer. One of the two holes in the retainer is closer to the forward end of the retainer than the other hole; also, one of the two holes in the cam is closer to the forward end of the cam than the other hole. This keeps the two springs from overlapping each other. The spring that is hooked into the forward hole in the retainer is also hooked into the forward hole of the cam. When disassembling the unit, hold the assembly in the left hand. With the right hand, pull the cam to the rear, stretching the springs until the ends of the springs in the cam clear the retainer. Hold the unit in this position with the index finger of the left hand. Unhook the springs from the cam with a small screw driver or needle-nose pliers. Remove the cam and springs.

**q.** Remove the shift rail and fork (51) and the sun gear (15) by pulling both to the rear.

**r.** Remove the snap ring (12) from the housing adapter.

**s.** Remove the cover plate (11) bulk ring and gear plate (10) and stationary gear pawl (Fig. 218, No. 18). The bulk ring is a slip fit on the gear plate and can be removed by pulling the ring from the plate hub.

**t.** Remove the snap ring (2) which holds the housing adapter to the transmission mainshaft bearing. Starting at the left side of the adapter where the snap ring boss is cut away, use a screw driver to work the ring free. See Fig. 219. Pull the adapter to the rear, separating it from the mainshaft bearing by tapping lightly on the rear of the mainshaft with a rawhide hammer.

**u.** Remove oil baffle (4) and gasket (6).

**v.** Remove the overdrive shift rail retractor spring (50) from the overdrive housing.

**w.** Remove nut (43) from the overdrive control shaft. Remove the control lever (44). Remove the

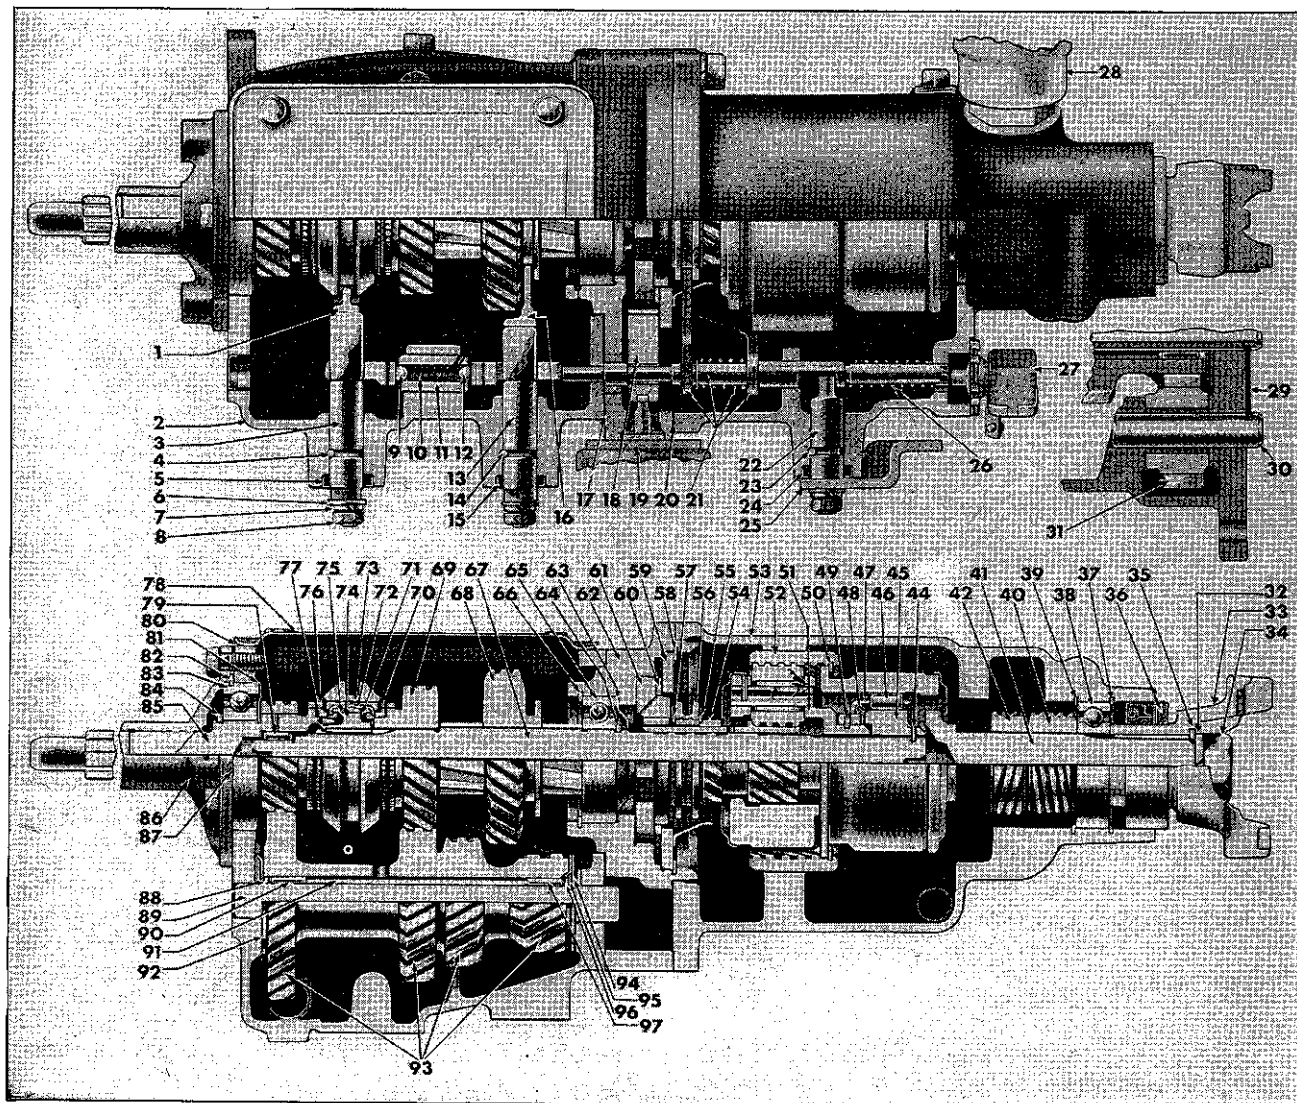


FIG. 218—TRANSMISSION AND OVERDRIVE — F4-134 MODELS

- |  |  |  |
|--|--|--|
| 1—High and Intermediate Shift Fork                         | 31—Reverse Idler Gear Assembly                 | 66—Mainshaft Bearing Snap Ring                             |
| 2—Transmission Case  | 32—Overdrive Mainshaft Nut Lockwasher          | 67—Transmission Mainshaft                                  |
| 3—Transmission Shift Lever Assembly—High and Intermediate  | 33—Transmission End (Rear) Yoke                | 68—Sliding Gear Low and Reverse                            |
| 4—Shift Shaft Tapered Pin                                  | 34—Overdrive Mainshaft Nut                     | 69—Mainshaft Second Speed Gear Assembly                    |
| 5—Shift Shaft Oil Seal                                     | 35—Overdrive Mainshaft Nut Washer              | 70—Synchronizer Blocking Ring                              |
| 6—Control Lever Washer                                     | 36—Overdrive Mainshaft Oil Seal                | 71—Synchronizer Spring                                     |
| 7—Control Lever Lockwasher                                 | 37—Mainshaft Bearing Snap Ring                 | 72—Synchronizer Shifting Plate                             |
| 8—Control Lever Nut  | 38—Mainshaft Bearing                           | 73—Intermediate and High Clutch Sleeve                     |
| 9—Shift Lever Poppet Ball                                  | 39—Mainshaft Bearing Snap Ring                 | 74—Intermediate and High Clutch Hub                        |
| 10—Shift Lever Poppet Spring                               | 40—Speedometer Drive Gear                      | 75—Synchronizer Spring                                     |
| 11—Shift Lever Interlock Sleeve                            | 41—Overdrive Mainshaft Assembly                | 76—Synchronizer Blocking Ring                              |
| 12—Shift Lever Poppet Ball                                 | 42—Overdrive Drive Gear                        | 77—Transmission Intermediate and High Clutch Hub Snap Ring |
| 13—Transmission Shift Lever Assembly—Low and Reverse       | 43—Overdrive Freewheel Cam Retainer Clip       | 78—Transmission Case Cover                                 |
| 14—Shift Shaft Tapered Pin                                 | 44—Overdrive Freewheel Cam                     | 79—Mainshaft Pilot Bearing Rollers                         |
| 15—Shift Shaft Oil Seal                                    | 45—Overdrive Freewheel Roller                  | 80—Transmission Case Cover Gasket                          |
| 16—Low and Reverse Shift Fork                              | 46—Overdrive Freewheel Roller Retainer         | 81—Main Drive Gear Baffle                                  |
| 17—Transmission Case Gasket (Adapter to Transmission)      | 47—Overdrive Freewheel Roller Retainer Springs | 82—Main Drive Gear Bearing Snap Ring                       |
| 18—Overdrive Sun Gear Pawl                                 | 48—Overdrive Freewheel Roller Retainer Clip    | 83—Main Drive Gear Bearing                                 |
| 19—Overdrive Solenoid                                      | 49—Overdrive Ring Gear Snap Ring               | 84—Main Drive Gear Snap Ring                               |
| 20—Overdrive Housing Gasket (Overdrive Housing to Adapter) | 50—Overdrive Planetary Gear Cage Assembly      | 85—Transmission Main Drive Gear                            |
| 21—Overdrive Shift Rail and Fork Assembly                  | 51—Overdrive Ring Gear                         | 86—Main Drive Gear Bearing Retainer                        |
| 22—Overdrive Control Shaft                                 | 52—Overdrive Sun Gear                          | 87—Main Drive Gear Bearing Retainer Gasket                 |
| 23—Overdrive Control Shaft Tapered Pin                     | 53—Overdrive Housing                           | 88—Countershaft Bearing Spacer—Short                       |
| 24—Overdrive Control Shaft Oil Seal                        | 54—Overdrive Sun Gear Shift Collar Snap Ring   | 89—Countershaft  |
| 25—Overdrive Control Lever                                 | 55—Overdrive Sun Gear Shifting Collar          | 90—Countershaft Bearing Roller                             |
| 26—Overdrive Retractor Spring                              | 56—Overdrive Sun Gear Shift Collar Snap Ring   | 91—Countershaft Bearing Spacer, Long                       |
| 27—Overdrive Rail Switch                                   | 57—Overdrive Cover Plate Snap Ring             | 92—Countershaft Thrust Washer, Front (Bronze)              |
| 28—Overdrive Governor                                      | 58—Overdrive Cover Plate and Trough Assembly   | 93—Countershaft Gears                                      |
| 29—Reverse Idler and Countershaft Lock Plate               | 59—Overdrive Sun Gear Balk Ring                | 94—Countershaft Thrust Washer, Rear (Steel)                |
| 30—Reverse Idler Gear Shaft                                | 60—Overdrive Sun Gear Plate                    | 95—Countershaft Thrust Washer, Rear (Bronze)               |
|  | 61—Overdrive Sun Gear Plate                    | 96—Countershaft Bearing Spacer, Short                      |
|  | 62—Transmission Overdrive Adapter Housing      | 97—Countershaft Bearing Roller                             |
|  | 63—Transmission Mainshaft Oil Baffle           |  |
|  | 64—Transmission Mainshaft Bearing              |  |
|  | 65—Mainshaft Bearing                           |  |



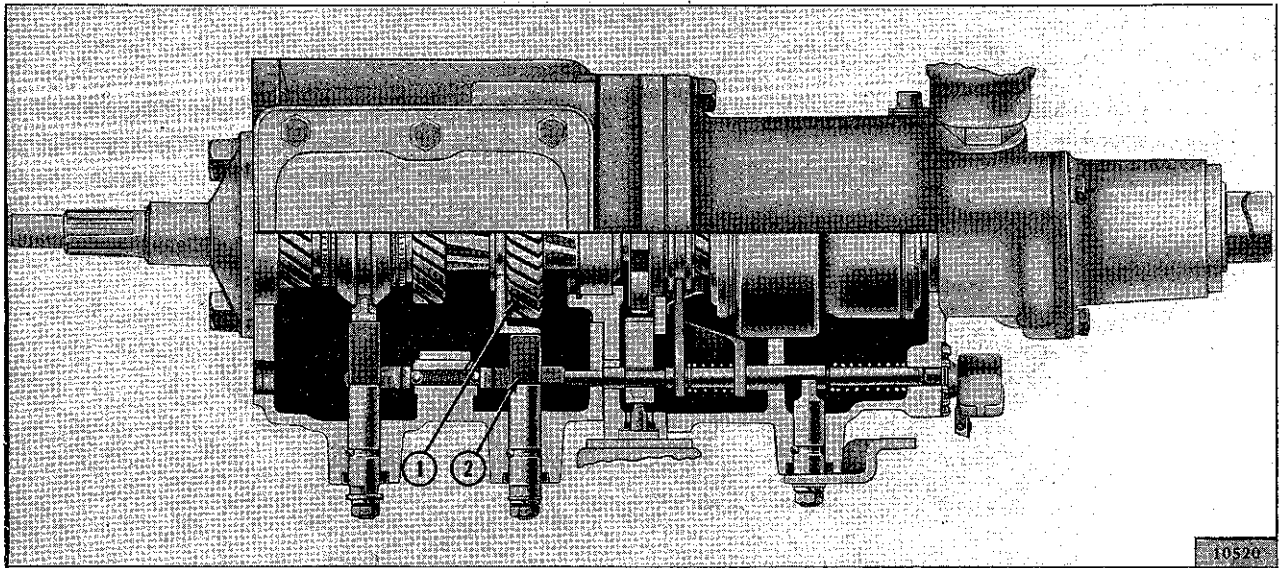


FIG. 218A—TRANSMISSION AND OVERDRIVE, L6-226 MODELS

1.—Low and Reverse Gear

2. Low and Reverse Shift Fork

control shaft (45) through the inside of the overdrive housing.

x. Remove the oil seal (30) from the rear of the overdrive housing.

y. Remove the snap ring (2) from the rear of the overdrive housing. Use a brass drift to tap the bearing out the rear of the housing.

#### K-21. Overdrive Reassembly

To reassemble the overdrive, reverse the procedure outlined in Par. K-20. The following points of assembly require special attention.

a. The sun gear balk ring, Fig. 220, must have from  $3\frac{1}{2}$  to  $5\frac{1}{2}$  lbs. [1,58 a 2,49 kg.] running friction (measured on a  $1\frac{5}{8}$ " [16,8 mm.] radius) when mounted on the sun gear plate hub. Replace any parts necessary to obtain this friction. This friction acts as a brake to allow the solenoid panel to engage without gear noise. In the absence of

friction a "clunking" noise will occur when the overdrive engages. Eventually the sun gear slot edges may become burred and prevent engagement of the pawl.

b. Install the balk ring as shown in Fig. 220. Place the wider flat edge of the ring (Fig. 220, No. 2) toward the top of the transmission which places the inner beveled edge toward the gear plate (3).

c. Install the sun gear pawl (Fig. 220, No. 1) with its grooved edge toward the top of the transmission.

d. Note that the ball end of the solenoid plunger has two flat sides. These flat sides are  $35^\circ$  from the vertical line of the solenoid, making it necessary to turn the solenoid one-quarter turn to engage the plunger with the sun gear pawl. After installing the solenoid, test the engagement of the plunger in the pawl by pulling straight out. If correctly engaged, the pawl will hold the solenoid. Unless the solenoid is correctly installed, the transmission will not shift back to conventional drive when the kickdown switch is pressed. The vent in the solenoid

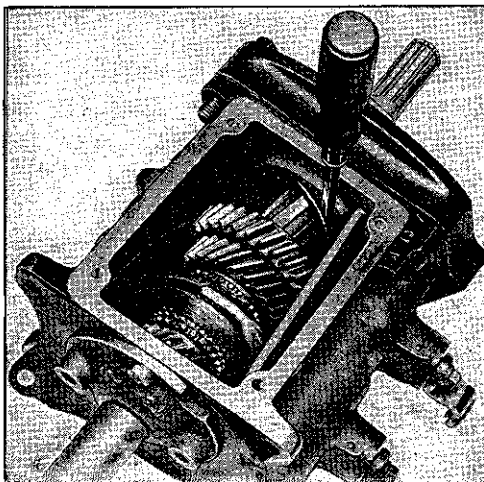


FIG. 219—REAR BEARING SNAP RING

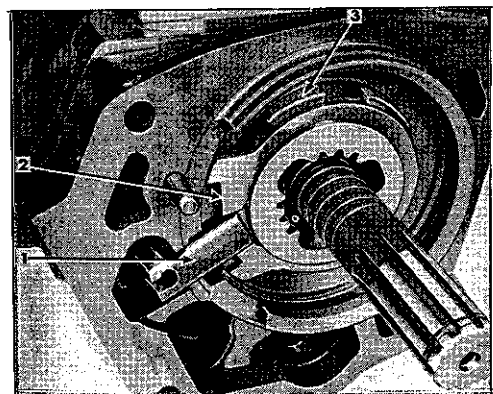


FIG. 220—SOLENOID BALK RING

cap should be installed down with the terminals to the rear of the overdrive unit.

e. Use care when assembling the freewheeling cam and retainer assembly. See Fig. 216 and 217 and Par. K-20p. To reassemble, hook the two springs into the retainer, making sure the hooked end points to the right (Fig. 217). Place the retainer on the bench with the open end (rear) up. Make sure the springs are not crossed. Take hold of the free end of the rear spring and stretch it up clear of the retainer, hook the end of the spring into the rear hole in the cam, and let the cam down into the retainer. Turn the assembly over with the front end up. Work the installed spring over the hub of the cam. Hook the free end of the second spring into its hole in the cam. Obtain clearance to do this by holding the cam down (so it does not pilot into the retainer) and to the side of the retainer opposite the hole. After the spring is hooked, work it down over the cam hub.

f. Use heavy grease to hold the freewheeling rollers in position in the retainer. Place a rubber band around the rollers (Fig. 221) with sufficient tension to drop the rollers into the grooves of the cam. Hold them in position when the retainer is turned to the left. The rollers must be in the grooves and compressed to the smallest possible diameter before the ring gear and mainshaft will pass over the rollers. Leave the rubber band around the rollers and install the ring gear and mainshaft. Oil will dissolve the rubber band.

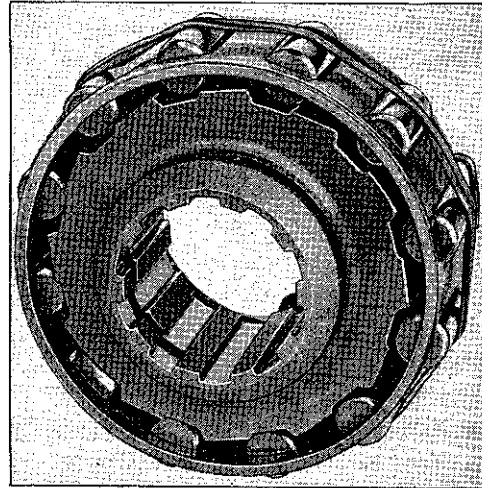


FIG. 221—FREEWHEELING ROLLERS

## K-22. Transfer Case

The transfer case used in all 4-wheel-drive vehicles is shown in Figs. 222 and 223.

The transfer case is essentially a two speed transmission located at the rear of the standard transmission which provides a low and direct gear also a means of connecting the power to the front axle. The shifting mechanism is located on the transfer case.

- 1—Output Clutch Shaft
- 2—Output Clutch Shaft Bearing
- 3—Output Clutch Shaft Bearing Snap Ring
- 4—Output Shaft Bearing Cup
- 5—Output Shaft Bearing Cone and Roller
- 6—Output Shaft Gear
- 7—Output Shaft Sliding Gear
- 8—Oil Filler Plug
- 9—Speedometer Drive Gear
- 10—Output Shaft
- 11—Output Shaft Oil Seal
- 12—Speedometer Driven Pinion
- 13—Output Shaft Bearing Shim
- 14—Intermediate Shaft
- 15—Intermediate Gear Thrust Washer
- 16—Intermediate Gear
- 17—Main Shaft Gear
- 18—Intermediate Shaft Bearings
- 19—Output Shaft Clutch Gear
- 20—Output Clutch Shaft Pilot Bushing
- 21—Companion Flange Front

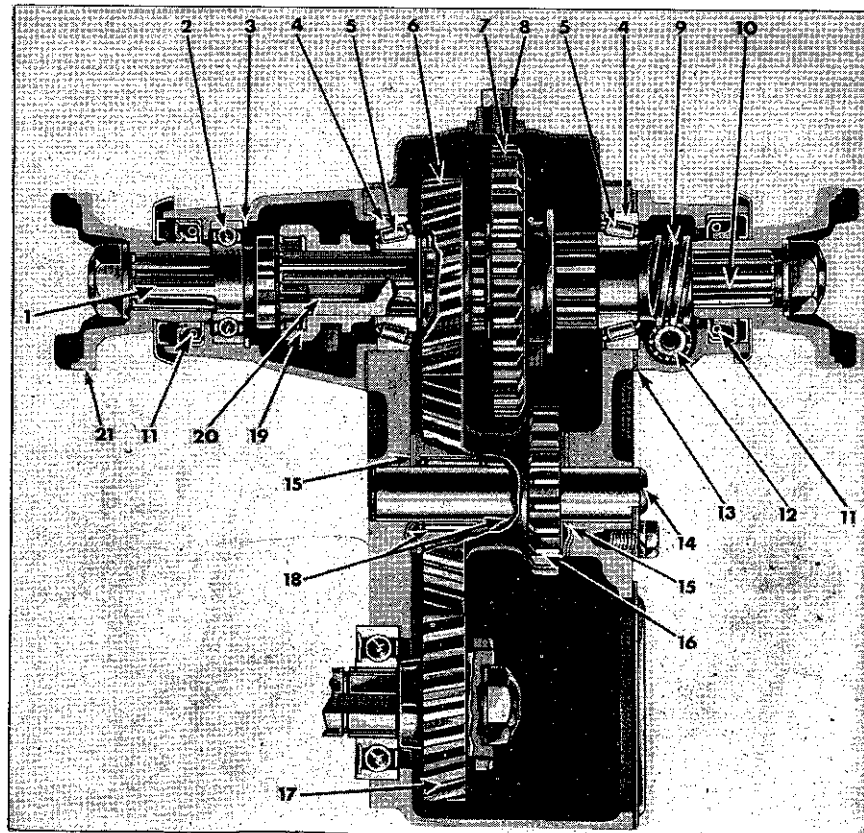


FIG. 222—TRANSFER CASE

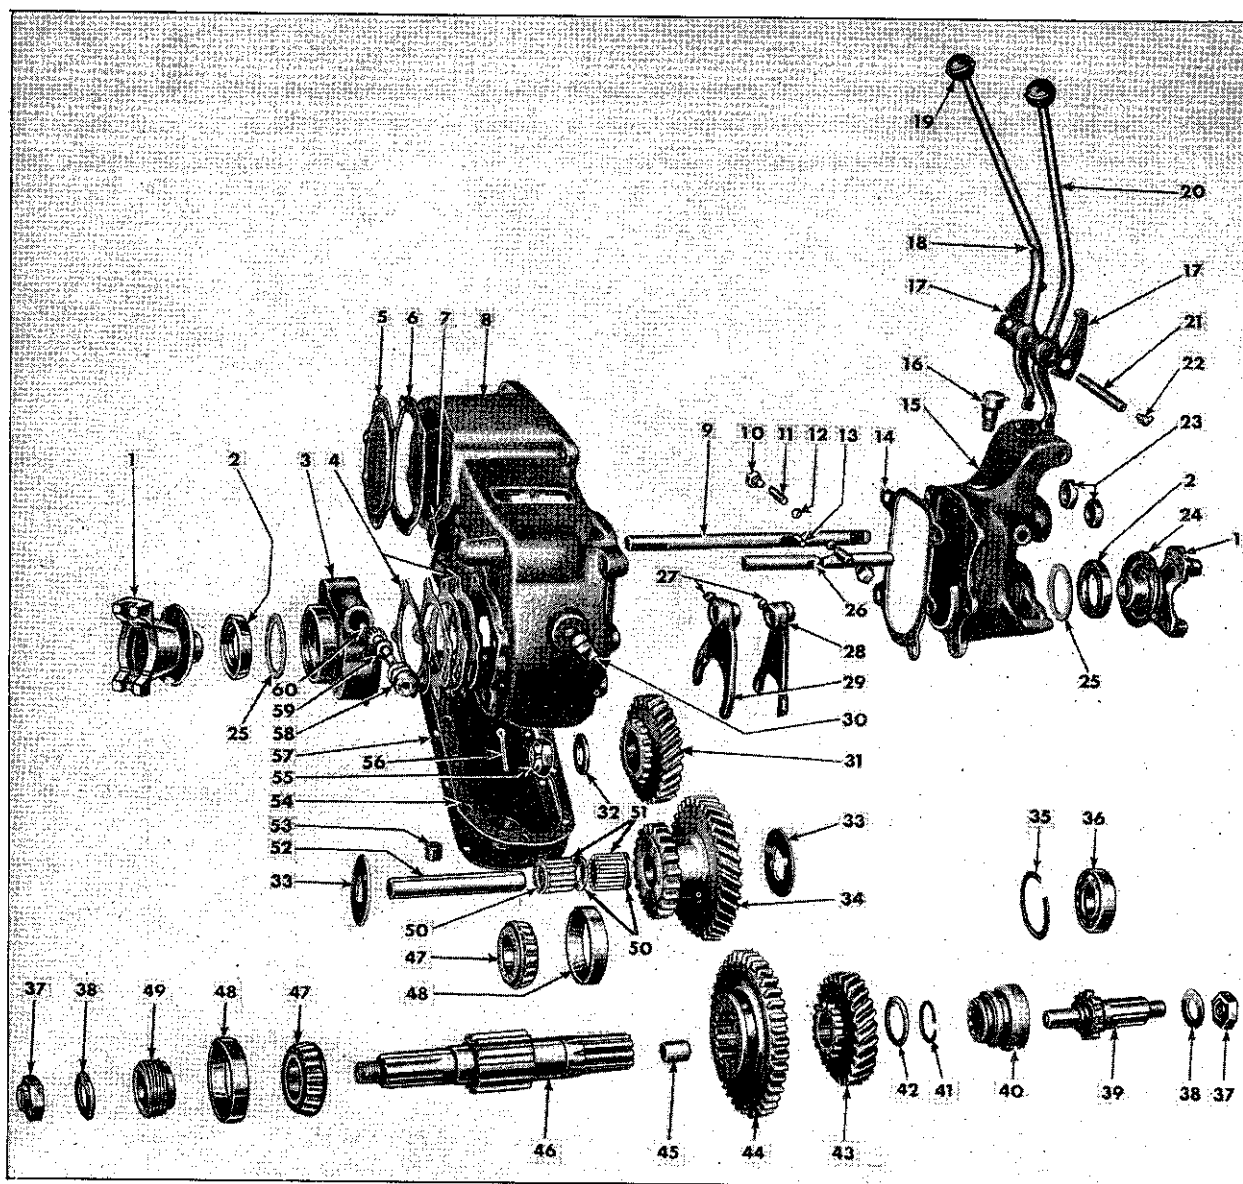


FIG. 223—TRANSFER CASE—4-WHEEL-DRIVE VEHICLES

- |                                    |                                  |   |
|------------------------------------|----------------------------------|---|
| 1. Output Shaft Yoke End           | 21. Shift Lever Pivot Pin        | 41. Output Shaft Snap Ring                |
| 2. Output Shaft Oil Seal           | 22. Hydraulic Fitting            | 42. Thrust Washer                         |
| 3. Rear Bearing Cap                | 23. Oil Seal                     | 43. Output Shaft Gear                     |
| 4. Rear Bearing Adjusting Shims    | 24. Dust Shield                  | 44. Output Shaft Sliding Gear             |
| 5. Rear Cover                      | 25. Oil Seal Gasket              | 45. Output Shaft Pilot Bushing            |
| 6. Rear Cover Gasket               | 26. Front Wheel Drive Shift Rod  | 46. Output Shaft                          |
| 7. Lock Plate                      | 27. Set Screw                    | 47. Output Shaft Bearing Cone and Rollers |
| 8. Transfer Case Housing           | 28. Front Wheel Drive Shift Fork | 48. Output Shaft Bearing Cup              |
| 9. Underdrive and Direct Shift Rod | 29. Underdrive Shift Fork        | 49. Speedometer Drive Gear                |
| 10. Poppet Plug                    | 30. Filler Plug                  | 50. Intermediate Gear Bearing Spacers     |
| 11. Poppet Spring                  | 31. Main Drive Gear              | 51. Intermediate Gear Bearing             |
| 12. Poppet Ball                    | 32. Main Shaft Washer            | 52. Intermediate Shaft                    |
| 13. Shift Rod Interlock            | 33. Thrust Washer                | 53. Drain Plug                            |
| 14. Front Bearing Cap Gasket       | 34. Intermediate Gear            | 54. Bottom Cover Gasket                   |
| 15. Front Bearing Cap              | 35. Snap Ring                    | 55. Output Shaft Nut                      |
| 16. Breather                       | 36. Clutch Shaft Bearing         | 56. Cotter Pin                            |
| 17. Shift Lever Spring             | 37. Output Yoke Nut              | 57. Bottom Cover                          |
| 18. Under Drive Shift Lever        | 38. Output Yoke Washer           | 58. Speedometer Gear Sleeve               |
| 19. Shift Lever Ball               | 39. Output Clutch Shaft          | 59. Speedometer Driven Gear               |
| 20. Front Wheel Drive Shift Lever  | 40. Clutch Gear                  | 60. Speedometer Driven Gear Bushing       |

On hard surface and level roads, disengage the front axle drive placing transfer case left shift lever in forward position. The right hand lever controls the gear ratio; low and high. Low gear can only be engaged when the left hand lever is in the engaged (rear) position for front drive.

### K-23. Removal of Transfer Case

The transfer case may be removed from the vehicle without removing the transmission. Proceed as follows:

- a. Drain transmission and transfer case and replace drain plugs.
- b. Disconnect the hand brake return spring, front control cable and equalizer adjusting rod from the hand brake lever.
- c. Disconnect front and rear propeller shafts at the transfer case. See Section L.
- d. Disconnect speedometer cable at transfer case.
- e. Remove floor board inspection plate.
- f. Remove transfer case shift lever pivot pin screw.
- g. Remove transfer case shift lever pivot pin and remove levers. If vehicle is equipped with power take-off remove shift lever plate screws and lift out lever.
- h. Remove cover plate on rear face of transfer case. Remove cotter key, nut and washer from transmission mainshaft.
- i. If possible, at this point remove the transfer case main drive gear from the transmission mainshaft. If not possible, see step 1 below.
- j. Remove transfer case mounting bracket bolt and nut.
- k. Remove transmission-to-transfer case bolts.
- l. Remove transfer case. If the transfer case main drive gear has not been removed in step i above, proceed as follows: Brace the end of the transmission mainshaft so that it cannot move in the transmission, pull the transfer case to the rear to loosen

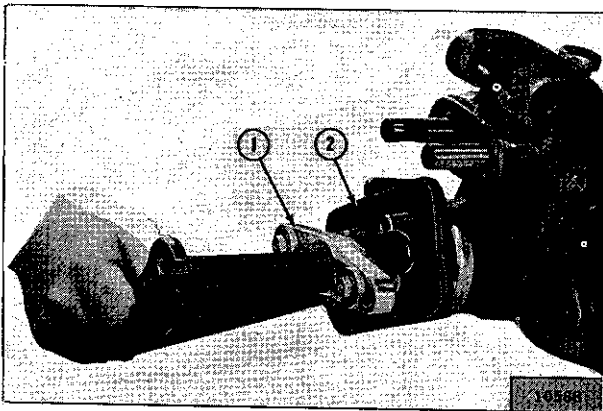


FIG. 224—UNIVERSAL JOINT FLANGE PULLER

- 1—U-Joint Flange Puller W-172  
2—U-Joint Flange Holding Wrench C-3281

the gear and remove the gear. When separating the two housings, use care that the transmission mainshaft bearing, which bears in both housings, remains in the transmission case.

### K-24. Transfer Case Disassembly

To remove the gears and bearings from the transfer case on the bench, the following procedure is recommended:

- a. Remove the both output shaft end yoke nuts (37) and both washers, using Yoke Holding Wrench C-3281 to prevent rotation of the yoke and shaft. Remove both yokes (1) with Puller W-172 as shown in Fig. 224.
- b. Remove lower screws and lockwashers and remove the cover (57).
- c. Remove lock plate screw, lock washer and lock plate (7).
- d. Use a brass punch to drive out intermediate shaft (52) to the rear of the case.
- e. Remove the intermediate gear (34), two thrust washers (33), needle bearings (51), and spacers (50) through the bottom of the case.
- f. Remove poppet plugs (10), springs (11), and balls (12) on both sides of front bearing cap (15). Shift front-wheel drive to engaged position (shaft forward).
- g. Remove screws holding front output bearing cap. Remove the cap as an assembly including the clutch shaft, bearing, clutch gear, fork, and shift rod. Use care not to lose the interlock (13) which floats between the shift rods.
- h. Remove the screws holding the rear output cap (3). Remove the cap as an assembly with the speedometer gear.
- i. Use a rawhide hammer to drive against the front end of the output shaft (46) to remove the rear

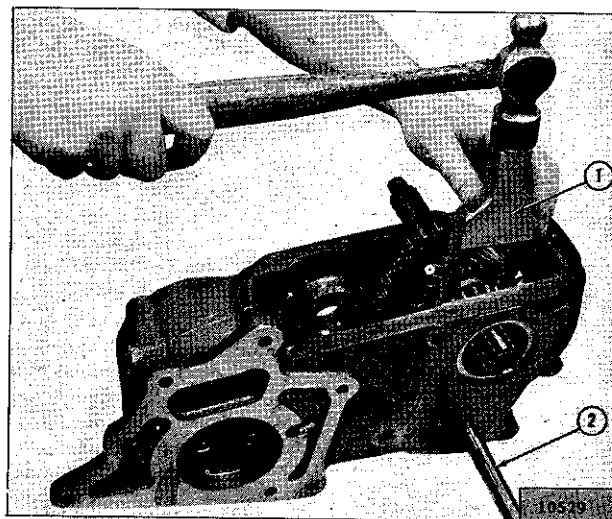


FIG. 225—BEARING CONE REMOVING WEDGE

- 1—Wedge W-139  
2—Shift Rod

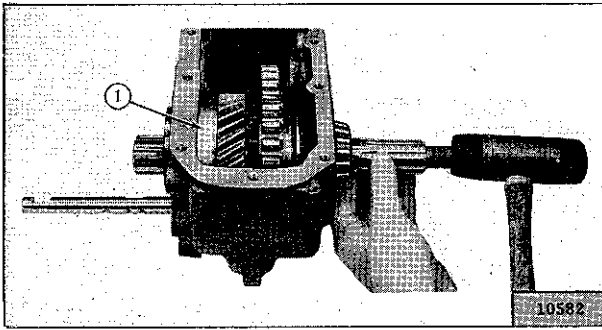


FIG. 226—BEARING CUP REMOVING RING

1—Removing Ring

bearing cup from the case. Use Tool W-139, as shown in Fig. 225, to wedge the front bearing cone and roller assembly from its seat on the shaft. Place Tool W-141 on the output shaft between the front bearing and the output shaft gear, (43). Use a rawhide hammer to drive against the rear end of the output shaft to remove the front bearing cup from the case. Loosen the snap ring (41) and slide it forward on the shaft. Drive the shaft through the rear of the case. As the shaft is removed; the gears, snap ring, and thrust washer will remain in the case and can be removed from the bottom. Remove the rear bearing cone and roller assembly from the shaft by striking the end of the shaft lightly against a wooden block.

j. Remove set screw in sliding gear shift fork (29). This will allow the shift rod to be removed. See the following paragraphs for disassembly of the front and rear bearing caps.

#### K-25. Front Bearing Cap Disassembly

The front bearing cap is a separate assembly which may be removed for service should difficulty be experienced in this section of the transfer case. Follow the sequence below for removal and disassembly.

a. Remove the output shaft front end yoke as outlined in Par. K-24a. Remove the poppet balls and move the front wheel drive shift rod forward as outlined in Par. K-24f.

b. Remove the yoke oil seal with Tool W-251 as

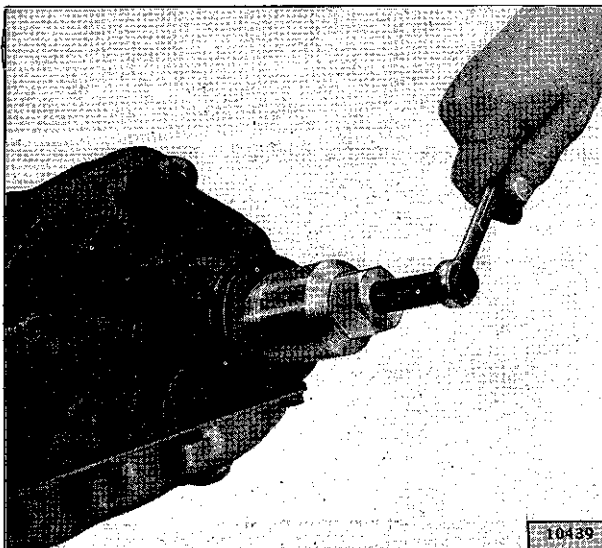


FIG. 227—OUTPUT SHAFT OIL SEAL PULLER

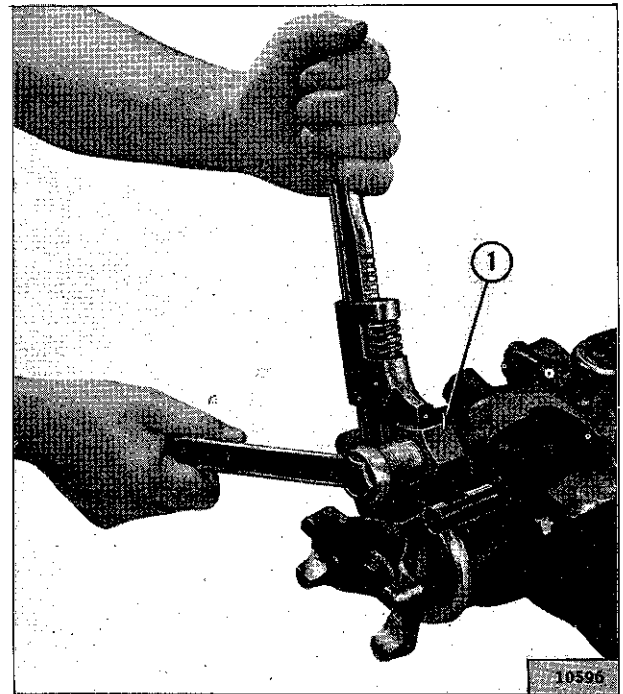


FIG. 228—SHIFT ROD OIL SEAL PULLER

1—Seal Puller

shown in Fig. 227. Remove the shift rod oil seals with Tool No. W-176 as shown in Fig. 228.

c. Remove the front bearing cap as outlined in paragraph L-3g.

d. Remove the set screw from the shifting fork and shifting rod. Clutch gear and shifting fork can now be removed together.

e. Remove the output shift shaft, carefully pressing it through the bearing.

f. Remove the bearing retaining snap ring. Remove the bearing.

#### K-26. Rear Cap Disassembly

When dismantling the transfer case the rear bearing cap is disassembled with the exception of the removal of the oil seal. This cap is, however, a

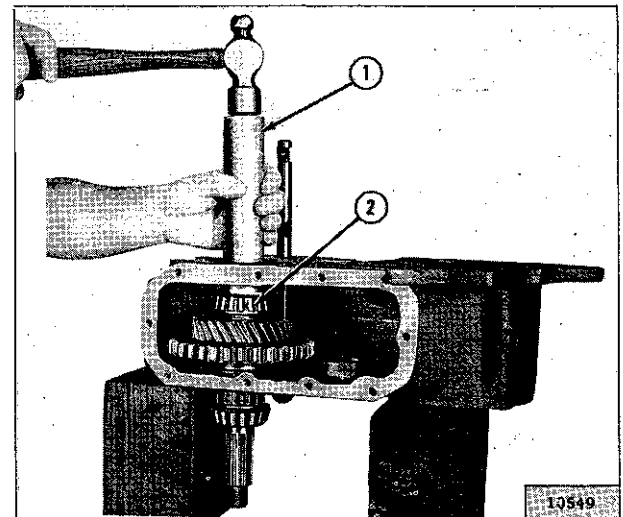


FIG. 229—BEARING CONE DRIVER

1—Driver

2—Bearing Cone

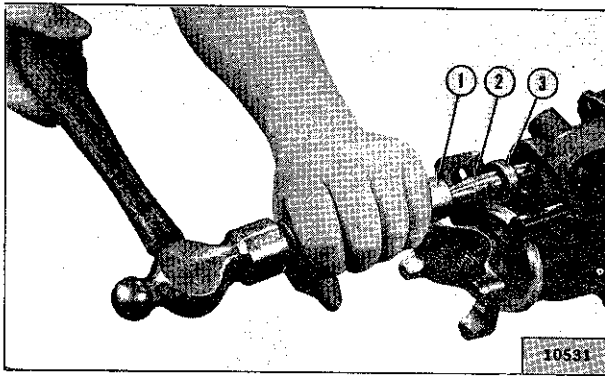


FIG. 230—SHIFT ROD OIL SEAL INSTALLER

- 1—Driver
- 2—Thimble
- 3—Oil Seal

separate assembly which may be removed for service. Follow the sequence below for removal.

- a. Remove the output shaft rear end yoke as outlined in Par. K-24a.
- b. Remove the oil seal with a Tool W-251 as shown in Fig. 227.
- c. Remove the speedometer driven pinion.
- d. Remove the cap screw attaching the cap and remove the cap. Take precautions not to lose or damage the bearing adjusting shims placed between the cap and the transfer case housing.
- e. Remove the speedometer driving gear.

### K-27. Transfer Case Overhaul

Reassembly of the transfer case is a reversal of the foregoing routine of disassembly.

The output shaft snap ring may best be installed with Tool No. W-131, output shaft snap ring installing thimble and driver, Fig. 232.

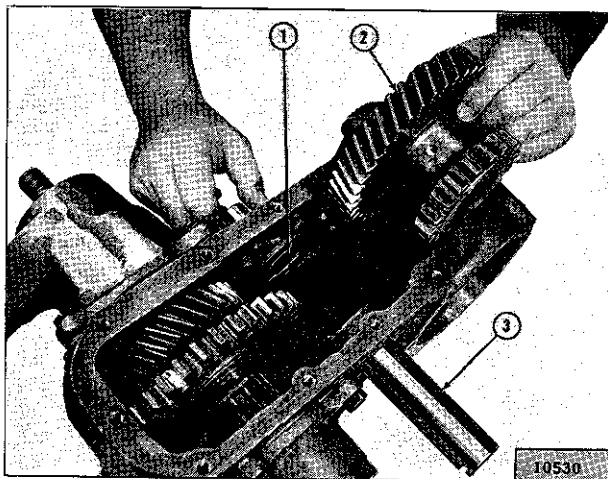


FIG. 231—THRUST WASHER PILOT

- 1—Pilot
- 2—Gear
- 3—Shaft

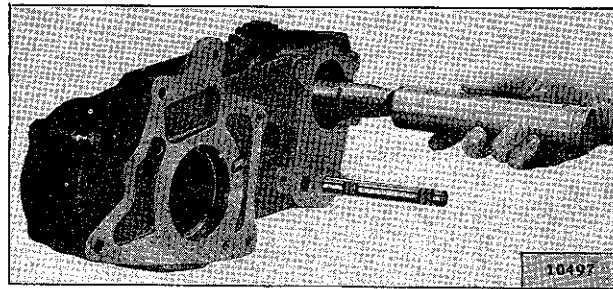


FIG. 232—OUTPUT SHAFT SNAP RING INSTALLER

Use a piece of tubing for installing the bearing cone and roller assemblies on the output shaft to prevent damage to the assemblies.

Early production transfer cases were equipped with a  $1\frac{1}{8}$ " [28,58 mm.] diameter intermediate shaft and caged needle bearings. When installing the intermediate gear in early production transfer cases, insert the bearings in the gear, support the front thrust washer with pilot pin Tool No. W-192, Fig. 231, position the gear and rear thrust washer, and insert the shaft from the rear of the case.

Late production transfer cases were equipped with a  $1\frac{1}{4}$ " [29,25 mm.] diameter intermediate shaft, and bearings consisting of individual rollers, No. 51, and spacers, No. 50. A dummy shaft is required to install the intermediate shaft, No. 52. The dummy shaft should be slightly smaller in diameter than the intermediate shaft, and a little shorter than the width of the intermediate gear. To install the intermediate gear, first load the bearing rollers and spacers in the gear using the dummy shaft. Then, supporting the front thrust washer with the fingers, position the gear and rear thrust washer, and insert the shaft from the rear of the case, driving out the dummy shaft.

Should it be necessary to replace the speedometer driven pinion bushing, installation may be best made with bushing installer Tool No. W-133, Fig. 233. When the rear bearing cap assembly is installed, check the end movement of the main shaft which determines the adjustment of the tapered roller bearings. For correct bearing adjustment the shaft should have .004" to .008" [0,102 a 0,203 mm.] end play. Adjustment is made by selective shim installation between the cap and the case. Shims .003", .010" and .031" [0,076, 0,254, 0,787 mm.]

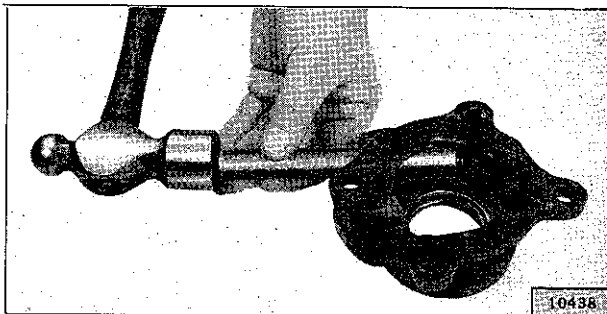


FIG. 233—SPEEDOMETER PINION BUSHING DRIVER



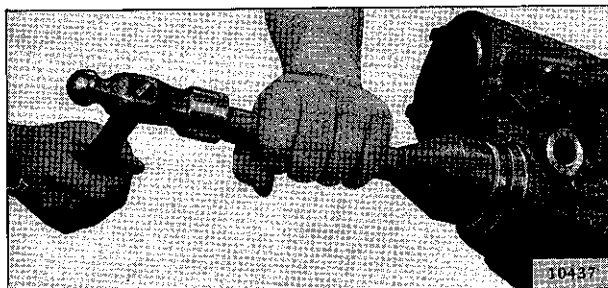


FIG. 234—OUTPUT SHAFT OIL SEAL DRIVER

in thickness are available for this adjustment. Do not install the rear cap oil seal until the bearings are correctly adjusted. Both the front and rear oil seals may be installed with oil seal driver Tool No. W-143, Fig. 234.

When installing the end yokes on the output shafts, inspect for the presence of felt seals in each oil seal guard. (The oil seal guard is a part of each yoke assembly.) Felt seals should be installed in the oil seal guards if they are not present.

When installing the shift rail oil seals in the front bearing cap, it is necessary to protect the seals against damage when passing over the shift rail notches. Protect them with the thimble, Fig. 230, and install them with the driver, Fig. 230, Tool No. W-130.

### K-28. Transfer Case Installation

The installation of the transfer case on the transmission is covered in Par. K-6h.

Lubricate the pilot bearing in the flywheel and also lubricate the transmission and transfer case as outlined in the "Lubrication" section. Be sure that the clutch pedal has 1" [25.4 mm.] free travel as outlined in the "Clutch" section.

**NOTE:** On Model F4-134 4x4 there is a possibility of the engine striking the floor pan or dash when pulling at low engine speeds or on deceleration in low gear. This condition can be corrected, if objectionable, by installation of the transfer case snubber as used on Model F4-134 4WD.

## TRANSFER CASE SERVICE DIAGNOSIS

### SYMPTOMS

#### Slips Out of Gear (High-Low)

Shifting Lock Spring Weak.....  
Bearing Broken or Worn.....  
Shifting Fork Bent.....

#### Slips Out Front Wheel Drive

Shifting Lock Spring Weak.....  
Bearing Worn or Broken.....  
End Play in Shaft.....  
Shifting Fork Bent.....

#### Hard Shifting

Lack of Lubricant.....  
Shift Lever Stuck on Shaft.....  
Shifting Lock Ball Scored.....  
Shifting Fork Bent.....  
Low Tire Pressure.....

#### Grease Leak at Front or Rear Drive

Grease Leak at Covers.....  
Grease Leak between Trans. and Transfer Cases  
Grease Leak at Output Shaft.....

### PROBABLE REMEDY

Replace Spring  
Replace  
Replace

Replace  
Replace  
Adjust  
Replace

Drain and Refill  
Remove, Clean and Lubricate  
Replace Ball  
Replace Fork  
Inflate

Install New Gaskets  
Install New Gaskets  
Install New Oil Seal

## TRANSMISSION SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Lock in Two Gears</b> .....	Adjust Remote Control, Replace Poppet or Shift Levers
<b>Slips Out of High Gear</b>	
Transmission Misaligned with Bell Housing....	Align Transmission Case to Bell Housing and Bell Housing to Engine
End Play in Main Drive Gear.....	Tighten Front Retainer
Damaged Pilot Bearing or Front Bearing.....	Replace
<b>Slips Out of Second</b>	
Worn Gear.....	Replace
Weak Poppet Spring.....	Replace
<b>Noise in Low Gear</b>	
Gear Teeth Worn.....	Replace Gears
Shifting Shoe Bent.....	Replace Shoe
Lack of Lubrication.....	Drain and Refill
<b>Grease Leak into Bell Housing</b>	
Gasket Broken Front Bearing Retainer.....	Replace
Transmission Main Drive Gear Oil Seal.....	Replace
<b>No overdrive operation</b> .....	Fuse blown in relay to solenoid circuit (Circuit "C" Fig. 185). Replace fuse.
	Open circuit in relay control circuit (Circuit "A" Fig. 185). Turn on ignition switch and be sure circuit is "hot" to governor terminal. If not check entire circuit "A" including wires, relay, kickdown switch and rail switch for open circuit.
<b>Will not shift into overdrive automatically..</b>	Faulty governor which will not make contact. Replace. Faulty relay or solenoid. Replace. Overdrive pawl stuck or binding in adapter plate housing. Free up.
<b>Relay clicks at idle speeds or as soon as ignition is turned on. Vehicle in overdrive from standing start. Impossible to shift into reverse. Impossible to pull out of overdrive control plunger. Impossible to tow or push car.</b>	Short or ground in relay control circuit (Circuit "A" Fig. 185). Check wiring, relay, kickdown switch, rail switch, and governor for short or ground. Faulty governor. Replace. Faulty relay or solenoid. Replace.
<b>Transmission will not return to conventional drive when accelerator is pressed to floor board.</b>	Improperly adjusted or faulty kickdown switch. Adjust or replace. Faulty solenoid. Replace. Short or broken wire in circuit "B", Fig. 185. Repair. Stationary gear pawl binding or seized in adapter housing. Free up.
<b>Heavy "thud" heard in transmission when accelerator is pushed to floor board (kickdown switch operated).</b>	Overdrive solenoid plunger not engaged in stationary gear pawl due to improper assembly.
<b>"Clunking" noise in transmission when overdrive engages.</b>	Insufficient friction between balk ring and stationary gear plate hub. Replace balk ring.
<b>Overdrive will not engage or disengage at proper speed.</b>	Improperly operating governor. Replace.



## TRANSMISSION AND OVERDRIVE SPECIFICATIONS

MODEL:	L6-226 4WD and 4x4	L6-226 4x2
Transmission:		
Make.....	Warner	Warner
Model.....	T-90-J	T-86
Type.....	Synchronous Mesh	Synchronous Mesh
Shift Lever Location.....	Floor	Steering Post
Interlock Poppet Clearance.....	.001" to .007" [0,025 a 0,177 mm.]	.001" to .007" [0,025 a 0,177 mm.]
Ratios: — Low.....	2.798:1	2.571:1
— Second.....	1.551:1	1.550:1
— High.....	1.000:1	1.000:1
— Reverse.....	3.798:1	3.489:1
Overdrive:		
Make.....		Warner
Model (Trans. with O.D.).....		T86E-R10B
Type.....		Planetary
Cut-in Speed — Min.....		24 mph. [38,4 kph.]
Ratio.....		0.7:1
MODEL:	F4-134 4WD and 4x4	F4-134 4x2
Transmission:		
Make.....	Warner	Warner
Model.....	T-90	T-96
Type.....	Synchronous Mesh	Synchronous Mesh
Shift Lever Location.....	Floor	Steering Post
Interlock Poppet Clearance.....	.001" to .007" [0,025 a 0,177 mm.]	.001" to .007" [0,025 a 0,177 mm.]
Ratios: — Low.....	2.798:1	2.605:1
— Second.....	1.551:1	1.630:1
— High.....	1.000:1	1.000:1
— Reverse.....	3.798:1	3.536:1
Overdrive:		
Make.....		Warner
Model (Trans. with O.D.).....		T96-R10B
Type.....		Planetary
Cut-in Speed — Min.....		26 mph. [41,6 kph.]
Ratio.....		0.7:1

## TRANSFER CASE SPECIFICATIONS

Transfer Case:	
Make.....	Spicer
Model.....	18
Mounting.....	Unit with Transmission
Shift Lever.....	On Floor
Ratio.....	High 1:1 Low 2.46:1
Transfer Case Bearings:	
Transmission Mainshaft.....	Ball
Idler Gear.....	2 Roller
Output Shaft.....	2 Tapered Roller
Front Axle Clutch Shaft:	
Front Bearing.....	Ball
Rear Pilot in Output Shaft.....	Bronze Bush. I.D. .627" [15.93 mm.]
Speedometer Drive:	
Drive Gear Teeth.....	4
Driven Pinion Teeth.....	15



# PROPELLER SHAFTS AND UNIVERSAL JOINTS

## Contents

SUBJECT	PAR.
Propeller Shafts.....	L-1
Universal Joints.....	L-2
Snap Ring Type — Assembly.....	L-4
— Disassembly.....	L-3
U-Bolt Type — Assembly.....	L-6
— Disassembly.....	L-5

### L-1. GENERAL

The drive from the transmission to the rear axle on 2-wheel-drive vehicles and from the transfer case to the front and rear axles on 4-wheel-drive vehicles is through tubular propeller shafts, each shaft equipped with a universal joint at each end. All vehicles except early production F4-134 4x2 vehicles have cardan cross (needle bearing) universal joints. Early production F4-134 4x2 vehicles were equipped with ball-and-trunnion universal joints.

### L-2. Universal Joint

Each shaft is equipped with a splined slip joint at one end to allow for variations in length caused by vehicle spring action. Some slip joints are marked with arrows at the spline and sleeve yoke, Fig. 235. When installing, align the arrows in the same plane. If unmarked with arrows, align the yokes at the front and rear of the shaft in the same parallel plane. This is necessary to avoid vibration. All the universal joints of this type used are similar in construction except that some are of the "U"-bolt type and others of the "Snap Ring"-type.

These universal joints have needle bearings and are so designed that correct assembly is a very simple matter. No hand fitting or special tools are required.

### L-3. Snap Ring Type Disassembly

This type joint is illustrated in Fig. 238. To remove the snap rings, pinch the ends together with a pair of pliers. If the rings do not readily snap out of the groove, tap the end of the bearing lightly which will relieve pressure against the rings. After removing the snap rings, press on the end of one bearing until the opposite bearing is pushed from the yoke arm. Turn the joint over and press the first bearing back out of that arm by pressing on the exposed end of the journal shaft. Use a soft ground drift with a flat face about  $\frac{1}{32}$ " [0,8 mm.]

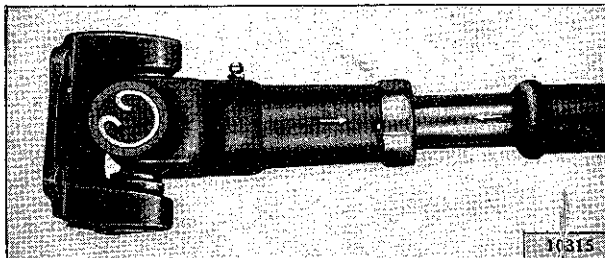


FIG. 235—ARROW MARKINGS

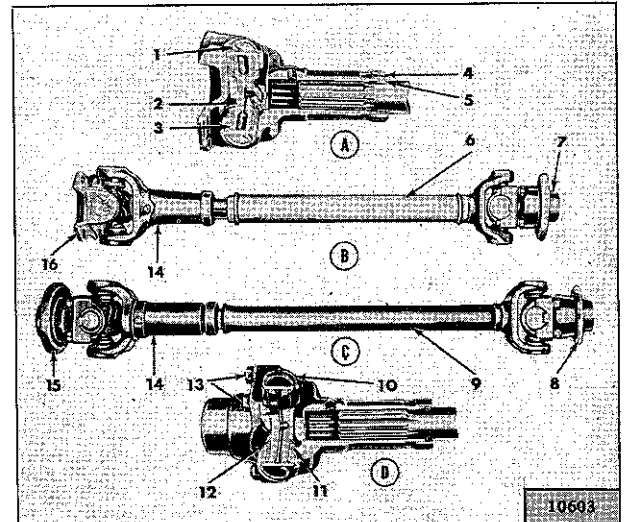


FIG. 236—UNIVERSAL JOINTS

- |                         |                   |
|-------------------------|-------------------|
| A—Snap Ring Type        | 7—Yoke End        |
| B—Rear Propeller Shaft  | 8—Yoke End        |
| C—Front Propeller Shaft | 9—Front Tube      |
| D—U-Bolt Type           | 10—"U" Bolt       |
| 1—Snap Ring             | 11—Retainer       |
| 2—Journal               | 12—Gasket         |
| 3—Bearing               | 13—"U" Bolt Nut   |
| 4—Dust Cap              | 14—Sleeve         |
| 5—Washer                | 15—Front Yoke End |
| 6—Rear Tube             | 16—Flange Yoke    |

smaller in diameter than the hole in the yoke arm and drive it out, otherwise there is danger of damaging the bearing.

Repeat this operation for the other two bearings, then lift out journal assembly by sliding it to one side.

### L-4. Snap Ring Type Assembly

Wash all parts in cleaning solvent and inspect the parts after cleaning. Replace any parts that indicate excessive wear. It is advisable to install new gaskets on the journal assembly regardless of the condition of the old gaskets. Make certain that the grease channel in each journal trunnion is open.

Pack the bearing cones one-third full of lubricant and install the rollers.

Draw the bearings into the end yoke arm and seat them firmly against the bearing shoulders. Hold the bearings in a vertical position to prevent the needles from dropping out until the joint is assembled. If the joint binds when assembled, tap the arms lightly to relieve any pressure on the bearings at the end of the journal.

### L-5. U-Bolt Type Disassembly

Removal of the attaching "U"-bolt releases one set of bearing races. Slide the propeller shaft into the yoke flange to remove them using care not to lose the rollers.

After the removal of the one set of bearing races, release the other set by removing the snap rings in the sleeve yoke by pinching the ends together with a pair of pliers. Should the rings fail to snap readily from the groove, tap the end of the bearing lightly, which will relieve the pressure against them.

needles from dropping out until the joint is assembled. If the joint binds when assembled, tap the arms lightly to relieve any pressure on the bearings at the end of the journal. Tighten the U-bolts equally. U-bolt torque wrench reading is 15 to 18 lb.-ft. [2,07 a 2,49 kg.-m.].

When installing the assembly in the vehicle be sure that the arrows on the propeller shaft and yoke sleeve are in alignment as shown in Fig. 239, or that the unmarked joints are aligned with the yokes in the same parallel plane.

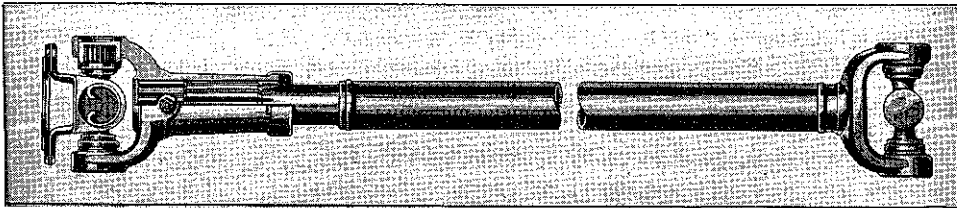


FIG. 237— PROPELLER SHAFT AND UNIVERSAL JOINTS—NEEDLE BEARING TYPE

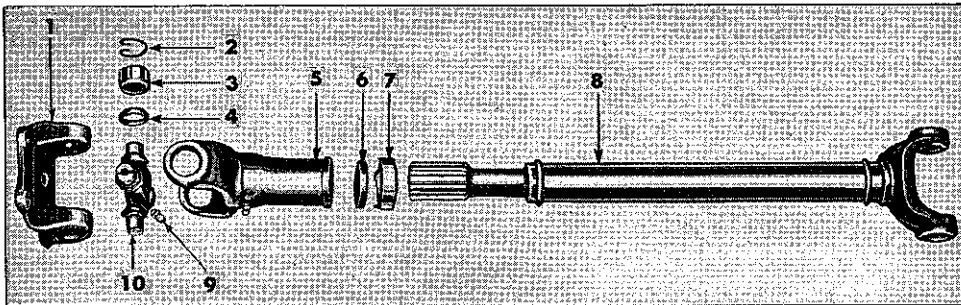


FIG. 238—PROPELLER SHAFT AND UNIVERSAL JOINTS—NEEDLE BEARING TYPE

- |                                      |                                       |                                      |
|--------------------------------------|---------------------------------------|--------------------------------------|
| 1. Universal Joint Flange Yoke       | 5. Universal Joint Sleeve Yoke Assem. | 9. Hydraulic Fitting                 |
| 2. Universal Joint Bearing Snap Ring | 6. Cork Washer                        | 10. Universal Joint Journal Assembly |
| 3. Universal Joint Bearing Race      | 7. Dust Cap                           |                                      |
| 4. Trunnion Gasket                   | 8. Propeller Shaft Tube Assembly      |                                      |

Press on the end of one bearing, until the opposite bearing is pushed out of the yoke arm. Turn the universal joint over and press the first bearing out by pressing on the exposed end of the journal assembly.

Use a soft ground drift with a flat face about  $\frac{1}{32}$ " (0,8 mm.) smaller in diameter than the hole in the yoke arm and drive out the bearing. Lift the journal out by sliding to one side. Clean all parts and check for wear.

### L-6. U-Bolt Type Assembly

Wash all parts in cleaning solvent and inspect the parts after cleaning. Replace any parts that indicate extensive wear. It is advisable to install new gaskets on the journal assembly regardless of the condition of the old gaskets. Make certain that the grease channel in each journal trunnion is open.

Pack the bearing cones one-third full of lubricant and install the rollers.

Draw the bearings into the end yoke arm and seat them firmly against the bearing shoulders. Hold the bearings in a vertical position to prevent the

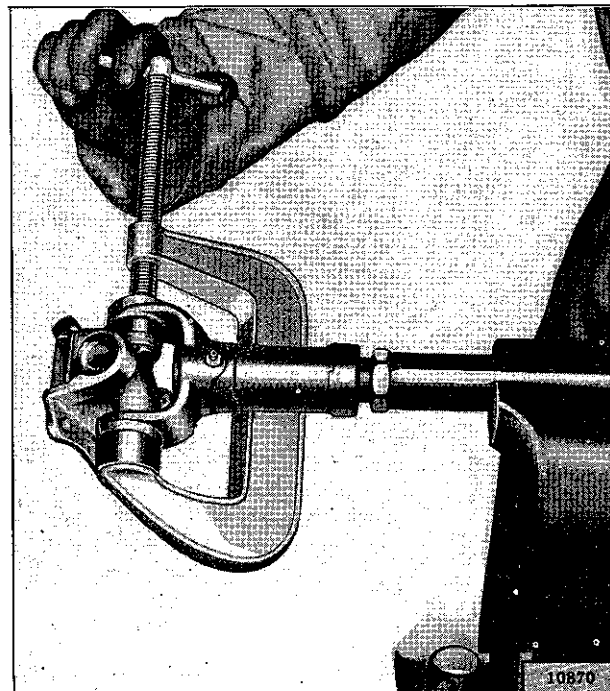


FIG. 239—UNIVERSAL JOINT BEARING CLAMP

## SPECIFICATIONS

## PROPELLER SHAFTS AND UNIVERSAL JOINTS

MODEL:	L6-226 4WD F4-134 4WD	L6-226 4x4 F4-134 4x4
Propeller Shaft:		
Make .....	Spicer	Spicer
Tube Diameter — Front.....	1 1/4" [3,17 cm.]	1 1/4" [3,17 cm.]
Tube Diameter — Rear.....	3" [7,62 cm.]	2" [5,08 cm.]
Length — Front.....	23" [58,42 cm.]	23" [58,42 cm.]
Length — Rear.....	55 3/4" [141,6 cm.]	42 5/8" [108,26 cm.]
MODEL:	L6-226 4x2	F4-134 4x2
Propeller Shaft:		
Make .....	Spicer	Spicer
Tube Diameter.....	2" [5,08 cm.]	2" [5,08 cm.]
Length.....	35 3/4" [90,80 cm.]	41 9/16" [105,56 cm.]
Universal Joints	All Current Models**	
Make.....	Spicer	
Type.....	Snap Ring**	
Bearings.....	Needle Rollers**	

\*\*See Par. M-1.



## FRONT AXLE

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
4-Wheel-Drive Axles		Turning Axle	M-14
Differential Overhaul	M-2	Universal Joints	M-6
Overhaul and Alignment	M-5	Elliot Type Axles	M-4
Steering Knuckle Oil Seal	M-12	Planar Type Suspension	M-13
Steering Knuckle Pivot Pins	M-10		
Steering Tie Rod and Bellcrank	M-3		

## M-1. GENERAL

The front axle used on Model L6-226 4x2 and late production Model F4-134 4x2 is of the reverse Elliot type. The steering knuckles are mounted on pivot pins which pass through openings at each end of the I-beam and are locked securely in position by a tapered pin and nut. The knuckles ride on ball thrust bearings for ease of steering.

Early production F4-134 4x2 vehicles were equipped with Planer-type independent front suspension.

The reverse Elliot type steering knuckles are supported at the bottom by a "Dow" type transverse spring with the second leaf double wrapped at the spring eye for safety, and, at the top by brackets pivoted at the frame. Pivot pins are securely locked

in the steering knuckles with tapered pins and the vehicle load is carried on ball bearings for ease of steering.

All 4-wheel drive models employ a live driving unit with hypoid type driving gears and spherical steering knuckles mounted on pivot pins which ride on tapered roller bearings for ease of steering. The drive is of the full floating type through axle shafts built integrally with universal joints which revolve in the steering knuckles.

On 4-wheel-drive models, the steering knuckle tie rod arm is integral with the steering knuckle. On Elliot-type axles, the arm is held securely in a tapered socket with heavy nut and cotter pin. On vehicles with Planar-type suspension, the arm is bolted to the knuckle.

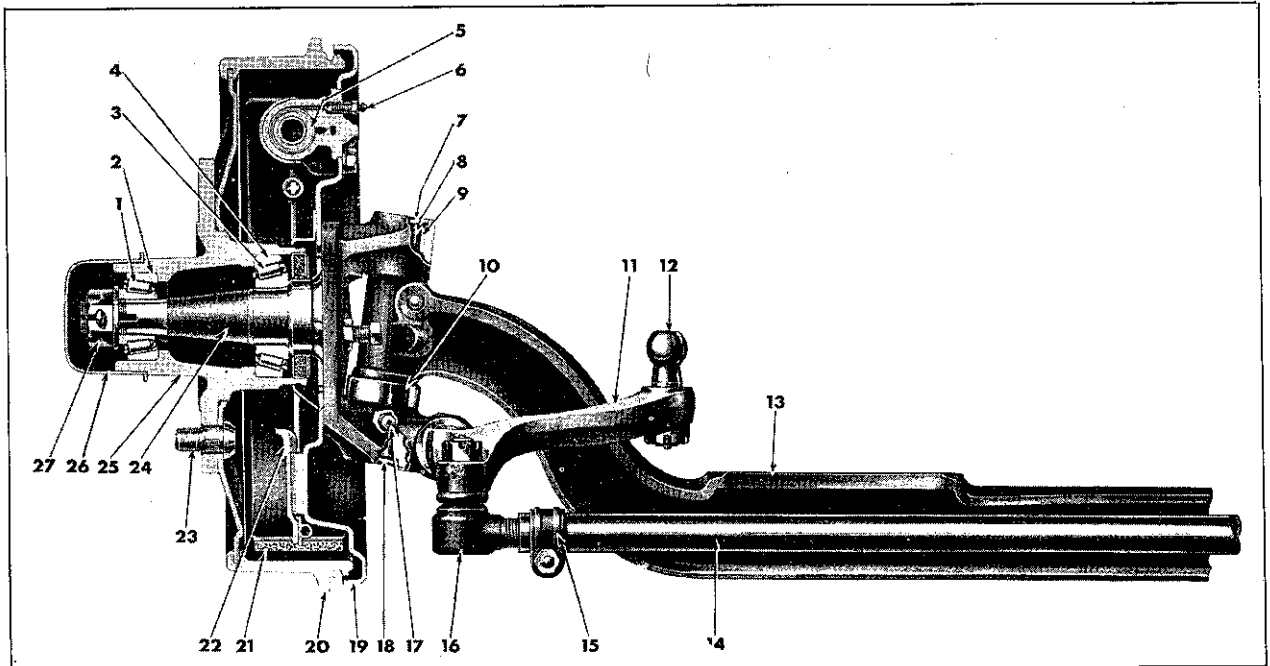


FIG. 240—FRONT AXLE—2-WHEEL-DRIVE MODELS

- |   |                                      |
|---|--------------------------------------|
| 1. Front Wheel Bearing Cone and Rollers—Outer | 15. Steering Tie Rod Clamp           |
| 2. Front Wheel Bearing Race—Outer             | 16. Steering Tie Rod Socket Assembly |
| 3. Front Wheel Bearing Cone and Rollers—Inner | 17. Lubrication Fitting              |
| 4. Front Wheel Bearing Race—Inner             | 18. Pivot Bolt Expansion Plug—Lower  |
| 5. Wheel Brake Cylinder                       | 19. Brake Backing Plate Assembly     |
| 6. Wheel Brake Cylinder Bleeder Screw         | 20. Brake Drum                       |
| 7. Pivot Bolt Expansion Plug—Upper            | 21. Brake Shoe Assembly              |
| 8. Pivot Bolt                                 | 22. Brake Shoe Retainer Plate        |
| 9. Steering Knuckle Bushing                   | 23. Wheel Hub Bolt                   |
| 10. Pivot Bolt Thrust Bearing                 | 24. Steering Knuckle Assembly        |
| 11. Steering Knuckle Arm                      | 25. Front Wheel Hub                  |
| 12. Steering Arm Ball                         | 26. Hub Cap                          |
| 13. Front Axle "I" Beam                       | 27. Front Axle Spindle Nut           |
| 14. Steering Tie Rod                          |                                      |

The knuckles are connected by a tie rod which is mounted on ball and socket connections. The tie rods are adjustable to secure correct toe-in of the front wheels. A steering connecting rod connects the left knuckle arm with the steering gear arm. On vehicles with Planar-type suspension, an extension of the tie rod, which is built in two parts, is connected directly to the steering gear arm.

Camber and caster of the front wheels is preset. Camber cannot be altered but caster can be adjusted by installing caster shims between the axle pad and the springs. For information on the steering geometry, see Section O.

Also, refer to Section Q on wheels, particularly Par. Q-5.

**NOTE:** Whenever an axle is inspected, see if the ring gear lock straps, Fig. 274 No. 49, are present. These straps should be installed on those axles without them.

**NOTE:** Possibility of front differential gear failures is greatly reduced if the clearance between the differential gears and differential case is correctly set. For procedure, see Par. N-10.

## M-2. Removing and Overhauling Differential

Adjustment and overhaul of the front axle differential assembly is the same as that of the rear axle. Information covering servicing of the differential is contained in Section N.

## M-3. Steering Tie Rod and Bell Crank

These parts of the front axle are covered in the "Steering" Section.

## M-4. Pivot Pin Replacement

All Elliot-type Axles

The only parts of the front axle subjected to wear which may require replacement are the pivot pins and bushings. To accomplish this replacement follow the procedure outlined below. (Refer to Fig. 240).

- a. Jack up the front axle to free the wheels. Set axle stands under the axle for safety.
- b. Remove the hub and dust caps.
- c. Remove the cotter pin, the wheel retaining nut, and washer.
- d. Remove the wheel with the hub, bearings, and oil retainer.
- e. Disconnect the hydraulic brake tube.
- f. Remove the brake backing plate.
- g. Remove the tapered pivot pin lock.
- h. Remove the top expansion plug and drive the pin out through the bottom with the lower plug. When the spindle is disassembled, be careful not to lose the spring shim located between the upper face of the axle and the spindle.
- i. Remove the thrust bearing and bushings.
- j. Assembly is the reverse of disassembly.

Be sure the oil holes in the bushings are correctly aligned with their lubrication fittings. Ream the bushings for running clearance with the pivot pin. Check the thrust bearing to be sure it is not worn

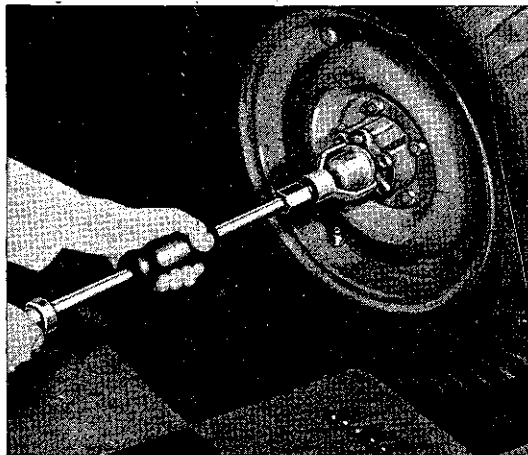


FIG. 241—HUB CAP PULLER

or damaged. When installing the pivot pin, align the notch for the taper retaining pin with the pin hole. When assembling the knuckle, eliminate excessive play between the axle and the inner face of the knuckle. Adjustment is made by selective fitting of the spacing shim between the upper face of the axle and the inner face of the knuckle. Shims are available as follows:

.011"	[0,279 mm.]	.035"	[0,889 mm.]
.033"	[0,838 mm.]		

Do not overlook bleeding the brakes after the axle end has been reassembled.

## M-5. Front Axle Overhaul and Adjustment

All 4-Wheel-Drive Models

A "live" type front axle is required to provide four-wheel drive. The differential is mounted in a housing similar to that used in the rear axle except that the pinion shaft faces toward the rear instead of the front and to the right of the center of the axle. This

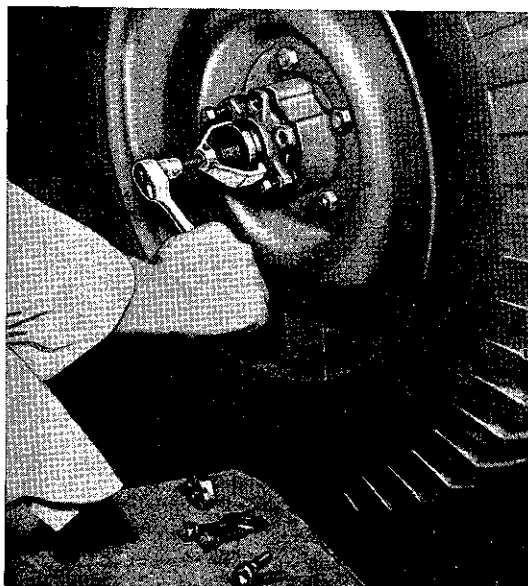


FIG. 242—AXLE SHAFT DRIVE FLANGE PULLER



design allows the placing of the front propeller shaft along the right side of the engine oil pan to avoid reducing road clearance under the engine.

The axle is of the full floating type and the axle shafts can be removed without dismantling the steering knuckle housing. Overhaul of the "live" driving unit is the same as the rear axle. Refer to that Section for full information.

To remove an axle shaft and universal joint assembly, the following operations must be performed:

- a. Remove the wheel.
- b. Remove the hub cap with a puller as shown in Fig. 241.
- c. Remove the axle shaft driving flange bolts.
- d. Apply the foot brakes and remove the axle shaft flange with puller, Tool No. W-163, which is illustrated in Fig. 242.
- e. Release the locking lip on the lock washer and remove the outer nut, lock washer, adjusting nut, and bearing lock washer. Use wrench, Tool No. W-144, Fig. 243, for removal of the nut.
- f. Remove the wheel hub and drum assembly with the bearings. Be careful not to damage the oil seal.
- g. Remove the hydraulic brake tube and the brake backing plate screws.
- h. Remove the spindle.
- i. Remove the axle shaft and universal joint assembly.

### M-6. UNIVERSAL JOINTS

The Rzeppa type illustrated in Figs. 244 and 245 and the Spicer type illustrated in Fig. 247 are used in production. Service procedure covering these type joints is outlined below.



FIG. 243—WHEEL BEARING NUT WRENCH

### M-7. Rzeppa Universal Joint

After the assembly has been removed, the universal joint may be disassembled as follows:

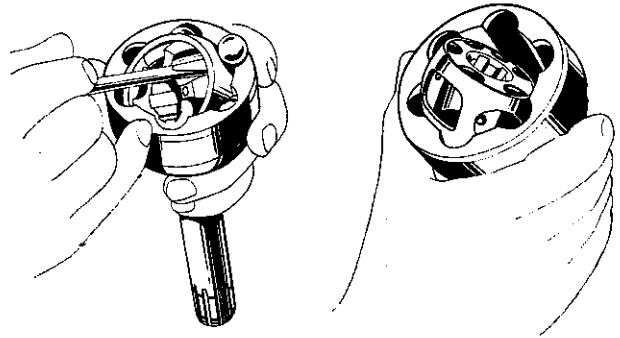


FIG. 244—DISMANTLING RZEPPA JOINT 10611

- a. Inspect to determine the method of attachment of the front axle shaft to the joint. Where three screws are used, follow step b. Where there are no screws, follow step c. After the axle shaft has been separated from the joint, follow steps d through h for both types.
- b. Remove the three screws holding the front axle shaft to the joint. Pull the shaft free of the splined inner race. To remove the axle shaft retainer, remove the retainer ring on the axle shaft.
- c. To remove the axle shaft from the joint, use a wooden pry and exert force in the direction of the axis of the axle shaft. Use a mallet, if necessary, to exert enough force to drive the retaining ring, installed on the end of the axle shaft, into its groove in the spline, permitting the joint to be slipped off the axle shaft.
- d. Push down on various points of the inner race and cage until the balls can be removed with the help of a small screw driver in the manner illustrated in Fig. 244.
- e. After removing the balls, turn the inner race and cage over so the pilot cup is up. Remove the pilot cup.

**NOTE:** This pilot cup was deleted from production of later joints.

- f. There are two elongated and four small holes in the cage. Turn the cage so the two bosses on the spindle shaft will drop into the elongated holes. Lift out the cage.
- g. Turn the inner race so that one of the bosses will drop into an elongated hole in the cage. Shift the race to one side and lift it out.
- h. Reassemble the joint in reverse order. Be careful not to damage parts and see that they are clean of all dirt and grit.


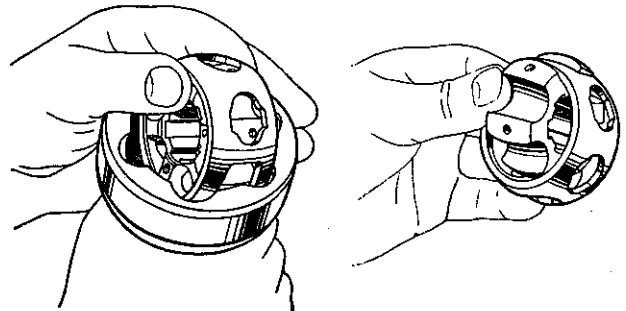


FIG. 245—REMOVING RZEPPA JOINT CAGE

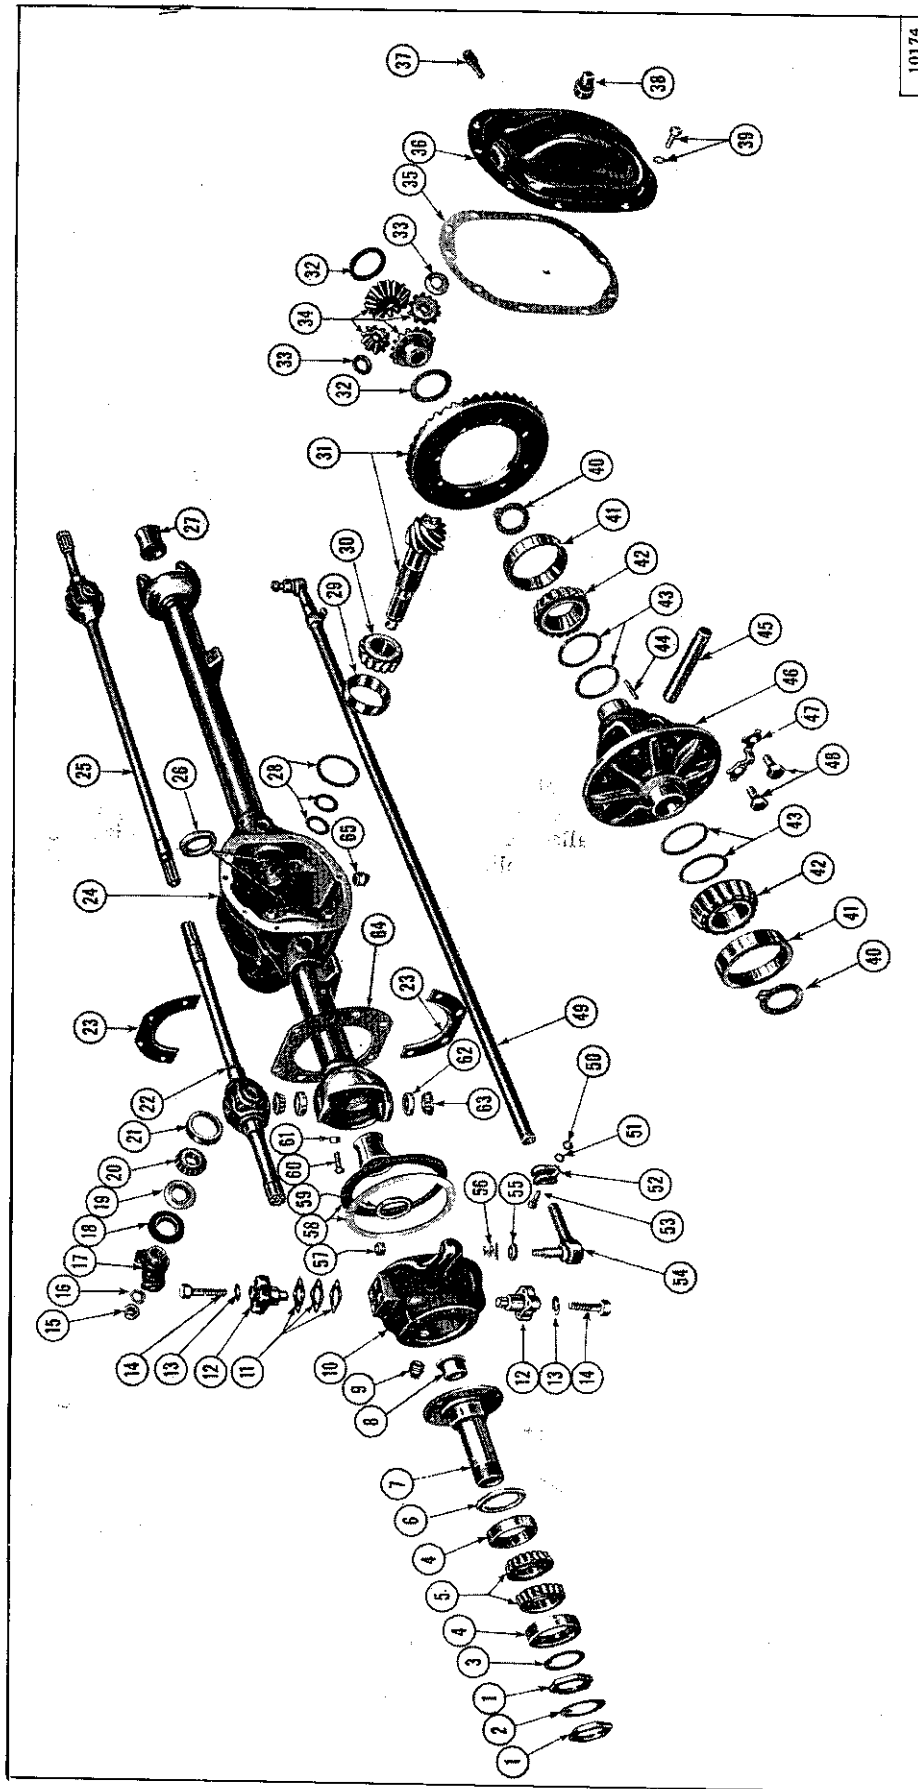

10174

FIG. 246—FRONT AXLE—4-WHEEL DRIVE MODELS

- 1—Wheel Bearing Nut
- 2—Locking Washer
- 3—Wheel Bearing Washer
- 4—Wheel Bearing Cup
- 5—Wheel Bearing Cone and Rollers
- 6—Wheel Bearing Oil Seal
- 7—Wheel Spindle
- 8—Knuckle Housing Bushing
- 9—Knuckle Housing Filler Plug
- 10—Adjusting Shims
- 11—Knuckle and Arm—Left
- 12—Bearing Cap
- 13—Lockwasher
- 14—Bearing Cap Bolt
- 15—Pinion Nut
- 16—Pinion Washer
- 17—Universal Joint Yoke

- 18—Pinion Shaft Oil Seal
- 19—Bearing Oil Slinger
- 20—Bearing Cone and Rollers
- 21—Bearing Cup
- 22—Right Universal Joint and Shaft
- 23—Knuckle Oil Seal Retainer
- 24—Front Axle Housing
- 25—Left Universal Joint and Shaft
- 26—Axle Shaft Oil Seal
- 27—Axle Shaft Guide
- 28—Pinion Bearing Adjusting Shims
- 29—Pinion Shaft Bearing Cup
- 30—Pinion Shaft Bearing Cone and Rollers
- 31—Ring Gear Thrust Washer
- 32—Side Gear Thrust Washer
- 33—Pinion Mating Thrust Washer

- 34—Differential Gears
- 35—Housing Cover Gasket
- 36—Housing Cover
- 37—Housing Breather
- 38—Fill Plug
- 39—Housing Cover Screw and Lockwasher
- 40—Retaining Ring
- 41—Differential Bearing Cup
- 42—Differential Bearing Cone and Rollers
- 43—Differential Bearing Adjusting Shims
- 44—Pinion Shaft Lock Pin
- 45—Pinion Shaft
- 46—Differential Case
- 47—Ring Gear Lock Strap
- 48—Ring Gear Bolts
- 49—Steering Tie Rod

- 50—Tie Rod Clamp Nut
- 51—Lockwasher
- 52—Tie Rod Socket Clamp
- 53—Tie Rod Clamp Screw
- 54—Tie Rod Socket
- 55—Dust Cover
- 56—Spring
- 57—Tie Rod Stud Nut
- 58—Oil Seal and Backing Ring
- 59—Universal Joint Thrust Washer
- 60—Knuckle Stop Bolt
- 61—Stop Bolt Nut
- 62—King Pin Bearing Cup
- 63—King Pin Bearing Cone and Rollers
- 64—Steering Knuckle Oil Seal
- 65—Housing Drain Plug

**M-8. Installation**

To install the Rzeppa axle shaft and universal joint assembly in the housing, proceed as follows:

- a. Clean all parts of dirt and foreign matter.
- b. Enter universal joint and axle shaft assembly in the housing, taking care not to knock out the inner oil seal. Enter the splined end of the axle shaft into the differential and push into place.
- c. Install wheel bearing spindle Fig. 246, No. 7.
- d. Install the brake tube and brake backing plate.
- e. Grease and assemble wheel bearings and install the wheel hub and drum on the wheel bearing spindle. Install the wheel bearing washer and adjusting nut. Tighten nut until there is a slight drag when the hub is turned. Then back off approximately one-sixth turn. Install locking washer and nut, tighten nut, and then bend the lock washer over the lock nut.
- f. Install the drive flange and gasket on hub and attach with cap screws and lockwashers. Install outer shaft snap ring.
- g. Install the hub cap.
- h. Install the wheel.
- i. Check front wheel alignment as outlined in Section O.
- j. Bleed the brake.
- k. Fill the universal joint housing with lubricant through the filler plug opening.

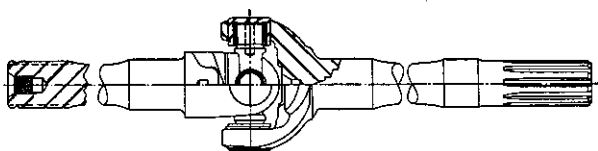


FIG. 247—SPICER UNIVERSAL JOINT

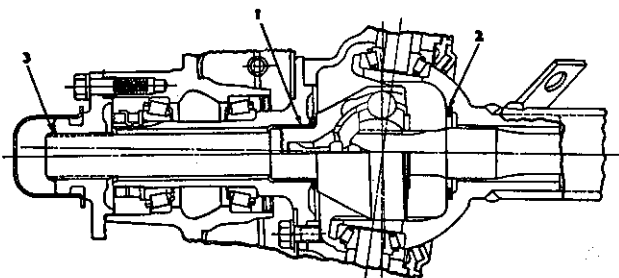


FIG. 248—RZEPPA UNIVERSAL JOINT

**M-9. Spicer Universal Joints**

The Spicer Universal Joint is shown in Fig. 247, and is a cardan cross joint with needle bearings similar in design to the Spicer propeller shaft universal joint. On Spicer axle joints, the snap ring slots are in the bearing retainer, as shown in Fig. 247.

The axle shaft and joint are removed and installed in the same manner as the Rzeppa joints. Service procedures will be found in Section L.

**M-10. Steering Knuckle Pivot Pins****All 4-Wheel-Drive Models**

The steering knuckle pivot pins pivot on tapered roller bearings. Replacement of these bearings requires removal of the hub and brake drum assembly, wheel bearings, axle shaft, spindle, steering tie rod, and steering knuckle. Disassemble the steering knuckle as follows:

- a. Remove the eight screws shown in Fig. 246 which hold the oil seal retainer (23) in place.
- b. Remove the four screws holding the lower pivot pin bearing cap (12).
- c. Remove the four screws holding the upper bearing cap in place. Remove the bearing cap. The steering knuckle (10) can now be removed from the axle.
- d. Wash all parts in cleaning solvent. Replace any damaged or worn parts. Inspect the bearing and races for scores, cracks, or chips. Should the bearing cups be damaged, they may be removed and installed with Special Driver, W-138.

**M-11. Reassembly**

Reverse the procedure of Par. M-10 to reassemble the unit. When reinstalling the steering knuckle, sufficient shims must be installed under the top bearing cap to obtain correct preload on the bearings. Shims are available in these thicknesses:

.003" [0,076 mm.]	.010" [0,254 mm.]
.005" [0,127 mm.]	.030" [0,762 mm.]

Install one each of the above shims at the top only.

**NOTE:** A shim pack of .058" [1,47 mm.] thickness is added to the bottom face of the king pin boss on the steering knuckles at production. Maintain this shim pack at the bottom and make adjustments at the top only.

Install the bearing caps, lockwashers, and screws, and tighten securely.

Check the preload on the bearings by hooking a spring scale in the hole in the knuckle arm for the tie rod socket. Take the scale reading when the knuckle has just started its sweep.

The scale reading should be 12 to 16 lb. [5,4 a 7,3 kg.] with the axle shaft and oil seal removed. Remove or add shims to obtain a scale reading within these limits. If all shims are removed and adequate preload is still not obtained, a washer may be used under the top bearing cap to increase preload. When a washer is used, shims may have to be reinstalled to obtain proper adjustment.

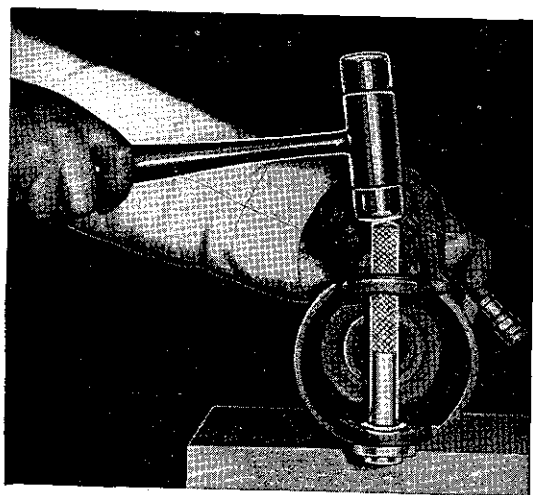


FIG. 249—SPINDLE PIN BEARING CUP DRIVER

### M-12. Replacing Steering Knuckle Oil Seal

Remove the old steering knuckle oil seal by removing the eight screws which hold it in place. Earlier production vehicles are equipped with seals consisting of two oil seal halves. Later production vehicles are equipped with oil seal assemblies consisting of a split oil seal and backing ring assembly, an oil seal felt, and two seal retainer plate halves. Examine the spherical surface of the axle for scores or scratches which could damage the seal. Smooth any roughness with emery cloth.

Before installing the oil seal felt, make a diagonal cut across the top side of the felt so that it may be slipped over the axle. Install the oil seal assembly in the sequence given above, making sure the

backing ring (of the oil seal and backing ring assembly) is toward the wheel.

After driving in wet, freezing weather swing the front wheels from right to left to remove moisture adhering to the oil seal and the spherical surface of the axle housing. This will prevent freezing with resulting damage to the seals. Should the vehicle be stored for any period of time, coat these surfaces with light grease to prevent rusting.

### M-13. Front Suspension

Early F4-134 4x2 Models.

The Planar independent front suspension is illustrated in Fig. 251 and 252. Replace the pivot pins and bearings as follows:

- a. Remove the hub and dust caps.
- b. Remove the wheel retaining cotter pin, nut, and washer. Remove the wheel with the hub, bearings, and oil seal.
- c. Disconnect the brake hydraulic tube and remove the brake backing plate with brake assembly attached.
- d. Remove the tapered pivot pin lock pin.
- e. Use a sharp drift to remove the pivot pin lower expansion plug.
- f. Use a brass drift to drive the pivot pin up until the upper needle bearing assembly is removed.
- g. Use a brass drift to drive the pivot pin out through the bottom.
- h. Remove the bushing from the lower part of the spindle.

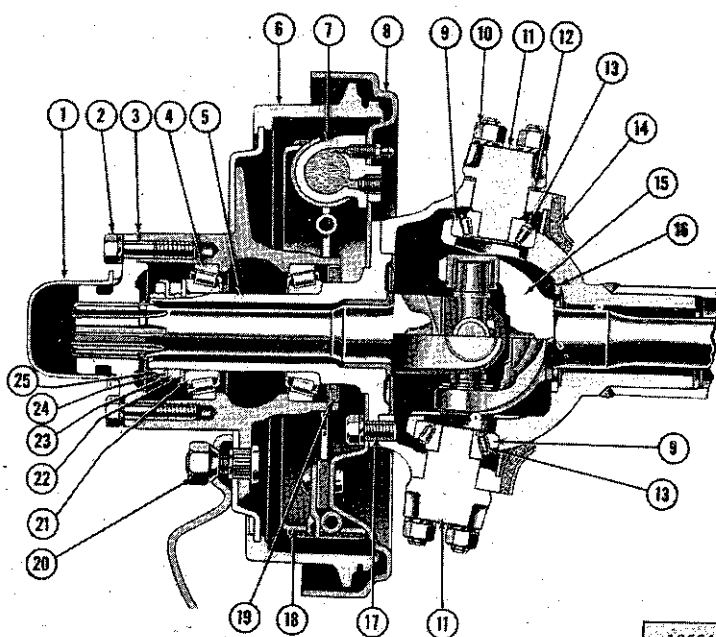


FIG. 250—FRONT STEERING KNUCKLE  
(With Spicer Universal Joints)

- 1—Wheel Hub Cap
- 2—Driving Flange Cap Screw
- 3—Axle Shaft Drive Flange Gasket
- 4—Wheel Bearing Cup
- 5—Front Wheel Spindle
- 6—Brake Drum
- 7—Front Brake Cylinder
- 8—Brake Backing Plate
- 9—Pivot Pin Bearing Cap
- 10—Pivot Pin Bearing Cap Nut
- 11—Pivot Pin
- 12—Pivot Bearing Adjusting Shims
- 13—Pivot Pin Cone and Rollers
- 14—Steering Knuckle Oil Seal
- 15—Front Axle Universal Joint
- 16—Thrust Washer
- 17—Brake Backing Plate Screw
- 18—Brake Shoe and Lining
- 19—Hub Oil Seal
- 20—Wheel Hub Bolt Nut
- 21—Wheel Bearing Cone and Rollers
- 22—Wheel Bearing Washer
- 23—Wheel Bearing Retaining Nut
- 24—Wheel Adjusting Nut Lockwasher
- 25—Wheel Bearing Retaining Nut

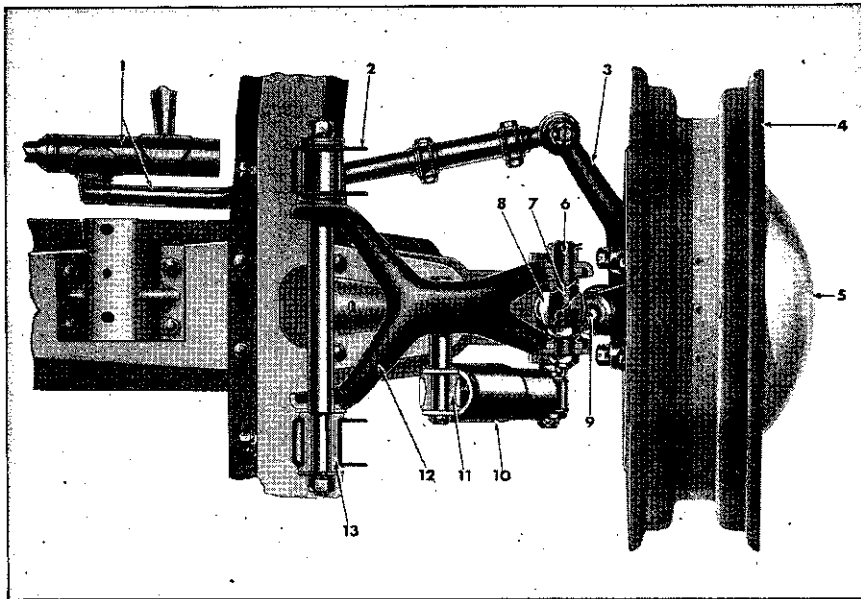


FIG. 251—PLANAR FRONT SUSPENSION—TOP VIEW

Assembly is the reverse of the above. When reaming the bushing to size, use a pilot type reamer to be sure that the bushing is square with the upper needle bearing. Examine the ball thrust bearing and replace it if worn or damaged. Do not overlook bleeding the brakes.

Should it be necessary to disassemble the front suspension be sure that the steering knuckle supports, No. 9, Fig. 252, are reinstalled on the proper side. The left support will interchange with the right,

however, the wheel camber will be incorrect, resulting in unstable steering. The supports have the part number on the forging for identification. Later production parts may be identified by a letter "L" indicating left and a letter "R" indicating right stamped on the front face at the center.

When mounting the upper control arm pin bushing, No. 7, Fig. 251, in the steering knuckle support, No. 8, tighten it to 175 ft. lbs. (24.2 kg.-m.) torque. Centralize the control arm assembly, No. 12, over

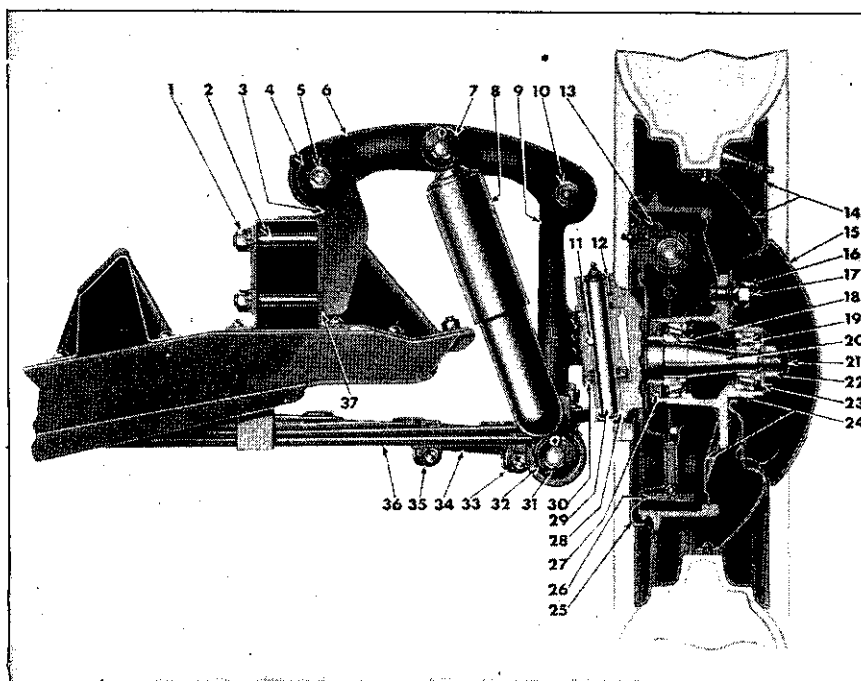


FIG. 252—PLANAR FRONT SUSPENSION—SIDE VIEW

1. Frame Bracket Mounting Nut
2. Frame Bracket Mounting Screw
3. Frame Bracket
4. Support Arm Mounting Washer
5. Support Arm Mounting Nut
6. Support Arm Assembly
7. Shock Absorber Mounting Washer
8. Shock Absorber
9. Knuckle Support
10. Support Arm Pin
11. Pivot Pin Locking Pin
12. Steering Knuckle Bearing
13. Wheel Brake Hydraulic Cylinder
14. Front Wheel
15. Hub Cap
16. Wheel Mounting Nut
17. Wheel Mounting Bolt
18. Inner Bearing Cone and Rollers
19. Outer Bearing Cone and Rollers
20. Steering Knuckle
21. Grease Cap
22. Wheel Retaining Nut
23. Wheel Nut Tongue Washer
24. Wheel Hub
25. Brake Backing Plate
26. Brake Shoe Lining
27. Dust Washer
28. Steering Knuckle Bushing
29. Pivot Pin
30. Pivot Bearing
31. Shock Absorber Mounting Washer
32. Shock Absorber Rubber Bushing
33. Steering Tie Rod Clamp
34. Steering Tie Rod Sleeve
35. Steering Tie Rod Clamp
36. Front Spring
37. Support Arm Shims

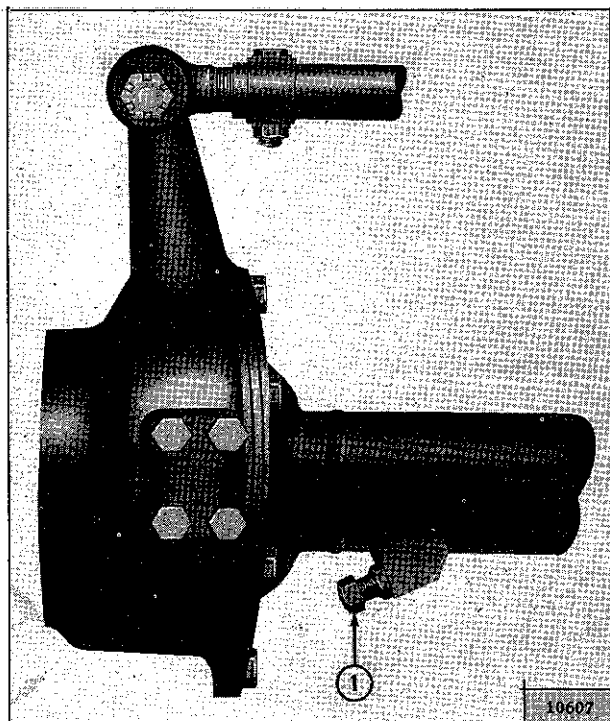


FIG. 253—TURNING ANGLE STOP SCREW

1—Stop Screw

the steering knuckle support, No. 8, before starting to thread pivot pin, No. 6 through the steering knuckle support. This is necessary to provide the proper caster effect and equal clearance at each side of the support for the rubber dust seals. Also for the same reasons centralize the spring eye in the lower end of the knuckle support before starting the spring pivot bolt.

Wheel camber is controlled by shim pack, No. 37, Fig. 252, installed between the frame and the support arm frame bracket. Adjustment (see "Steering" Section) is through selection of the correct shim thickness. Shims .060" and .120" (1.524 and 3.048 mm.) in thickness are available. Should the shims be removed be sure that each pack is reinstalled on the same side from which it was removed.

#### M-14. 4-Wheel-Drive Turning Angle

To avoid possible damage to the universal joints on the front axles of 4-wheel drive vehicles, it is advisable to check the turning angle. The 4-wheel-drive vehicles should have a turning angle of not more than 29°. The angle is measured by placing the front wheels on turntables.

The stop screw for setting the turning angle is shown in Fig. 253. To adjust the screw, it is necessary to break the weld holding the screw in position. When the adjustment has been made, reweld the screw in place to prevent any movement.

## SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Hard Steering</b>	
Lack of Lubrication.....	Lubricate
Tires Soft.....	Inflate
Tight Steering.....	Adjust. See "Steering" Section
<b>Low Speed Shimmy or Wheel Fight</b>	
Spring Clips and Shackles Loose.....	Readjust or Replace
Front Axle Shifted.....	Broken Spring Center Bolt
Insufficient Toe-in.....	Adjust
Improper Caster.....	Reset
Steering System Loose or Worn.....	Adjust or Overhaul Steering Gear, Front Axle or Steering Parts
Twisted Axle.....	Straighten or Adjust
<b>High Speed Shimmy or Wheel Fight</b>	
Check Conditions Under "Low Speed Shimmy"	
Tire Pressures Low or Not Equal.....	Inflate
Wheel Out of Balance.....	Balance
Wheel Runout.....	Straighten
Radial Runout of Tires.....	Mount Properly
Wheel Camber.....	Same on Both Wheels
Front Springs Settled or Broken.....	Repair or Replace
Bent Steering Knuckle Arm.....	Straighten or Replace
Shock Absorbers not Effective.....	Replace or Repair
Steering Gear Loose on Frame.....	Tighten
Front Springs Too Flexible.....	Over Lubricated
<b>Tramp</b>	
Wheels Unbalanced.....	Check and Balance
<b>Wandering</b>	
Improper Toe-in.....	Adjust—Check for Bent Steering Knuckle Arm
Broken Front Spring Main Leaf.....	Replace
Axle Shifted.....	Spring Center Bolt Broken
Loose Spring Shackles or Clips.....	Adjust or Replace
Improper Caster.....	Reset
Tire Pressure Uneven.....	Inflate
Tightness in Steering System.....	Adjust
Loose Wheel Bearings.....	Adjust
Front Spring Settled or Broken.....	Repair or Replace
<b>Axle Noisy on Pull</b>	
Pinion and Ring Gear Adjusted too Tight.....	Readjust
Pinion Bearings Rough.....	Replace
<b>Axle Noisy on Coast</b>	
Excessive Back Lash at Ring and Pinion Gears.....	Readjust
End Play in Pinion Shaft.....	Readjust
Rough Bearing.....	Replace
<b>Axle Noisy on Coast and Pull</b>	
Ring and Pinion Adjusted too Tight.....	Readjust
Pinion Set too Deep in Ring Gear.....	Readjust
Pinion Bearing Loose or Worn.....	Readjust or Replace
<b>Back Lash</b>	
Axle Shaft Universal Joint Worn.....	Replace
Axle Shaft Improperly Adjusted.....	Readjust
Worn Differential Pinion Washers.....	Replace
Worn Propeller Shaft Universal Joints.....	Repair

**Emergency (4-Wheel Drive Models)**

Where difficulty is experienced with front axle differential making the vehicle inoperative, remove axle driving flanges. This will allow bringing vehicle in under its own power. Be sure front wheel drive shift lever is in the forward (disengaged) position.

## FRONT AXLE SPECIFICATIONS

MODEL:	L6-226 4WD	L6-226 4x4	F4-134 4WD F4-134 4x4
<b>FRONT AXLE:</b>			
Make.....	Spicer	Spicer	Spicer
Model.....	25	25	25
Capacity.....	2000 lb. [907 kg.]	2000 lb. [907 kg.]	2000 lb. [907 kg.]
Description.....	Full Floating Hypoid Gears	Full Floating Hypoid Gears	Full Floating Hypoid Gears
Universal Joints:			
Standard			
Make.....	Spicer	Spicer	Spicer
Type.....	Cardan Cross	Cardan Cross	Cardan Cross
Optional			
Make.....	Bendix	Bendix	Bendix
Type.....	Constant Velocity	Constant Velocity	Constant Velocity
Optional			
Make.....	Rzeppa	Rzeppa	Rzeppa
Type.....	Constant Velocity	Constant Velocity	Constant Velocity
King Pin Bearing Preload.....	12 to 16 lb. [5,4 a 7,3 kg.]	12 to 16 lb. [5,4 a 7,3 kg.]	12 to 16 lb. [5,4 a 7,3 kg.]
Drive Pinion Offset.....	1.38" [35,052 mm.]	1.38" [35,052 mm.]	1.38" [35,052 mm.]
Number of Differential Pinions.....	2	2	2
Gear Ratio:			
Standard.....	4.88 to 1	4.27 to 1	5.38 to 1
Optional.....	5.38 to 1	4.88 to 1	.....
Optional.....	4.27 to 1	5.38 to 1	.....
Ring Gear Pitch Diameter.....	7.75" [19,68 cm.]	7.75" [19,68 cm.]	7.75" [19,68 cm.]
Pinion Adjustment.....	Shim	Shim	Shim
Pinion Bearing Adjustment.....	Shim	Shim	Shim
MODEL:	L6-226 4x2	F4-134 4x2	
<b>Front Axle:</b>			
Make.....	Clark	Clark	Clark
Model.....	130093	130093	130093
Type.....	Reverse Elliot	Reverse Elliot	Reverse Elliot
Road Clearance.....	7 $\frac{3}{8}$ " [18,7 mm.]	7 $\frac{3}{8}$ " [18,7 mm.]	7 $\frac{3}{8}$ " [18,7 mm.]
Capacity.....	1600 lb. [725 kg.]	1600 lb. [725 kg.]	1600 lb. [725 kg.]



## REAR AXLE

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Axle Shaft — Full Floating .....	N-4	Differential — Spiral Bevel	
— Semifloating .....	N-3	Drive Pinion — Overall .....	N-14
Differential — Hypoid .....	N-5	Overhaul .....	N-13
Assembling .....	N-12	Gauge Set .....	N-11
Bearings .....	N-7, N-8	Installing .....	N-15
Disassembly .....	N-6	Removing .....	N-2
Drive Pinion — Adjustment .....	N-9	Trouble Shooting .....	N-22
Side Gears — Adjustment .....	N-10	Powr-Lok .....	N-23
Differential — Powr-Lok .....	N-16	Rear Wheel Noise .....	N-29
		Vehicle Vibrations .....	N-28

## N-1. GENERAL

All models are equipped with Spicer semifloating hypoid rear axles as standard equipment. Some early production trucks (Models L6-226 4WD and F4-134 4WD) were equipped with Timken rear axles with spiral bevel gears as optional equipment. Information for front and rear axle differentials is covered in this section. All models have full-floating hypoid front axles.

For Powr-Lok differential, see the special instructions at the end of this section.

Information for axle shaft adjustment is given in Section Q.

**NOTE:** Whenever an axle is inspected, see if the ring gear lock straps (Fig. 274, No. 49) are present. These straps should be installed on those axles without them.

A metal tag beneath one of the differential housing cover screws is stamped to identify the number of teeth in the drive gear and pinion. By dividing the larger number (ring gear teeth) by the smaller number (pinion teeth) the axle ratio can be determined. Thus, 47/11 denotes a 4.27:1 ratio.

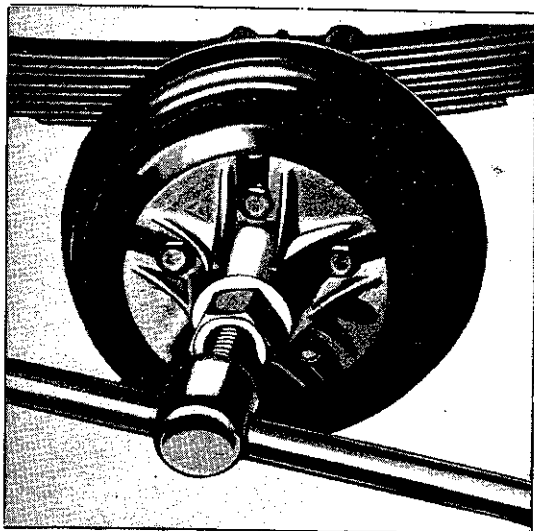


FIG. 254—WHEEL HUB PULLER

## N-2. Removing Rear Axle Assembly

To remove a rear axle assembly first raise the rear end of the vehicle with a hoist and safely support the frame ahead of the rear springs. Remove the wheels and disconnect the propeller shaft at the rear universal joint companion flange. Disconnect the brake hydraulic hoses. Remove the spring to axle "U"-bolt clips and slide the assembly from underneath the vehicle.

## N-3. Axle Shaft — All Semifloating

To remove an axle shaft from a semifloating axle assembly follow the sequence below:

- Jack up the wheel and remove the hub cap.
- Remove the axle shaft nut.
- Use a puller to remove the wheel hub. (Tool C-319 shown in Fig. 254.)
- Remove the screws attaching the brake dust shield, grease and bearing retainers, and brake assembly. Remove the shield and retainer.
- Using care not to lose the adjusting shims, pull out the axle shaft. Should an axle shaft be broken, the inner end can usually be drawn out of the housing with a wire loop after the outer oil seal is re-

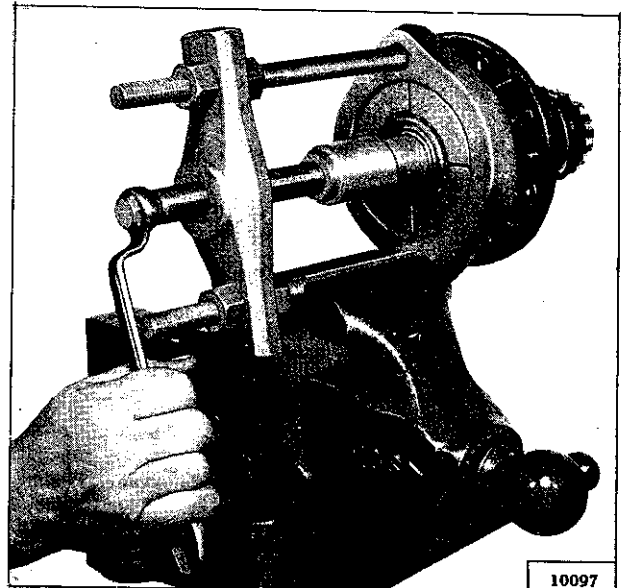


FIG. 255—BEARING PULLER

moved. However, if the broken end is less than 8" [20 cm.] long, it may be necessary to remove the differential.

To remove the bearing from an axle shaft use combination bearing puller, Tool No. W-104-A shown in Fig. 255.

If both shafts are to be removed, keep the shims from each shaft separate and replace them on the shafts from which they were removed to maintain correct bearing adjustment.

On Timken axles, shims may be installed on one shaft only or the clearance may be divided equally and shims installed on both shafts.

Assembly is the reverse of dismantling. Check the shaft oil seal, No. 35, Fig. 256, before installing the axle shaft. If replacement is necessary use axle

shaft oil seal driver W-186, Fig. 257. Also check the grease retainer, No. 9, Fig. 256, and replace it if there is any doubt of its condition. Adjust the wheel bearings as outlined in Section Q.

#### N-4. Full-Floating Axle Shaft

To remove the full-floating axle shaft, it is not necessary to jack up the rear wheel. Removal procedure:

a. Remove the six screws holding the driving flange to the wheel hub.

b. Screw two flange screws into the threaded holes in the axle flange to loosen the shaft. Remove the shaft.

c. If shaft is broken, remove the outer piece of the shaft. Then, loop a piece of stiff wire over the piece

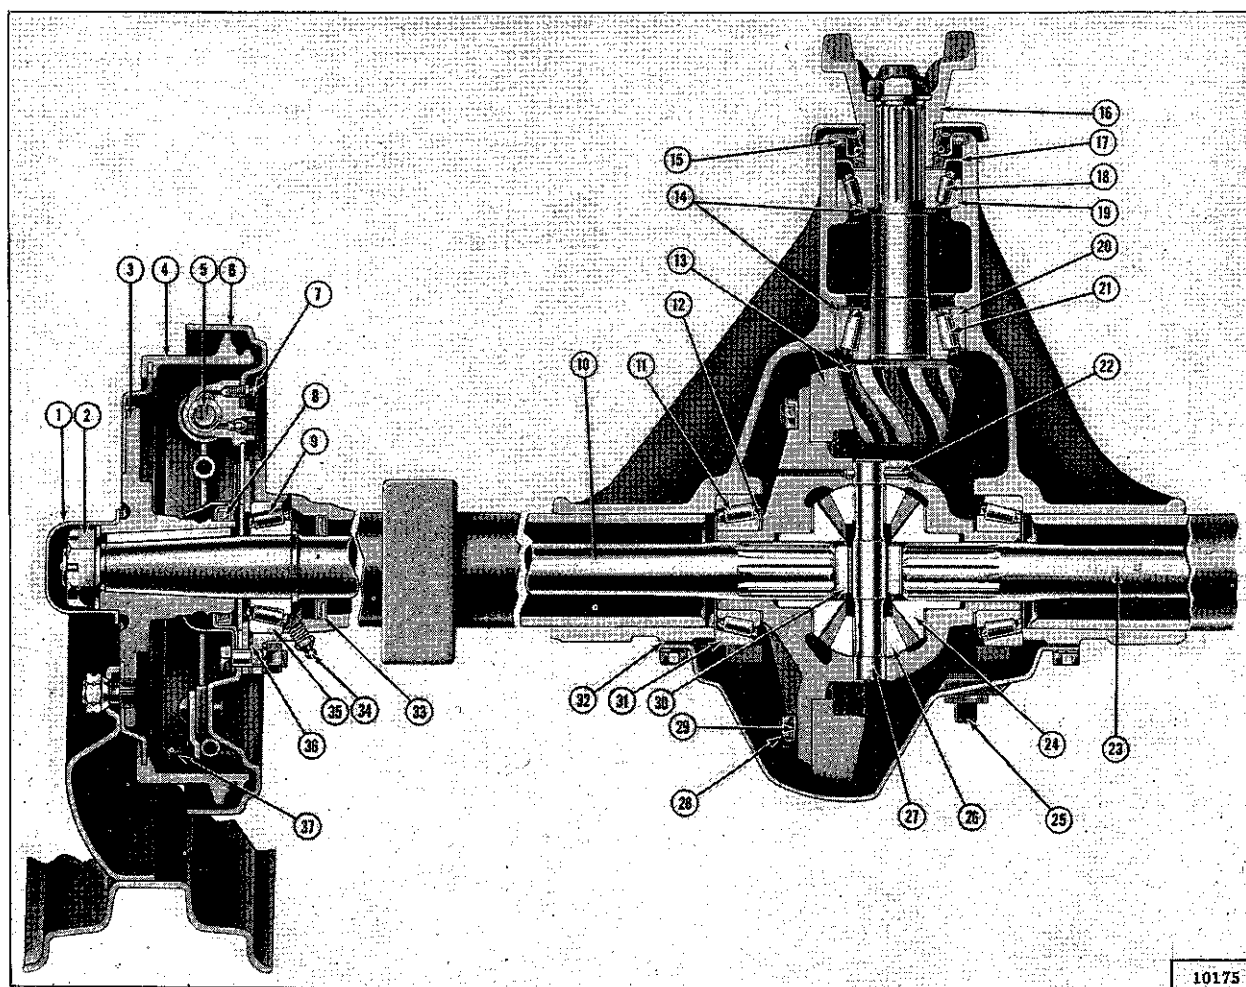


FIG. 256—REAR AXLE ASSEMBLY

- 1—Wheel Hub Cap
- 2—Axle Shaft Nut
- 3—Rear Wheel Hub
- 4—Brake Drum
- 5—Wheel Brake Cylinder
- 6—Brake Backing Plate
- 7—Bleeder Screw
- 8—Outer Oil Seal
- 9—Cone and Rollers
- 10—Axle Shaft, Left
- 11—Cone and Rollers
- 12—Adjusting Shims

- 13—Ring Gear and Pin Set (matched)
- 14—Adjusting Shims
- 15—Oil Seal
- 16—End Yoke
- 17—Oil Slinger
- 18—Cone and Rollers
- 19—Bearing Cup
- 20—Bearing Cup
- 21—Cone and Rollers
- 22—Lock Pin
- 23—Axle Shaft, Right
- 24—Side Gear
- 25—Oil Filler Plug

- 26—Pinion Mate
- 27—Pinion Mate Shaft
- 28—Drive Gear Screw
- 29—Screw Locking Strap
- 30—Spacer (center block)
- 31—Bearing Cup
- 32—Cover Gasket
- 33—Inner Oil Seal
- 34—Lubrication Fitting
- 35—Bearing Cup
- 36—Wheel Bearing Shims
- 37—Brake Shoe and Lining

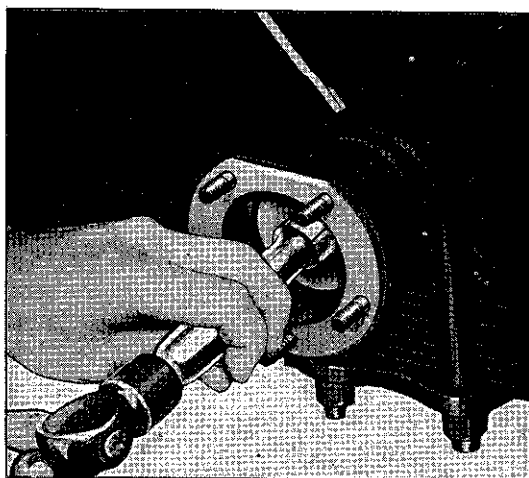


FIG. 257—OIL SEAL DRIVER

of shaft remaining inside the housing. Pull the wire to bind the loop on the shaft piece and remove it.

d. Replace the shaft in reverse order. Install the shaft carefully so the inner oil seal at the differential is not knocked out.

#### N-5. DIFFERENTIAL

Differentials of both front and rear axles are covered here with the exception of Powr-Lok. Powr-Lok differentials are covered starting with Par. N-16.

Before disassembling the differential it is advisable to determine through inspection the cause of difficulty or failure of the parts. Drain the lubricant from the differential housing and then remove the differential cover. Wash the differential parts thoroughly with solvent so the parts can be carefully inspected. Should it be determined by this inspection that the differential requires overhaul-

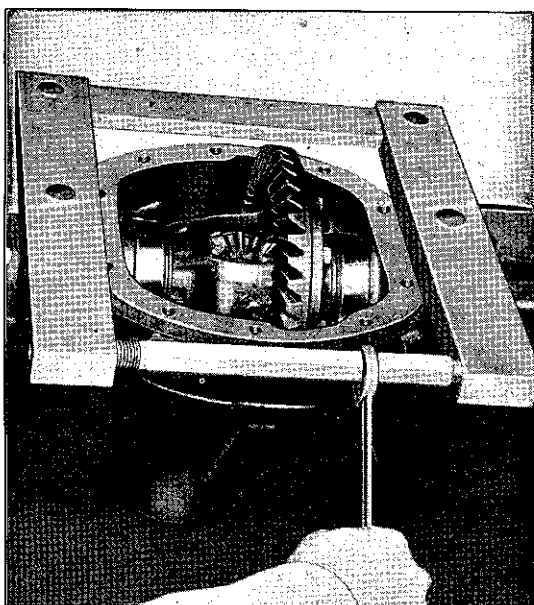


FIG. 258—DIFFERENTIAL CARRIER SPREADER

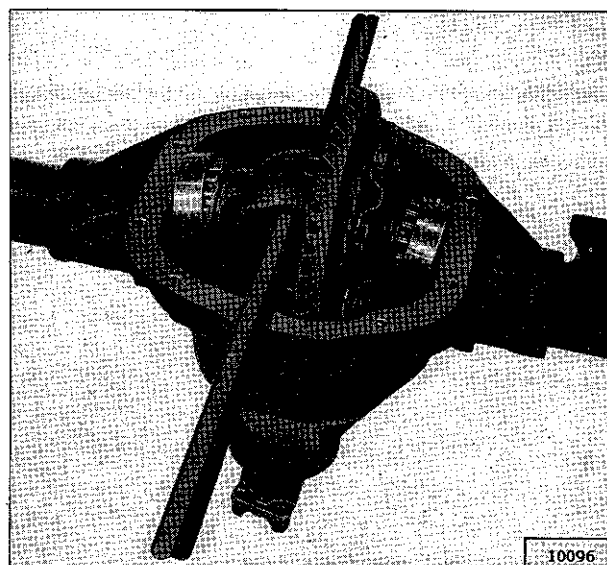


FIG. 259—REMOVING DIFFERENTIAL

ing, the axle assembly must be removed from the vehicle.

#### N-6. Disassembly

After the axle assembly is removed, disassemble the differential as outlined below:

a. Remove the axle shafts. Refer to Par. N-3 or N-4 for rear axles and Section M for front axles.

b. Remove the housing cover and four screws holding the two differential side bearing caps in position. Make sure there are matching letters or other marks on the caps and the housing so that each cap can be reinstalled in the same position and location from which it is removed.

c. It is necessary to spread the carrier as the differential bearing has initial preload. Use Housing Spreader Tool W-129 as shown in Fig. 258 to spread the housing. Install W-129-18 hold down clamps, if available, to keep the spreader in position. Clamp on a dial indicator. From the side, measure the carrier spread. When the spreading force is applied, do not exceed a limit of .020" [5 mm.]. Remove the dial indicator. Carefully pry the differential case

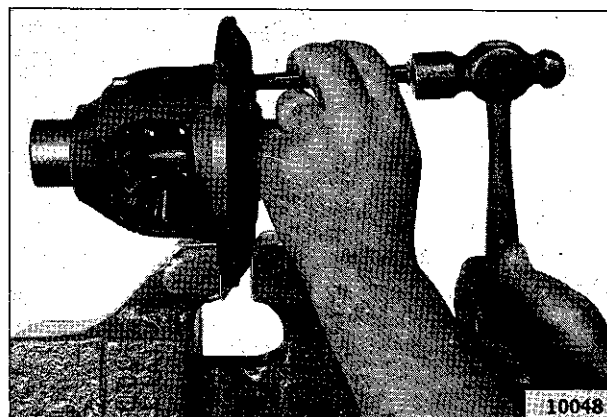


FIG. 260—REMOVING LOCK PIN

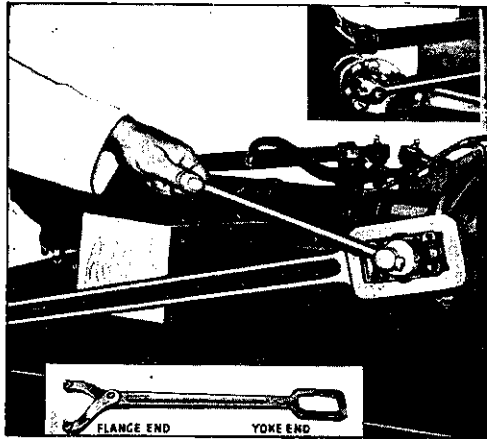


FIG. 261—FLANGE HOLDING WRENCH

loose, using pry bars as the heads of the ring gear bolts and the carrier casting.

**Caution:** Remove the spreader tool to prevent the possibility of the carrier taking a set.

d. Should the spreader tool be unavailable, use two pry bars, one on each side of the differential case opening, to pry out the differential assembly as shown in Fig. 259.

e. If the differential carrier bearings are to be removed, use bearing puller W-104-A as shown in Fig. 255 or pullers DD-914-8 and DD-914-62 as shown in Fig. 266.

f. Turn down the lock strap tabs and remove the screws and lock straps holding the differential ring gear to the differential case.

g. The differential shaft (Fig. 256, No. 29) is held in place by a lock pin (24). Use a small punch as shown in Fig. 260 to drive out the lock pin. Remove the differential shaft.

h. Using care not to lose the pinion thrust washers, remove the differential pinion gears.

i. Remove the axle shaft gears and thrust washers.

j. To remove the drive pinion, first remove the universal joint end yoke assembly. Use Tool C-3281

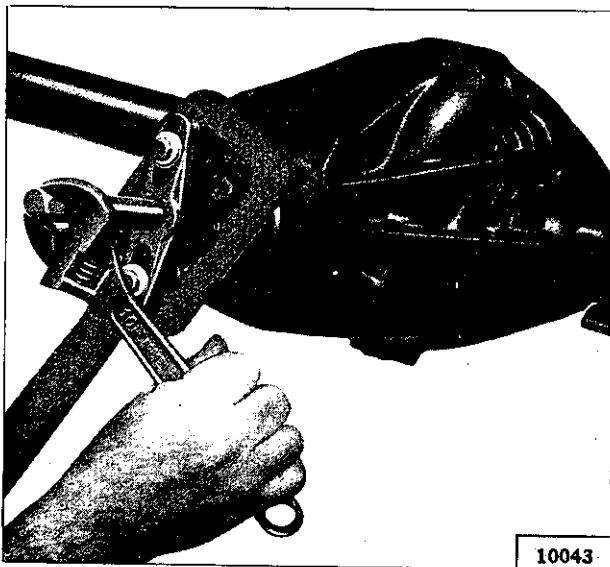


FIG. 262—END YOKE PULLER

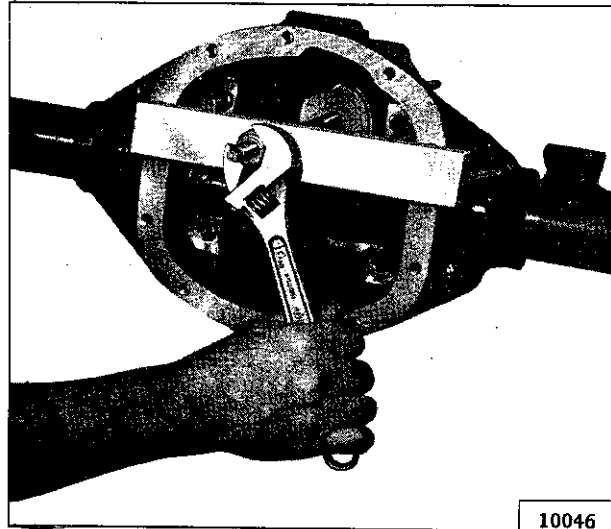


FIG. 263—PINION SHAFT BEARING CUP PULLER

to hold the shaft as shown in Fig. 261 while removing the nut. Use puller, Tool W-172, to remove the end yoke as shown in Fig. 262.

k. With a hammer and brass drift, drive on the end of the pinion shaft to force the pinion into the differential housing so it can be removed.

l. Remove the pinion shaft oil seal.

### N-7. Differential Carrier Bearing Cups

To remove the front and rear differential carrier bearing cups, use puller W-100 with its adapter plates which are a part of W-99, W-99A, and W-99-B tool kits. Oil the puller screw threads with clean engine or machine oil. Remove the rear bearing cup first. To replace the bearing cups, puller W-100 is used for the rear bearing cup and driver W-126 is used to install the front bearing cup. Procedure for removal is given below.

a. Remove the hex nuts from each end of the W-100 puller.

b. Carefully insert the round adapter with two flat sides through one of the bearing cups and position it behind the rear bearing cup shoulder.

c. Insert the short-threaded end of the main puller screw through the hole in this adapter and secure the adapter with a hex nut.

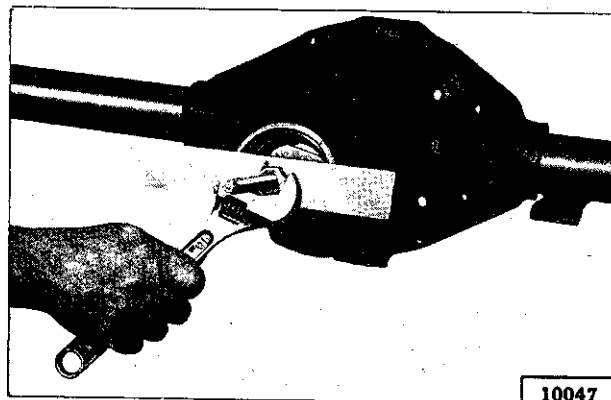


FIG. 264—PINION SHAFT BEARING CUP PULLER

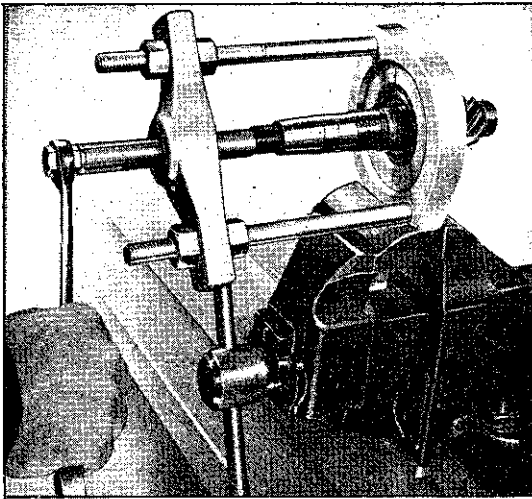


FIG. 265—BEARING PULLER

- d. Position the plate across the open face of the differential housing and secure it with a hex nut.
- e. Make sure the adapter plate sets flat against the pinion rear bearing adjusting shims. Turn down the screw to remove the bearing cup.
- f. Reposition the puller to remove the front bearing cup. The adapter should be seated firmly against the shoulder of the cup with the long-threaded end of the main puller screw through its center. The

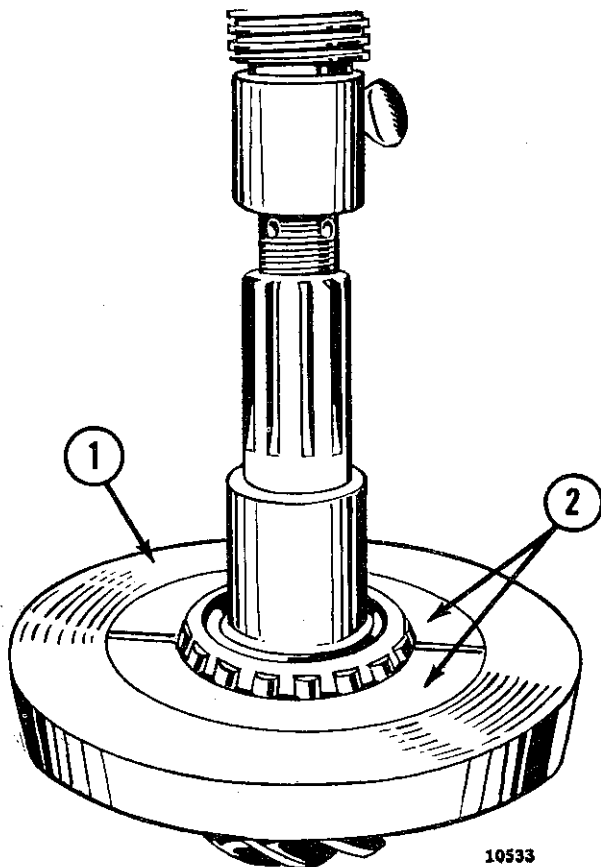


FIG. 266—REMOVING PINION BEARING

1—Holding Ring

2—Adapter

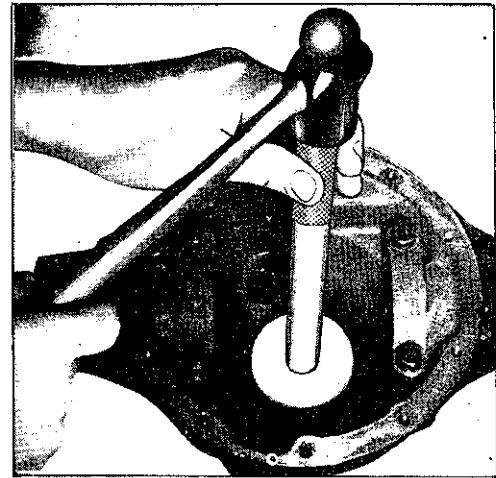


FIG. 267—PINION SHAFT REAR BEARING CUP DRIVER

plate is positioned against the front seat of the differential housing.

- g. Make sure the adapter plate sets flat against the pinion front bearing adjusting shims. Turn down the screw to remove the bearing cup.

#### N-8. Removing Differential and Pinion Bearings

To remove the cone and rollers of the differential or pinion bearing use a pair of adapter plates and a holding ring in an arbor press. The holding ring keeps the bearing adapters snug to the bearing rollers so that the bearing may be safely removed in the arbor press. For removing the differential bearings from the differential case use adapter plate pair DD-914-62.

For removing the pinion bearing use adapter plate pair DD-914-95.

For either adapter pair, holding ring DD-914-8 is also used.

#### N-9. Adjusting the Drive Pinion

Before attempting to adjust the bevel gear or differential parts, the drive pinion should be carefully checked and adjusted. The pinion is correctly po-

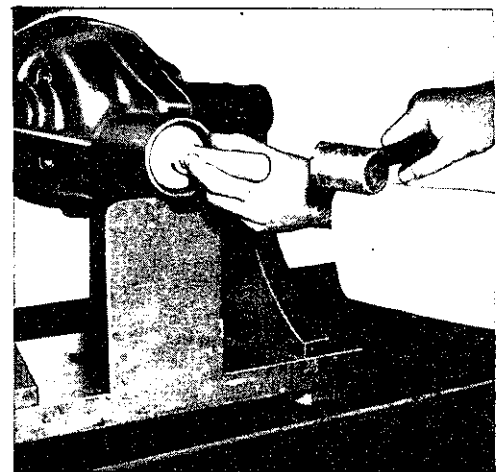


FIG. 268—PINION SHAFT FRONT BEARING CUP DRIVER

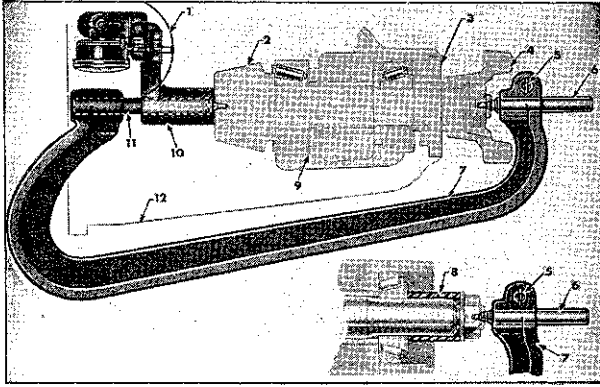


FIG. 269—PINION ADJUSTING FIXTURE

sitioned in relation to the ring gear by the use of shims which are placed between the rear bearing cup and the housing. These shims are available in thickness of .003", .005" and .010" (.076, .127, .254 mm.).

Should it be necessary to remove and replace the pinion shaft bearing cups, this may best be accomplished by using pinion shaft bearing cup pullers, as described in Par. N-7.

Proper adjustment of the drive pinion is best accomplished by the use of ring gear and pinion setting gauge W-99, W-99-A, or W-99-B. Refer to Par. N-11.

This gauge is equipped with a dial indicator which measures the distance from the finished surface on the head of the pinion to the center line of the differential carrier bearing. By establishing this distance, the correct amount of shims to be installed can be determined, to provide the required position of the drive pinion.

All pinions are marked on the head with a dimension indicating the proper number of thousandths of an inch they must be adjusted either plus or minus from standard. For example, a pinion marked plus three means it must be adjusted .003" (.076 mm.) further away from the ring gear center than

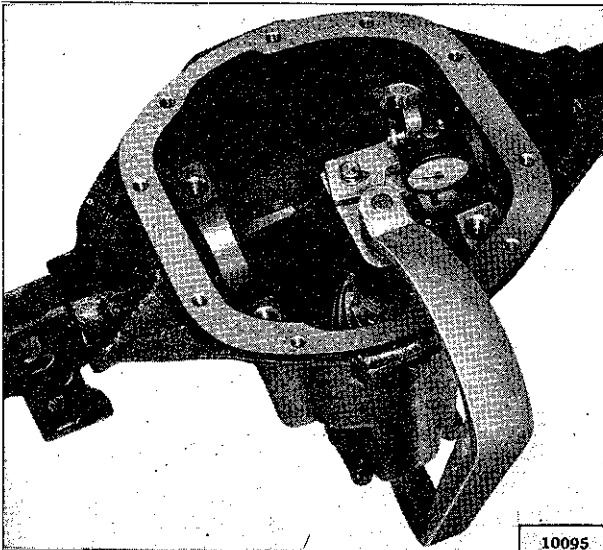


FIG. 270—PINION SETTING GAUGE

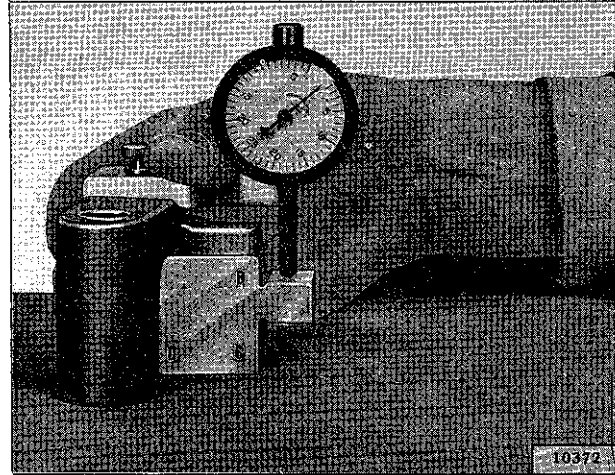


FIG. 271—PINION MASTER GAUGE

standard and the gauge dial must read plus .003" when the pinion is correctly shimmed.

Master gauge blocks are supplied with this tool so that the original zero or standard dimension is accurately and easily established. The gauge blocks provide seven different standards for seven different axles. The seven standards are indicated with A, B, C, D, E, F and G markings stamped on the gauge blocks. Use only the blocks listed below for the axles covered here.

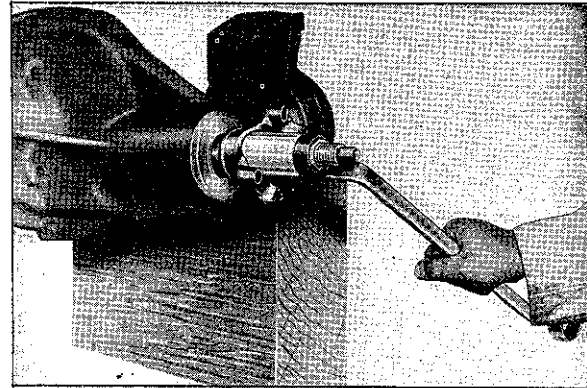
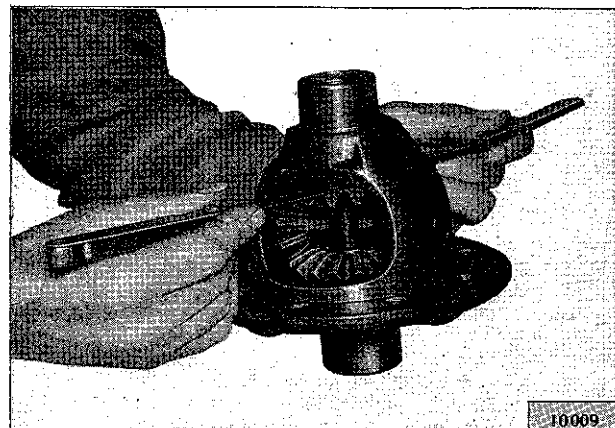
FIG. 272—UNIVERSAL JOINT FLANGE  
INSTALLING TOOL

FIG. 273—CHECKING SIDE GEAR CLEARANCE

**Front Axles**

Use block D for front axles with 5.38:1 and 4.88:1 gear ratios. Use block G for front axles with a 4.27:1 gear ratio. The 4.27:1 gear ratio is used on some late production Model L6-226 4-wheel-drive vehicles.

**Rear Axles**

Use block F for all Model L6-226 4WD and Model F4-134 4WD rear axles.

Use block E for all Model L6-226 4x4, L6-226 4x2, and F4-134 4x4 rear axles.

Use block E for late production Model F4-134 4x2, which is equipped with Spicer Model 44 rear axle. Use block D for early production Model F4-134 4x2, which are equipped with Spicer Model 23 rear axle. The axle model number will be found on the lower right rib of the gear carrier housing

when viewed from the rear of the vehicle.

The dial gauge is set to the master gauge for the different axles as shown in Fig. 271. Use the correct master gauge surface for the model axle being adjusted. Hold the dial indicator and gauge as shown in Fig. 271 and set the dial bezel to position the hand at zero with one-half turn tension on the gauge pin. This sets the dial to register at zero when mounted in the axle, when the distance between the finished head of a standard pinion and the center of the differential carrier is spanned. After setting the dial use care not to jar it or turn the bezel to disturb the setting.

Assemble the pinion in the case with the same thickness shim packs originally installed and without the oil seal. Use Spacer Tool No. W-126-6 in place of the universal joint yoke.

Assemble the dial gauge head to the "C" clamp by

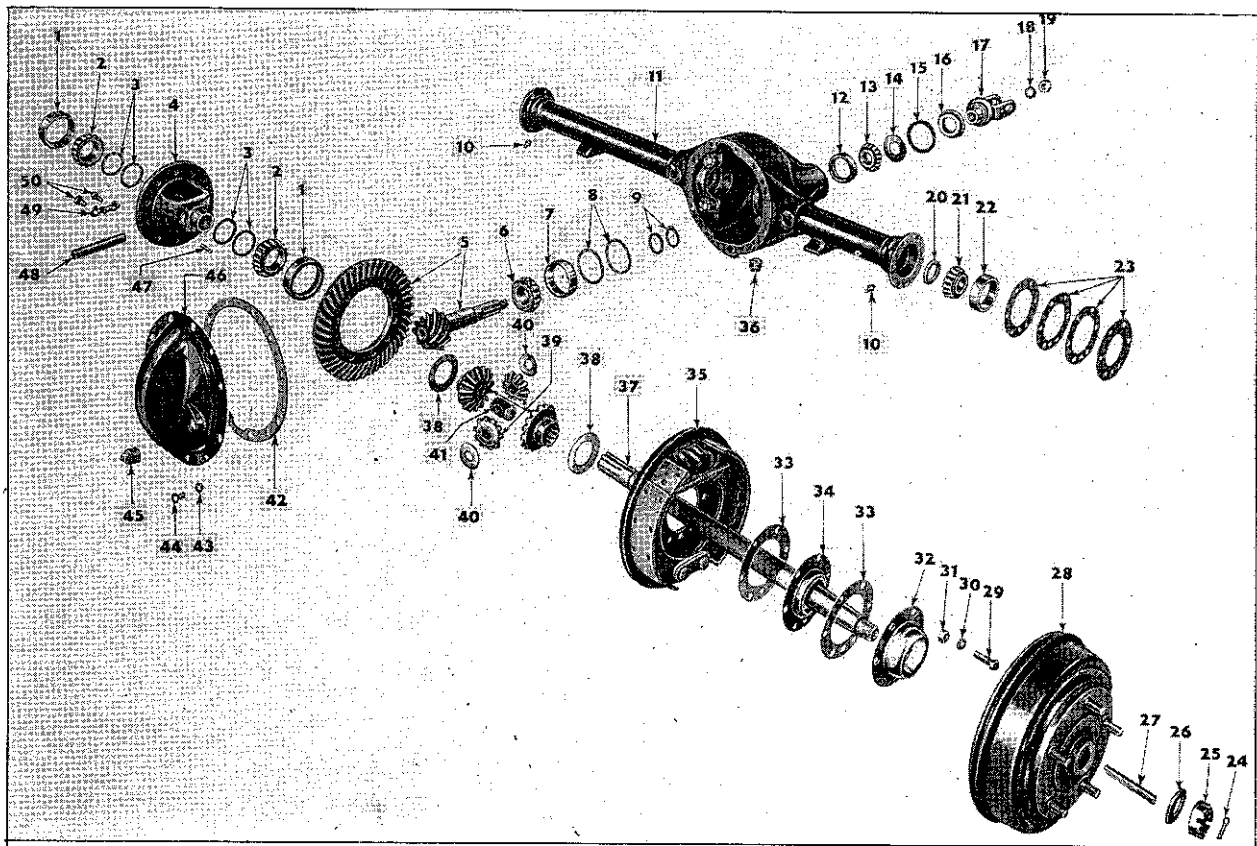


FIG. 274—SEMI-FLOATING, HYPOID REAR AXLE

- |                                    |                                      |
|------------------------------------|--------------------------------------|
| 1—Differential Bearing Cup         | 26—Axle Shaft Washer                 |
| 2—Differential Bearing Cone        | 27—Axle Shaft Key                    |
| 3—Differential Bearing Shim        | 28—Hub and Drum                      |
| 4—Differential Case                | 29—Bolt—Brakes to Housing            |
| 5—Ring Gear and Pinion             | 30—Lockwasher                        |
| 6—Pinion Shaft Rear Bearing Cone   | 31—Nut—Brakes to Housing             |
| 7—Pinion Shaft Front Bearing Cup   | 32—Brake Grease Protector            |
| 8—Pinion Shaft Bearing Shim        | 33—Brake Grease Protector Gasket     |
| 9—Pinion Shaft Bearing Shims       | 34—Grease Retainer                   |
| 10—Lubrication Fitting             | 35—Brake Assembly                    |
| 11—Housing Assembly                | 36—Drain Plug                        |
| 12—Pinion Shaft Front Bearing Cup  | 37—Axle Shaft                        |
| 13—Pinion Shaft Front Bearing Cone | 38—Side Gear Thrust Washer           |
| 14—Pinion Bearing Oil Seal         | 39—Differential Gear Set             |
| 15—Pinion Shaft Oil Seal Gasket    | 40—Differential Pinion Thrust Washer |
| 16—Drive Pinion Oil Slinger        | 41—Axle Shaft Spacer                 |
| 17—Universal Joint Yoke            | 42—Housing Cover Gasket              |
| 18—Pinion Nut Washer               | 43—Lock Washer                       |
| 19—Pinion Nut                      | 44—Housing Cover Screw               |
| 20—Inner Oil Seal                  | 45—Filler Plug                       |
| 21—Wheel Bearing Cone              | 46—Housing Cover                     |
| 22—Wheel Bearing Cup               | 47—Pinion Shaft Lock Pin             |
| 23—Axle Bearing Shims              | 48—Pinion Mate Shaft                 |
| 24—Cotter Pin                      | 49—Bolt Lock Strap                   |
| 25—Axle Shaft Nut                  | 50—Ring Gear Screws                  |



slipping the housing over the stationary guide pin, Fig. 269. Hold the gauge head and the large end of the "C" clamp in one hand and position it over the pinion and press the guide pin at the small end of the "C" clamp into the threaded end of the pinion and lock it into position with a thumb screw.

With the "C" clamp correctly seated in the drive pinion shaft lathe center and the dial indicator contact point bearing against the differential carrier side bearing bore, hold the dial gauge body (fixture), No. 1, Fig. 269, against the drive pinion head. Swing the dial gauge body back and forth across the bearing bore and watch the dial reading. The lowest reading indicates the center of the bearing bore and if the shim pack is of the correct thickness, the dial gauge reading will be the same as the etched marking on the pinion head. For example, if the pinion is marked plus three, the dial should indicate plus .003". If the pinion is marked minus three, the dial should indicate minus .003". Should the dial reading fail to agree with the marking on the pinion head note the difference and a corresponding amount of shims should be added or removed to secure the correct adjustment (reading on dial and pinion marking agree).

Recheck the adjustment if any shim changes are made and be sure to set the dial to the correct face of the master gauge. After correctly locating the pinion, adjust the pinion bearing preload. Start with approximately .065" [1,651 mm.] shim pack on the shoulders of the pinion. Reassemble the front bearing, yoke, washer, and nut. Tighten to a torque of 200 to 200 lb.-ft. [27,66 a 30,43 kg.-m.] 225 to 275 lb.-ft. [31,12 a 38,03 kg.-m.] for full-floating rear axle). Using an inch-pound torque-wrench, check the rotating torque (disregard starting torque). Torque should be 10 to 25 inch-pounds [0,116 a 0,288 kg.-m.]. Add or remove shims to obtain the recommended rotating torque.

Do not install the oil seal until the differential has been assembled and the entire unit checked. When

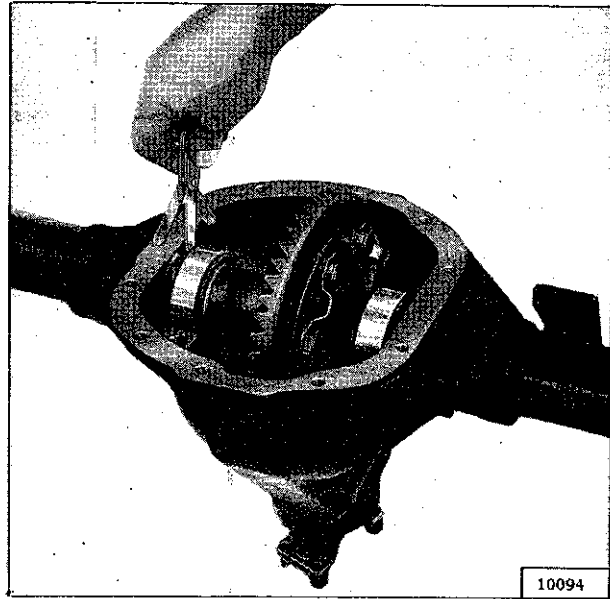


FIG. 276—CHECKING DIFFERENTIAL BEARINGS

installing the universal joint flange use flange installing Tool W-162, Fig. 272.

#### N-10. Adjusting Differential Side Gears

Clearance between the differential side gears and differential case should be .000" to .006" [0,00 a 0,15 mm.]. Use this procedure to check the clearance.

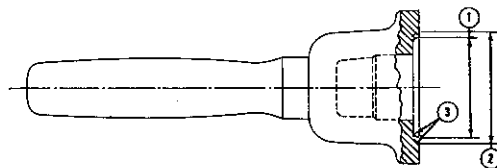


FIG. 277—TOOL W-147 MODIFICATION

- 1—Original Diameter 1.975" [50,167 mm.]
- 2—Modified Diameter 2.031" [51,587 mm.]
- 3—Radius  $\frac{1}{8}$ " [3,2 mm.]

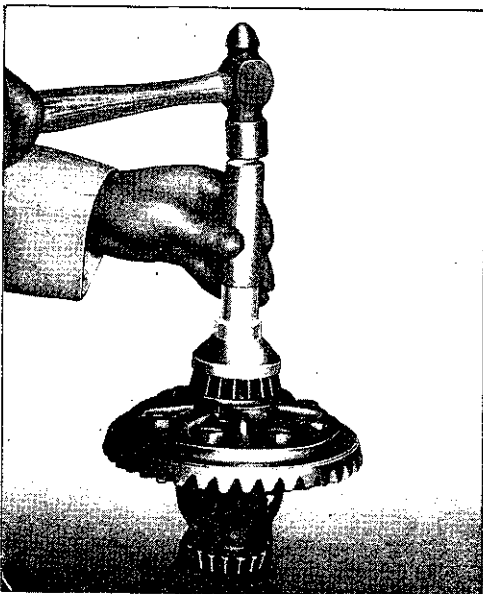


FIG. 275—DIFFERENTIAL BEARING DRIVER

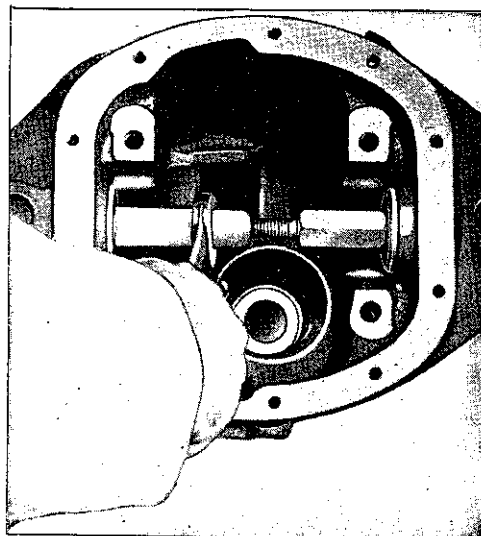


FIG. 278—INNER OIL SEAL INSTALLER



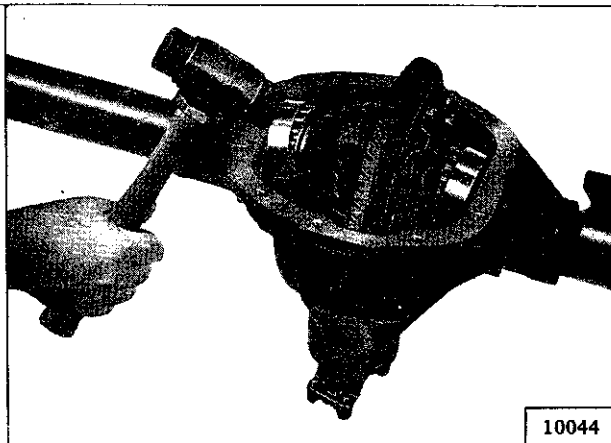


FIG. 279—INSTALLING DIFFERENTIAL.

- a. With the differential positioned as shown in Fig. 273, bounce the differential lightly on a flat surface so the differential gears settle.
- b. Measure the clearance between side gears and the case as illustrated.

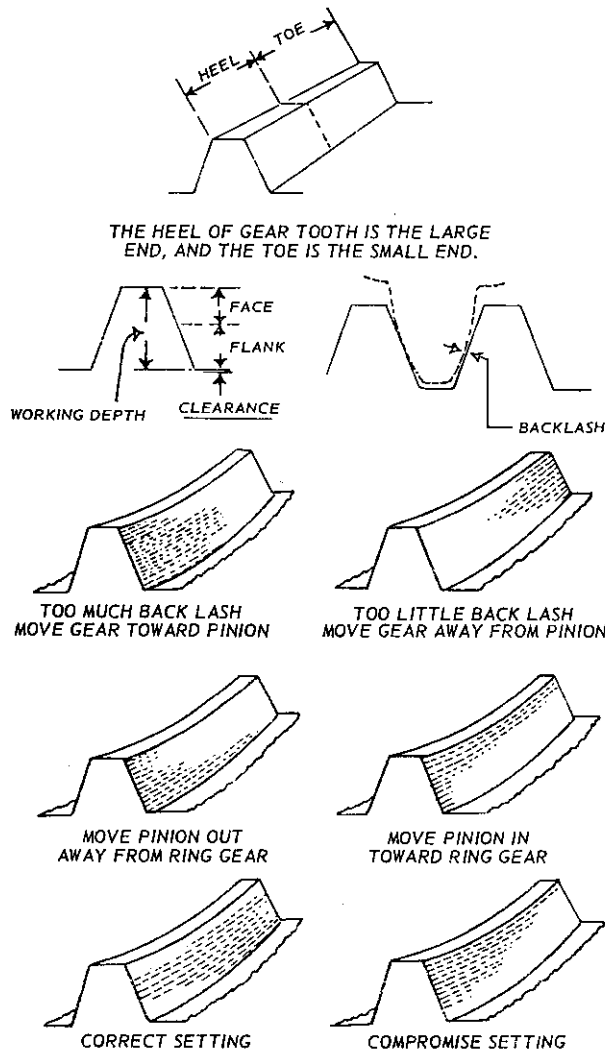


FIG. 280—GEAR TOOTH CONTACT

- c. If the clearance exceeds .006", add shims between the side gears and the case. To bring the clearance within specified tolerance, shims in these thicknesses are available:

.004" [0,10 mm.]  
.006" [0,15 mm.]

.008" [0,20 mm.]

When shims are required, there must be at least one shim on each side. Also, keep the shim packs as equal as possible. After adding shims, repeat the clearance check.

#### N-11. Pinion and Ring Gear Setting Gauge Set

For correct and easy setting of the drive pinion use a Pinion and Ring Gear Setting Gauge Set W-99, W-99-A, or W-99-B. This set includes a tool with adapter to remove and install pinion bearing cups, a C-clamp aligning fixture that locks to the pinion shaft and aligns a dial indicator which accurately measures the distance from the pinion head to the bottom of the differential side carrier bore, master gauge blocks, and a dial indicator. Set W-99 is now superseded by set W-99-A which is in turn superseded by W-99-B. A longer C-clamp alignment fixture is required for the model 70 axle used on FC-170 dual-rear-wheel models (these models not covered in this manual). Each C-clamp aligning fixture is embossed with its part number; usage is as follows:

W-101-3A (from W-99 kit) for all axles requiring gauge blocks A thru E.

W-101-16A (from W-66-A kit) for all axles requiring gauge blocks A thru F.

W-101-14A (from W-99-B kit) for all axles requiring gauge blocks A thru G.

These gauge blocks are currently used:

W-101-11 (in W-99 and W-99A kits) has A, B, C, D markings.

W-101-13 (in W-99A kit; supersedes W-101-9 in W-99 kit and only marked for E gauge) has E and F markings.

W-101-17 (in W-101-21A kit) has G markings.

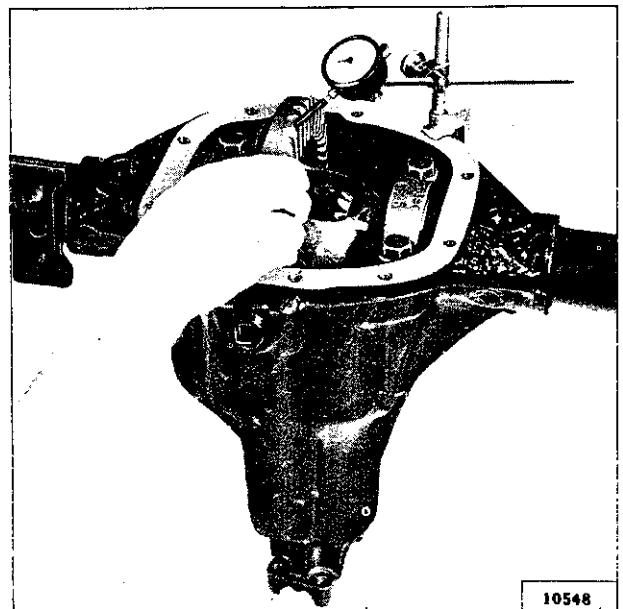


FIG. 281—BACK LASH CHECKING GAUGE

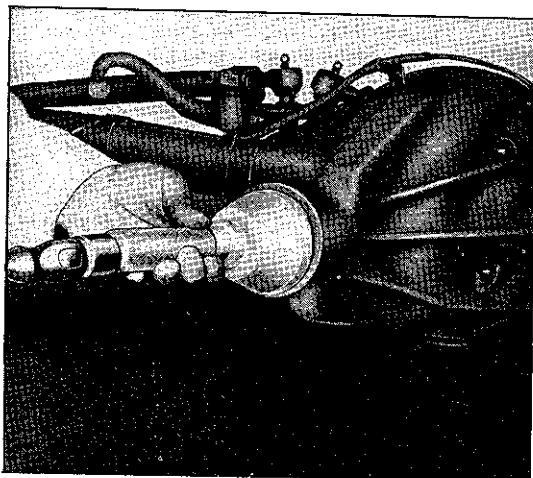


FIG. 282—PINION SHAFT OIL SEAL  
INSTALLER

A supplementary kit, W-101-21A, will adapt either W-99 or W-99-A basic kit to use for the Model 70 axle used on FC-170 dual-rear-wheel models. It includes spacer W-101-19 needed for Model 70 axle used with FC-170 dual-rear-wheel models. This supplementary kit will make a W-99-A kit equal to a W-99-B kit. Substituting W-101-16A C-clamp aligning fixture

for W-101-3A in the W-99 kit and substituting W-101-13 gauge block for W-101-9 gauge block in the W-99 kit will bring a W-99 kit up to include the same items as a W-99-A kit.

#### N-12. Assembling Differential Unit

The relative assembled position of the internal parts of the differential are shown in Fig. 260. Re-assemble the differential pinions, side gears, thrust washers and shaft in place and do not overlook installing the differential shaft lock pin. In order to prevent the lock pin from working out, stake it in position with a punch.

Carefully examine the surfaces of the differential case and bevel gear to make sure there are no foreign particles or burrs on the two contacting surfaces. Line up the holes in the bevel gear with those on the differential case and then place it in position on the case by tapping it lightly with a mallet. Install the screws which hold the bevel gear to the differential case. Make certain that the screw locks are bent around the heads so there is no possibility of the screws working loose. Screws should not be lubricated. Torque screws 35 to 55 lb.-ft. [4,84 a 7,600 kg-m.] (100 to 110 lb.-ft. [13,88 a 15,21 kg-m.] for full-floating rear axles.)

NOTE: If ring gear bolt locking straps (Fig. 274, No. 49) are not present, install them using longer screws (50).

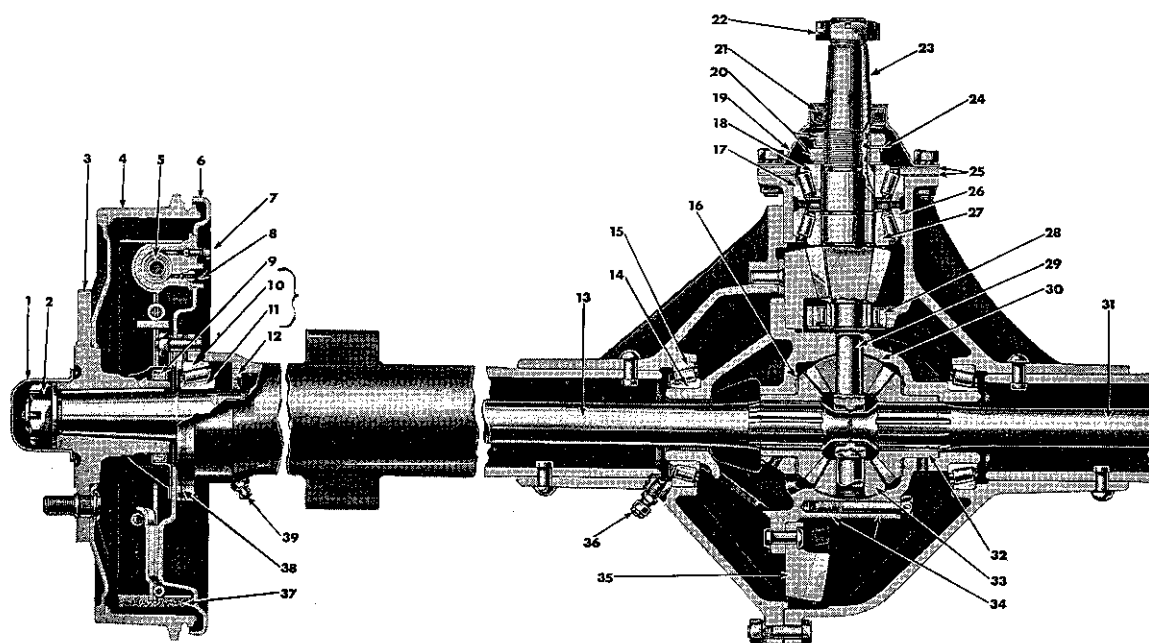


FIG. 283—SPIRAL BEVEL REAR AXLE

- |   |   |                                       |
|---|---|---------------------------------------|
| 1. Wheel Hub Cap—Left or Right          | 14. Differential Bearing Cone and Rollers       | 27. Pinion Bearing Cone and Rollers   |
| 2. Axle Shaft Nut                       | 15. Differential Bearing Race                   | 28. Pinion Rear Bearing               |
| 3. Wheel Hub                            | 16. Differential Side Gear Thrust Washer        | 29. Differential Spider               |
| 4. Brake Drum                           | 17. Pinion Shaft Bearing Race                   | 30. Differential Pinion Thrust Washer |
| 5. Brake Cylinder Assembly—Rear         | 18. Pinion Shaft Bearing Cone and Rollers       | 31. Axle Shaft Right                  |
| 6. Brake Backing Plate                  | 19. Pinion Front Bearing Cone                   | 32. Differential Side Gear            |
| 7. Brake Cylinder Bleeding Screw        | 20. Pinion Front Bearing Adjusting and Lock Nut | 33. Differential Pinion               |
| 8. Brake Hose Connection                | 21. Pinion Cover Oil Seal                       | 34. Differential Case                 |
| 9. Axle Shaft Grease Retainer—Outer     | 22. Pinion Nut                                  | 35. Spiral Bevel Ring Gear            |
| 10. Axle Shaft Bearing Race             | 23. Pinion                                      | 36. Axle Breather                     |
| 11. Axle Shaft Bearing Cone and Rollers | 24. Pinion Adjusting Nut Lock                   | 37. Brake Shoe Assembly               |
| 12. Axle Shaft Grease Retainer—Inner    | 25. Pinion Cover Gaskets                        | 38. Axle Shaft Bearing Shim           |
| 13. Axle Shaft—Left                     | 26. Pinion Bearing Race                         | 39. Lubricator                        |

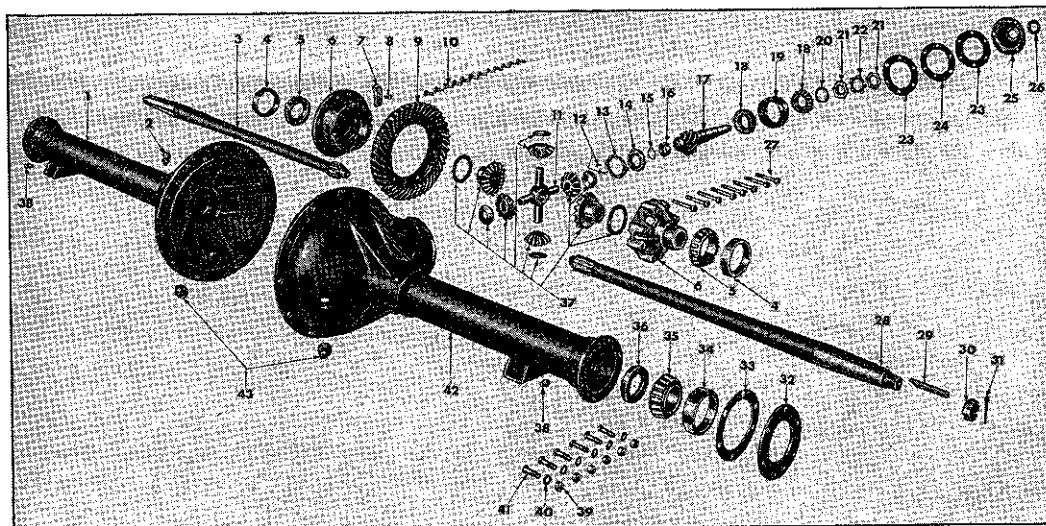


FIG. 284—SPIRAL BEVEL REAR AXLE

- |  |                                    |   |
|--|------------------------------------|---|
| 1. Left Axle Housing                     | 15. Rear Pinion Bearing Lock Ring  | 30. Axle Shaft Nut                      |
| 2. Axle Vent                             | 16. Rear Pinion Bearing Race       | 31. Cotter Pin                          |
| 3. Axle Shaft—Left                       | 17. Drive Pinion                   | 32. Flange Retainer                     |
| 4. Differential Bearing Cup              | 18. Pinion Bearing Cone and Roller | 33. Axle Shaft Bearing Shim             |
| 5. Differential Bearing Cone and Rollers | 19. Pinion Bearing Cup—Front       | 34. Axle Shaft Bearing Cup              |
| 6. Differential Case                     | 20. Thrust Washer                  | 35. Axle Shaft Bearing Cone and Rollers |
| 7. Thrust Block                          | 21. Pinion Bearing Adjusting Nut   | 36. Axle Shaft Inner Oil Seal           |
| 8. Thrust Block Pin                      | 22. Adjusting Nut Lock Nut         | 37. Differential Gear Set               |
| 9. Axle Ring Gear                        | 23. Cover Gasket                   | 38. Hydraulic Fitting                   |
| 10. Ring Gear Rivet                      | 24. Pinion Bearing Spacer          | 39. Nut                                 |
| 11. Differential Spider                  | 25. Pinion Bearing Cover           | 40. Lockwasher                          |
| 12. Bearing Retainer Rivet               | 26. Cover Oil Seal                 | 41. Flange Bolt                         |
| 13. Bearing Retainer                     | 27. Differential Case Bolt         | 42. Axle Housing—Right                  |
| 14. Rear Pinion Bearing                  | 28. Axle Shaft—Right               | 43. Axle Housing Plug                   |
|  | 29. Axle Shaft Key                 |   |

The adjustment of the differential bearings is maintained by the use of shims placed between the differential case and the bearing cones.

To adjust the differential bearing preload, first install the differential case and bearings in the carrier without shims and with the bearing caps snug. Holding the ring gear in contact with the pinion, and using a screwdriver blade to move the bearing caps toward the center, force shims in between both bearing cups and the carrier. There should be only .001" to .002" [0,0254 a 0,0508 mm.] backlash when no more shims can be forced in. After the shim pack for each bearing has been established, remove the differential assembly, keeping the shim packs separated. Add an additional .015" [0,0381 mm.] thickness of shims to the pack on the tooth side of the ring gear.

When overhauling the full-floating type differential used on all front axles of these models, check the inner axle oil seals to determine if they are satisfactory. Should new seals be required install them with Tool W-128 as shown in Fig. 278. Place the differential bearing shim packs on the differential case under each bearing. Press the bearings in place. Attach the carrier spreader tool W-129, install a dial indicator, and spread the carrier a maximum of .020" [0,508 mm.]. Remove the indicator, lubricate the bearings, then place the differential assembly in the carrier. In the absence of tool W-129, the assembly may be installed by cocking the bearing cups slightly when the differential is placed in the carrier. See Fig. 259.

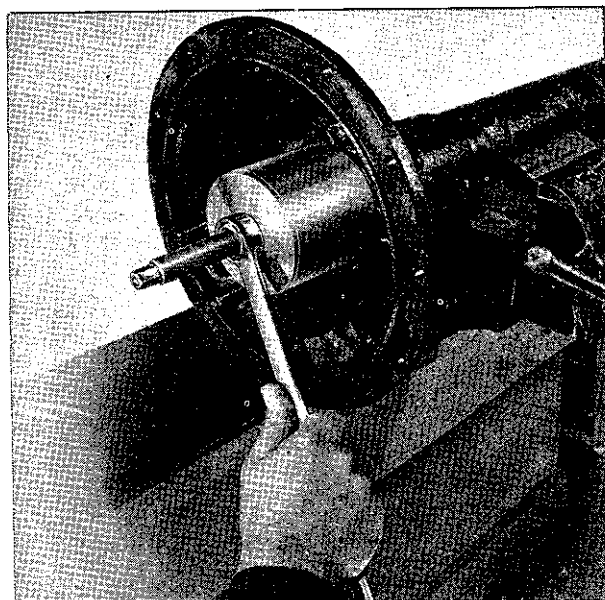


FIG. 285—DIFFERENTIAL BEARING CUP PULLER

Tap the unit carefully into place, making sure the ring gear teeth mesh with the pinion teeth. Install bearing caps, matching their markings with those on the carrier. Apply sealing compound to the screw threads. Torque the screws 70 to 90 lb.-ft. [9,58 a 12,45 kg.-m.].

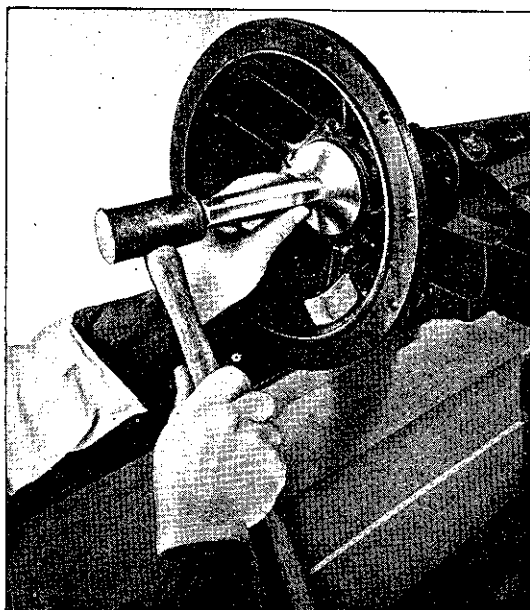


FIG. 286—DIFFERENTIAL BEARING CUP DRIVER

Install indicator to check ring gear backlash. Check backlash at two points. Backlash must be held between .005" and .010" [0,13 a 0,25 mm.]. If backlash does not fall within specifications, shims should be interchanged between the two differential bearing shim packs until correct backlash is obtained.

Check ring gear for runout. A reading in excess of .006" [0,152 mm.]. indicates a sprung differential case, dirt between the case and the gear, or loose ring gear screws.

In order to assist in determining whether the gears are properly adjusted, if the pinion and ring gear gauge set No. W-99A, above, is not available, paint the bevel gear teeth with red lead or prussian blue and turn the bevel gear so the pinion will make an impression on the teeth.

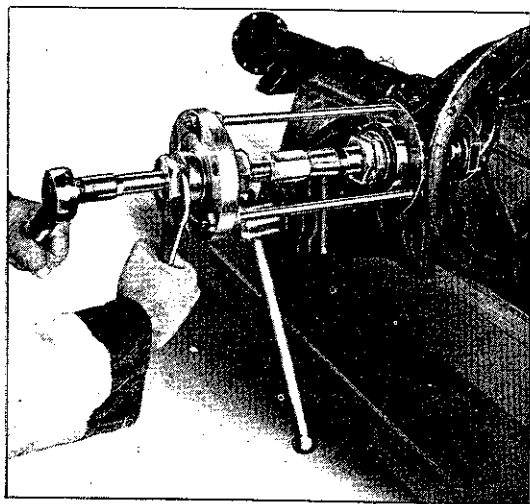


FIG. 287—PINION AND BEARING REMOVER AND REPLACER

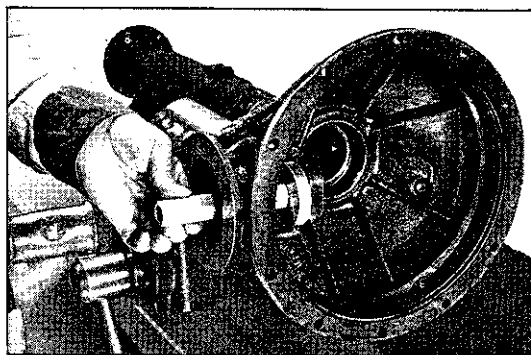


FIG. 288—PINION PILOT BEARING INSTALLER

The correct procedure to follow in the event of an unsatisfactory tooth contact is shown in Fig. 280. After the differential has been assembled and adjusted, the pinion shaft oil seal should be installed. Remove the sleeve previously installed in place of the universal joint yoke and install the oil seal with Tool W-147 shown in Fig. 275.

**NOTE:** To drive the latest type pinion shaft oil seal, the diameter of the recess on the driving end of Tool W-147 must be 2.031" [51,59 mm.]. Early production W-147 tools had a recess diameter of 1.975" [50,15 mm.]. If necessary, increase the diameter of the tool as shown in Fig. 277 so that it can be used to drive either type seal without damaging the seal.

Install the universal joint yoke and tighten the nut firmly. Then install the cotter pin. Install the axle shafts. Replace the differential housing cover.

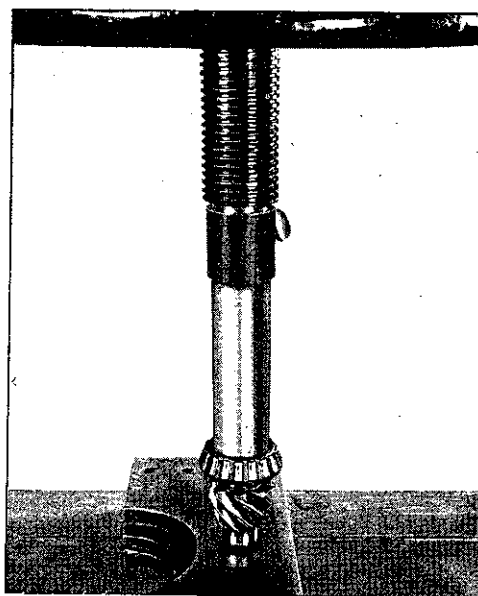


FIG. 289—PINION REAR BEARING INSTALLING SLEEVE

### N-13. Overhauling Spiral Bevel Differential

It is necessary to divide the axle housing at the center to inspect or remove the differential. The differential may be removed without removing the pinion shaft and the pinion shaft and bearings assembly may be removed without dividing the axle housing. Drain the lubricant from the housing. Raise the vehicle to remove weight from the rear wheels and axle. Remove the spring clips which attach the left side of the axle housing to the spring. Place a jack under the right housing next to the differential to support the weight when the left half is removed. Remove the eleven screws connecting the two housing halves. Skid the left housing to the left to separate the two housing halves, pulling the left axle shaft from the differential splines. The differential as an assembly may then be removed from the right housing.

Wash the assembly in solvent and examine it for wear or damage.

The ring gear is riveted to the differential case, however, the differential gears and thrust washers may be installed without removing the ring gear by dividing the differential case. To divide the case cut the locking wire and remove the nine screws holding the halves together.

Should it be necessary to remove the differential mounting cone and rollers use Tool No. W-104-20, Fig. 265 to pull them. The bearing cups may be pulled from the housing with Tool No. W-200 as shown in Fig. 285.

Assembly is the reverse of disassembly. The differential gears and thrust washers are supplied only as matched sets, however, the spider is supplied separately. If any of the following parts must be replaced, the complete set should be installed:

- a. Differential pinions.
- b. Differential pinion thrust washers.
- c. Side gears.
- d. Side gear thrust washers.

As an example, the use of three new and one used pinion thrust washer would probably result in premature failure.

Install the differential mounting cone and rollers. The cups may be installed in the axle housing with Tool No. W-204 as shown in Fig. 286.

Before installing the differential assembly examine the ring gear bronze thrust block, No. 7, Fig. 284 which is mounted in the left housing, for scores or roughness. This is riveted to the housing and may be readily replaced.

### N-14. Overhauling Drive Pinion

#### All Spiral Bevel Gear Axles

The pinion shaft and bearings assembly may be removed without disturbing the differential assembly or dividing the axle housing. Should this be done,

however, check the bearing preload before reinstalling in the housing.

To remove the pinion and bearings assembly first remove the pinion shaft cover, No. 25, Fig. 284 with the oil seal. Remove the six screws attaching the cover to the housing and remove the cover, the spacer (bearing retainer) and the gaskets. Pull the pinion shaft assembly with Puller Tool No. W-203, Fig. 287.

The pinion shaft is mounted on two tapered roller bearings with a double cup made as a single piece. To remove the bearings put the drive pinion in a vise protected with brass vise jaws. Bend up the locking lips on locking washer, No. 24, Fig. 283, and remove the locking nut, the washer and the adjusting nut. The front cone and the double bearing cup may be easily removed as the cone is a slip fit on the shaft. Use Tool No. W-104-32, Fig. 265 to remove the rear cone. The pinion shaft pilot (straddle) bearing is mounted in the axle housing and is positioned by retainer plate No. 13, Fig. 284. Two tubular type rivets hold the plate against the housing. To remove the pilot bearing, first drive out the rivets from the front side of the axle, remove the retainer plate and using a brass drift drive the bearing from the housing.

The axle parts are precision machined and no adjustment of ring gear and pinion mesh is provided. The ring gear and pinion are supplied only in matched sets and the pinion shaft pilot bearing race is supplied mounted on the shaft pilot.

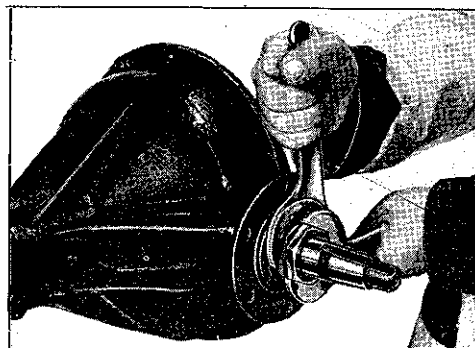


FIG. 290—PINION BEARING ADJUSTING WRENCHES

To assemble pinion and bearings:

- a. Install pilot bearing retainer and drive the bearing into place with Tool No. W-207, Fig. 288.
- b. If necessary (new pinions supplied with cup and snap ring installed) press the pinion pilot bearing inner cup onto the pinion shaft. Install the snap ring.
- c. Press rear pinion shaft bearing firmly against pinion shoulder. Use Tool No. W-205, Fig. 289.
- d. Position cup over rear bearing.
- e. Install the front bearing.
- f. Install washer, adjusting nut, locking washer and lock nut.

Use wrenches Tool No. W-201, Fig. 290 to set the adjusting nut to sufficiently preload the bearings to provide 12 - 18 inch pounds (.14 - .21 kg.-m.) torque on the pinion shaft with the adjusting nut lock nut tightened. This preload is necessary for satisfactory pinion shaft bearing operation because these bearings carry the thrust as well as radial load. Guard against overtightening however, as heating and bearing failure might result. Do not overlook bending over the lip of the locking washer. Install the pinion shaft and bearings assembly in the axle housing with Installer Tool No. W-203, Fig. 287 being sure the pilot race enters the pilot bearing in the housing.

Check the oil seal in the pinion shaft cover. Should replacement be necessary install a new seal, Fig. 291. Position new gaskets and the bearing spacer (retainer) with the oil drain hole in alignment with the opening in the housing. Install the cover.

Install the differential assembly and assemble the axle housing halves. When assembly is completed check the backlash between the ring gear and pinion which must be between .004" and .018" (.102 - .457 mm.).

#### N-15. Installing Rear Axle in Vehicle

To install the axle under the vehicle, have the end of the vehicle securely supported with a chain hoist or a support under the frame just ahead of the rear springs. Place the axle assembly in position and raise it so the spring clips and front spring bolts may be installed. Next connect the brake line hose at frame, install lock clip and attach the brake line. Connect the propeller shaft at the rear universal joint. The wheels may then be installed and the vehicle lowered to the floor. Bleed the brakes to remove any air from the lines, first making certain that there is an ample supply of brake fluid in the master cylinder reservoir.

See "Brake" Section for further instructions.

Fill the housing with the proper lubricant. See "Lubrication" Section.

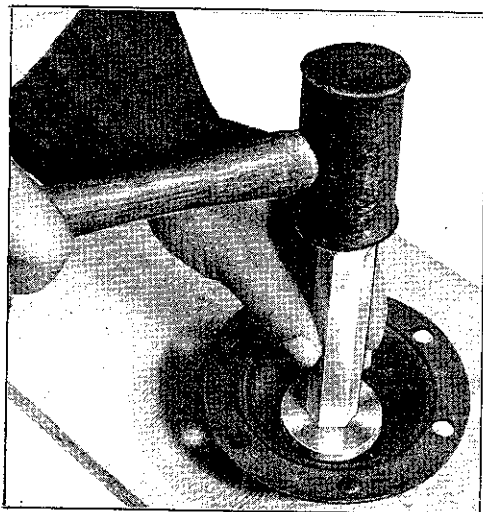


FIG. 291—PINION OIL SEAL INSTALLER

#### N-16. POWR-LOK DIFFERENTIAL

Optional equipment —

Identification, application, servicing, and trouble shooting of the Powr-Lok differential are explained in the following paragraphs.

#### N-17. Identification

Power-Lok differentials are determined by a brass tag under one of the differential carrier housing cover screws. This tag is usually placed opposite the axle ratio tag as shown in Fig. 292. This tag is stamped either with a letter T or with "USE LIMITED SLIP DIFF. LUBE ONLY."

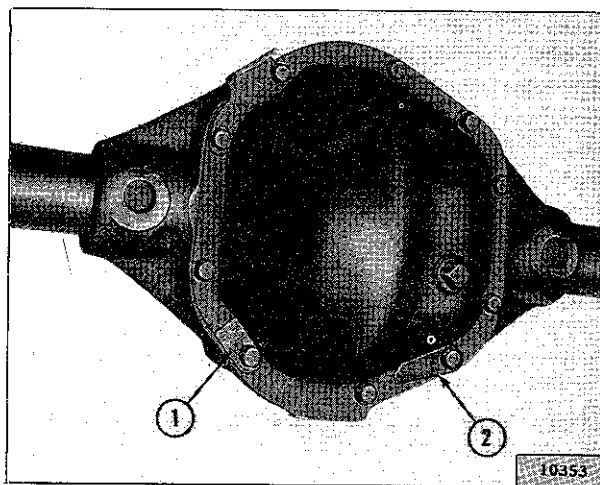


FIG. 292—POWR-LOK DIFFERENTIAL IDENTIFICATION

1—Ratio Tag 2—Powr-Lok Tag

#### N-18. Powr-Lok Changes

The disc type Powr-Lok differential is currently used on all Powr-Lok axle assemblies. Both the cone type and disc type have been used on vehicles with the Model 44 axle. Only the disc type is now available. However, as the disc type is interchangeable as a complete assembly with the cone type, no service problem is presented.

The disc type also has been produced with two different types of friction plate and disc sets or clutches. In the early disc type, all plates and discs were the flat type. The late disc type have Bellville or dished plates in the plate and disc sets; one dished plate in each set. (See Fig. 293).

#### N-19. Application

The Powr-Lok differential can be installed in the axle assembly of some models which did not have Powr-Lok as original equipment. On other models, a complete axle assembly or other related parts will be required to convert to Powr-Lok.

**NOTE:** When converting a standard axle to a Powr-Lok axle, if possible fashion a metal tag marked with the letter T and install as described under Identification above.

a. All vehicles with Model 44 rear axle can be converted by installing the proper Powr-Lok differential in place of the standard differential if the original axle shafts have involute splines. If not, the proper involute splined shafts for the vehicle will have to be installed.

b. The models 53 axle requires the complete replacement of the rear axle assembly to convert to Powr-Lok.

c. Model 25 axle may be converted by installing the proper Powr-Lok differential.

### N-20. Servicing Powr-Lok

Whenever a replacement or conversion Powr-Lok differential assembly is to be installed in an axle which has been previously in service and acquired mileage, be sure to record the amount of backlash between the ring gear and pinion at the time of disassembly. When the axle is again assembled the ring gear and pinion must be set to this same amount of backlash.

**NOTE:** Parts are not available for any cone type Powr-Lok differential. If repair of these differentials is necessary, the complete unit must be replaced.

**NOTE:** The only lubricant specified for Powr-Lok differentials is Willys Powr-Lok Differential Oil, Part No. 94557, furnished in pint cans. Ordinary multipurpose gear lubricant must not be used.

### N-21. Powr-Lok Differential Overhaul

The procedure for overhauling disc type Powr-Lok differentials is as follows:

a. Remove the Powr-Lok differential case assembly from the axle. Do not remove the ring gear or bearing cones unless replacement is to be made. Mark the bearing cups so they may later be reassembled with the same bearing cones. Mark the differential

case halves for correct alignment at reassembly. Each pinion mate cross shaft should also be marked so that each pin cam surface will match with the same V-ramp in the case when reassembled.

b. Separate the case halves.

c. Remove clutch friction discs and plates. Care should be taken to see how the friction plates and friction discs and dished plates are assembled. The illustration (Fig. 293) shows the arrangement of plates and discs used for current production model Powr-Lok differentials. Earlier production differentials will have a different arrangement, and a different number, of plates and discs. If the plates and discs are not to be replaced, they will be reinstalled in their original arrangement. If the plates and discs are to be replaced, the new plates and discs will be installed with the arrangement shown in Fig. 293.

**IMPORTANT** — When installing a new plate and disc set (with dished plates) in a Model 25 differential which did not have dished plates as original equipment the  $\frac{1}{16}$ " dead plate must be removed (See Fig. 293). In such cases, if there is any indication of differential case wear, complete differential replacement rather than attempted repair is recommended.

d. Remove the pinion mate cross shafts, bevel pinion mate gears, bevel side gears and side gear rings.

e. Clean all parts thoroughly in kerosene and dry with compressed air. Inspect all parts and replace

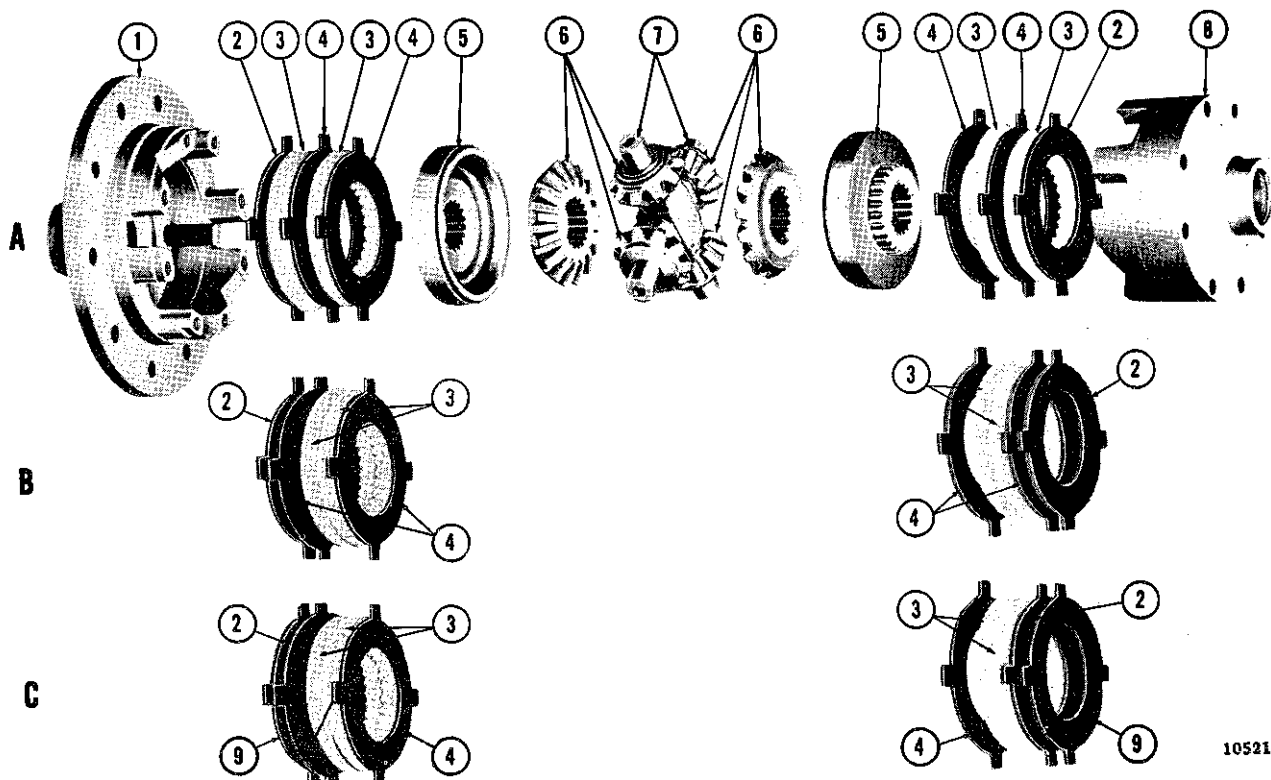


FIG. 293—POWR-LOK DIFFERENTIAL

A—Model 53 Axle  
B—Model 44 Axle  
C—Model 25 Axle  
1—Differential Case Flange Half

2—Differential Clutch Dished Plate  
3—Differential Clutch Friction Disc  
4—Differential Clutch Friction Plate  
5—Side Gear Differential Ring

6—Side Gear and Pinion Mate Gear Set  
7—Cross Pinion Mate Shaft  
8—Differential Case Bottom Half  
9—Differential Clutch  $\frac{1}{16}$ " Dead Plate

10521



any items which appear to be worn or damaged. Inspect the plate surfaces of the case halves, the side gear rings, and the clutch plates and discs for excessive wear and scoring. Inspect the pinion mate shaft V-surfaces, and the ramp surfaces, on the case for excessive wear and pitting. Inspect the side gear and pinion gear teeth. Inspect the pinion gear races that bear on the side gear rings. Inspect the corresponding surfaces on the side gear rings. Inspect the clutch plates and discs for cracks and distortion.

In the event one or more of the clutch plates or discs needs replacing, replace the entire stack of plates and discs on each side of the pinions. These stacks are supplied in sets. Each set contains plates and discs for one differential.

The differential case halves are not serviced. Should replacement be required it will be necessary to replace the complete differential.

**f.** Assemble the clutch friction plates, clutch friction discs, and dished plates, on the splined hub of each bevel side gear. Make sure the plates and discs are installed according to their original arrangement, or Fig. 293 if the new plate and disc set is used. The dished plates in the plate and disc set, are always assembled with the convex side toward the case. As each part is reassembled in its proper position, it is necessary that it be lightly coated with Willys "Powr-Lok" Differential Oil, Part No. 94557.

**g.** Hold each differential case half on its side, and install the side gear rings with the plates and discs assembled. The side gear ring will rotate with a slight drag when properly located in the case.

**h.** With the ring gear flange half of the differential case in an upright position, assemble the bevel side gears, pinion mate cross shafts, and bevel pinion mate gears. Install the remaining case half on the ring gear flange half. Make sure that all markings coincide.

**i.** Install the differential case bolts and turn them in a few threads. Using axle shafts from the vehicle, align the splines of the side gear and the side gear ring. With these axle shafts in position, tighten the differential case bolts evenly and adequately torque to 35 to 45 lb-ft. [4,84 a 6,22 kg-m.]. Remove the axle shafts.

**j.** Check for proper assembly. Each pinion mate cross shaft can be tight on its ramp or, in the event there is clearance between the cross shaft and the ramp, the clearance should be only a few thousandths of an inch and it should be equal to all four cross shaft ends.

**k.** Reinstall the unit in the axle. Other service operations, such as ring gear and pinion replacement, or pinion and bearing adjustments, are performed in the same manner prescribed earlier in this section.

## N-22. Trouble Shooting

## N-23. Trouble Shooting Powr-Lok

**NOTE:** Extreme care must be exercised, on a Powr-Lok equipped vehicle, to be sure the transmission is in the neutral position whenever the engine is started with one wheel jacked up. Other-

wise inertia forces in the wheel may actuate the differential causing the vehicle to lurch unexpectedly and fall off the jack.

If trouble is experienced with the operation of a Powr-Lok differential, one or more of three possible conditions probably exists. These conditions and their remedies are discussed in Par. N-24, N-27, N-28.

## N-24. Powr-Lok Torque Tests

Improper operation due to inadequate torque may be determined by two different tests. Test One is for Powr-Lok differentials known to have dished plates; Test Two is for any Powr-Lok differential, but Test One is recommended if the unit has dished plates. These tests are described in the following two paragraphs.

## N-25. Test One

For Powr-Lok Units with Dished Plates.

- Place the transmission in neutral.
- Raise one wheel off the floor and place a block in front and at the rear of the opposite wheel.
- Apply a torque wrench to the axle shaft nut of the elevated wheel.
- Turn wheel with torque wrench. Disregard breakaway torque and observe torque required to continuously turn wheel smoothly. Torque should read 40 lb-ft. [5,53 kg-m.] or more.
- Disc type differentials that do not pass this test should be overhauled as outlined in Par. N-21; cone type should be replaced.

## N-26. Test Two

For Any Powr-Lok Unit.

- Place vehicle on smooth level floor.
- Place transmission in neutral.
- Place a roller type floor jack under one wheel of the axle to be tested and raise that wheel off the floor.
- Tighten brake shoe on the raised wheel until it can barely be moved when the wheel is grasped with both hands and an attempt is made to turn it forward or backwards.
- Next, start engine and shift to low gear holding the clutch pedal down. With engine at idle or just above, engage the clutch easily, avoiding sudden engagement or jerk. If the Powr-Lok is operating properly, the vehicle should move forward, causing the jack to roll on the floor.
- Disc type differentials that do not pass this test should be overhauled as outlined in Par. N-21; cone type should be replaced.

## N-27. Powr-Lok Chatter

- Differential chatter is usually caused by use of the wrong lubricant in the axle differential. To eliminate the chatter, first drain the axle housing thoroughly of the old lubricant. It is necessary to rotate the wheels of the vehicle (by hand only), to allow the lubricant in the Powr-Lok unit itself to drain. Flush the differential, using a light engine oil as the flushing agent. Do not use solvent.
- Replace the drain plug. Refill with the correct



amount of Willys Powr-Lok Differential Oil, Part No. 94557.

c. In the event the above procedure is not effective after 200 miles of operation, overhaul disc type differentials, replace cone type.

#### N-28. Powr-Lok Backlash

Excessive lost motion, or backlash in the vehicle drive line, might be the result of excessive backlash in the transmission, propeller shaft spline, universal joint, ring gear and pinion, the axle shaft spline, or the differential.

The lost motion in the differential can be measured as follows:

- a. Jack up one rear wheel.
- b. Put the transmission in gear.
- c. Measure the travel of the jacked-up wheel on a 10" radius from the wheel center. This total movement should not exceed  $1\frac{1}{4}$ " in a new unit. In order to restrict the backlash to the axle only, make sure that the axle and yoke of the propeller shaft does not move during the check.
- d. If all causes of backlash mentioned above have been eliminated, with the exception of the differential, and differential backlash exceeds that given in subparagraph c, overhaul the disc type differential or replace the cone type.

#### N-29. Vehicle Vibrations

All F4-134 Models

See also Service Diagnosis in the Clutch Section for other possible causes.

In some instances, a secondary vibration or chatter will appear simultaneously with the one described under TROUBLE SHOOTING at the end of the Clutch Section. If this vibration is experienced after the clutch disc has been replaced as described there, proceed as follows to attempt correction.

- a. Drive the vehicle for approximately 20 miles [32 km.] to thoroughly heat the rear axle assembly. Before the axle can cool, raise the vehicle on a free-wheel grease lift or jack up the vehicle so that

both rear wheels are off the ground and install axle stands for safety.

b. Disconnect the propeller shaft at the rear universal joint and slowly turn the pinion shaft by turning the companion flange. If the pinion shaft does not turn freely and the motion does not feel perfectly smooth, the preload on the pinion bearings is at fault. There is either an insufficient shim pack under the front pinion bearing or the front pinion bearing cap is cocked. For correcting either condition, it will be necessary to remove the rear axle assembly from the vehicle.

c. To check the front pinion bearing cup for positive seating in the housing, insert a .0015" [0,0038 cm.] feeler gauge or piece of shim stock between the bottom of the cup and the seat in the housing. If the cup is squarely seated, it will not be possible to insert the feeler at any point. Pinion bearing cones and cups should be closely examined and replaced if streaking, brinelling, or other damage is evident.

d. If examination discloses that the front bearing cup is squarely seated in the housing, check the pinion bearing preload. The pinion shaft should have no end play and should turn with a slight drag (without grease seal installed) after the companion flange has been installed and securely tightened. Usually, the addition of a .003" [0,076 cm.] shim to the shim pack under the front pinion bearing brings the desired result.

#### N-30. Rear Wheel Noise

Looseness of the rear axle shaft nut on semifloating rear axles may produce a clicking or creaking noise. This noise is audible when the vehicle is just starting from a dead stop. The noise can usually be stopped by torquing the nut 150 to 175 lb-ft. [20,7 a 24,2 kg-m]. If the condition has continued for some time slight wear may have resulted allowing the noise to persist. In this case, coat the hub, key, and keyway with white lead and torque the nut as specified. If the noise persists after this treatment, replace the worn parts.

## SERVICE DIAGNOSIS

## SYMPTOMS

## PROBABLE REMEDY

**Axle Noisy on Pull and Coast**

Excessive Back Lash Bevel Gear and Pinion.....	Adjust
End Play Pinion Shaft.....	Adjust
Worn Pinion Shaft Bearing.....	Replace
Pinion Set Too Deep in Bevel Gear.....	Adjust
Pinion and Bevel Gear Too Tight.....	Adjust
Wrong Lubricant Being Used (Powr-Lok Differential).....	See "Differential Chatter" under "Trouble Shooting Powr-Lok" in this Section.

**Axle Noisy on Pull**

Pinion and Bevel Gear Improperly Adjusted.....	Adjust
Pinion Bearings Rough.....	Replace
Pinion Bearings Loose.....	Adjust

**Axle Noisy on Coast**

Excessive Backlash in Bevel Gear and Pinion.....	Adjust
End Play in Pinion Shaft.....	Adjust
Improper Tooth Contact.....	Adjust
Rough Bearings.....	Replace

**Backlash**

Worn Differential Pinion Gear Washers.....	Replace
Excessive Backlash in Bevel Gear and Pinion.....	Adjust
Worn Universal Joints.....	Replace

## REAR AXLE SPECIFICATIONS

MODEL:	L6-226 4WD	L6-226 4x4	L6-226 4x2	F4-134 4WD	F4-134 4x4	F4-134 4x2
<b>REAR AXLE:</b>						
Make.....	Spicer	Spicer	Spicer	Spicer	Spicer	Spicer
Model.....	53	44	44	53	44	44
Capacity.....	4500 lb. [2041 kg.]	3700 lb. [1678 kg.]	3700 lb. [1678 kg.]	4500 lb. [2041 kg.]	3700 lb. [1678 kg.]	3700 lb. [1678 kg.]
Description.....	Semifloating Hypoid Gears	Semifloating Hypoid Gears	Semifloating Hypoid Gears	Semifloating Hypoid Gears	Semifloating Hypoid Gears	Semifloating Hypoid Gears
Drive.....	Thru Springs	Thru Springs	Thru Springs	Thru Springs	Thru Springs	Thru Springs
Drive Pinion Offset.....	1.75" [44,45 mm.]	1.5" [38,1 mm.]	1.5" [38,1 mm.]	1.75" [44,45 mm.]	1.5" [38,1 mm.]	1.5" [38,1 mm.]
Differential Pinions.....	2	2	2	2	2	2
Gear Ratio:						
Standard.....	4.88 to 1	4.27 to 1	4.27 to 1	5.38 to 1	5.38 to 1	4.89 to 1
Optional.....	5.38 to 1	4.89 to 1	4.89 to 1	.....	.....	5.38 to 1
Optional.....	4.27 to 1	5.38 to 1	5.38 to 1	.....	.....	.....
Ring Gear:						
Pitch Diameter.....	9.25" [23,5 cm.]	8.5" [21,6 cm.]	8.5" [21,6 cm.]	9.25" [23,5 cm.]	8.5" [21,6 cm.]	8.5" [21,6 cm.]
Pinion Adjustment.....	.....	Shim	Shim	Shim	Shim	Shim
Pinion Bearing Adjustment.....	.....	Shim	Shim	Shim	Shim	Shim

## STEERING SYSTEM

## Contents

SUBJECT	PAR.
Connecting Rods.....	O-9, O-20
Front Wheel Alignment.....	O-11
Camber.....	O-15
Caster.....	O-16
Toe-In.....	O-12
Front Wheel Shimmy.....	O-19
Front Wheel Turning Angle.....	O-17
Tie Rod.....	O-10
Steering Gear.....	O-2
Adjustment.....	O-3
Installation.....	O-6
Overhaul.....	O-7
Removal.....	O-5
Steering Linkage.....	O-8
Steering Wheel Alignment.....	O-4

**O-1. GENERAL**

The steering system guides the vehicle through the steering gear and the steering linkage.

The stability and proper functioning of the steering system depends in a large measure upon correct alignment, and a definite procedure for inspection of the steering system is recommended. In so doing, nothing is overlooked and any trouble is ascertained in the shortest possible time. It is suggested that the following sequence be used:

- a. Equalize tire pressures and level vehicle.
- b. Inspect spindle pivot pins and wheel bearing looseness.
- c. Check wheel runout.
- d. Test wheel balance and bearing adjustment.
- e. Check for spring sag.
- f. Inspect brakes and shock absorbers.
- g. Check steering assembly and the steering connecting rods.
- h. Check caster.
- i. Check toe-in.
- j. Check toe-out on turns.
- k. Check camber.
- l. Check king pin inclination.
- m. Check tracking of front and rear wheels.
- n. Check frame alignment.

**O-2. STEERING GEAR**

The steering gear is a reducing gear which exchanges a relatively large amount of movement with a small force, applied by the driver to the wheel, for a much smaller amount of movement with greatly increased force, to swing the front wheels of the vehicle right or left for steering. The steering gear must be adjusted to provide free operation without excessive play in the steering wheel.

**O-3. Adjustment**

When adjusting a steering gear remove all loads from the unit by disconnecting the steering connecting rod (drag link) from the steering arm and

also loosen the instrument panel bracket and the steering gear to frame bolts to allow the steering post to correctly align itself. When retightening the  $\frac{7}{16}$ " [11,1 mm.] steering-gear-to-frame bolts, torque them to 45 to 55 lb.-ft. [6,22 a 7,6 kg.-m.]. Early production Model F4-134 4x2 vehicles were equipped with  $\frac{3}{8}$ " [9,5 mm.] bolts which should be torqued 30 to 40 lb.-ft. [4,15 a 5,5 kg.-m.].

Do not tighten the steering gear to dampen out steering trouble. Adjust the steering only to remove lost motion or play within the unit.

The cam and lever steering gear is illustrated in Fig. 294. It consists of a spiral cam, and a cross shaft and lever assembly with two lever studs. When the steering wheel is turned, the cam moves the studs, causing rotary movement of the cross shaft, which in turn causes angular movement of the steering arm.

Adjustment of the ball thrust bearings No. 31 to eliminate up and down play of the steering shaft is accomplished by removing shims which are installed between the steering gear housing and the upper cover. Before making this adjustment loosen the housing side cover adjusting screw No. 21 to free the pins in the cam groove. Loosen the housing cover to cut and remove a shim or more as required. Install the screws and tighten. Adjustment should be made to have a slight drag but allow the steering wheel to turn freely with thumb and forefinger lightly gripping the rim.

Shims installed for adjustment are .002", .003", and .010" (.0508, .0762 and .254 mm.) in thickness.

Adjustment of the tapered pins in the cam groove is accomplished by adjusting screw No. 21. Unlock the adjusting screw and turn it in until a very slight drag is felt through the mid-position when turning the steering wheel slowly from one extreme position to the other.

Backlash of the pins in the groove shows up as end play of lever shaft, also as backlash of steering arm.

The cam groove is purposely cut shallow in the straight ahead driving position for each pin. This

feature permits a close adjustment for normal straight ahead driving and provides precision steering and permits take up of backlash at this point after the wear occurs without causing a bind elsewhere. Always adjust within the high range through the mid-position of pin travel. Do not adjust off "straight ahead" position. Backlash in turned positions is not objectionable.

#### O-4. Steering Wheel Alignment

To properly position the steering wheel on the steering column with the front wheels in the straight-ahead position and the tapered pins of the steering shaft and lever positioned as close as possible to the high point of the cam groove, proceed as follows:

- a. Jack up the front of the vehicle. Use axle stands under the axle for safety.
- b. Turn the steering wheel as far to the right as possible.
- c. Turn the wheel from extreme right to extreme left. Count the total number of turns required to accomplish this movement.
- d. Turn the wheel back to the right half the total turns counted. The tapered pins should now be positioned on the high point of the cam groove.
- e. With the steering gear held in this position,

check to see if the cross bar of the steering wheel is in a straight-across position perpendicular to the center line of the vehicle. If it is not, while holding the center position of the gear, remove the steering wheel from the steering column. Position the steering wheel until the cross bar is perpendicular to the center line of the vehicle. Reinstall the steering wheel on the steering column.

#### O-5. Steering Gear Removal

It is necessary to pass the steering gear down through the floor pan.

- a. Remove the left front fender.
- b. On 4x2 models equipped with remote control, disconnect the remote control rods from the transmission control levers.
- c. Remove the horn button and steering wheel.
- d. Remove the steering post bracket at the instrument panel.
- e. On 4x2 models equipped with remote control, remove the gear shift lever.
- f. Remove the exhaust pipe from the manifold.
- g. Remove the steering column cover plate on the floor board.
- h. On 4x2 models equipped with remote control,

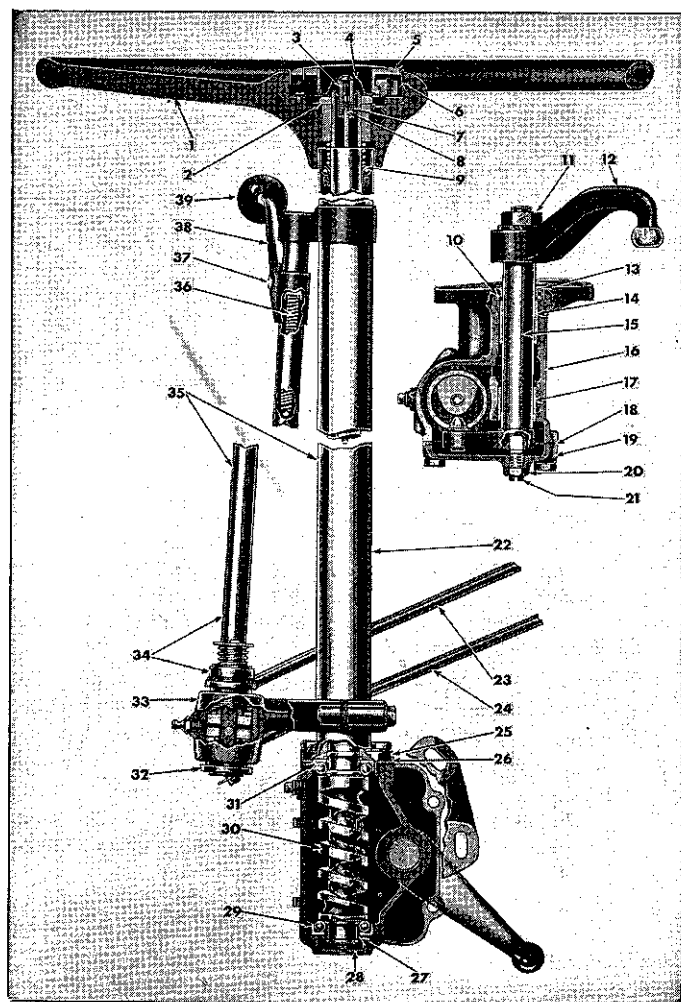


FIG. 294—STEERING GEAR

1. Steering Wheel
2. Steering Wheel Nut
3. Horn Button Ferrule
4. Contact Button Cup
5. Horn Button
6. Trim Ring
7. Horn Button Spring
8. Horn Button Spring Cup
9. Steering Column Bearing
10. Lever Shaft Oil Seal
11. Lever Shaft Nut
12. Steering Gear Arm
13. Lever Shaft Oil Seal Gasket
14. Outer Housing Bushing
15. Shaft and Lever
16. Steering Gear Housing
17. Inner Housing Bushing
18. Side Cover Gasket
19. Housing Side Cover
20. Adjusting Screw Lock Nut
21. Adjusting Screw
22. Steering Gear Column
23. Low and Reverse Remote Control Rod
24. High and Intermediate Remote Control Rod
25. Housing Upper Cover
26. Upper Cover Shim
27. Bearing Snap Ring
28. End Cover and Tube
29. Cam Bearing Ball
30. Steering Gear Tube and Cam
31. Cam Bearing Cup
32. High and Intermediate Lever with Clutch
33. Remote Control Bracket with Cap
34. Remote Control Shifting Shaft
35. Control Shaft with Column
36. Bias Spring
37. Control Lever Pin
38. Gear Shift Control Lever
39. Control Lever Ball

remove two screws attaching remote control housing to the steering column.

i. Disconnect the horn wire.

j. On 4x2 models equipped with remote control, lower the remote control assembly down through the floor.

k. Remove the steering connecting rod (drag link) from the steering gear arm ball.

l. Remove bolts attaching the steering gear housing to the frame.

m. Remove the steering gear assembly by bringing it down through the floor pan and over the outside of the frame side rail.

### O-6. Steering Gear Installation

Installation of the steering gear assembly is the reverse of the removal outlined above. Do not overlook adjustment of the remote control shift rod as outlined in the "Transmission" section.

### O-7. Steering Gear Overhaul

All models are equipped with the cam and lever, variable ratio type steering gear.

While the various models are slightly different in detail the following outline for dismantling and assembly may be followed:

a. Remove the steering gear arm (Fig. 294, No. 12) with a puller.

b. Loosen the lock nut and unscrew the adjusting screw (21) two turns.

c. Remove the side cover screws and washers. Remove the side cover (19) with its gasket.

d. Remove the lever shaft (15).

e. Remove the upper cover plate screws. Remove the cover (25), cam, and wheel tube and bearing assembly from the housing.

f. After dismantling as outlined above is completed, inspect cam grooves for wear, chipping and scoring, also the ball races on the cam ends and the separate ball cups. Existence of any of these con-

ditions indicates the necessity for parts replacement.

g. Inspect the tapered stud mounted on the lever shaft for flat spots and chipping. In the case of either, replacement is usually advisable. Inspect the lever shaft for wear and test the fit of the shaft in the bushings.

h. Inspect condition of the oil seal at outer end of lever shaft and the bearing at top end of steering column.

i. Reassemble all parts to wheel tube in reverse order of dismantling.

j. Assemble cam, wheel tube and bearing assembly in housing, seating the lower bearing ball cup in the housing.

k. With adjusting shims in place, assemble upper cover and adjust the cam bearings.

l. Assemble lever shaft in housing and with gasket in place assemble the side cover and set adjusting screw for a minimum backlash of the studs in the cam groove, with the steering gear at the center point of travel.

m. When assembling upper bearing spring and spring seat in jacket tube make sure that the spring seat is positioned correctly. It must be installed with the lengthwise flange down against the bearing and not up inside of spring coil.

n. Install steering gear assembly in chassis in the reverse order in which it was removed.

o. After installing the assembly in the vehicle, place the front wheels in the straight ahead position. Temporarily install the steering wheel to locate the mid-position of the steering gear. To locate the mid-position, turn the steering wheel as far to the right as possible and then turn in the opposite direction as far as possible, noting the total number of turns. Turn the wheel back just half of the total movement to place the gear in mid-position.

p. With the steering gear in mid-position and the wheels in the straight ahead position install steering gear arm on lever shaft.

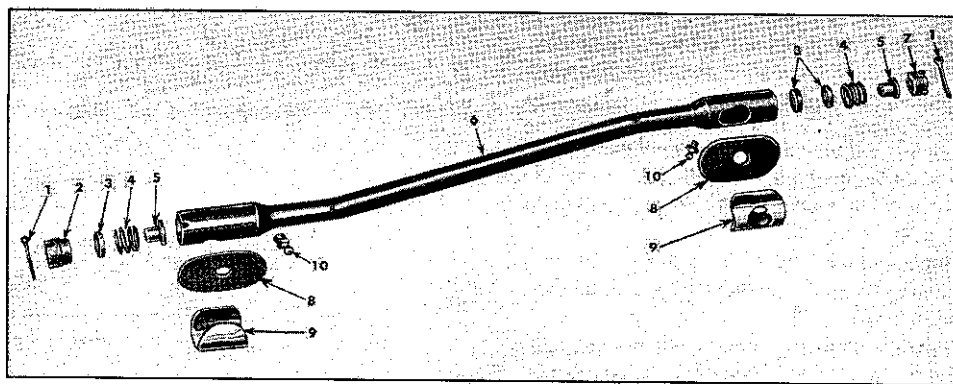


FIG. 295—STEERING CONNECTING ROD

1. Cotter Pin
2. Adjusting Plug
3. Ball Seat
4. Ball Seat Spring
5. Plug Spring

6. Connecting Rod
7. Adjusting Plug
8. Dust Cover
9. Dust Cover Shield
10. Lubricating Fitting

When the steering gear arm is installed on early production Model F4-134 vehicles, the line across the face of the arm and the end of the shaft should be in alignment. On later production F4-134 and all L6-226 vehicles, blind splines on the lever shaft and in the steering gear arm ensure correct positioning of the arm.

q. Remove the steering wheel without disturbing the mid-position of the steering gear. Reinstall it with the spokes positioned parallel with the vehicle floor.

r. Do not overlook adjustment of the transmission remote control shift rods as outlined in the "Transmission Section".

### O-8. STEERING LINKAGE

The steering linkage must maintain constant toe-in and good steering control under all driving conditions. This requires ball joints at each end of the tie rods and steering connecting rod. All joints in the steering linkage must be kept well lubricated for easy operation and long life. Should the joints be worn, allowing excessive free motion in the linkage, the joints must be replaced. Whenever ball joints are replaced, toe-in must be reset. Because some members of the steering system may have become bent or distorted, a periodic inspection should be made.

### O-9. Steering Connecting Rod

The steering connecting rod is of the ball and socket type. All ball seat springs and adjusting plugs are identical, the only difference between front and rear end being the relative location of the springs. The correct assembly of the steering connecting rod used on all models discussed here is shown in Fig. 295. At the front or axle end, the spring and spacer are assembled between the rod and ball seat, while at the steering gear end, spring and spacer are between the ball seat and the end plug. In the illustration the front end is to the left.

When removing springs and seats for any reason, make sure they are reassembled as shown in the illustration because this method of assembly relieves road shock from the steering gear in both directions. To adjust the ball joint, screw in the plug firmly against the ball, then back off one half turn and lock with a new cotter pin inserted through holes in the tube and the slot in the adjusting plug. To adjust the ball joint at the steering gear arm, screw in the end plug firmly against the ball, then back off one full turn and lock with a new cotter pin inserted through holes in the tube and the slot in the adjusting plug.

The above adjustments will give the proper spring tension and avoid any tightness when swinging the wheels from maximum left to right turn.

The ball joints must be tight enough to prevent end play and yet loose enough to allow free movement.

### O-10. Tie Rod

The tie rods are of three piece construction consisting of the rod and two ball and socket end assemblies. Ball and socket end assemblies are threaded into each rod and locked with clamps

around each end of the rod. Right and left hand threads on tie rod end assemblies provide toe-in adjustment without removing the tie rod ends from the steering arms.

A single tie rod connects the steering knuckle arms on all models except early production Model F4-134 4x2 vehicles.

The twin or divided type of tie rod used on early production F4-134 4x2 vehicles requires that each wheel be adjusted independently. See Fig. 251.

When wear takes place in the tie rod end ball and socket, it will be necessary to replace the ball and socket assembly and also the rubber seal.

### O-11. Front Wheel Alignment

Proper alignment of front wheels must be maintained in order to insure ease of steering and satisfactory tire life.

The most important factors of front wheel alignment are wheel camber, axle caster and wheel toe-in.

Wheel toe-in is the distance the wheels are closer together at the front than at the rear.

Wheel camber is the amount the wheels incline outward at the top from a vertical position.

Front axle caster is the amount in degrees that the steering pivot pins are tilted towards the front or rear of the vehicle. Positive caster is inclination of the top of the pivot pin towards the rear of the vehicle. Zero caster is the vertical position of the pivot pin. Negative or reverse caster is the inclination of the top of the pin towards the front of the vehicle.

These points should be checked at regular intervals, particularly when the front axle has been subjected to a heavy impact. When checking wheel alignment, it is important that wheel bearings and knuckle bearings be in proper adjustment. Loose bearings will affect instrument readings when checking the camber, pivot pin inclination and toe-in.

To accurately check camber and caster, use a wheel aligning fixture. Camber and caster of the front wheels are both preset. Camber cannot be altered but caster can be adjusted by installing caster shims between the axle pad and the springs. Wheel toe-in may be adjusted. To measure wheel toe-in,

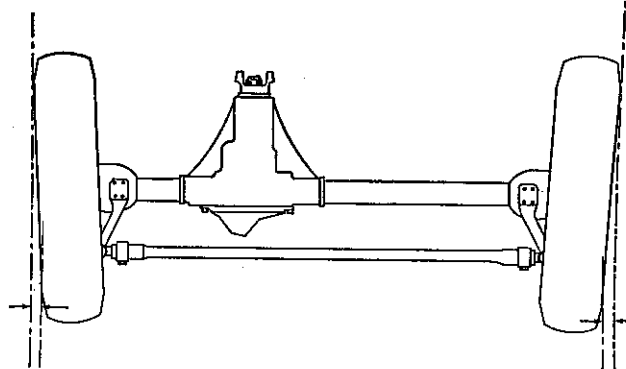


FIG. 296—FRONT WHEEL TOE-IN

use a wheel aligning fixture or follow the procedure given in Par. O-12.

### O-12. Front Wheel Toe-In

Toe-in as illustrated in Fig. 296 is necessary to offset the effect of camber as shown in Fig. 297.

In the absence of a wheel aligning fixture, toe-in may be set by measuring between the front wheels at the edge of the rim, at the flange or at the tire tread center. When making this adjustment the wheels must be in a straight ahead position.

It is highly important that toe-in be checked regularly and if found to be out of adjustment, correction should be made immediately.

On all vehicles equipped with the planar type front suspension, toe-in adjustment must be made at curb weight.

The correct toe-in of the various models is found in the specifications of this section.

### O-13. Toe-In Adjustment

All except early F4-134 4x2 vehicles.

To adjust the wheel toe-in of these models, first raise the front of the vehicle to free the front wheels. Turn the wheels to the straight ahead position. Use a steady-rest to scribe a pencil line in the center of each tire tread as the wheel is turned by hand. A good way to do this is to first coat a strip with chalk around the circumference of the tread at the center to form a base for a fine pencil line.

Measure the distance between the scribed lines at the front and rear of the wheels using care that both measurements are made at an equal distance from the floor. The distance between the lines should be greater at the rear than the front by the amount shown in the specifications. To make adjustment to obtain this distance loosen the clamp bolts and turn the tie rod with a small pipe wrench. The tie rod is threaded with right and left hand threads to provide equal adjustment at both wheels. Do not overlook retightening the clamp bolts.

It is common practice to measure between the wheel rims. This is satisfactory providing the wheels run true. By scribing a line on the tire tread, measurement is taken between the road to tire contact points which will reduce error due to wheel run-out.

### O-14. Toe-In Adjustment

Early F4-134 4x2 vehicles.

The toe-in of these models varies slightly in proportion to the vehicle load due to the independent front wheel suspension. The standard toe-in is correct for the vehicle at curb weight, which is the standard weight of the vehicle including fuel, oil, water and spare tire. Guard against setting toe-in when the vehicle is loaded.

To adjust, first jack up the front end of the vehicle to free the front wheels. Turn the steering wheel through its entire range of movement, counting the turns, after which reverse the wheel one-half the total turns. In this position the steering wheel spokes should set parallel to the windshield and the steer-

ing gear arm should be in the straight ahead position (steering gear in straight ahead driving position).

With the divided tie rod each wheel is adjusted independently which makes it necessary to first adjust both wheels to a true straight ahead position. Be sure that the steering gear arm points straight forward. If necessary loosen the tie rod adjusting sleeve clamps and adjust the sleeves to position the wheels.

Use chalk to coat a strip at the center of each tire tread for the entire circumference of the tread. Use a steady rest to hold a pencil against the exact tread center and scribe a line in the chalked surface around the tread by turning the wheel by hand. After scribing both tires remove the jack and roll the vehicle back and forth for a few feet to allow the front wheels to return to normal running position.

After positioning the wheels carefully measure between the scribed lines at the front and rear of the tires and at an equal distance from the floor to set the toe-in as specified. Correct adjustment will require approximately  $\frac{1}{4}$  turn of the adjusting sleeve of each tie rod. Tighten the adjusting sleeve clamp screws.

### O-15. Front Wheel Camber

The purpose of camber Fig. 297 is to more nearly place the weight of the vehicle over the tire contact on the road to facilitate ease of steering.

The result of excessive camber is irregular wear of tires on outside shoulders and is usually caused by bent axle parts.

The result of negative or reverse camber, if excessive, will be hard steering and possibly a wandering condition. Tires will also wear on inside shoulders. Negative camber is usually caused by excessive wear or looseness of front wheel bearings, axle parts or the result of a sagging axle.

Unequal camber may cause any or a combination of the following conditions: unstable steering, wandering, kick-back or road shock, shimmy or excessive tire wear. The cause of unequal camber is usually a bent steering knuckle or axle end.

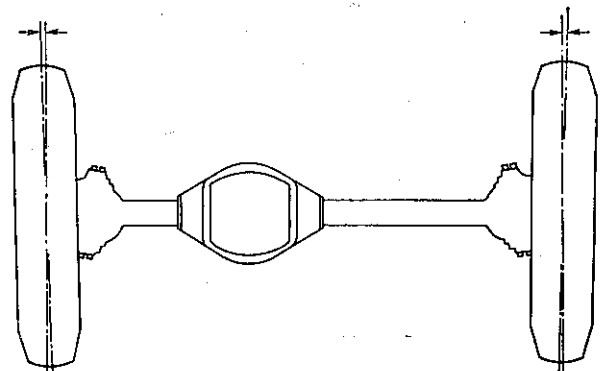


FIG. 297—WHEEL CAMBER

Correct wheel camber of all models excepting those equipped with planar type front suspension is set in the axle at the time of manufacture and cannot be altered by any adjustment. It is important that the camber be the same on both front wheels. Heating of any of these parts to facilitate straightening usually destroys the heat treatment given them at the factory. Cold bending may cause a fracture of the steel and is also unsafe. Replacement with new parts is recommended rather than any straightening of damaged parts.

On those models equipped with planar type front suspension the wheel camber is controlled by shim packs No. 37, Fig. 252, which are installed between the frame and the upper support arm frame brackets. Adjustment is through selection of the correct shim thickness. Shims .060" and .120" (1.524 mm. and 3.048 mm.) in thickness are available.

When adjustment is made the thickness of shim packs required for each wheel must be determined individually as one wheel of a vehicle may require more shims than the other, due to some variation in manufacture. Shim pack thickness between the frame and brackets on any one side of the vehicle must be of equal thickness. For additional information see Section M.

#### O-16. Axle Caster

Caster angle is established in the axle design by tilting the top of the kingpin toward the rear and the bottom of the kingpin forward so that an imaginary line through the center of the kingpin would strike the ground at a point ahead of the point of tire contact.

The purpose of caster Fig. 298 is to provide steering stability which will keep the front wheels in the straight ahead position also assist in straightening up the wheels when coming out of a turn. Caster of the front wheels is preset. If the angle of caster, when accurately measured, is found to be

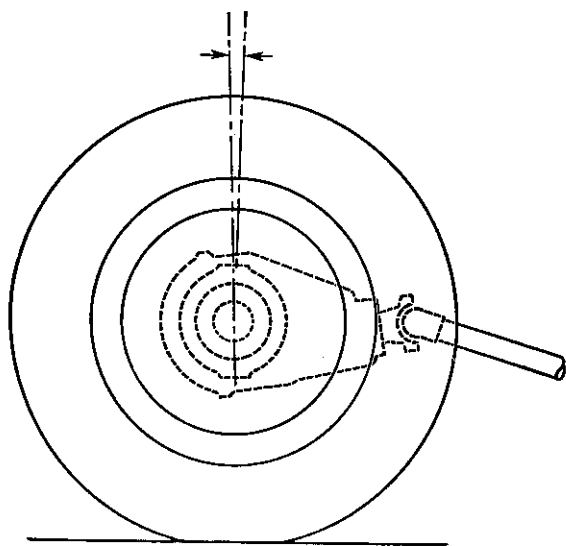


FIG. 298—AXLE CASTER

incorrect, correct it to the specification given at the end of this section by either installing new parts or installing caster shims between the axle pad and the springs.

If the camber and toe-in are correct and it is known that the axle is not twisted, a satisfactory check may be made by testing the vehicle on the road. Before road testing, make sure all tires are properly inflated, being particularly careful that both front tires are inflated to exactly the same pressure.

If vehicle turns easily to either side but is hard to straighten out, insufficient caster for easy handling of vehicle is indicated. If correction is necessary, it can usually be accomplished by installing shims between the springs and axle pads to secure the desired result.

#### O-17. Front Wheel Turning Angle

When the front wheels are turned, the inside wheel on the turn travels in a smaller circle than the outside wheel, therefore, it is necessary for the wheels to toe-out. This change in wheel alignment is obtained through the length and angularity of the steering knuckle arms in relation to the front axle. The left steering knuckle arm controls the relationship of the front wheels on a left turn and the right arm controls the relation on a right turn. Should a steering arm become bent, the entire housing must be replaced. It is not safe to straighten the knuckle arm.

#### O-18. TROUBLE SHOOTING

##### O-19 Front Wheel Shimmy

Wheel shimmy may be caused by various conditions in the wheels, axle or steering system, or a combination of these conditions. Outlined below will be found the usual corrections of this fault:

- a. Equalize tire pressures and see that they are according to specifications.
- b. Check the wheel bearings for looseness. Be sure that the inner wheel bearing race is not too loose on the spindle.
- c. Remove both steering knuckles and carefully inspect the upper and lower king pin bearings. Inspect the bearing cups for evidence of brinelling, pitting, or fretting. Any bearings that show the slightest imperfection must be replaced. Adjust the king pin bearings.  
Reassemble and lubricate the front axle and steering linkage, installing new steering knuckle oil seals if present seals show any wear.
- d. Check wheel run-out. This check should include radial run-out and wheel looseness on the hub.
- e. Test wheel balance—check for blowout patches, uniform tire tread, vulcanized tires, mud on inside of wheels, and tires creeping on the rims.
- f. Try switching front wheels and tires to the rear, criss-crossing them in this operation.
- g. Check for front spring sag. Also check for broken spring leaves, broken center spring bolt, loose spring clips (or tight clips), over lubrication of spring



leaves, spring shackle bracket loose on frame, and loose rear spring shackle. Be sure that the shock absorbers are operating properly to eliminate bobbing of the front end.

**h.** Check brakes to make sure that one does not drag.

**i.** Check the steering assembly and steering connecting rod. This includes the up and down play of the steering worm shaft, end play of the cross shaft, tightness of the steering gear in the frame, tightness of steering gear arm, adjustment of the steering connecting rod and condition of the steering tie rod ball joint ends. Adjust the steering connecting rod (drag link) to maximum safe tightness at both ends. Examine the steering bellcrank bearings, the shaft in the mounting bracket, and the mounting bracket on the frame cross member.

**j.** Check front axle caster. This should be the same on both sides, otherwise a locking brake may be indicated causing a twisting action of the axle. Correct caster is shown in specifications at the end of this section.

**k.** Check the front wheel toe-in. See Specifications.

**l.** Check wheel toe-out on turns. This gives you

an indication of the proper angularity of the steering knuckle arms and tells whether or not they have been bent and require replacing. These may be checked by comparing them with new parts. If an arm is bent, check for a bent tie rod.

**m.** Check wheel camber. This should be the same on both wheels as shown on the Specifications.

**n.** Check the king pin inclination. See Specifications.

**o.** Check the tracking of the front axle and frame alignment, which may be incorrect due to an accident.

## **O-20. Steering Connecting Rod Interference**

### **Early 4x2 models**

Interference between the steering connecting rod and steering arm may occur in some cases during an extreme right-hand turn. To check for this condition, have someone hold the steering wheel in a full-right turn and check for any contact between the connecting rod and steering arm. If such interference exists, the latest steering connecting rod should be installed as it has been redesigned to eliminate all possibility of interference.

## SERVICE DIAGNOSIS

## SYMPTOMS

## PROBABLE REMEDY

## Hard Steering

Lack of Lubrication.....  
 Tie Rod Ends Worn.....  
 Connecting Rod Ball Joints Tight.....  
 Cross Shaft Improperly Adjusted.....  
 Steering Gear Parts Worn.....

Lubricate All Connections  
 Replace  
 Adjust  
 Adjust  
 Replace

## Steering Loose

Tie Rod Ends Worn.....  
 Connecting Rod Ball Sockets Worn.....  
 Steering Gear Parts Worn.....  
 Steering Gear Improperly Adjusted.....

Replace  
 Replace  
 Replace  
 Adjust

## Road Shock

Steering Connecting Rod Too Tight; Axle Spring  
 Clip Loose; Wheel Bearings Loose; Poor Shock Ab-  
 sorber Control.

## Turning Radius

Short One Side.....

Center Bolt in Spring Sheered Off, Axle Shifted,  
 Steering Arm Bent, Steering Arm Not Properly  
 Located on Steering Gear.

## STEERING SPECIFICATIONS

		ALL MODELS				
Steering Gear:						
Make.....		Ross				
Type.....		Cam and Lever				
Model.....		TL-12				
Ratio (Variable).....		19-16.7-19 to 1				
Wheel.....		17" dia. [43,18 cm.]				
Bearings:						
Cam-Upper.....		Ball				
Cam-Lower.....		Ball				
Lever Shaft.....		Bushing				
Steering Column Upper.....		Ball				
Lever Shaft:						
Clearance to Bushing.....		.0005" to .0025" [0,0127 a 0,0635 mm.]				
End Play.....		.000"				
Lash at Cam (Straight ahead).....		Slight Drag				
Wheel Turns.....		3				
MODEL:	L6-226 4WD	L6-226 4x4	L6-226 4x2	F4-134 4WD	F4-134 4x4	F4-134 4x2
STEERING GEOMETRY:						
King Pin Inclination.....	7½°	7½°	7½°	7½°	7½°	7½°
Toe-in.....	¾" to ½" [1,183 a 2,381 mm.]	¾" to ½" [1,183 a 2,381 mm.]	¾" to ½" [1,183 a 2,381 mm.]	¾" to ½" [1,183 a 2,381 mm.]	¾" to ½" [1,183 a 2,381 mm.]	¾" to ½" [1,183 a 2,381 mm.]
Camber.....	1½°	1½°	1°	1½°	1½°	1°
Caster.....	3°	3°	3°	3°	3°	3°
Turning Radius.....	24' [7,3 m.]	24' [7,3 m.]	22' [6,7 m.]	25' [7,6 m.]	25' [7,6 m.]	22' [6,7 m.]
Turning Angle.....	29°	29°	29°	29°	29°	29°
Outside Wheel Angle with Inside Wheel at 20°.....	20°	20°	21° 45'	20°	20°	21° 45'

## BRAKES

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Hand Brake.....	P-7	Pedal Adjustment.....	P-5
Adjustment.....	P-9	Wheel Cylinder.....	P-12
Lever Adjustment.....	P-8	Rattles in Brakes.....	P-16
Hydraulic Brakes.....	P-2	Relining Brakes.....	P-10
Bleeding.....	P-4	Shoe Adjustment.....	P-6
Master Cylinder.....	P-11	Squeaky Brakes.....	P-15

## P-1. GENERAL

All models discussed here are equipped with the hydraulic type brakes. The hydraulic system on all models is similar. As a general example of this installation the Model F4-134 4WD system is illustrated in Fig. 299.

## P-2. Hydraulic Brakes

In order to thoroughly understand the operation of the hydraulic brake system, it is necessary to have a good knowledge of the various parts and their function, and to know what takes place throughout the system during the application and the release of the brakes.

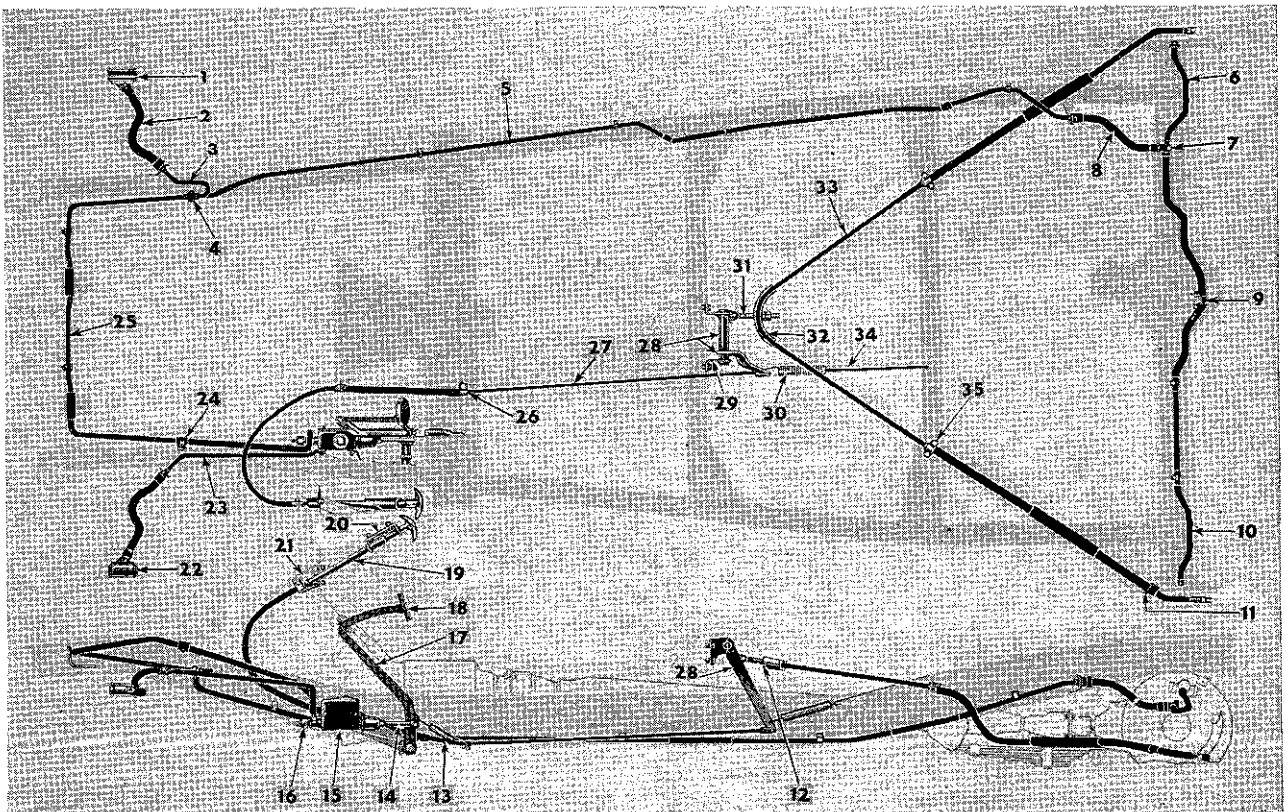


FIG. 299—BRAKE SYSTEM—MODEL F4-134 4WD

- |                               |                              |
|-------------------------------|------------------------------|
| 1—Right Front Brake Cylinder  | 19—Hand Brake Ratchet Tube   |
| 2—Front Brake Hose            | 20—Tube Bracket              |
| 3—Right Front Brake Tube      | 21—Conduit Bracket           |
| 4—Front Brake Tube Tee        | 22—Left Front Brake Cylinder |
| 5—Right Brake Tube            | 23—Left Front Brake Tube     |
| 6—Right Rear Brake Tube       | 24—Tube Clip                 |
| 7—Rear Axle Tee               | 25—Brake Tube                |
| 8—Brake Hose                  | 26—Conduit Clamp             |
| 9—Clip                        | 27—Hand Brake Cable          |
| 10—Left Rear Brake Tube       | 28—Hand Brake Lever          |
| 11—Spring Yoke (473-4WD only) | 29—Left Lever Bracket        |
| 12—Adjusting Rod Block        | 30—Retracting Spring         |
| 13—Pedal Retracting Spring    | 31—Adjusting Rod             |
| 14—Master Cylinder Eye Bolt   | 32—Hand Brake Equalizer      |
| 15—Master Cylinder            | 33—Rear Cable                |
| 16—Stop Light Switch          | 34—Retracting Spring Rod     |
| 17—Brake Pedal                | 35—Frame Clamp               |
| 18—Pedal Pad                  |                              |

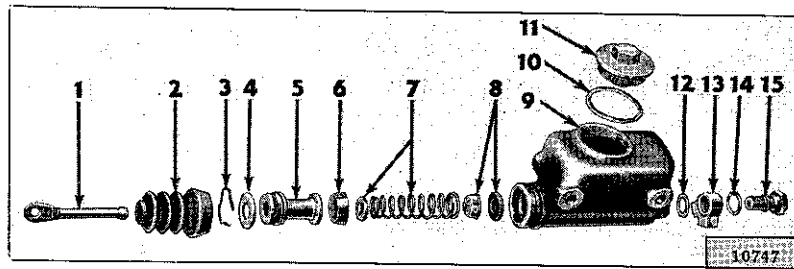


FIG. 300—MASTER BRAKE CYLINDER

- 1—Push Rod
- 2—Boot
- 3—Piston Stop Lock Wire
- 4—Stop Plate
- 5—Piston

- 6—Master Cylinder Cup
- 7—Valve Spring Assembly
- 8—Valve Seat
- 9—Supply Tank
- 10—Filler Cap Gasket

- 11—Filler Cap
- 12—Outlet Fitting Gasket
- 13—Outlet Fitting
- 14—Outlet Fitting Bolt Gasket
- 15—Outlet Fitting Bolt

The piston in the master cylinder, Fig. 300 and Fig. 301 receives mechanical pressure from the brake pedal and exerts pressure on the fluid in the lines, building up hydraulic pressure which moves the wheel cylinder pistons. The master cylinder primary cup No. 6 is held against the piston by the piston return spring which also holds the check valve against the seat.

The spring maintains a slight fluid pressure in the lines and in the wheel cylinders to prevent the possible entrance of air into the system. The secondary cup which is secured at the opposite end of the piston, prevents the leakage of fluid into the rubber boot. The holes in the piston head are for the purpose of allowing the fluid to flow from the space in back of the piston into the space between the primary cup and the check valve, keeping sufficient fluid in the lines at all times. The holes in the check valve case allow the fluid to flow through the case, around the lips of the rubber valve cup and out into the lines during the brake application. When the brakes are released, the valve is forced off the seat permitting the fluid to return to the master cylinder. The piston assembly is held in the opposite end of the housing by means of a lock wire (retainer spring). The rubber boot that fits around the push rod and over the end of the housing prevents dirt or any foreign matter from entering the master cylinder.

The wheel cylinder, Fig. 302, and Fig. 303, is a double piston cylinder, the purpose of the two pistons being to distribute the pressure evenly to each of the two brake shoes. Rubber piston cups on the pistons prevent the leakage of fluid. The rubber boots over the end of the cylinder prevent dust and dirt or foreign material from entering the cylinder. When pressure is applied to the brake pedal, the master cylinder forces fluid through the lines and into the wheel cylinders. The pressure forces the pistons in the wheel cylinders outward, expanding the brake shoes against the drums. As the pedal is further depressed, higher pressure is built up within the hydraulic system, causing the brake shoes to exert a greater force against the brake drums.

As the brake pedal is released, the hydraulic pressure is released and the brake shoe return spring draws the shoes together, pushing the wheel cylin-

der pistons inward and forcing the fluid out of the cylinders, back into the lines toward the master cylinder. The piston return spring in the master cylinder returns the piston to the piston stop faster than the brake fluid is forced back into the master cylinder, which creates a slight vacuum on the head of the piston. The vacuum causes a small amount of fluid to flow through the holes of the piston head, past the lip of the primary cup and into the forward part of the cylinder. This action keeps the cylinder filled with fluid at all times, ready for the next brake application. As fluid is drawn from the space behind the piston head it is replenished from the reservoir through the intake port. When the piston is in fully released position the primary cup clears the by-pass port, allowing the excess fluid to flow from the cylinder into the reservoir as the brake shoe retracting springs in all cylinders continue to force the fluid back into the master cylinder.

### P-3. Brake Service

To service the brakes, follow the procedure below:

- a. Check the fluid level in the brake master cylinder. See Lubrication Section B.
- b. Check brake pedal adjustment. See Par. P-5.
- c. Check brake pedal travel. If the pedal travels more than halfway to the floor, the brakes may need adjusting to compensate for lining wear or they may need relining. How much lining is left can only be determined by a visual lining inspection. See Par. P-6 for brake adjustment; Par. P-11 for relining brakes.
- d. If the brakes pull to one side after adjustment, check tire pressures. All tires must be inflated to recommended pressures to ensure even braking. If the condition persists, examine the brake linings for foreign material and clean as necessary. If cleaning does not correct the condition the linings should be replaced. If the side pull persists, check front wheel alignment and balance.
- e. Check the brake system for leaks by applying a steady pressure on the brake pedal. A leak in the system will allow the pedal to "fall away". If the pedal "falls away" check for a leaking wheel cylinder. Remove wheels and drums and carefully check each cylinder. Also examine all lines and fittings. Rebuild or replace all wheel cylinders (Par. P-12)

if one is defective as they are all probably in poor condition. If the leak has allowed brake fluid to get on the linings, the linings will have to be replaced.

**f.** A "spongy" brake pedal indicates the pressure of air in the hydraulic system. This condition must be corrected by bleeding the brakes. See Par. P-4.

**g.** Should the brakes become locked so that the vehicle cannot be moved, the brakes may be released by opening the bleeder screw on any one of the wheel cylinders. Before the vehicle is driven, correct the cause of the condition. The cause may be either a defective master cylinder or the use of low grade brake fluid which has expanded because of heat.

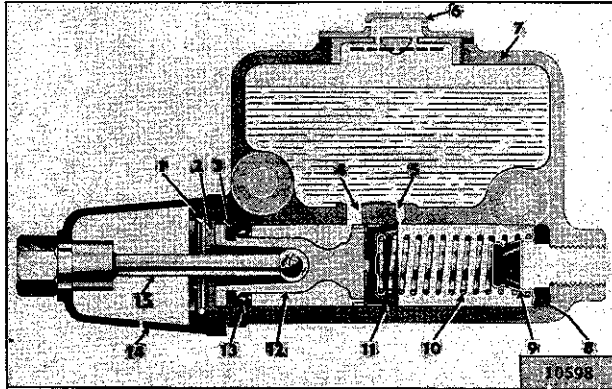


FIG. 301—BRAKE MASTER CYLINDER

- |                   |                  |
|-------------------|------------------|
| 1—Retainer Spring | 9—Check Valve    |
| 2—Piston Stop     | 10—Return Spring |
| 3—Cup Ring        | 11—Primary Cup   |
| 4—Intake Port     | 12—Piston        |
| 5—By-Pass Port    | 13—Secondary Cup |
| 6—Fill Cap        | 14—Boot          |
| 7—Supply Tank     | 15—Link          |
| 8—Valve Seat      |                  |

#### P-4. Bleeding Brakes

The hydraulic brake system must be bled whenever a fluid line has been disconnected or air gets into the system. A leak in the system may sometimes be indicated by the presence of a spongy brake pedal. Air trapped in the system is compressible and does not permit the pressure applied to the brake pedal, to be transmitted solidly through to

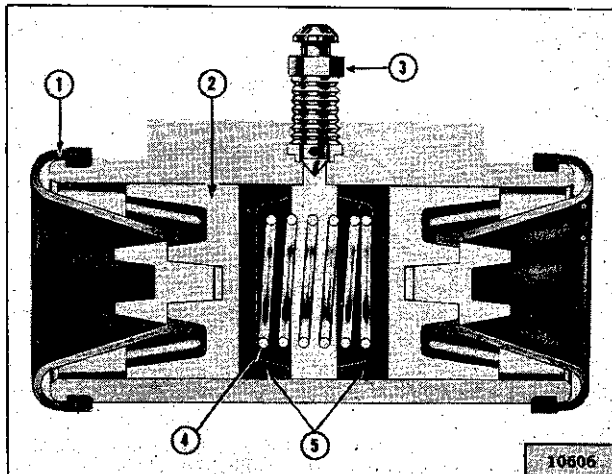


FIG. 302—WHEEL BRAKE CYLINDER

- |                 |                |
|-----------------|----------------|
| 1—Cylinder Boot | 4—Cup Spring   |
| 2—Piston        | 5—Cylinder Cup |
| 3—Bleeder Screw |                |

the brakes. The system must be absolutely free from air at all times. When bleeding brakes, bleed at that wheel with the longest line from the master cylinder first, the next longest second, etc. During the bleeding operation the master cylinder must be kept at least  $\frac{3}{4}$  full of hydraulic brake fluid.

To bleed the brakes, first carefully clean all dirt from around the master cylinder filler plug. Remove the filler plug and fill the master cylinder to the lower edge of filler neck. Clean off all bleeder connections at all four wheel cylinders. Attach bleeder hose and fixture to right rear wheel cylinder bleeder screw and place end of tube in a glass jar, and submerged in brake fluid. Open the bleeder valve one-half to three-quarters of a turn. See Fig. 304.

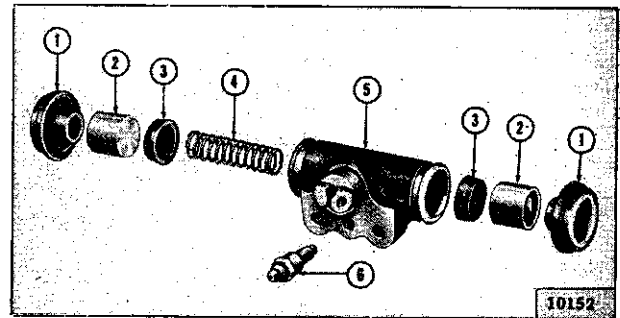


FIG. 303—BRAKE WHEEL CYLINDER

- |                |                 |
|----------------|-----------------|
| 1—Boot         | 4—Cup Spring    |
| 2—Piston       | 5—Cylinder      |
| 3—Cylinder Cup | 6—Bleeder Screw |

Depress the foot pedal, allowing it to return very slowly. Continue this pumping action to force the fluid through the line and out of the bleeder hose which carries with it any air in the system. When bubbles cease to appear at the end of the bleeder hose, close the bleeder valve and remove the hose. After the bleeding operation at each wheel cylinder has been completed, fill the master cylinder reservoir and replace the filler plug.

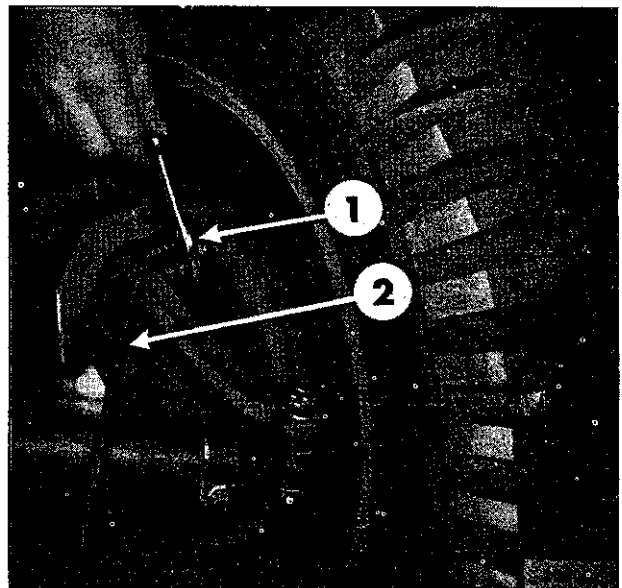


FIG. 304—BLEEDING BRAKES

- |                 |                |
|-----------------|----------------|
| 1—Bleeder Screw | 2—Bleeder Hose |
|-----------------|----------------|

Do not re-use the liquid which has been removed from the lines through the bleeding process because of air bubbles and dirt.

### P-5. Brake Pedal Adjustment

There should always be at least  $\frac{1}{2}$ " (12.7 mm.) free pedal travel before the push rod engages the master cylinder piston.

This adjustment is accomplished by shortening or lengthening of the brake master cylinder eye bolt No. 14, Fig. 299. This is done so the primary cup will clear the by-pass port when the piston is in the off position, otherwise the compensating action of the master cylinder for expansion and contraction of the fluid in the system, due to temperature changes, will be destroyed and cause the brakes to drag.

### P-6. Brake Adjustment

The brakes used on these models are of the two shoe self-centralizing type without brake anchor adjustments.

To adjust this type of brake, first jack up all four wheels. Be sure that the brake pedal has approximately  $\frac{1}{2}$ " (12.7 mm.) free travel without moving the master cylinder piston. Centralize the brake shoes in the drums by making a hard brake application and releasing the pedal. At each left front and left rear wheel turn the forward shoe adjusting cam clockwise until the shoe is tight against the drum, see Fig. 305. Turn the cam in the opposite direction until the wheel rotates freely without brake drag. At each right front and right rear wheel turn the forward shoe adjusting cam counter-clockwise until the shoe is tight against the drum and then turn the cam in the opposite direction until the wheel rotates freely without drag.

Repeat this procedure for the reverse or rear brake shoes, but on the left wheels turn the rear adjusting cams counter-clockwise to tighten and on the right wheels turn the rear adjusting cams clockwise to tighten.

### P-7. Hand Brake

On all models the rear brake shoes are operated through cables and conduits to form the hand or parking brake.

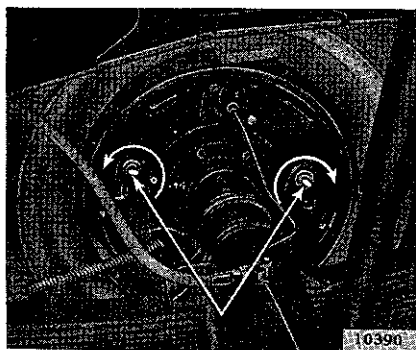


FIG. 305—BRAKE ADJUSTMENTS

### P-8. Hand Brake Lever Adjustment

Later production vehicles have a different hand brake lever. This latest lever can be identified by appearance and is shown in Fig. 306. The operator can adjust this lever.

The hand brake is either fully on or fully off, never part way on. It affords increased mechanical leverage and is adjustable for the amount of tension applied to the hand brake cable.

To set the hand brake, first set the foot brakes and then pull the hand brake lever up to a horizontal position. To release the hand brake, push the lever down to the vertical position.

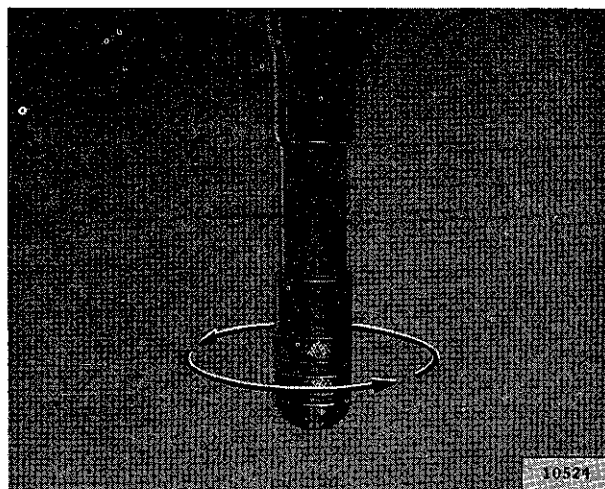


FIG. 306—HAND BRAKE LEVER

The tension which is applied can be changed by rotating the knurled knob at the end of the handle. A counterclockwise rotation (as viewed from above) as indicated by the arrows increases the tension applied. Rotating the knob in the opposite direction will decrease the applied tension.

This adjustment does not eliminate or change the requirement for periodic wheel brake adjustment.

### P-9. Hand Brake Adjustment

The foot brakes must be satisfactorily adjusted before attempting adjustment of the hand brake.

To adjust the hand brake raise both rear wheels free of the floor. Pull up three notches on the hand brake lever and tighten the adjustment until the rear brakes drag slightly. Release the hand brake lever and check the rear wheels for drag. The wheels must turn freely with the lever released.

All models are equipped with the brake cable equalizer and adjusting rod located directly back of the frame center cross member, No. 31, Fig. 299.

### P-10. Relining Wheel Brakes

When necessary to reline the brakes, the vehicle should be raised so that all four wheels are free.

Remove the wheels and the hubs and drums which will give access to the brake shoes. Install wheel cylinder clamps or keepers to retain the wheel cylinder pistons in place and prevent leakage of brake fluid while replacing the shoes. Turn all eccentrics to the lowest side of the cam and then remove the brake shoe return springs.

Brake shoes may be distorted by improper lining installation and linings should be ground true after installation on the shoes. For this reason it is recommended that new or replacement shoe and lining assemblies be installed.

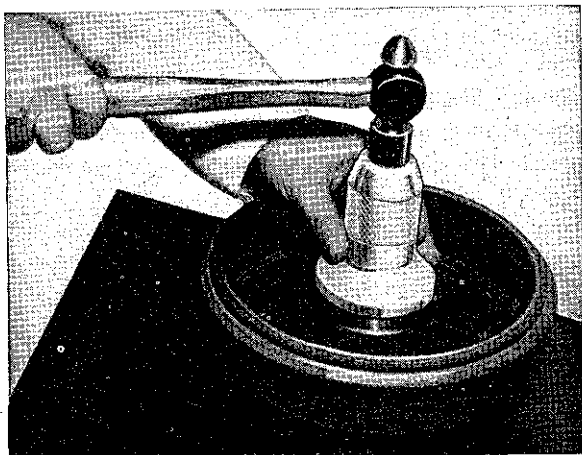


FIG. 307—WHEEL HUB OIL SEAL DRIVER

Inspect the oil seals in the wheel hubs. If the condition of any oil seal is doubtful, replace it. Install the oil seal with an oil seal driver as shown in Fig. 307.

Install the brake shoes on the brake backing plates and remove the wheel cylinder clamps.

**NOTE:** On some vehicles, the lining on the forward shoe is longer than the lining on the reverse shoe.

Install the eccentrics and the brake shoe retaining springs.

Should a brake drum be rough and scored, it may be reconditioned by grinding or turning in a lathe. Do not remove more than .030" [.762 mm.] thickness of metal (.060" [1.52 mm.] overall diameter). If a drum is reconditioned in this manner, either the correct oversize lining (.030" [.762 mm.] oversize linings supplied by Factory) must be installed or a shim equal in thickness to the metal removed must be placed between the lining and shoe so that the arc of the lining will be the same as that of the drum. Install the hubs and drums and make a major adjustment of the brakes.

If it is found when wheels are removed that there is brake fluid leakage at any of the wheel cylinders, it will be necessary to recondition that wheel cylinder and bleed the brake lines. This subject is covered under the heading, "Wheel Cylinders."

Whenever the brake lining is renewed in one front or one rear wheel be sure to perform the same operation in the opposite front or rear wheel, using the same brake lining as to color and part number, otherwise unequal brake action will result.

### P-11. Hydraulic Brake Master Cylinder

Should it be necessary to recondition the master cylinder, the method of removal is obvious.

After the master cylinder Fig. 300 has been removed it should be dismantled and thoroughly washed in alcohol. Never wash any part of the hydraulic braking system with gasoline or kerosene. After the parts have all been thoroughly cleaned with alcohol, make a careful inspection, renewing those parts which show signs of being deteriorated. Inspect the cylinder bore and if found to be rough it should be honed out or a new cylinder installed.

The clearance between the piston and the cylinder bore should be .001" to .005" (.025 to .127 mm.). Clean out the cylinder with alcohol and with a wire passed through the ports that open from the supply reservoir into the cylinder bore, make sure that these passages are free and clear of any foreign matter. It is our recommendation that a new piston, primary cup, valve and valve seat be installed when rebuilding the master cylinder.

Install the valve seat in the end of the cylinder with the flat surface toward the valve. Install the valve assembly. Install return spring and primary cup. The flat side of the cup goes toward the piston. Install piston, stop plate, and lock wire (retainer spring). Install fitting connection with new gasket. Fill reservoir half full of brake fluid (see Par. B-29) and operate the piston with the piston rod until fluid is ejected at fitting. Install the master cylinder to the frame and fill to a level  $\frac{1}{2}$ " [1.3 cm.] below the top of the fill hole. Make the necessary connections and adjust pedal clearance to  $\frac{1}{2}$ " [1.3 cm.] free play.

Bleed the brake lines as instructed in Par. P-4.

Recheck the entire hydraulic brake system to make sure there are no leaks.

### P-12. Wheel Cylinder

Some vehicles are equipped with 1" [25 mm.] diameter front wheel brake cylinders, others with  $1\frac{1}{8}$ " [29 mm.] diameter cylinders. Both front wheel cylinders and both rear wheel cylinders must have the same diameter or unequal braking will result. Make sure a replacement brake cylinder has the same part number as the original cylinder.

To remove a wheel cylinder jack up the vehicle and remove the wheel, hub and drum. Disconnect the brake line at the fitting on the brake backing plate. Remove the brake shoe return spring which allows the brake shoes at the toe, to fall clear of the brake cylinder. Remove two screws holding wheel cylinder to the backing plate.

Remove the rubber dust covers on ends of cylinder and then the piston and piston cups and the spring. See Fig. 303.

Wash the parts in clean alcohol. Examine the cylinder bore for roughness or scoring. Check fit of pistons to cylinder bore by using a .002" (.051 mm.) feeler gauge. When reassembling the cylinder, dip springs, pistons and piston cups in brake fluid. Install spring in center of the wheel cylinder. Install piston cups with the cupped surface towards the spring so that the flat surface will be against the piston. Install pistons and dust covers. Install wheel cylinder to the backing plate, connect brake line and install brake shoe return spring. Replace wheel, hub and drum, then bleed the lines as instructed under heading, "Bleeding Brakes". Adjust brakes if required.

### P-13. Care of Brakes

No brake can be expected to work well when grease or oil is allowed to leak into the drum from the rear axle. Little breaking friction can be obtained be-

tween brakes and drums when the surface is covered with oil and grease.

Care should be exercised to see that excessive amounts of lubricants are not put into the front hubs or the rear axle bearings or differential. Keep the grease retainers in good condition.

Whenever wheels are removed, it is advisable to wash off the drums with a suitable solvent so that all grease and dirt are removed. Should there be a quantity of grease on the linings, this can also be washed off with solvent, however, should the linings be thoroughly saturated with grease, there is nothing that can be done except to replace the lining.

#### **P-14. TROUBLE SHOOTING**

##### **P-15. Squeaky Brakes**

In most cases, squeaks are entirely eliminated by correct adjustment of the brakes. Squeaks may be caused however, by glazed linings, lining wore thin to the point of exposed rivets or by vibration. A drum will not vibrate when the brake is securing

uniform contact over the entire lining surface, except when due to improper conditions such as the linings becoming glazed. Glazed surface of the brake linings may be removed by a stiff wire brush.

Occasionally squeaks are caused by roughened surface of the drum, which can usually be remedied by rubbing down with emery cloth and by wiping the brakings surface clean. In extreme cases it may be necessary to reface the drum in a lathe. Should this be done, do not remove a metal thickness greater than .030" (.762 mm.)—.060" (1.52 mm.) overall diameter.

##### **P-16. Rattles in Brakes**

See that the tension of the springs in the brakes and attached to the control system are sufficient to return brakes and brake mechanism to their normal position. Return springs are so placed that they keep all slack out of the control system by tension on all joints.

Brakes will not rattle inside the drum if the springs holding the shoes are kept at the proper tension.



## SERVICE DIAGNOSIS

SYMPTOMS	PROBABLE REMEDY
<b>Brakes Drag</b>	
Brake Shoes Improperly Adjusted.....	Readjust
Piston Cups—Enlarged.....	Flush All Lines with Alcohol—Install New Cups in
Mineral Oil or Improper Brake Fluid in System.....	Wheel and Master Cylinders
Improper Pedal Adjustment.....	Adjust Master Cylinder Rod
Clogged Master Cylinder Compensating Port..	Clean Master Cylinder
<b>One Brake Drags</b>	
Brake Shoe Adjustment Incorrect.....	Adjust
Brake Hose Clogged.....	Replace
Return Spring Broken.....	Replace
Wheel Cylinder Piston or Cups Defective.....	Replace
Loose or Damaged Wheel Bearings.....	Adjust or Replace
<b>Brake Grabs—Car Pulls to One Side</b>	
Brake Anchor Pin Adjustment Incorrect.....	Adjust
Grease or Brake Fluid on Lining.....	Replace Lining
Dirt Between Lining and Drum.....	Clean With Wire Brush
Drum Scored or Rough.....	Turn Drum and Replace Lining—Shim Lining
Loose Wheel Bearings.....	Adjust
Axle Spring Clips Loose.....	Tighten
Brake Backing Plate Loose.....	Tighten
Brake Lining.....	Different Kinds on Opposite Wheels
Brake Shoe Reversed.....	Forward and Reverse Shoes Reversed in One Wheel
Tires Under-Inflated.....	Inflate
Tires Worn Unequally.....	Replace or Change Around to Opposite Wheels
Glazed or Worn Lining.....	Replace Linings
Restricted Brake Line.....	Locate and Repair
<b>Excessive Pedal Travel</b>	
Normal Lining Wear.....	Adjust
Lining Worn Out.....	Replace
Leak in Brake Line.....	Locate and Repair
Scored Brake Drums.....	Replace or Regrind—Shim Lining
Incorrect Brake Lining.....	Replace
Air in Hydraulic System.....	Fill Master Cylinder and Bleed Lines
<b>Spongy Brake Pedal</b>	
Air in Lines.....	Bleed Lines
Brake Shoe Adjustment Incorrect.....	Adjust
Insufficient Brake Fluid.....	Fill Master Cylinder
<b>Excessive Pedal Pressure</b>	
Grease or Brake Fluid in Lining.....	Replace Lining
Shoes Improperly Adjusted.....	Major Adjustment
Warped Brake Shoes.....	Replace
Distorted Brake Drums.....	Replace or Regrind—Shim Lining
Glazed or Worn Lining.....	Replace Linings
Restricted Brake Line.....	Locate and Repair
Faulty Brake Cylinder.....	Repair or Replace
Insufficient Brake Fluid.....	Fill Master Cylinder
<b>Squeaky Brakes</b>	
Brake Shoes Warped or Drums Distorted.....	Replace
Lining Loose.....	Replace
Dirt Imbedded in Lining.....	Clean With Wire Brush or Replace
Improper Adjustment.....	Adjust
Oil or Grease on Lining.....	Replace Linings
Glazed or Worn Lining.....	Replace Linings
Drum Scored.....	Turn Drum and Replace Linings

## BRAKE SPECIFICATIONS

BRAKES:	ALL MODELS
Type.....	Hydraulic Internal Expansion Non-Servo Floating Shoe
Effective Area.....	161.16 sq. in. [1039 cm <sup>2</sup> ]
Total Area.....	176.2 sq. in. [1150 cm <sup>2</sup> ]
Drum Diameter:	
Front.....	11" [27,9 cm.]
Rear.....	11" [27,9 cm.]
Shoe Lining.....	Molded Asbestos Riveted
Lining Size:	
Front Shoe:	
Front Wheel.....	12.25 x 2 x .212 [25,48 cm. x 5,08 cm. x 5,38 mm.]
Rear Wheel.....	12.25 x 2 x .212 [25,48 cm. x 5,08 cm. x 5,38 mm.]
Rear Shoe:	
Front Wheel.....	10.03 x 2 x .212 [25,48 cm. x 5,08 cm. x 5,38 mm.]
Rear Wheel.....	10.03 x 2 x .212 [25,48 cm. x 5,08 cm. x 5,38 mm.]
Wheel Cylinder Bore:	
Front.....	1 1/8" [2,85 cm.]
Rear.....	1" [2,54 cm.]
Master Cylinder Bore.....	1" [2,54 cm.]
Available Pedal Travel.....	7" [17,7 cm.]
Pedal Free Travel.....	1/2" [1,27 cm.]
Line Pressure @ 100 lb. [45 kg.]	
Pedal Load.....	550 psi. [38,6 kg.-cm <sup>2</sup> ]
Parking Brakes.....	Hand Lever and Cable
Location.....	Left of Steering Column
Operation.....	Rear Service Brakes

## WHEELS

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Bearing Maintenance.....	Q-8	Front Wheel Bearings.....	Q-3
Brake Drums.....	Q-9	Adjustment — 4-wheel-drive.....	Q-4
Captive Air Tires.....	Q-14	Adjustment — 2-wheel-drive.....	Q-5
Demounting.....	Q-17	Grease Protector.....	Q-10
Inflating.....	Q-15	Rear Wheel Bearings.....	Q-6
Mounting.....	Q-16	Adjustment.....	Q-7
Repair.....	Q-18	Tires.....	Q-11
		Wheel Balancing.....	Q-2, Q-19

**Q-1. GENERAL**

The front wheels of all models discussed here are carried on two opposed tapered bearings as shown in Fig. 308 and 309.

Each rear wheel is carried on a single tapered roller bearing mounted on the axle shaft as shown in Fig. 310 and 311.

To check the wheel bearings for adjustment, brakes must be free and in fully released position.

**Q-2. Wheel Balancing**

Wheel balancing with the wheel on the vehicle is recommended with one exception. The wheels from any Powr-Lok axle should always be removed for balancing.

**Q-3. Front Wheel Bearings**

Adjustment of the front wheel bearings is critical because it establishes the running clearance of the wheel bearings. Wheel bearing adjustment that is too tight preloads the bearings and causes them to run hot. Loose wheel bearings permit the drum hub to shift its position on the bearings as thrust loads

vary with accelerating, braking, and cornering. Loose bearings also cause erratic braking.

To check the front wheel bearings raise the front end of the vehicle with a jack so that the tires clear the floor.

Grip the tire and test sidewise shake of the wheel. If bearings are correctly adjusted, shake of wheel will be just perceptible and wheel will turn freely with no drag.

If bearing adjustment is too tight, the rollers may break or become overheated. Loose bearings may cause excessive wear and possible noise.

If this test indicates adjustment is necessary, proceed as follows:

**Q-4. Front Wheel Bearing Adjustment**

All 4-Wheel-Drive Models

With the vehicle on the jack, remove the hub cap, axle shaft nut, washer or snap ring, and driving nut, flange. Use front axle shaft driving flange puller, Tool No. W-163, shown in Fig. 242 and a hub cap puller as shown in Fig. 241.

Bend the lip of nut lockwasher so that adjustment

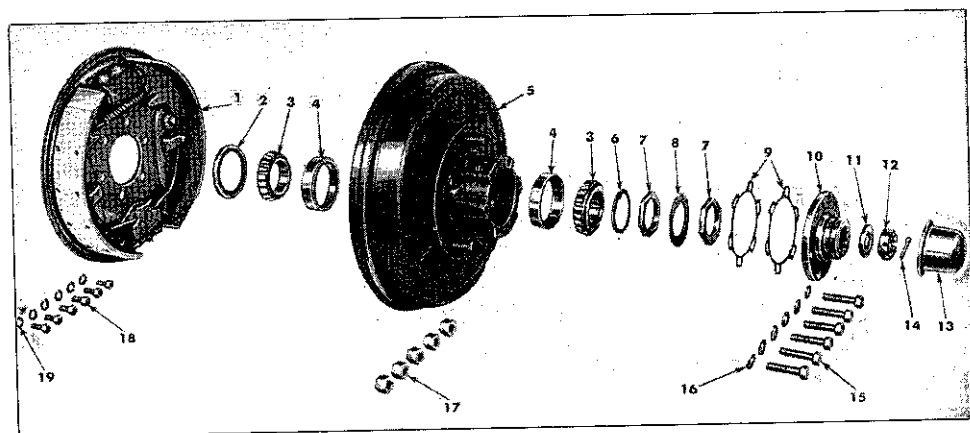


FIG. 308—FRONT WHEEL ATTACHING PARTS — 4-WHEEL-DRIVE VEHICLES

- 1—Brake Assembly
- 2—Oil Seal
- 3—Inner Bearing
- 4—Inner Bearing Cup
- 5—Hub and Brake Drum
- 6—Bearing Lockwasher
- 7—Lock Nut
- 8—Bearing Nut Locking Washer
- 9—Adjusting Shim
- 10—Driving Flange

- 11—Axle Shaft Nut Washer
- 12—Axle Shaft Nut
- 13—Hub Cap
- 14—Cotter Pin
- 15—Flange Bolt
- 16—Lockwasher
- 17—Wheel Nut
- 18—Backing Plate Bolt
- 19—Lockwasher

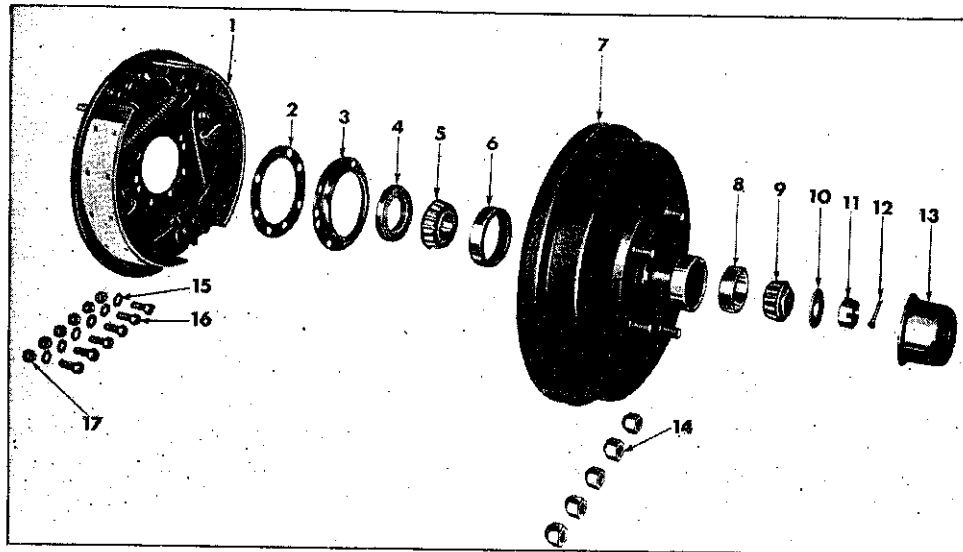


FIG. 309—FRONT WHEEL ATTACHING PARTS — 2-WHEEL-DRIVE VEHICLES

- |                         |                           |
|-------------------------|---------------------------|
| 1. Brake Assembly       | 10. Washer                |
| 2. Grease Shield Gasket | 11. Nut                   |
| 3. Grease Shield        | 12. Cotter Pin            |
| 4. Hub Dust Washer      | 13. Hub Cap               |
| 5. Inner Bearing        | 14. Wheel Nut             |
| 6. Inner Bearing Cup    | 15. Brake to Knuckle Bolt |
| 7. Hub and Brake Drum   | 16. Lockwasher            |
| 8. Outer Bearing Cup    | 17. Nut                   |
| 9. Outer Bearing        |                           |

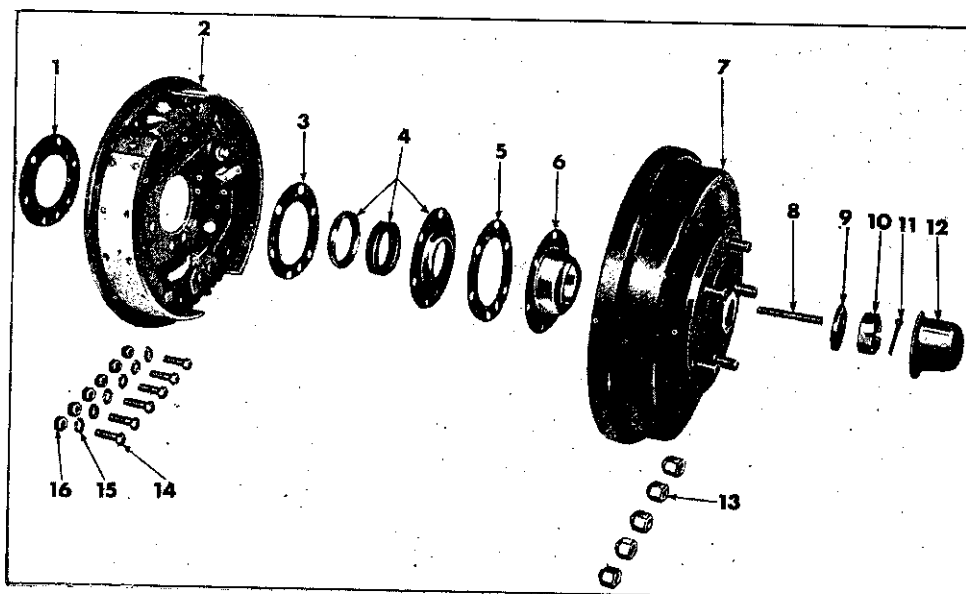


FIG. 310—REAR WHEEL ATTACHING PARTS

- |                         |                      |
|-------------------------|----------------------|
| 1. Retaining Flange     | 9. Axle Shaft Washer |
| 2. Brake Assembly       | 10. Axle Shaft Nut   |
| 3. Adjusting Shim       | 11. Cotter Pin       |
| 4. Grease Retainer      | 12. Hub Cap          |
| 5. Grease Shield Gasket | 13. Wheel Nut        |
| 6. Grease Shield        | 14. Axle Flange Bolt |
| 7. Hub and Drum         | 15. Lockwasher       |
| 8. Axle Shaft Key       | 16. Nut              |

locknut and lockwasher may be moved. Rotate the wheel and tighten the adjusting nut until the wheel binds. Then back off nut about one-sixth turn or more if necessary making sure that the wheel rotates freely without sidewise shake. Replace the lockwasher and locknut and do not fail to bend over the lockwasher lip.

Check the adjustment and reassemble the driving flange. Make sure the gasket is properly installed between the hub and the flange.

#### Q-5. Front Wheel Bearing Adjustment

All 2-Wheel-Drive Models

With the vehicle still on the jack, remove the hub cap and the wheel retaining nut cotter pin. Rotate the wheel and tighten the wheel retaining nut until the wheel binds. Then back off nut about one-sixth turn or more if necessary making sure wheel rotates freely without sidewise shake. Replace the cotter pin and hub cap.

#### Q-6. Rear Wheel Bearings

Raise wheel on which adjustment is to be made, by placing a jack under the axle housing. With hands, test sidewise shake of the wheel. If bearings are correctly adjusted, shake of wheel will be just perceptible and the wheel will turn freely with no drag. If adjustment is necessary proceed as follows.

#### Q-7. Rear Wheel Bearing Adjustment

The bearing adjusting shims are placed between the brake backing plate and axle flange as shown in Fig. 311, No. 2. To make this adjustment remove the hub cap, the cotter pin, the axle shaft nut and use a wheel puller to remove the wheel hub. Remove the bolts holding the brake dust shield, grease

and bearing retainer and the brake backing plate. Remove or install shims to adjust the bearings to provide .003" to .007" (.076-.177 mm.) end float of the axle shaft.

On all Spicer semi-floating type rear axles, the bearing shim packs are installed at both axle housing flanges.

On all Timken semi-floating type rear axles, the shims may be installed at one flange only or the clearance may be divided equally and shims installed at both flanges.

#### Q-8. Maintenance of Wheel Hub Bearings

Under normal operating conditions the hub bearings require lubrication only every 6000 miles (9600 km.). It is necessary to disassemble and remove the bearings from all front wheels to properly lubricate them. All models having semi-floating type rear axles are equipped with lubricators.

When hubs and bearings are removed for lubrication, they should be thoroughly washed in a suitable cleaning fluid. The bearings should be given more than a casual cleaning. Use a clean stiff brush to remove all particles of old lubricant from bearings and hubs. After the bearings are thoroughly cleaned inspect them for pitted races and rollers, also check the hub oil seals. Repack the bearing cones and rollers with grease and reassemble hub in the reverse order as that of dismantling. Test bearing adjustment as covered under "Bearing Adjustment".

When installing the hubs and drums, the hubs with the right hand threaded studs are placed on the right hand side of the vehicle. The left hand threaded studs are on the left hand side, viewing the vehicle from the rear.

#### Q-9. Brake Drums

The brake drums are attached to the wheel hubs by five serrated bolts. These bolts are also used for mounting the wheels on the hub. To remove a brake drum, press or drive out the serrated bolts and remove the drum from the hub.

When placing the drum on the hub, make sure that the contacting surfaces are clean and flat. Line up the holes in the drum with those in the hub and put the drum over the shoulder on the hub. Insert five new serrated bolts through the drum and hub and drive the bolts into place solidly. Place a round piece of stock approximately the diameter of the head of the bolt, in a vise; next place the hub and drum assembly over it so that the bolt head rests on it. Then swage the bolt into the countersunk section of the hub with a punch.

The runout of the drum face should be within .003" (.076 mm.). If the runout is found to be greater than .003" (.076 mm.), it will be necessary to reset the bolts to correct the condition.

The left hand hub bolts are identified with an "L" stamped on the head of the bolt.

The left hand threaded nuts may be identified by a groove cut around the hexagon faces.

Hubs containing the left hand threaded hub bolts are installed on the left hand side of the vehicle.

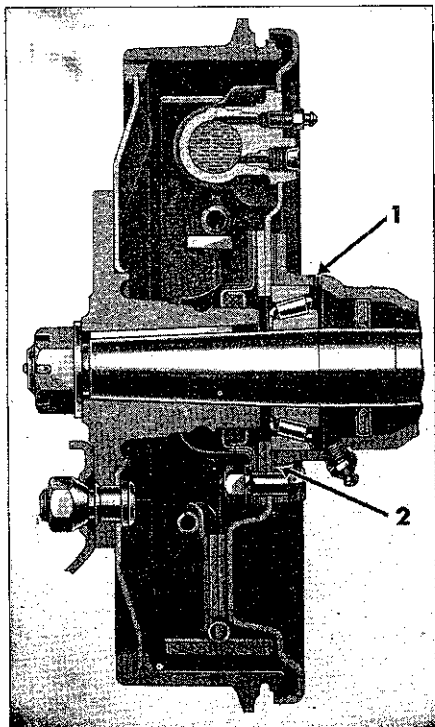


FIG. 311—REAR WHEEL HUB AND BEARING

**Q-10. Grease Protector**

Late Model L6-226 4WD and F4-134 4WD vehicles.

An improved hub and brake drum assembly and companion grease protector were installed in production effective with these serial numbers:

L6-226 4WD	F4-134 4WD
55168-14472	55148-10975
55268-33884	55248-11555
55368-11281	55348-10060

Only the later grease protector (Fig. 312, No. 3) can be used with the later hub and brake drum assembly (1). Either grease protector can be used with the earlier hub and brake drum assembly (2).

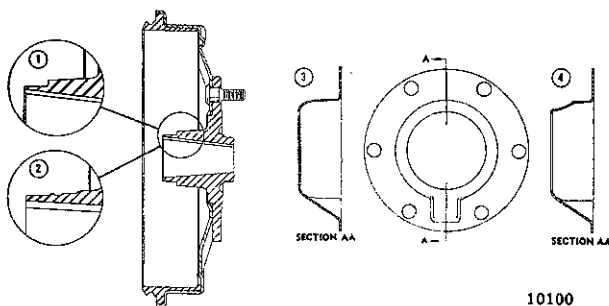


FIG. 312—GREASE PROTECTOR IDENTIFICATION

- 1—Late Hub and Drum Assembly
- 2—Early Hub and Drum Assembly
- 3—Late Grease Protector (912646)
- 4—Early Grease Protector (640888)

**Q-11. TIRES**

Tires each consisting of a tube and casing are standard on all but certain 4x2 models. On 4x2 models having a serial number prefix of 58147 or 58167, Captive-Air tires are standard. Refer to Par. Q-14 for information on Captive-Air tires.

**Q-12. Tire Care**

Tire pressure, tire rotation, wheel balance, and wheel alignment are the four vital factors that influence the extent of tire life and the ease and safety of vehicle control. Four of the most common tire troubles are:

- a. Excessive wear around the outer edges resulting from under-inflation.
- b. Excessive wear in the center of the tread resulting from over-inflation.
- c. Tire tread worn on one side indicating wheels need realigning.
- d. Cuplike depressions on one side of the tread indicating wheels need balancing.

If the vehicle normally carries a full load, two to four pounds [0,14 a 0,28 kg-cm<sup>2</sup>] can be added to the recommended pressures. But, remember that adding air with a light load means a harsher ride, doesn't help tires, and wears out shock absorbers.

Cross-switch the tires every 5000 miles [8.000 km.]. This practice will even out differences in wear and make a set of tires last longer than they would without cross switching. Refer to Fig. 313 for the recommended rotation method for all except "cap-

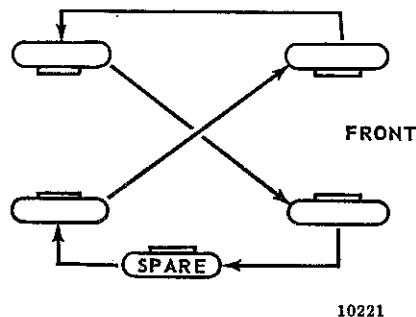


FIG. 313—TIRE ROTATION

tive air" tires. When a method of tire rotation is selected, it should be used consistently or the full benefits of tire rotation may be lost.

**Q-13. Removing and Installing Tires**

All except Captive-Air tires.

To remove a tire from a drop center rim, first deflate completely and then force the tire away from the rim throughout the entire circumference until the bead falls into the center of the wheel rim. With a heavy screw driver or tire removing tool, used opposite the valve, remove one side of the tire at a time and remove the inner tube.

Installation of the tire is made in the same manner by first dropping one side of the tire into the center of the rim and with a tire tool raise the bead over the wheel rim using care not to damage the inner tube.

When mounting the wheel, alternately tighten opposite stud nuts to prevent wheel runout. After the nuts have been tightened with the wheel jacked up, lower the jack so wheel rests on the floor and re-tighten the nuts.

**Q-14. Captive-Air Tires**

Model L6-226 4x2 and F4-134 4x2 Station Wagon. These models with a serial number prefix of 58147 or 58167 are equipped with Captive Air tires as standard. These tires have two chambers with a safety shield separating the compartments. Each compartment is filled with air separately. There is no inner tube. Should the outer tire be damaged or ripped by a blowout or puncture, the inner chamber immediately carries the load. Captive-Air tires should receive normal tire care such as periodic pressure checks and regular rotation.

**Q-15. Inflation Procedure**

- a. Inflate inner chamber first through rim valve to 28 psi. [1,97 kg-cm<sup>2</sup>] pressure.
- b. Lubricate inflation needle. Insert needle into sidewall valve.
- c. Inflate outer chamber through sidewall valve to 24 psi. [1,69 kg-cm<sup>2</sup>] pressure.
- d. When correctly inflated, inner chamber pressure (rim valve) will be 4 psi. [0,28 kg-cm<sup>2</sup>] more than outer chamber pressure (sidewall valve).

**NOTE:** For maximum hauling capacity, inflate rear tires to 34 psi. [2,39 kg-cm<sup>2</sup>] pressure through rim valve, then 30 psi. [2,11 kg-cm<sup>2</sup>] pressure through sidewall valve.

If pressure difference cannot be obtained, inspect tire and shield to locate and correct the fault. Over a period of time, the pressure difference will equalize. This is normal and does not necessarily indicate any shield defect.

#### Q-16. Mounting Procedure

- a. Clean rim using steel wool or wire brush. Install a new tubeless tire valve with each new tire.
- b. Before inserting shield, apply Captive-Air anti-friction treatment to tire. Spread fluid uniformly all around inside center of tire.
- c. Insert shield. Line up L mark on tire with H mark on shield. Fit shield bead over tire beads. Smooth out wrinkles.
- d. Coat flange and base of shield with mounting lubricant. Do not allow mounting lubricant to get between tire and shield. Lubricate flanges, bead seats, and rim well.
- e. When using tire changing machine be careful to avoid cutting or tearing shield bead channels. Tools or tire irons must be free of burrs or sharp edges. When using tire irons, work tire beads over rim flange in short sections. If shield slips off tire bead, reposition shield after it is in the rim well and before mounting second bead. Use pliers to reposition shield on tire bead. Turn tire on rim until both rim valve and sidewall valve are in line. Smooth shield channels by hand to be sure that they are seated smoothly on tire beads.
- f. Inflate tire following procedure given in Par. 00.
- g. Check to see that shield is visible. When properly mounted, edges of shield must be visible and evenly exposed all around both rim flanges.

#### Q-17. Demounting Procedure

- a. Remove valve core from the rim valve to deflate inner chamber. Deflation of the outer chamber is not necessary. Mark tire shield and rim with crayon so they can be reassembled in balanced position.
- b. Use standard bead unseating tools (do not use hammer or tire irons) to loosen tire beads from bead seats.
- c. After unseating tire beads, loosen shield from top tire bead. Tuck bead channel of shield under tire bead by hand.
- d. Apply mounting lubricant to rim flange and tire bead. Pry top tire bead over rim flange with tire irons or tire changing machine.

- e. Repeat steps c and d above for bottom bead.

#### Q-18. Repair

Captive-Air shields will resist penetration of most puncturing objects. The shield will bend most nails, break them off, or throw them out.

Continued operation with a large puncturing object in the tire may eventually cause trouble. It is recommended that tires be inspected periodically and any puncturing objects or foreign material removed.

Injuries to the tire should be handled the same as for any standard tubeless tire except that when making inside repairs to tire, the Antifriction Treatment (the special lubricant on the tire) should be removed. Use a scrapper and then rubber solvent before buffing. In case of sidewall valve damage, replace with a new valve using a sidewall valve replacement kit.

If a puncturing object is removed from tire, the shield should be inspected for possible damage.

If a repair of the outside casing is made, the shield may be tested by inflating the inner chamber to a higher pressure than the outer chamber. If the pressure difference holds, shield is undamaged. If pressures equalize after a few minutes, demount tire to check for possible damage to shield.

Damaged shields with injuries in the crown area that are  $\frac{1}{4}$ " [0,6 mm.] or less in diameter may be repaired with a hot patch in a manner similar to that used on tubless tires.

Shields damaged in crown area where the injury extends less than half way through do not require repair.

Shield having injuries in crown area larger than  $\frac{1}{4}$ " [0,6 mm.] require a fabric-reinforced, sectional repair. Prepare shield for repair in the same manner used for tire sectional repair, then use a PN 20 Goodyear Readybilt repair patch and cure on a hot plate.

#### Q-19. Tire Balancing Captive-Air Tires

- a. Pressure in the inner chamber (rim valve) must be 4 psi. [0,28 kg-cm<sup>2</sup>] higher than the outer chamber (sidewall valve).
- b. The antifriction fluid must be uniformly spread around the inside tire crown.
- c. For tires that have been on a vehicle, drive them 5 miles [8 km.] raise the vehicle immediately to prevent parking set from affecting the balance.

## WHEEL AND TIRE SPECIFICATIONS

MODELS:	L6-226 4WD F4-134 4WD	L6-226 4x4 F4-134 4x4	L6-226 4x2 F4-134 4x2
<b>Wheels:</b>			
Make.....	Kelsey-Hayes	Kelsey-Hayes	Kelsey-Hayes
Type.....	Disc	Disc	Disc
Material.....	Steel	Steel	Steel
Rim Size.....	16 x 5.00	15 x 4.50	15 x 4.50
Flange Type.....	K	E	E
Attachment —			
Type.....	Stud	Stud	Stud
Circle Diameter.....	5.50	5.50	5.50
Number.....	5	5	5
Size.....	1/2-20	1/2-20	1/2-20
Axle Shaft End Float.....	.001" to .006" [0,0254 a 0,152 mm.]	.001" to .006" [0,0254 a 0,152 mm.]	.001" to .006" [0,0254 a 0,152 mm.]
<b>Tires:</b>			
Size.....	7.00-16	7.00-15	6.70-15
Ply Rating.....	4	4	6
Revolutions per Mile @ 30 mph.....	683	716	742
Inflation Pressure:			
Front.....	30 psi. [2,11 kg-cm <sup>2</sup> ]	27 psi. [1,89 kg-cm <sup>2</sup> ]	27 psi. [1,89 kg-cm <sup>2</sup> ]*
Rear.....	45 psi. [3,16 kg-cm <sup>2</sup> ]	27 psi. [1,89 kg-cm <sup>2</sup> ]	27 psi. [1,89 kg-cm <sup>2</sup> ]*

## \*Captive Air Tires:

With normal load: outer chamber; front 24 psi. [1,40 kg-cm<sup>2</sup>], rear 24 psi. [1,40 kg-cm<sup>2</sup>].

With max. GVW load: outer chamber; front 30 psi. [2,11 kg-cm<sup>2</sup>], rear 30 psi. [2,11 kg-cm<sup>2</sup>].

Inner chamber 4 psi. [0,28 kg-cm<sup>2</sup>] higher.



## FRAME

## Contents

SUBJECT	PAR.
Alignment — Frame.....	R-2
— Front Axle.....	R-5
Dimensions — Frame.....	R-3
Straightening Frame.....	R-4

## R-1. GENERAL

The frame is the structural center of the vehicle, for in addition to carrying the load, it provides and maintains correct relationship between other units to assure their normal functioning.

Of rugged design, the frame is constructed of heavy channel steel side rails and cross-members. Brackets and diagonal braces are used to maintain the proper longitudinal position of the side rails relative to each other, and at the same time provide additional resistance to torsional strains.

Vehicles which may have been in an accident of any nature, which may result in a swayed or sprung frame, should always be carefully checked for proper frame alignment, steering geometry, and axle alignment.

## R-2. Checking Frame Alignment

The most efficient and satisfactory method of checking frame alignment is with a frame aligning fixture which is equipped with bending tools for straightening frame parts. In the absence of such a fixture, frame alignment may be determined by using the "X" or diagonal method of checking from given points on each side rail. Fig. 314 illustrates this method of checking the frame.

The most convenient way to make this check, particularly when the body is on the chassis, is by marking on the floor all points from which measurements should be taken.

Select a space on the floor which is comparatively level. If a cement floor is available clean it so that chalk marks will appear underneath the frame to

be checked. If a wooden floor, it is advisable to lay a sheet of paper underneath the vehicle and tack in place, dropping a plumb-bob from each point indicated in Fig. 314, marking the floor directly underneath the point. Satisfactory checking depends upon the accuracy of the marks in relation to the frame.

To reach the points shown that have been marked, have vehicle carefully moved away from layout on the floor, and proceed as directed in the following paragraphs:

a. Check frame width at front and rear end, using corresponding marks on the floor. If widths correspond to specifications given below, draw center line the full length of the vehicle, half-way between marks indicating front and rear widths. If frame width is not correct and the center line cannot be laid out from checking points at the end of frame it can be drawn through intersections of any two pair of equal diagonals.

b. With the center line properly laid out, measure the distance from it to points opposite over the entire length of chassis. If frame is in proper alignment measurement should not vary.

c. To locate the point at which the frame is sprung, measure the diagonals marked A-B, B-C, C-D. If the diagonals in each pair are within  $\frac{1}{8}$ " [3,175 mm.], that part of the frame included between points of measurements may be considered as satisfactory alignment. These diagonals should also intersect at the center line. If the measurements do not agree within the above limits, it means that correction will have to be made between those points that are not equal.

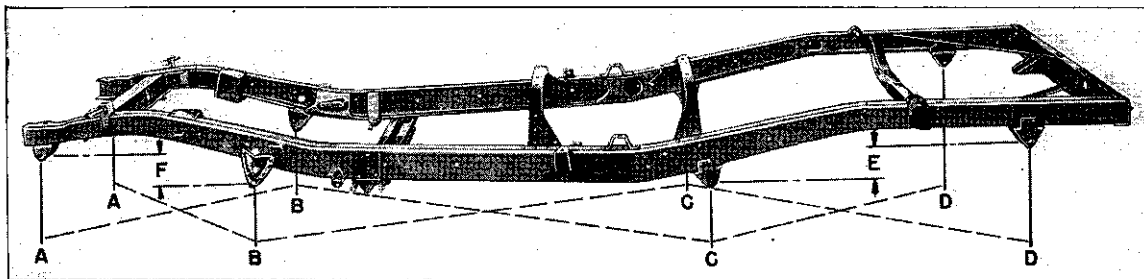


FIG. 314—TYPICAL FRAME SHOWING POINTS FOR MEASURING ALIGNMENT

**R-3. Frame Dimensions**

Points for measuring frame alignment are shown in Fig. 314. The correct measurements for each model are given in the table. Point A is at the front of the frame.

A-B and C-D are the distances between spring shackle bolt and spring pivot bolt frame centers measured on a line parallel with the frame centerline. E and F show the shackle bolt centers in relation (above or below) to the pivot bolt centers.

The Planar type of spring suspension used on early Model F4-134 4x2 vehicles makes it impossible to give checking dimensions for the front end of the frame. With the Planar type, the upper edges of the side rails are parallel at the front and at the center of the frame; also, the edges at the front are  $4\frac{1}{2}$ " [114 mm.] higher than at the center.

**R-4. Straightening Frame**

In case the bending or twisting of the frame is not excessive, it may be straightened. This should be done cold, as excessive heat applied to the frame will weaken it. For this reason it is recommended that badly damaged frame parts be replaced.

**R-5. Front Axle Alignment**

After it has been determined that the frame is properly aligned, the front axle alignment with the frame can be checked. The front axle is square with the frame if the distance between the front and rear axle is the same on both sides. The distance from the spring upper bushings to the front axle on both sides should be equal.

Model	A-B	C-D	Width Front	Width Rear	"E"	"F"
F4-034 4x2 with Planar Front Suspension	.....	$49\frac{3}{16}$ " 1.249 m.	$29\frac{1}{2}$ " .749 m.	$44\frac{1}{2}$ " 1.130 m.	$5\frac{1}{2}$ " above 130.2 mm.	.....
L6-226 4x4 L6-226 4x2 F4-134 4x4 F4-134 4x2	$35\frac{5}{32}$ " .893 m.	$48\frac{3}{4}$ " 1.238 m.	32" .813 m.	$44\frac{1}{2}$ " 1.130 m.	$31\frac{1}{32}$ " above 84.8 mm.	$51\frac{9}{32}$ " above 1.421 mm.
L6-226 4WD F4-134 4WD	$35\frac{5}{32}$ " .893 m.	$48\frac{23}{32}$ " 1.238 m.	32" .813 m.	$49\frac{1}{2}$ " 1.257 m.	$5\frac{3}{8}$ " above 136.5 mm.	$51\frac{9}{32}$ " above 142.1 mm.

**FRAME SPECIFICATIONS**

Model:	F4-134 4x2 With Planar Front Suspension	L6-226 4x4 L6-226 4x2 F4-134 4x4 F4-134 4x2	L6-226 4WD F4-134 4WD
Frame:			
Length.....	$154\frac{3}{4}$ " [393.06 cm.]	$159\frac{15}{16}$ " [406.24 cm.]	$176\frac{7}{32}$ " [447.6 cm.]
Width — Front.....	$29\frac{1}{2}$ " [74.93 cm.]	32" [81.28 cm.]	32" [81.28 cm.]
Rear.....	$44\frac{1}{2}$ " [113.03 cm.]	$44\frac{1}{2}$ " [113.03 cm.]	$49\frac{1}{2}$ " [125.73 cm.]
No. Cross Members.....	4	5	6
Section Modulus.....	.....	2.581 in. cu.	2.581 in. cu.

## SPRINGS AND SHOCK ABSORBERS

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Pivot Bolts.....	S-4	Springs — Front.....	S-2
Shackles.....	S-4	— Rear.....	S-3
U-Shackles.....	S-5	— Remove and Replace.....	S-6
Shock Absorbers.....	S-7	Trouble Shooting.....	S-8

**S-1. GENERAL**

The springs are of alloy steel to stand the severe service to which they may be subjected.

They should be periodically examined for broken or shifted leaves, loose or missing rebound clips, angle of spring shackles and position of springs on the saddles. Springs with shifted leaves do not have their normal strength. Missing rebound clips may permit the spring leaves to fan out or break on rebound. Broken leaves may make the vehicle hard to handle or permit the axle to shift out of line. Weakened springs may break causing difficulty in steering.

Spring attaching "U" bolts must be tight. It is suggested that they be checked at each vehicle inspection. Tighten the  $\frac{7}{16}$ " bolts to 45–55 ft. lbs. (6.2–7.6 kg.-m.) and the  $\frac{1}{2}$ " bolts to 65–80 ft. lbs. (9.0–11.0 kg.-m.)

**S-2. Front Springs**

Semi-elliptic front springs are used on all the models discussed except those models equipped with planar type front suspension which are of the transverse type.

Spring dimensions of all models are found in the specifications at the end of this section.

Shackles are provided at the front end of the front springs on all models. The rear ends of the springs are supported by pivot bolts mounted in the frame brackets and supported by either rubber or bronze bushings as outlined under the heading "Spring Shackles and Pivot Bolts".

The springs are firmly attached to the front axle by "U"-bolts and the spring center bolts are inserted in the axle spring saddles to prevent shifting of the axle.

The front springs on Model F4-134 4x2 with Planar suspension and the rear springs on all 4x4 and 4x2 models are all of the "Dow" type and should never be lubricated.

This type spring has Neoprene rubber inserts mounted in forged cups at each end of the several leaves. Movement between the leaves is through flexing of the rubber inserts rather than sliding metal-to-metal contact. Lubricating the springs will destroy the effective use of the inserts. *Do not lubricate "Dow" type springs.*

It is recommended that all springs other than the "Dow" type be lubricated as sparingly as possible. Frequent lubrication will thin out the original graphite lubricant installed by the manufacturer which is necessary for effective spring action.

**S-3. Rear Springs**

The rear springs are of the semi-elliptic type, shackled at the rear end and pivoted on either bronze or rubber bushings at the front end.

Spring saddles are welded to the underside of the rear axle housing and the center spring bolt is utilized to prevent shifting of the axle. The springs are held in position by "U"-bolts around the axle.

The lubrication information given above for front springs applies as well to all rear springs.

**S-4. Spring Shackles and Pivot Bolts**

Spring shackles are either of the U-shackle type (Fig. 315) on earlier vehicles or the type shown in Fig. 316 on later vehicles. Threaded core bushings are used with the U-shackles. The side-plate shackles will have either silent-bloc (rubber) bushings or unthreaded bronze bushings. Use of bronze bushings with the side-plate shackles will be evident from the lubrication fitting; where no lubrication fitting is present, silent-bloc bushings are present and are not to be lubricated.

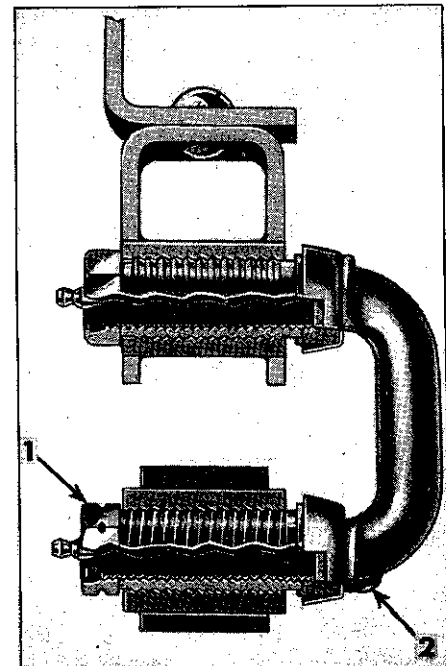


FIG. 315—FRONT SPRING SHACKLE (EARLY VEHICLES)

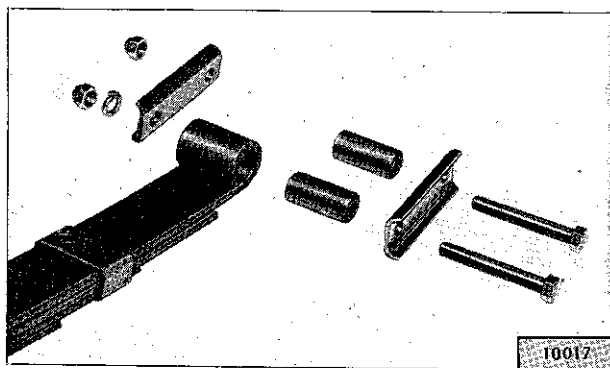


FIG. 316—FRONT SPRING SHACKLE

Installation of the rubber type shackle and pivot bolt bushings is obvious, however, when making this installation tighten the shackle and pivot bolt retaining nuts only enough to hold the bushings in position until the vehicle is lowered from the jack. Allow the weight of the vehicle to seat the bushings to their operating position after which tighten the nuts to 27 - 30 ft. lbs. (3.73 - 4.15 kg.-m.) torque.

Bronze bushings require no reaming when replacement is made. Some early production shackles and pivot bolts were equipped with cotter pins to correctly position the nuts. After tightening these nuts, back them off two cotter pin slots before installing the cotter pins. To prevent shackle and pivot movement, the nuts must be tight but without evidence of binding. On later production vehicles, the nuts should be torqued to the specifications for vehicles equipped with rubber bushings as given above.

#### S-5. Threaded U-Shackles and Bushings

The threaded bushings of the "U"-type shackles are anchored solidly in the frame brackets and spring eyes and the oscillation is taken between the threads of the "U"-shackle and the inner threads of the bushings. Lubrication of the shackle bushings is important and should not be neglected or excessive wear of both the bushings and "U"-shackles will occur.

On later production vehicles, only right-hand threaded shackles and bushings were used.

The left hand threaded "U"-shackle may be identified by a small forged boss on the lower shank of the shackle as shown in Fig. 315, No. 2. The left hand threaded shackle is used at the left front spring with the left hand threaded end DOWN at the spring eye.

On early production vehicles, three bushings were used with right-hand threads and one with left-hand threads. The right-hand threaded bushings have plain hexagonal heads. The left-hand bushing has a groove around the head as indicated by No. 1 in Fig. 315.

The "U"-shackles are installed with the bushing hexagon heads at the outside of the frame.

When installing a new "U"-shackle or a shackle bushing, follow the procedure outlined below:

Install the shackle grease seal and retainer over the

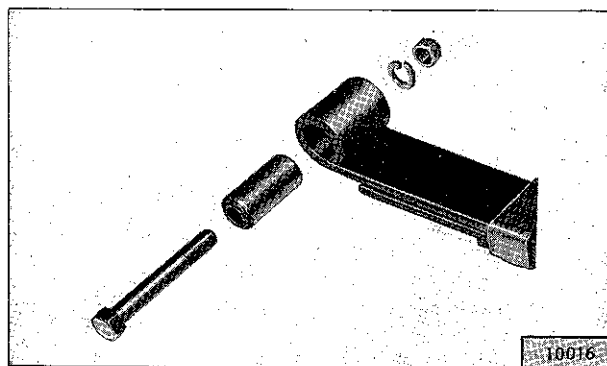
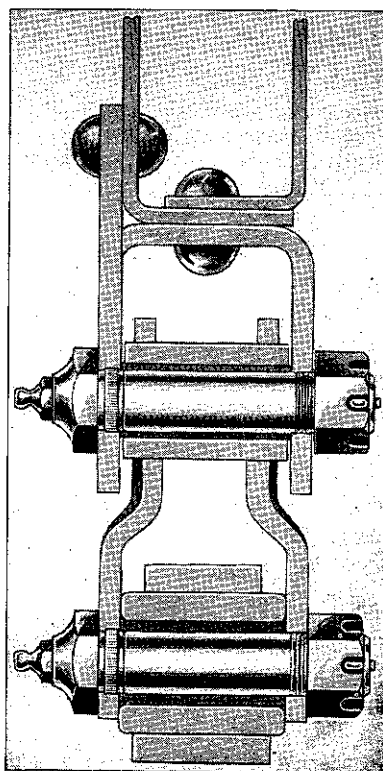


FIG. 317—SPRING PIVOT BOLT

threaded end of the shackle up to the shoulder. Insert the shackle through the frame bracket and eye of the spring. Holding the "U"-shackle tightly against the frame, start the upper bushing on the shackle, care being taken that when it enters the thread in the frame that it does not cross-thread. Screw bushing on the shackle about halfway, and then start the lower bushing, holding the shackle tightly against the spring eye and thread the bushing in approximately halfway, then alternating from top bushing to lower bushing turn them in until the head of the bushing is snug against the frame bracket and the bushing in the spring eye is  $\frac{1}{32}$ " (.794 mm.) away from the spring measured from the inside of hexagon head to the spring. Lubricate the bushing and then try the flex of the shackle, which must be free. If a shackle is tight it will cause spring breakage and it will be necessary to rethread the bushings on the shackle.

FIG. 318—REAR SHACKLE —  
4-WHEEL-DRIVE VEHICLES

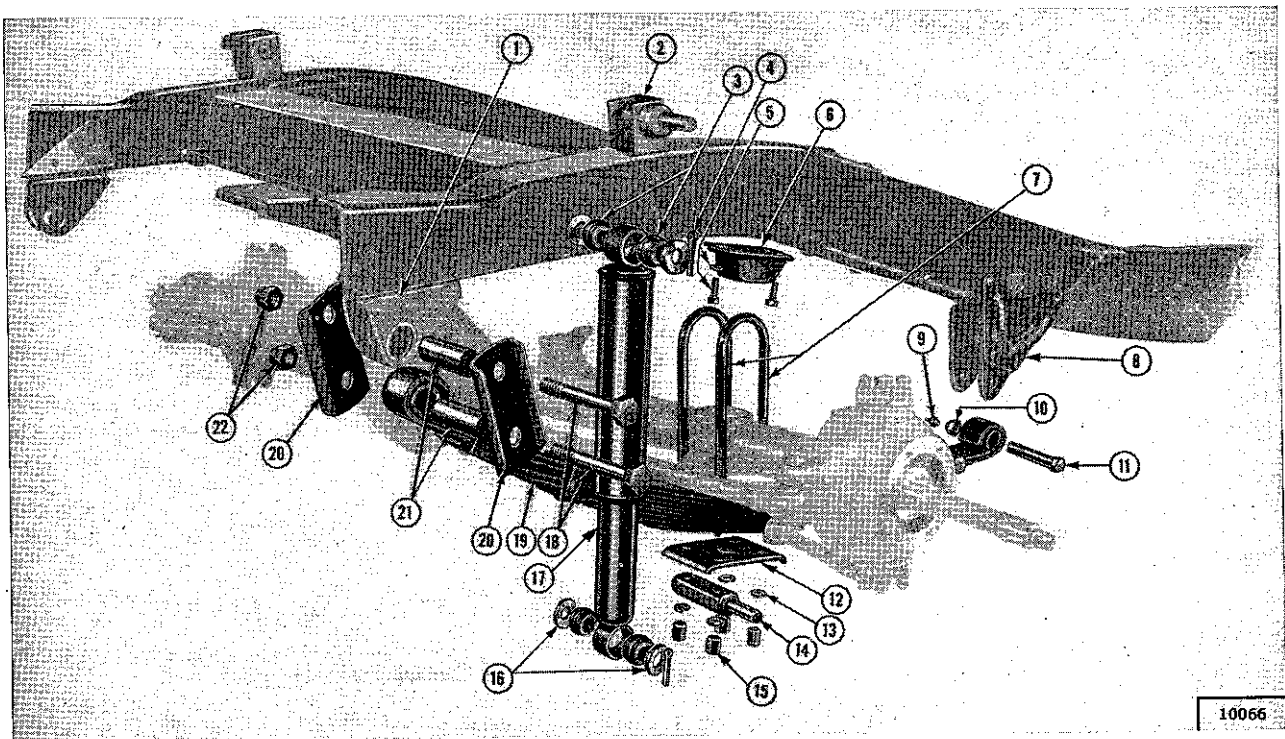


FIG. 319—TYPICAL FRONT SPRING

- 1—Bracket
- 2—Bracket and Shaft
- 3—Bushing
- 4—Cotter Pin
- 5—Bolt and Lockwasher
- 6—Axle Bumper

- 7—Clip
- 8—Bracket and Reinforcement
- 9—Lubrication Fitting
- 10—Nut
- 11—Bolt

- 12—Plate
- 13—Lockwasher
- 14—Bracket
- 15—Nut
- 16—Special Washer

- 17—Front Shock Absorber
- 18—Bolt
- 19—Front Spring
- 20—Spring Shackle Side Plate
- 21—Silent Bloc Bushing
- 22—Nut

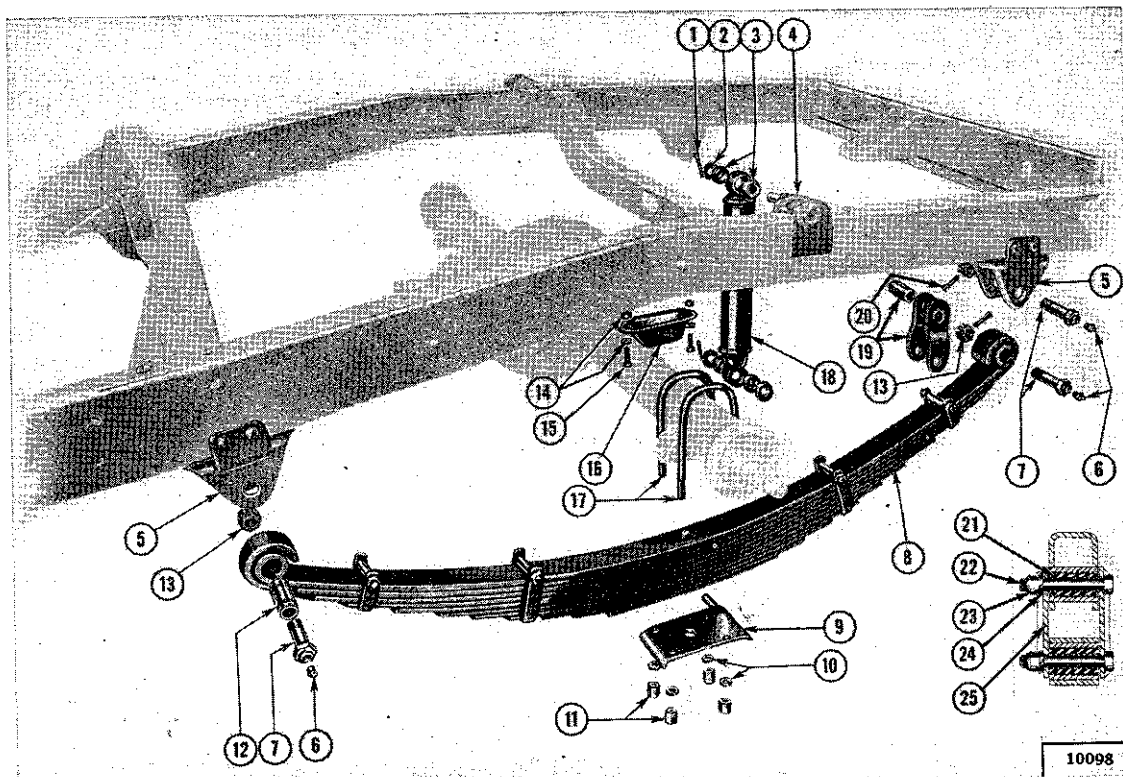


FIG. 320—TYPICAL REAR SPRING

- 1—Cotter Pin
- 2—Special Washer
- 3—Bushing
- 4—Bracket and Shaft
- 5—Rear Spring Hanger
- 6—Lubrication Fitting

- 7—Bolt
- 8—Rear Spring
- 9—Plate and Shaft
- 10—Lockwasher
- 11—Nut
- 12—Rear Spring Eye Bushing
- 13—Nut

- 14—Nut and Lockwasher
- 15—Bolt
- 16—Axle Bumper
- 17—Clip
- 18—Rear Shock Absorber
- 19—Rear Spring Shackle

- 20—Cotter Pin
- 21—Silent Bloc Bushing
- 22—Bolt
- 23—Nut
- 24—Lockwasher
- 25—Spring Shackle Side Plate

**S-6. Remove and Replace Spring**

To remove a spring raise the vehicle, then place a stand jack under the frame side rail, adjusted so that the load is relieved from the spring with the wheel resting on the floor. Remove the axle spring clip bolt nuts and lockwashers. Remove the spring plate and clip bolts. Lower jack at the side rail to free the spring from the axle.

Remove the pivot bolt nut and drive out the pivot bolt. Disconnect the shackle, or if a threaded "U"-type, remove the threaded bushing.

To install a spring, replace pivot bolt first and then reconnect the shackle. Raise the jack and place the spring center bolt in the axle saddle and install the axle spring clip bolts and nuts. Axle spring clip nut torque wrench reading, 50 – 55 ft. lbs. (6.91 – 7.60 kg.-m.); spring pivot bolt nut, 27 – 30 ft. lbs. (3.73 – 4.15 kg.-m.). Avoid over tightening. Be sure the spring is free to oscillate at both ends.

**S-7. Shock Absorbers**

The shock absorbers used on these models are of the hydraulic direct action type, designed to absorb both upward and downward motion. They are mounted on rubber bushings at both top and bottom and their removal and installation is obvious. They are non-refillable and non-adjustable, and if trouble develops in one, it must be discarded and replaced with a new one as no repairs can be made on the unit. If a shock absorber is removed from the vehicle and turned upside down it will lose its prime and become inoperative. To test a unit it must be held in an upright position and the plunger should be worked up and down its full length of travel four or five times to determine whether its action is positive or faulty.

**NOTE:** The shock absorber stem is smoothly machined to work through a tight seal in the upper end of the cylinder. *Do not* roughen the stem with pliers or similar tools during removal or installation as this will destroy the effectiveness of the seal.

**S-8. TROUBLE SHOOTING****S-9. Improper Spring Action**

Some 4x2 models

Improper spring action resulting from tightness or binding at the pivot or shackle can, in the case of front springs, transmit road shock to the steering wheel. The condition is probably caused either by excessive torque on the pivot or shackle bolts or by the spring being too wide at the spring mounting point. To correct the condition proceed as follows:

- a. Loosen the bolts at the pivot or shackle affected and retorque 27 to 30 lb.-ft. [3,7 a 4,1 kg.-m.].
- b. If retorquing does not correct the condition, remove the spring from the vehicle.
- c. Measure the over all width of the shackle end of the spring. It should not exceed 1.780" [45,2 mm.]. If it does, grind equally each side of the shackle end of the spring until the over all width is within the limits of 1.720" to 1.780" [43,7 a 45,2 mm.].
- d. Position the pivot end of the spring in the pivot bracket. Check the clearance between the spring and pivot bracket side plates. If clearance is insufficient, carefully reface the pivot end of the spring until clearance is satisfactory. Grind each side of the spring equally.
- e. Check the condition of all bushing sleeves. If any bushing is worn or damaged, replace the bushing.
- f. Install the spring. Torque all pivot bolts and shackle bolts 27 to 30 lb.-ft. [3,7 a 4,1 kg.-m.].

## SPRING AND SHOCK ABSORBER SPECIFICATIONS

## Front Springs

MODEL:	L6-226 4WD & 4x4 F4-134 4WD & 4x4	L6-226 4x2 SW	L6-226 4x2 UD	F4-134 4x2
Number of Leaves.....	10	6	7	6
Length.....	36 $\frac{1}{4}$ " [92,08 cm.]	35 $\frac{1}{8}$ " [89,21 cm.]	36 $\frac{1}{4}$ " [92,08 cm.]	35 $\frac{1}{8}$ " [89,21 cm.]
Width.....	1 $\frac{3}{4}$ " [4,44 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]
Load to Attain Design Camber....	640 lb. [290 kg.]	735 lb. [333 kg.]	735 lb. [333 kg.]	735 lb. [333 kg.]
Stack Height.....	2.090" [5,308 cm.]	1.275" [3,238 cm.]	1.48" [3,761 cm.]	1.275" [3,238 cm.]
Design Camber.....	+ $\frac{3}{8}$ " [0,952 cm.]	-1" L [2,54 cm.] -1 $\frac{1}{2}$ " R [3,81 cm.]	- $\frac{5}{8}$ " [1,58 cm.]	-1 $\frac{1}{2}$ " L [3,81 cm.] -2 $\frac{1}{4}$ " R [5,71 cm.]

## Rear Springs

MODEL:	L6-226 4WD F4-134 4WD	L6-226 4x4 F4-134 4x4	L6-226 4x2 SW F4-134 4x2 SW	L6-226 4x2 UD F4-134 4x2 UD
Number of Leaves.....	10	8	8	8
Length.....	50 $\frac{1}{4}$ " [127,63 cm.]	50 $\frac{1}{8}$ " [127,31 cm.]	50 $\frac{1}{8}$ " [127,31 cm.]	50 $\frac{1}{8}$ " [127,31 cm.]
Width.....	2" [5,08 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]	1 $\frac{3}{4}$ " [4,44 cm.]
Load to Attain Design Camber....	1625 lb. [737 kg.]	900 lb. [408 kg.]	900 lb. [408 kg.]	900 lb. [408 kg.]
Stack Height.....	2.678" [6,802 cm.]	1.946" [4,942 cm.]	1.946" [4,942 cm.]	1.946" [4,942 cm.]
Design Camber.....	+1 $\frac{3}{4}$ " [4,44 cm.]	0"	-1 $\frac{3}{4}$ " [4,44 cm.]	0"

## Shock Absorbers

MODEL:	L6-226 4x4 — L6-226 4x2 F4-134 4x4 — F4-134 4x2		L6-226 4WD F4-134 4WD	
	Front	Rear	Front	Rear
Type.....	Hydraulic	Hydraulic	Hydraulic	Hydraulic
Action.....	Double	Double	Double	Double
Length Compressed.....	11 $\frac{7}{16}$ " [29,05 cm.]	11 $\frac{7}{16}$ " [29,05 cm.]	11 $\frac{7}{16}$ " [29,05 cm.]	12 $\frac{1}{2}$ " [32,86 cm.]
Length Extended.....	18 $\frac{7}{16}$ " [46,83 cm.]	18 $\frac{7}{16}$ " [46,83 cm.]	18 $\frac{7}{16}$ " [46,83 cm.]	20 $\frac{1}{2}$ " [54,45 cm.]
Piston Diameter.....	1" [2,54 cm.]	1" [2,54 cm.]	1" [2,54 cm.]	1" [2,54 cm.]





## BODY

## Contents

SUBJECT	PAR.
Body Reinforcement.....	T-20
Care — Exterior Finish.....	T-2
— Chromium.....	T-3
— Interior.....	T-4
Cowl Upper Trim Moulding.....	T-15
Cowl Ventilator.....	T-22
Door Adjustment.....	T-5, T-25
Door Striker Plate.....	T-6
Front Passenger Seat.....	T-19
Hood Adjustment.....	T-16
Hood Prop.....	T-17

SUBJECT	PAR.
Hood Vibration.....	T-18
Glass Replacement — Door.....	T-10
— Sliding Window.....	T-14
— Window.....	T-11
— Windshield.....	T-12, T-13
Locks.....	T-9
Tail Gate Adjustment.....	T-7
Tail Gate Hinge Replacement.....	T-8
Tool Box Door.....	T-24
Windshield Wiper.....	T-22
Windshield Wiper Cable Tension.....	T-23

**T-1. GENERAL**

The bodies of all models discussed here are of all-steel construction. Of heavy gauge steel, all open edges of the panels are turned under, reinforced and flanged to give inherent strength. The panels are reinforced with "U" sections and welded. All component panels are seamed and welded together. The bodies are insulated from the frame with insulator shims placed between the body and frame and held in position by the body bolts.

Regardless of the rigidity built into the body it must be periodically inspected for settling and alignment.

- Check all body bolts to be sure they are tight.
- Check floor board screws and tighten if necessary.
- Inspect door hinges, locks, window regulators and tighten.
- Check the door striker plates — adjust and tighten.
- Check window glass for side play. Side play may be eliminated by placing cardboard shims back of the felt lined runs.

**T-2. Care of Exterior Finish**

Frequent washing with clear water and polishing with a soft cloth or chamois will preserve the original lustre of the finish. Always use cold water in washing a car. Never wash it in the direct rays of the hot sun and always wait until the sheet metal surfaces are cooled off before washing.

If the vehicle finish becomes extremely dirty, and especially when the dirt is allowed to remain for some time it may remain dull even after washing. Dullness may also be caused by slight oxidation of the finish due to chemical action of the elements.

All that is needed to bring back the original lustre is a small amount of good polish. Rub the polish lightly until dry to eliminate a damp surface to collect dust. Oxidation of the finish will be reduced to a minimum by periodic application of a good quality wax.

**T-3. Care of Chromium Finish**

Wash chromium finish with clear water and a clean

cloth. No polishing is required, however, the life of the finish will be extended by periodic application of a good quality wax.

Because of the severe use to which they are put, bumpers present a special problem in regards to keeping their polished surface bright. The finish is likely to become scuffed or worn through and small rust spots may appear. Should this occur clean off the rust with mild kitchen scouring compound on a cloth, then apply wax, transparent varnish or lacquer to retard further rust formation.

**T-4. Care of the Interior**

To remove spots and stains from upholstery or carpets the following suggestions may be helpful. Use a good shampoo type cleaner where possible instead of carbon tetrachloride on cloth upholstery. When using cleaning fluids, follow the method that is commonly used when cleaning spots from clothing — that is, dampen a clean cloth with a little of the fluid and begin rubbing lightly around the outside of the spot, working gradually toward the center. This method keeps the spot from spreading and is less likely to leave a ring.

**Blood Stains** — Rub the stain with a clean cloth dampened with cold water.

**Candy** — If candy does not contain chocolate, the stain can be removed by rubbing with a cloth moistened with very hot water. Chocolate stains may be removed by rubbing with a cloth and lukewarm water, followed by sponging with carbon tetrachloride.

**Chewing Gum** — Moisten the gum with carbon tetrachloride and work the gum off the fabric with a dull knife while it is still moist.

**Fruit Stains** — Rub vigorously with a cloth dampened with very hot water. Let dry, then sponge with carbon tetrachloride.

**Grease and Oil** — Use cleaning fluid or carbon tetrachloride. If the fabric is saturated with oil, pour on the cleaning fluid and soak it up by pressing a white blotter on the spot before sponging in the usual manner with a cloth dampened in the fluid.

**Ice Cream** — Use the same method as for removal of fruit stains. If the stain is persistent, use a cloth moistened with warm soap suds, then cold water. After drying, sponge with carbon tetrachloride.

**Lipstick** — Pour on a little carbon tetrachloride and immediately press a clean blotter firmly on the spot. Repeat until the stain is removed.

**Paints and Lacquers** — Use a cloth saturated with turpentine, then sponge with a cloth and cold water.

**Shoe Polish** — Black or tan polish may be removed with a cloth saturated with carbon tetrachloride. White polish will usually come off with a stiff brush. If not, moisten with cold water, let it dry, and then use a brush.

**Tar** — Moisten the spot with carbon tetrachloride and remove as much tar as possible with a dull knife. Then sponge with cleaning fluid.

**Water Spots** — Sponge the entire panel with a clean cloth dampened with cold water then sponge the spot with a cloth moistened with carbon tetrachloride.

**Imitation Leather Upholstery** — May be cleaned by rubbing the surface with a clean cloth saturated in water, using a good quality soap. After thorough scrubbing, use water only and polish dry with a soft dry cloth.

#### T-5. Door Adjustment — All Models

Doors are adjusted by shifting the door end of hinges, Fig. 321, where attached to the door. Attachment is made by screws which thread into a floating plate at each hinge. Loosen the attaching screws to shift the door either vertically or horizontally. Do not attempt to spring the hinges to improve door fitting. The combination door support latch pin and dovetail is attached to the pillar by screws threaded into a floating plate. Adjustment may be made by loosening the screws to allow shifting of the assembly. Use care in positioning this assembly. If it is located too far in it will be necessary to slam the door and the remote control button will be hard to




FIG. 321—DOOR HINGE ADJUSTMENT

operate — if too far out the door will be loose horizontally.

#### T-6. Door Striker Plate

To prevent the door opening in the safety latched position, the door striker wedge, Fig. 322, must be properly positioned in relation to the cam surface of the lock toggle. Improper safety latched position, as shown in Fig. 322, will permit the toggle to override the striker pin, causing the door to open. The striker must be positioned so that the door lock toggle will be held securely in engagement with the striker pin. The top or wedge end of the striker plate must be moved outward until the wedge firmly contacts the cam surface of the lock toggle, exerting sufficient pressure to prevent the toggle from overriding the striker pin. This may be accomplished by placing a suitable driver against the upper inside edge of the striker plate and with a hammer strike the driver to move the plate outward slightly. The safety latch operation must be checked intermittently with the repositioning of the striker until the correct position is obtained.

The striker plate to pillar attaching screws must be securely tightened after the striker plate has been properly positioned.

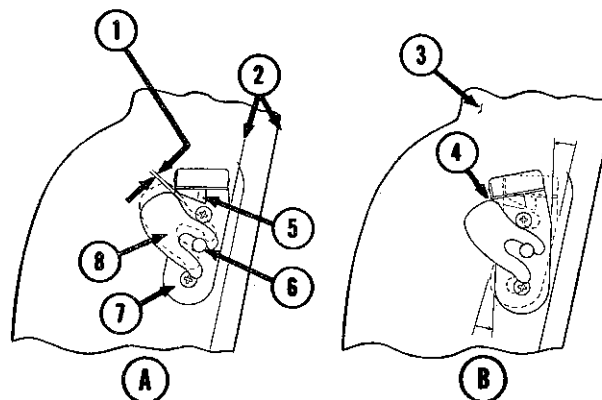

10602

FIG. 322—LOCK TOGGLE AND STRIKER PLATE POSITION

- |             |                     |
|-------------|---------------------|
| A—Incorrect | 4—No Clearance      |
| B—Correct   | 5—Wedge             |
| 1—Clearance | 6—Striker Plate Pin |
| 2—Parallel  | 7—Striker Plate     |
| 3—Pillar    | 8—Door Lock Toggle  |

#### T-7. Tail Gate Adjustment

All Utility Wagons

No adjustment is provided for the upper and lower piano type tail gate hinges. Both the upper and lower lock catches mounted on the body pillars are adjustable vertically. Loosen the mounting screws to adjust. The lower tail gate dovetails are adjusted in the same manner.

#### T-8. Tail Gate Hinge Replacement

All 4WD Models

When replacing the tail gate hinges with the latest type it will be necessary to alter the tail lamp bracket. The alteration consists of increasing the width of the U-shaped opening from  $1\frac{5}{8}$ " [41 mm.] to  $1\frac{3}{4}$ " [45 mm.].

### T-9. Door Locks

The remote control door locks are riveted at assembly and it is recommended that a new assembly be installed should trouble develop. To install a new lock first run the glass up to the closed position and remove the window regulator crank by pressing in the trim ring and removing the retaining pin. To remove the remote control handle, push in on the trim ring and remove the retaining pin.

Remove the arm rest and trim panel. Remove the inside door locking knob by unscrewing. Remove two screws from the edge of the door which attach the lower end of the glass runway channel. Place the lock in locked position by turning the forked latch to a vertical position. Remove three screws attaching the remote control to the door panel. Remove four screws attaching the lock to the edge of the door and remove the lock. Reassembly is the reverse of disassembly.

It is not necessary to remove the outside door lock handle to remove the lock assembly. To remove the handle, remove the retaining screw from the edge of the door. Run the glass up to the closed position. If the trim panel has not been removed, loosen the upper corner, directly back of the lock, to spring it back sufficiently to reach in and remove the retaining nut.

Should the outside door handle fail to release the door lock easily it is usually due to the trigger in the handle failing to release the lock until it is nearly flush with the handle due to wear or a bent releasing lever on the lock assembly. This condition may be usually corrected without replacement of parts as follows:

Remove the inside lining panel as outlined above.

Remove the outside door handle and close the door and lock it with inside lock. Measure through the door handle hole the distance from the face of the outside door panel to the face of the releasing lever on the lock assembly. Measure the distance on door handle from the edge of the handle casing to the tip of the boss on the trigger striker lever as shown in Fig. 323. Subtract the two measurements which will indicate the amount the lever boss must be built up to eliminate the lost motion in the trigger.

Add slightly more than this amount to the lever boss, indicated by the arrow in Fig. 323, by brazing and dress the brass down to the correct dimension with a file. Lubricate the handle parts and install the handle.

### T-10. Door Glass Replacement

To remove the door glass first remove the door lock remote control escutcheon plate by pressing it in and rotating it  $\frac{1}{4}$  turn counter-clockwise. If equipped with a remote control handle, remove as outlined in "Door Locks". Remove the regulator crank by pressing in the trim ring and removing the retaining pin. Remove the trim panel and also remove the garnish moulding from around the glass. Loosen the glass run channel and remove the regu-

lator control arms from the channel, mounted on the bottom of the glass, by removing the two hair pin type locks which retain the control arm buttons. Remove the glass and runway as an assembly through the window opening.

### T-11. Window Glass Replacement

Windshield, rear window and quarter window glass is replaced in the same manner on all models. The glass is mounted in a rubber channel or weather seal which is held in position by the rubber garnish moulding and a flange on the body. To remove the glass first remove the garnish moulding. The rubber

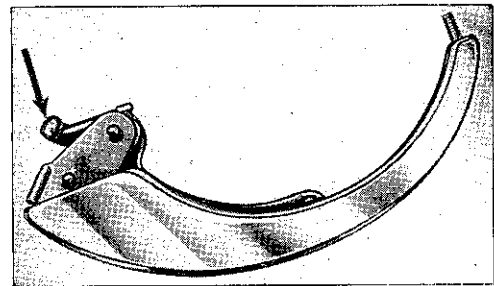


FIG. 323—DOOR HANDLE ADJUSTMENT

channel is cemented, for waterproofing, to the body flange and the cement must be loosened. This can usually be done by pressing with the fingers, however, in some cases it may be necessary to use a dull thin blade as a tool. When the cement is loosened the glass and rubber channel can be readily pushed through the opening for removal.

To install a glass, first remove the old cement from the rubber channel and body flange. Cement the body flange and glass. Place the rubber channel over the glass and wrap a piece  $\frac{3}{16}$ " (4.76 mm.) rope around the channel. See Fig. 324. Place the glass and channel in the opening and as the assembly is pushed against the body flange pull both ends of the cord out from around the channel. As the cord is pulled the lip of the rubber channel will be pulled out and correctly positioned against the body and over the body flange. Fig. 325.

### T-12. Windshield Glass Replacement

Models with two-piece windshield

To make installation of a windshield glass, it is necessary to first remove the entire windshield assembly. To make a satisfactory installation, both glasses must be installed simultaneously.

First, remove the center cover plate from the center bar garnish moulding, the mirror bracket plate, the center bar, the outer cover panel and the two garnish mouldings.

Check the packing strip used for attachment of the upholstery to be sure there is no obstruction present which will prevent the free removal of the assembly. Drive in any upholstery tacks which may be protruding and be sure the packing strip is well back in the groove.

Have one man work from the front, using a screw driver to work the rubber mounting channel over the body retaining flange. Start at the top center and as the rubber is removed, push in on the assembly to prevent the rubber from working back over the flange. Have a second man support the assembly to prevent its falling in suddenly.

After the assembly has been removed, place it on a flat surface with a piece of 1" thick wood under each glass. Remove the glass which must be replaced by working the rubber channel over the edge of the glass. It may be necessary to use a screw driver to loosen the cement seal between the glass and rubber.

Next, install the glass in the rubber mounting channel. The two pieces of glass are interchangeable, however, note that the two corners which are

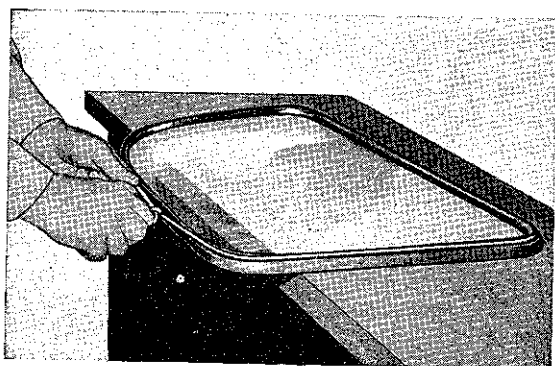


FIG. 324—WINDOW GLASS REPLACEMENT

nearly square are placed together with the rounded corners outside. Use a small paint brush to thoroughly coat the channel, which receives the glass, with cement. Place the rubber mounting channel over the glass and work the glass into the channel, being sure it is well-seated.

Next, reinstall the windshield assembly in the body, which requires two men. First, mix a strong solution of soap and water and paint the body and mounting flange at all points which contact the rubber. The soap acts as a lubricant to facili-

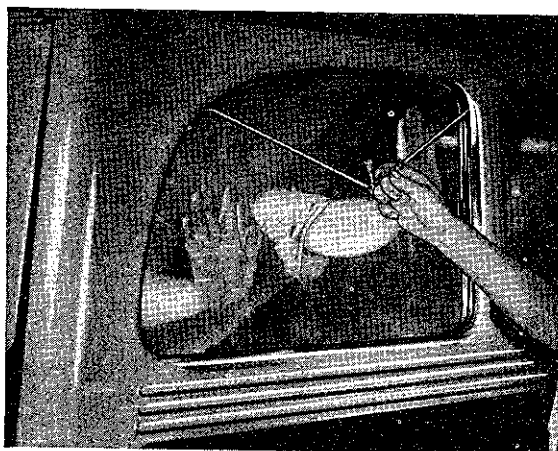


FIG. 325—WINDOW GLASS REPLACEMENT

tate the installation. Wrap a piece of string at least  $\frac{1}{16}$ " in diameter, but not more than  $\frac{1}{8}$ ", around the assembly and in the mounting flange groove as shown in Fig. 326. Approximately eight feet of string will be required. Have a man positioned inside the vehicle to place the assembly in the body opening, pressing it in until the rubber contacts the mounting flange. As the assembly is pressed in, have a man on the outside pull the string from the groove to feed the lip of the channel uniformly over the body flange around the windshield. See Fig. 328.

After positioning the windshield in the body, cement the rubber mounting channel to the body flange.

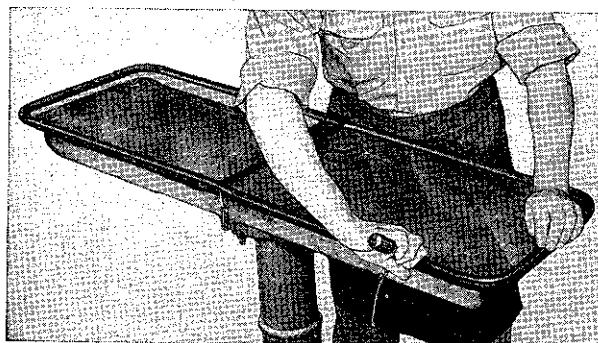


FIG. 326—WINDSHIELD GLASS INSTALLATION

### T-13. Windshield Glass Replacement

Models with one-piece windshield

**a.** Remove and retain the garnish moulding attaching screws, garnish moulding covers, and garnish mouldings. If the vehicle is equipped with a heater, rubber plugs will have been installed under the garnish moulding at each side of both defroster openings. Retain these plugs.

**b.** Unlock the existing weatherstrip with a weatherstrip locking tool, if available, or a wooden wedge. Carefully remove the windshield. Remove and discard the weatherstrip.

**c.** Fill the hem flange groove (1) in the new weatherstrip with suitable sealer. Install the weatherstrip on the hem flange with the weatherstrip lock (2) facing outside the vehicle.

**d.** Install the filler tubing (3) beneath the weatherstrip lip (4) facing inside the vehicle. Locate the 6" [152 mm.] long piece of tubing at the top center of the windshield opening. Locate the 32" [813 mm.] long piece of tubing along the bottom edge of the windshield opening with the ends of the tubing extending beyond the defroster openings in the instrument panel. Install these pieces of tubing before installing the windshield glass.

**e.** With the weatherstrip unlocked, install the windshield glass in the glass groove (5) of the weatherstrip. Fill the glass groove between the glass and the locking lip with suitable sealer.

**f.** Lock the weatherstrip in place with a weatherstrip locking tool, if available, or a wooden wedge. For ease of installation, the use of a locking tool is recommended. Remove all excess sealer.

g. Reinstall the garnish mouldings, garnish moulding covers, and defroster rubber plugs (when so equipped). The  $1\frac{1}{2}$ " [38 mm.] long screws are used along the top; the  $1\frac{1}{4}$ " [32 mm.] long screws along sides and bottom.

h. If a different type of weatherstrip was previously installed, new garnish moulding attaching holes must be drilled or punched in the instrument panel, door pillars, and header before the garnish moulding can be reinstalled. To drill new garnish moulding attaching holes, use the mouldings as templates. Position the mouldings on the door pillars with mouldings as far as possible to the rear of the vehicle. Drill or punch three .128" [3,251 mm.] diameter holes in each pillar and loosely attach each moulding with three screws. Position the ends of the mouldings at both the top and bottom center of the windshield opening with dimension A at  $\frac{1}{8}$ " to  $\frac{3}{16}$ " [3,175 to 4,763 mm.]. Drill or punch seven .128" diameter holes in the header rail and nine .120" [3,048 mm.] diameter holes in the instrument panel. Then install the garnish mouldings as outlined in step g.

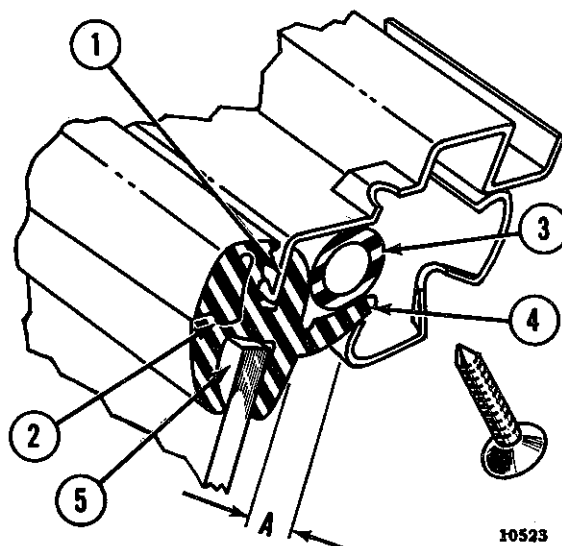


FIG. 327—ONE-PIECE WINDSHIELD WEATHERSTRIP

- 1—Hem Flange Groove
- 2—Weatherstrip Lock
- 3—Filler Tubing
- 4—Weatherstrip Lip
- 5—Glass Groove

#### T-14. Sliding Window

All Utility Wagons

To remove the sliding window, first remove the garnish moulding. Unclip the glass run channel at each end. Glass and channel are removed as an assembly by tilting in.

To remove the sliding window lock it is first necessary to remove the glass as outlined above. Remove the lock handle by removing the retaining pin using a pin punch. Remove the nut directly back of the handle. Remove the trim panel and remove the two screws attaching the lock spring to the body.

Fig. 329 illustrates the drain for the sliding window. Be sure the tube is cemented in position and inserted in the body drain hole.

#### T-15. Cowl Upper Trim Moulding

All 4x2 models with one-piece windshield

Cowl upper trim moulding is attached in production with T-bolts and hex nuts on later models and with trim clips on early models. Should water leakage occur at the cowl upper trim moulding on a vehicle with the moulding attached by trim clips, they should be replaced with T-bolts. Procedure:

- a. Remove the trim moulding cover located at the center of the moulding.
- b. Remove the attaching screws at the outside ends of the moulding.
- c. Remove the moulding from the vehicle.
- d. Remove and discard the trim clips.
- e. Plug six holes in the cowl, the first, third, and fifth in from each side, with sealer. These holes are not reused.
- f. Place sealer in the holes in the cowl for the attaching screws at the outside ends of the moulding. This sealer is to prevent water leakage at these holes after the moulding is reinstalled.
- g. Reinstall the moulding using six T-bolts and six hex nuts.
- h. Apply sealer under the head of each T-bolt before installing the moulding. Tighten the nuts securely after the moulding is installed.
- i. Install the attaching screws at the outside ends of the moulding.
- j. Install the trim moulding cover.

#### T-16. Hood Adjustment

Hood hinge mounting holes on all models are slotted for hood adjustment.

The hood lock used on all models may be adjusted by threading the spring loaded catch, mounted on the hood, in or out. A screw driver slot is provided

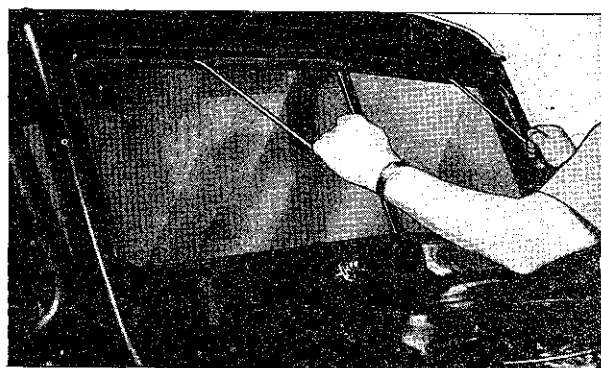


FIG. 328—WINDSHIELD GLASS INSTALLATION

for the adjustment. Use care that the catch is not screwed too far into the hood making it difficult to release.

#### T-17. Hood Prop

It is possible for the hood prop to be incorrectly assembled to the lip on the upper hood lock plate support. The hood prop may then bear on the radiator cap with resulting vibration eventually cracking the filler-neck-to-tank seam causing a leak.

Correctly assembled, the spring is placed between the support lip and the washer at the cotter pin end of the prop. Incorrectly assembled, the spring is placed between the lip and the washer at the bend in the prop.

### T-18. Hood Vibration

Excessive hood vibration may develop on vehicles after long service and may be corrected as follows:

- Check the hood lock for tight engagement of the locking bolt. Adjust if necessary.

- Inspect the weatherstrips on the front and rear hood ledge for excessive wear or poor adhesion. Replace or recement if necessary.

- Install new bumpers in place of the two original bumpers on the rear hood ledge at each end of the rear weatherstrip.

- Apply chalk on top of the new bumpers and close the hood tightly. Open hood and check chalk marks or inner surface of hood. If bumpers are not providing good compression, add flat washers under the bumpers until positive pressure between hood and bumper is obtained.

- Remove end clips from the weatherstrip on the front hood ledge. Cut  $1\frac{1}{2}$ " [4 cm.] from each end of the weatherstrip. Make sure the remaining weatherstrip is securely cemented at the ends to the hood ledge.

- Install two bumpers, one at each end of the front weatherstrip, using the holes left by removal of the end clips. Check for proper compression as outlined in paragraph d. above.



FIG. 329—SIDE WINDOW DRAIN

### T-19. Front Passenger Seat

The pivot bolts on Utility Vehicle front passenger seats will work loose unless properly installed. The correct installation is shown in the illustration.

To prevent the bolt from working loose, the bolt must be installed with the head next to the seat leg, not the pivot bracket. Also the flat washer should be next to the seat leg.

### T-20. Body Reinforcement Kit


All 4-Wheel-Drive Models

If a 4-wheel drive truck or Utility Wagon is subjected to severe off-the-road usage it is recommended that the body reinforcement kit, Part No.

683962, be installed on the vehicle. This kit is available from the parts department and includes:

- Dash panel reinforcement
- Air deflector reinforcement
- Radiator guard reinforcement
- Rear fender braces
- Front seat support pan reinforcement

Complete installation instructions are included in the kit.

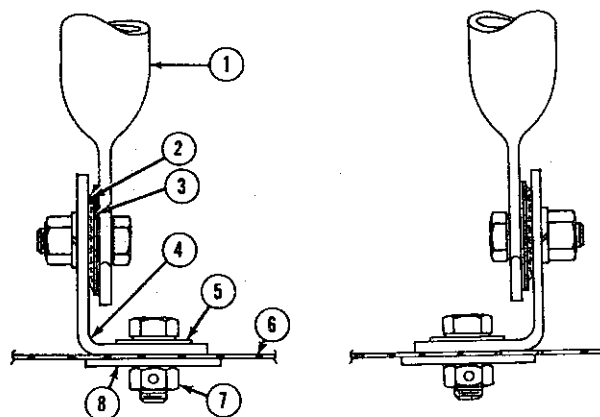

10600

FIG. 330—FRONT PASSENGER SEAT ATTACHMENT

- |                        |                |
|------------------------|----------------|
| 1—Front Passenger Seat | 5—Flat Washer  |
| 2—Spring Washer        | 6—Floor Pan    |
| 3—Flat Washer          | 7—Stollock Nut |
| 4—Pivot Bracket        | 8—Flat Washer  |

### T-21. Cowl Ventilator

The cowl ventilator lid on all models is protected from leakage by sponge rubber gaskets. The gaskets are cemented in position and may be readily replaced.

The ventilator lid hinge mounting holes are slotted for adjustment.

### T-22. Windshield Wiper

The windshield wiper motor is of the conventional vacuum type, mounted at the center of the dash directly back of the engine. The tandem wiper arms are actuated through cables which are equipped with suitable spring loaded tensioners and operate over "V"-type pulleys.

A tensioner may be readily released for cable replacement by loosening the nut which attaches it to the mounting bracket. See Fig. 331.

A ferrule is soldered at each end of the cable. The cable is installed by placing the ferrule in the recess provided in the motor arm, by passing the cable through the slot. When the cable is installed, correctly tighten it by adjusting the tensioner spring then retighten the locking nut.

Both the tensioners and the arm shaft pivots assemblies are made for the right and left sides of the vehicle and cannot be interchanged. Should they be removed they should be tagged to insure correct reassembly.

### T-23. Windshield Wiper Cable Tension

Two windshield wiper cable tensioners are mounted under the instrument panel. They keep the cables under tension and guide the cables from the wiper motor to the wiper pivot housing. When windshield wiper cables lose tension, overtravel is the result. Overtravel will allow the windshield wiper blades to slap against the windshield center divider bar or lower windshield weatherstrip. There is a limit to the cable slack that can be compensated for by repositioning the arms. Adjustment procedure is to check tension and then reposition arms. Only if these two adjustments do not eliminate the slapping condition should modification in step e be attempted.

**a.** Be sure bolts which attach each tensioner to the firewall are tight.

**b.** There is a tensioner for both the left and right wiper. The right tensioner can be seen in Fig. 331. This adjustment can be made on left or right tensioner or both.

Loosen, but do not remove entirely, the cable tensioner lock nut on the tensioner bracket. The spring-loaded cable tensioners should then automatically take up any slack in the cables. In some cases it may be necessary to tap the stud lightly to unseat the lockwasher located between the tensioner bracket and base. Then pry the tensioner bracket slightly outboard with a screwdriver to induce cable tensioner springs to take up the slack.

**c.** Retighten the lock nut firmly to hold the pulleys on the tensioner in the new position.

**d.** Operate the wipers. If wipers are still slapping, reposition wiper arms one serration at a time until

slap is eliminated. Only if slap is not eliminated, modify the tensioners as follows in step e.

**e.** Elongate the mounting holes in the tensioner bracket toward the center of the vehicle  $\frac{1}{16}$ " [1,6 mm.]. This will let tensioner bracket move outboard an additional  $\frac{1}{16}$ " to provide more tension on the cables.

**f.** Install tensioner bracket in new mounting position.

**g.** Finally, check that wiper cables have no interference along their entire travel.

### T-24. Tool Box Door

#### Utility Vehicles

If the tool box doors will not stay closed because the door is lower than the body panel opening, loosen the nuts on the hinges and use the slotted holes of the body panel provided for adjustment. If the door is positioned satisfactorily but fails to latch because of faulty operation of the lock cylinder, the lock cylinder should be replaced.

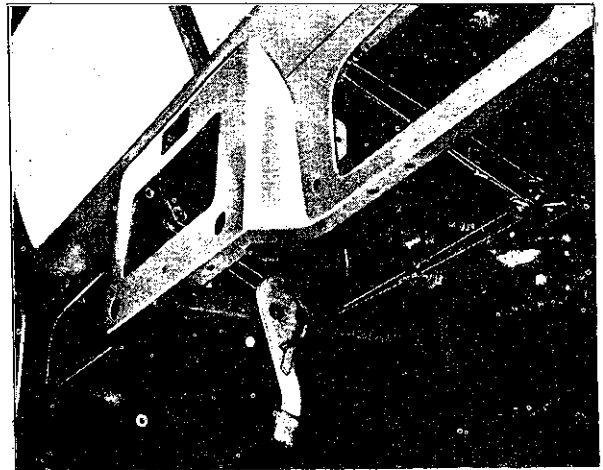


FIG. 331—WINDSHIELD WIPER CONTROL





## MISCELLANEOUS

## Contents

SUBJECT	PAR.	SUBJECT	PAR.
Extra Equipment.....	U-2	Miscellaneous Data.....	U-20
Power Take-Off.....	U-3	Special Tools.....	U-19
Governor.....	U-9	Torque Specifications.....	U-18

**U-1. GENERAL**

Miscellaneous information included in this section includes coverage of extra equipment, special tools, torque specifications, and charts and tables.

**U-2. EXTRA EQUIPMENT**

Much of the utility of the 4-wheel drive vehicles is due to the extra equipment which has been designed to adapt it for farming and industry. The maintenance and use of some of this equipment is outlined in this section.

**U-3. Power Take-Off**

Several methods of utilizing engine power, both with the vehicle standing or in motion, have been developed. General data, including horse power available, covering the power take-off assemblies, is given in Par. U-20.

The rear power take-off is covered in detail in the following paragraphs.

**U-4. Power Take-Off with Shaft and Belt Pulley**

The rear power take-off consists of four assemblies: the shift unit mounted on the transfer case, propeller shaft and universal joints, shaft drive assembly, and pulley drive assembly.

The shaft drive assembly is mounted at the rear of the vehicle and is designed to operate trailed equipment. The pulley drive assembly is driven by the shaft drive and is designed to operate stationary equipment by belt drive.

**U-5. Front Unit or Shift Assembly**

Drive for the power take-off is taken from the transfer case main drive gear through an internal type sliding gear, No. 42, Fig. 332. The sliding gear is mounted in the shift housing and the shift lever controls this gear to engage and disengage the drive. A conventional type poppet ball and spring prevents disengagement of the gear.

The shift assembly is lubricated from the transfer case and no attention is required other than regular lubrication of the transfer case.

Should it be necessary to remove the assembly for service, first remove the bolts in the propeller shaft companion flange at the power take-off front universal joint. Remove the shift lever by removing the four screws holding the lever cover, in position.

Use care not to lose or damage the felt oil seal. Remove the five screws used to attach the assembly to the transfer case and remove the shift unit by pulling it to the rear.

Wash the assembly thoroughly in cleaning solution and place the unit in a bench vise if it is necessary to dismantle it.

Place a light bar through the shift lever opening to pry the shift rail and fork, No. 1, forward to clear the poppet ball and spring, using care not to lose the ball and spring, and remove the shifting sleeve, No. 42.

Remove nut, No. 4, and the companion flange, after which the shaft, No. 39, may be driven forward out of the housing. Be careful not to damage oil seal, No. 37, as the shaft is removed. Remove the spacer, No. 40, after which bearing No. 38 can be removed. Remove bearing, No. 38, from the housing.

Wash all parts in cleaning solution and inspect them for wear or damage. Reassembly is in the reverse order of dismantling. Do not overlook assembly of the poppet ball and spring when installing the shift rail.

**U-6. Propeller Shaft and Universal Joint Assembly**

The propeller shaft is tubular and has two universal joints, Fig. 332. The joints are enclosed by housings and boots, which contain the lubricant. As the torque capacity of the propeller shaft is far greater than that developed by the engine and as there is very little flexing of the joints, this unit will require no attention for the life of the vehicle under normal use other than an inspection at each 1000 miles (1600 km.), to guard against loose companion flange attaching screws or leakage of lubricant at the boots. Should the power take-off be used often for continuous operation, disassemble the joints and repack them with lubricant once each year. See "Propeller Shaft and Universal Joint" section.

**NOTE:** A Spicer type propeller shaft has been released as an optional component of the Power Take-Off assembly. This shaft has the cross type

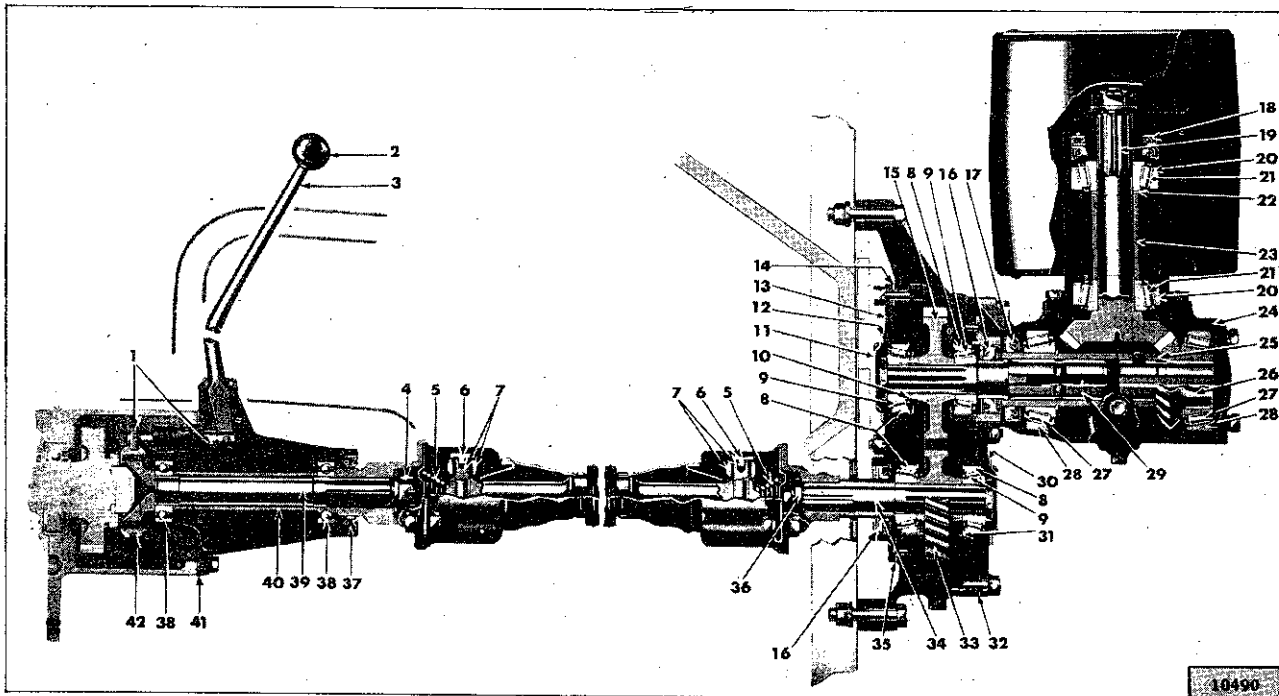


FIG. 332--POWER TAKE-OFF

- |                      |               |                     |                     |            |                    |
|----------------------|---------------|---------------------|---------------------|------------|--------------------|
| 1. Fork and Rod      | 8. Cup        | 15. Gear            | 22. Shims           | 29. Shaft  | 36. Washer         |
| 2. Ball              | 9. Bearing    | 16. Oil Seal        | 23. Spacer          | 30. Gasket | 37. Oil Seal       |
| 3. Lever             | 10. Snap Ring | 17. Oil Seal        | 24. Shims           | 31. Shims  | 38. Ball Bearing   |
| 4. Nut               | 11. Plate     | 18. Oil Seal        | 25. Shims           | 32. Gasket | 39. Gear and Shaft |
| 5. Button and Spring | 12. Gasket    | 19. Gear and Shaft  | 26. Pinion          | 33. Gear   | 40. Spacer         |
| 6. Spring            | 13. Retainer  | 20. Cup             | 27. Cone and Roller | 34. Shaft  | 41. Gasket         |
| 7. Trunnion and Ball | 14. Gasket    | 21. Cone and Roller | 28. Cup             | 35. Gasket | 42. Sleeve         |

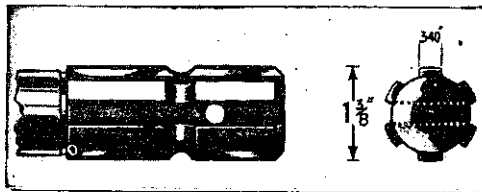


FIG. 333--POWER TAKE-OFF SPLINED SHAFT

universal joints and is attached with "U" bolts. A shear pin is embodied in the shaft as a safety feature. See Fig. 334 No. 1. It is **IMPORTANT** to note that the Spicer type universal joints have no slip splines to allow movement endwise and it is necessary to select and install spacing washers at No. 2, Fig. 334 to correctly position the center bearing assembly to prevent end bind in the universal joints.

Each joint on this type shaft is equipped with a lubricator and the shaft should be lubricated when

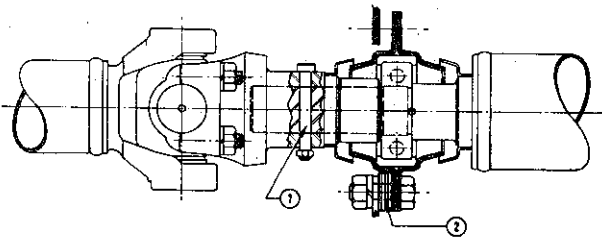


FIG. 334--SPICER PROPELLER SHAFT

- 1—Shear Pin 2—Spacing Washers

installed and periodically thereafter, depending upon the amount of usage. Use a hand gun to avoid damaging the joint seals.

### U-7. Shaft Drive Assembly

The standard six splined,  $1\frac{3}{8}$ " (34.92 mm.) diameter output shaft, No. 29, Fig. 332 and also Fig. 333, of the rear power take-off assembly is driven through two helical cut gears mounted in a housing attached to the vehicle at the center of the frame rear cross member. Both the input and output shafts rotate on tapered roller bearings with the running clearance adjusted by shims.

The maximum torque of the engine is developed at a speed of 2000 r.p.m. At this speed the splined output shaft turns 536 r.p.m., which is the SAE standard for all farm tractors. This shaft speed is obtained, when the vehicle is in motion, by using low transmission gear and low transfer case gear in four-wheel drive.

When the power take-off is used, inspect it periodically to guard against possible leakage of the lubricant, which should be kept at the level of the filler plug hole in the left side of the housing. The attaching screws should be kept tight at all times and the breather free of dirt.

Should it be necessary to remove the unit for service, first remove the four screws attaching the rear universal joint to the companion flange. Remove the flange retaining screw and the flange. Remove the screws attaching the assembly to the vehicle and remove the unit.

Drain the oil and wash the unit with cleaning solution. Next remove the cover at bearing No. 9, and gasket. Bend the locking tangs away from the nut and remove the nut and locking washer on the input shaft, No. 34. Remove the five screws attaching the bearing retainer and remove the bearing and retainer assembly with the gasket, No. 32. Use care not to lose the shims installed between gear No. 33 and the bearing cone. The bearing cone may be readily removed from the retainer, after which remove the cup, then the snap ring. Next remove the three screws attaching the oil seal retainer and pilot assembly. Press the shaft through the housing, removing the bearing cone, the oil seal, and the oil seal retainer as an assembly. Gear No. 33 may be removed through the rear bearing retainer opening. The bearing cup may be pushed out after which the snap ring can be removed. The bearing cone and the oil seal may be removed from the shaft. Removal of the output shaft assembly is made in the same manner.

Adjustment of the tapered roller bearings on both shafts is accomplished by shim packs placed between the gear hubs and the bearing cones. The shims are interchangeable and care should be used not to mix the two packs, and that they be replaced in the same position from which they were removed. Should new parts be installed in the assembly, it may be necessary to change the thickness of the shim packs. The shims are supplied .003", .005", .010" and .030" (.076, .127, .254 and .762 mm.) in thickness. The correct combination of these shims must be installed to allow the bearings to turn freely, yet without end play of the shaft. As an approximate guide, if the thickness of the shim packs be unknown, install .031" (.787 mm.) shims on each shaft and add or remove, if necessary, to secure the correct adjustment.

Reassemble in the reverse order of dismantling. When assembly is completed, fill the housing to the filler plug level with hypoid gear oil. See Lubrication Chart.

#### U-8. Pulley Drive Assembly

The pulley drive assembly is mounted on the shaft drive assembly and is driven by the splined output shaft.

To dismantle the pulley drive assembly, remove it from the vehicle by removing the four attaching screws. Drain the oil from the housing and wash the assembly thoroughly with cleaning solution or solvent.

First remove the pulley retaining nut, Fig. 332, and remove the pulley. Remove six screws to disassemble the pulley shaft housing from the gear housing. Note that there is a shim pack between the two housings which must be kept separate.

Press the pulley shaft, No. 19, through the housing, removing the inner bearing cone, No. 21, spacer and shim pack, Nos. 22 and 23.

Remove the oil seal, No. 18, after which the outer bearing cone may be lifted from the housing. If necessary, pull the bearing cups, No. 20, from the housing.

To dismantle the gear housing assembly, first remove bearing retainer cover and shim pack, No. 24. Bearing assembly No. 27 and gear No. 26, will

come out by using a brass drift to tap the shaft through the housing. Be careful not to lose the shims, No. 25, from between the gear and the sleeve on the stub shaft. Pull oil seal No. 17 and, if necessary, bearing cup No. 28.

Wash all of the parts in solvent and make careful examination to determine their condition. Replace parts found worn or damaged and reassemble in the reverse order, excepting the two oil seals which should not be installed until the shim adjustment is checked.

Shim packs of correct thickness should be installed to allow bearing to turn freely without end float and to provide .004" to .010" (.102 to .254) backlash of the gears. After the gear backlash is corrected with shim packs, No. 25 and that placed between the housings, the bearing adjustment is made with shim packs, No. 22 and No. 24. The standard thickness of gear adjusting shim packs, No. 25 and that placed between the housings, is .031" (.787 mm.). That of No. 22 is .050" (.127 mm.) and No. 24 is .062" (.157 mm.). Should the shims become lost or mixed, install the standard packs and then add or remove to secure proper adjustment. When the assembly is completed do not overlook filling the housing to filler plug level with hypoid gear oil. See Lubrication Chart.

#### U-9. GOVERNOR

Three different governors are used in production — the King-Seeley, the Monarch and the Novi. These governors are all of the centrifugal type and installation is similar as they are designed to mount on the same bracket and utilize the same dash control parts. There are some differences, however, in the carburetor throttle bell crank adjustment, throttle linkage and speed control adjustment which are pointed out below.

#### U-10. Carburetor Throttle Bell Crank

When a Novi governor is used, it is necessary that a carburetor equipped with a throttle bell crank as shown in Fig. 336 be used. King-Seeley or Monarch governors may be used when the carburetor is equipped with that shown in either Fig. 336 or Fig. 337. Carburetors equipped with the early type bell crank (Fig. 337) may be changed over to the later type (Fig. 336) by installing Part No. 116847 Throttle Shaft and No. 116849 Throttle Lever.

When bell crank shown in Fig. 336 is used, the screw attaching the bell crank to the throttle shaft must be installed correctly for the governor being used. For either King-Seeley or Monarch governor, the screw is placed in the top hole (No. 1) and the inner end extends above the throttle lever. When no governor is used the screw is placed in the center hole (No. 2) and through the throttle lever, locking the two parts together as a unit. When a Novi governor is used the screw is placed in the lower hole (No. 3) and the inner end extends below the throttle control lever.

When a carburetor having throttle bell crank as shown in Fig. 337, with which the Novi governor cannot be installed, is used screw No. 1 is removed and discarded when Monarch or King-Seeley governor equipped. This screw must be installed only when no governor is used.

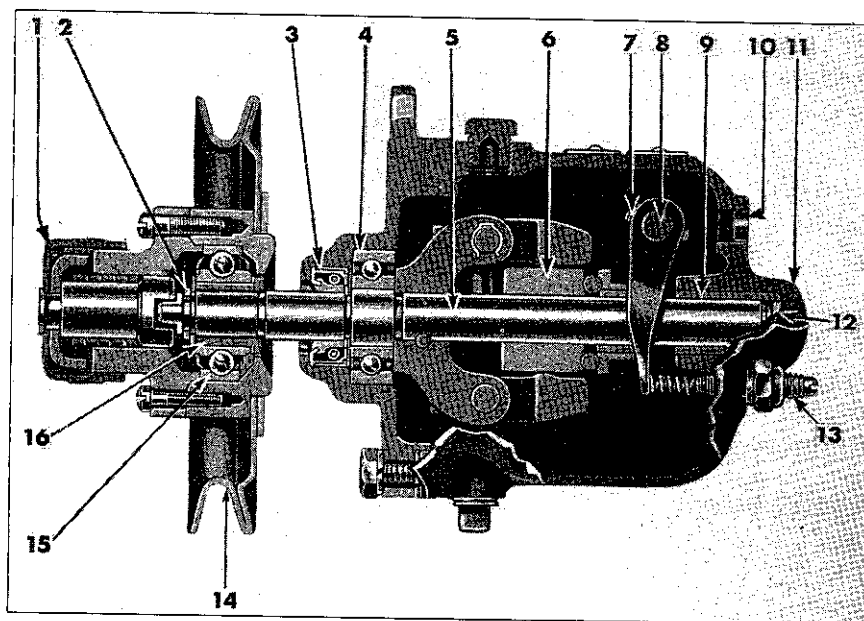


FIG. 335—KING-SEELEY GOVERNOR—4WD MODELS

**U-11. Governor Adjustment**

a. Adjust the carburetor to obtain smooth engine idle at 600 rpm., then stop the engine.

b. Check throttle linkage to ensure maximum throttle opening. Be certain that throttle and governor linkage is free.

c. Place the carburetor throttle in wide-open position and pull the governor control handle out to the last notch. Adjust the governor to bellcrank rod so that the linkage will hold the carburetor throttle in wide-open position.

d. Close the governor control and start the engine. Again pull the control out to the last notch and adjust the length of the cable at adjusting yoke so that the engine will run at 2600 rpm. Close the control to recheck the linkage for free action and to make sure the engine will return to 600 rpm. idle speed.

e. Should it appear necessary to lengthen the governor control cable excessively to obtain an engine speed of 2600 rpm. the link between governor and bellcrank may be lengthened slightly.

**U-12. Novi Governor Operation**

The Novi governor is directly belted to the engine as no clutch is provided to disconnect the drive.

To operate the vehicle **WITHOUT** governor control, push the governor hand control all the way **IN** against the instrument panel.

To operate the vehicle **WITH** governor control, pull the governor hand control handle out. The hand control has nine notched positions. Pulling the control out to the first notch sets the controlled engine speed at approximately 1000 r.p.m. and each successive notch increases the speed 200 r.p.m. until 2600 r.p.m. is reached in the ninth notch. The hand control may be released by turning the handle one-quarter turn in either direction.

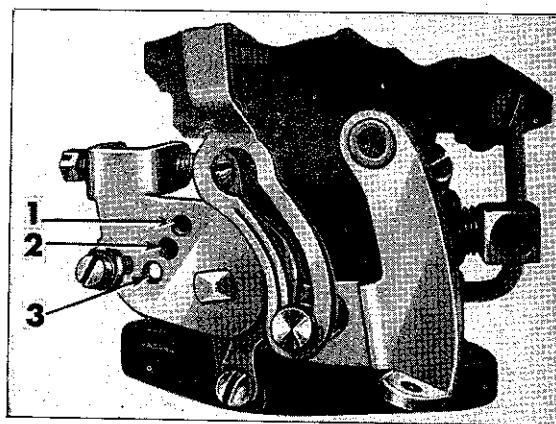


FIG. 336—THROTTLE BELL CRANK

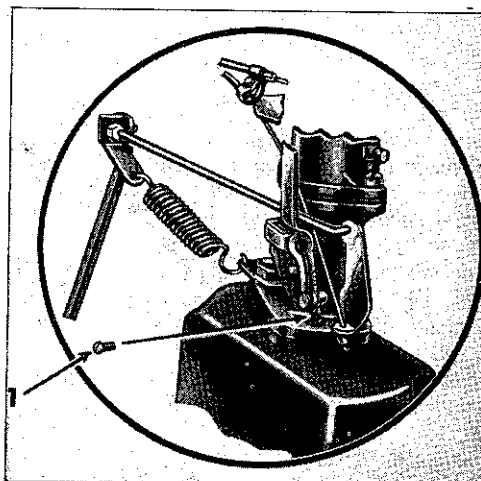


FIG. 337—THROTTLE BELL CRANK

When the engine is being operated under governor control (hand control out) the controlled engine speed may be exceeded at any time by depressing the foot accelerator in the conventional manner to secure a greater carburetor throttle opening than that determined by the governor hand control setting.

### U-13. King-Seeley Governor Adjustment

First tune the engine to obtain smooth operation. Mechanical adjustment of speed control is obtained by adjusting the length of the hand control cable with a clevis.

First check the carburetor bell crank to be sure the screw shown in Fig. 337 has been removed or if as shown in Fig. 336 is correctly located. Check the carburetor throttle rod to make certain the throttle opens and closes fully. Disconnect the accelerator spring and eliminate any bind or stiffness in the throttle connections and carburetor linkage. Free operation of the throttle is necessary to avoid surging of the governor when the engine is placed under load. After checking, reconnect the accelerator spring.

Set the dash hand throttle in the fully open position and leave it there. All the adjustments are made with the throttle in this position.

Adjust the length of the spring loaded governor-to-throttle link No. 12 to allow exact assembly between the short or lower governor lever and the carburetor throttle lever without moving either lever and with the throttle fully open. Tighten the adjustment lock nut and install the link.

Engage the governor clutch by turning the control on the pulley hub until the driving pins engage the deeper recesses. Place the governor hand control in the closed or IN position and check to be sure the hand throttle on the dash is fully out. Start the engine and allow it to run until operating temperature is reached.

The governed engine speed is controlled by the position of the upper or long governor lever. Adjust the yoke on the hand control cable and attach it to the governor arm when the arm is positioned to give an engine speed of 1000 rpm. In the absence of electrical tachometer equipment, the engine speed may be determined by the speedometer. Safely jack up the rear wheels and be sure the front wheel drive is not engaged. When driving the rear wheels in high or direct transmission gear, the speedometer will read 15 mph [24 kph.] at an engine speed of 1000 rpm.

In some cases it may be necessary to adjust the surge screw at the rear of the governor to eliminate surge. Should this be necessary, loosen the lock nut and turn the slotted screw in until the engine stops surging when the governor hand control is suddenly operated from low to high speeds, then tighten the lock nut. Use care in making this adjustment not to turn the screw in too far or governor speed control will be lost.

### U-14. King-Seeley Governor Operation

When speed control is not desired the governor may be disengaged with the twin-pin type clutch

mounted on the driven pulley hub. Never attempt to engage this clutch with the engine running. To operate it pull the cap out toward the radiator and rotate it  $\frac{1}{4}$  turn in either direction until you feel the two driving lugs drop into the recesses provided. The governor is engaged when the lugs are in the deeper recesses, and, locked in the disengaged position when in the shallow recesses.

The controlled engine speed may be varied with the governor hand control. With this control in against the dash, the controlled engine speed is 1000 r.p.m. The speed is increased 200 r.p.m. per notch, as the hand control is pulled out. The top speed is 2600 r.p.m. in the ninth notch. The hand control is released by turning the handle  $\frac{1}{4}$  turn in either direction.

When the governor is to be used, stop the engine, engage the governor clutch and pull the hand throttle control fully out to allow the governor to take over engine speed control. When the governor clutch is disengaged, release the hand throttle by turning the handle one-quarter turn in either direction.

### U-15. Monarch Governor Adjustment

The adjustment of the Monarch governor is the same as that listed above for the King-Seeley with the exception of the adjustment of the spring loaded governor-to-throttle link No. 12. Adjust this link to have approximately  $\frac{1}{16}$ " (1.588 mm.) slack or lost motion. No surge adjustment is provided and this lost motion is allowed to cushion any slight irregularities in governor control.

### U-16. Monarch Governor Operation

The operation of the Monarch governor is the same as that of the King-Seeley excepting the clutch control. Clutch control is through a spring loaded lever mounted on the top of the unit. To engage the drive, unlatch the lever and allow the spring to carry the engaging assembly forward. Do not engage this clutch with the engine running.

### U-17. Governor Maintenance

#### (All Types)

The belt tension may be adjusted by raising or lowering the governor in the slotted holes in the mounting bracket. Keep the pulleys and belt free of dirt and oil. Belt slippage will affect governor operation and a tight belt may cause rapid wear of the governor shaft and bearings. Adjust it to allow 1" (25.4 mm.) depression midway between the pulleys with thumb pressure.

There is little wear of the internal parts for they operate in oil. The governor housings are equipped with both fill and drain plugs and also (with the exception of some Novi type governors), with level indicating plugs. Check the oil level at each vehicle lubrication and change the oil each time the engine oil is changed using the same grade oil used in the engine. Do not fill the governor housing above the level plug. Overfilling will prevent governor control and possibly cause damage to governor internal parts.

Guard against overfilling the Novi units, which are not equipped with level indicating plugs. The capacity of these governors is two fluid ounces [59.15

cc.]. The Novi filler plug is also a vent which should be cleaned thoroughly at each oil change to be sure that the vent operates.

## U-18. TORQUE SPECIFICATIONS

ENGINE	L6-226		F4-134	
	Pounds-Feet	Kg-m.	Pounds-Feet	Kg-m.
Camshaft Gear to Camshaft	35-40	[4,8 a 5,5]	30-40	[4,1 a 5,5]
Camshaft Thrust Plate Bolt	12-15	[1,7 a 2,1]	20-26	[2,8 a 3,6]
Clutch Control Ball Stud — $\frac{5}{16}$ " [0,8 mm.]	-	-	35-45	[4,8 a 6,2]
Clutch Control Ball Stud — $\frac{5}{16}$ " [1,4 mm.]	-	-	70-85	[9,7 a 11,8]
Clutch Housing to Cylinder Block Screw	40-50	[5,5 a 6,9]	-	-
Connecting Rod Cap Bolt Nut — $\frac{3}{8}$ " [1 mm.]	40-45	[5,5 a 6,2]	35-45	[4,8 a 6,2]
Connecting Rod Cap Bolt Nut — $\frac{1}{16}$ " [1,1 mm.]	-	-	50-55	[6,9 a 7,6]
Crankshaft Counterweight Bolt	-	-	60-70	[8,3 a 9,7]
Cylinder Head to Block Bolts	35-45	[4,8 a 6,2]	60-70	[8,3 a 9,7]
Engine Mounting (Center Bolt)	-	-	45-55	[6,2 a 7,6]
Exhaust Manifold to Cylinder Block	30-35	[4,1 a 4,8]	29-35	[4,0 a 4,8]
Front and Rear Filler Block Bolt	12-15	[1,7 a 2,1]	-	-
Front End Plate Screw — $\frac{5}{16}$ " [0,8 mm.]	12-15	[1,7 a 2,1]	-	-
Front End Plate Screw — $\frac{1}{16}$ " [1,1 mm.]	40-50	[5,5 a 6,9]	-	-
Flywheel to Crankshaft Bolt	35-40	[4,8 a 5,5]	35-41	[4,8 a 5,7]
Generator Bracket to Cylinder Block	20-25	[2,8 a 3,4]	25-35	[3,4 a 4,8]
Intake Manifold to Cylinder Block	30-35	[4,1 a 4,8]	29-35	[3,4 a 4,8]
Main Bearing Caps	85-95	[11,8 a 13,1]	65-75	[9,0 a 10,4]
Oil Filter to Cylinder Head Nut	20-25	[2,8 a 3,4]	-	-
Oil Pan Screws to Cylinder Block	12-15	[1,7 a 2,1]	9-14	[1,2 a 1,9]
Oil Pump Body to Intermediate Bearing Cap	30-35	[4,1 a 4,8]	-	-
Oil Pump Cover to Body Bolt	7-10	[1,0 a 1,4]	-	-
Piston Pin Lock Bolt	-	-	35-41	[4,8 a 5,7]
Rocker Arm Bracket to Head Nut	-	-	30-36	[4,1 a 5,0]
Spark Plugs to Cylinder Head	20-30	[2,8 a 4,1]	25-33	[3,4 a 4,6]
Starting Motor Mounting Bolt	25-30	[3,4 a 4,1]	20-25	[2,8 a 3,4]
Timing Chain Cover Bolts	12-15	[1,7 a 2,1]	-	-
Valve Tappet Cover Nuts	7-10	[1,0 a 1,4]	-	-
Vibration Damper to Crankshaft	100-130	[13,8 a 18,0]	-	-
Vibration Damper to Pulley Hub	12-15	[1,7 a 2,1]	-	-
Water Outlet Elbow to Cylinder Head	12-15	[1,7 a 2,1]	20-25	[2,8 a 3,4]
Water Pump to Cylinder Block	15-20	[2,1 a 2,8]	12-17	[1,7 a 2,3]

Note: Turn the connecting rod cap nut locks (inverted type, pressed steel) finger tight and then tighten  $\frac{1}{2}$  turn more with wrench

## CHASSIS

	Pounds-Feet	Kg-m.
Brake Backing Plate Bolts	25-35	[3,4 a 4,8]
Differential Carrier	38-42	[5,2 a 5,8]
Engine Front Insulator to Frame	10-15	[1,4 a 2,1]
Engine Rear Insulator to Cross Member Bolt	20-30	[2,8 a 4,1]
Engine Rear Mounting Bracket to Transmission Bolt	20-30	[2,8 a 4,1]
Pressure Plate to Flywheel Bolts	12-17	[1,7 a 2,3]
Propeller Shaft and Universal Joint Flange Bolt	20-30	[2,8 a 4,1]
Propeller Shaft and Universal Joint U-Bolt	15-20	[2,1 a 2,8]
Rear Axle Shaft Nut — Minimum	150	[20,8]
Spring Mounting — Front and Rear U-Bolt — $\frac{1}{16}$ " [1,1 mm.]	45-55	[6,2 a 7,6]
Spring Mounting — Front Suspension U-Bolt	65-80	[9,0 a 11,0]
Spring Mounting — Rear U-Bolt — $\frac{1}{2}$ " [1,3 mm.]	65-80	[9,0 a 11,0]
Spring Pivot Bolts	25-30	[3,4 a 4,1]
Steering Arm to Gear Nut	95-115	[13,1 a 15,9]
Steering Arm to Steering Knuckle	55-65	[7,6 a 9,0]
Steering Bell Crank Bolt Nut	70-90	[9,7 a 12,4]
Steering Knuckle Seal Retainer Bolts	15-20	[2,1 a 2,8]
Steering Knuckle Support to Knuckle Arm to Wheel Spindle Bolt	45-55	[6,2 a 7,6]
Steering Mounting to Frame — $\frac{3}{8}$ " [1,0 mm.]	30-40	[4,1 a 5,5]
Steering Mounting to Frame — $\frac{1}{16}$ " [1,1 mm.]	45-55	[6,2 a 7,6]
Steering Tie Rod Clamp Bolts — $\frac{5}{16}$ " [0,8 mm.]	10-15	[1,4 a 2,1]
Steering Tie Rod Clamp Bolts — $\frac{1}{16}$ " [1,1 mm.]	35-45	[4,8 a 6,2]
Transmission Mainshaft Nut	80-110	[11,0 a 15,2]
Wheel to Hub Bolts	60-75	[8,3 a 10,4]

## U-19. SPECIAL TOOLS

Below are listed the tools applicable to models covered in this manual. These special tools are essential not only for the time they will save but also because many operations described cannot be performed without them.

Address any correspondence concerning special tools, their application or availability, to Willys Motors, Inc., Service Department, Toledo 1, Ohio.

**Engine Group**

- KF-27 Driver — Valve Guide.
- C-38 Reamer — Valve Guide, .375" [0,953 mm.].
- DD-82-2 Reamer — Piston Pin, .859" [2,182 mm.].
- W-172 Puller — Crankshaft Gear, Camshaft Sprocket, U-Joint Flange and Parking Brake Drum.
- W-231 Kit — Flywheel Dowel Bolt Installing.
- W-238 Kit — (pr.) Intake and Exhaust Valve Guide Drivers.
- C-249 Reamer, Valve Guide, .343" Exp. [0,871 mm.].
- C-3422 Compressor — Valve Spring.

**Transmission Group**

- KF-128 Driver — Trans. Main Drive Pinion Ball Brg. and Rear Axle Pinion Shaft Brg.
- W-133 Driver — Speedometer Drive Pinion Bushing.
- W-166 Arbor and Sleeve — Cluster Gear Needle Bearing Assembly.
- W-193 Arbor — Transmission Cluster Gear Assembly.
- W-194 Plate — Transmission Mainshaft Retaining.
- W-210 Wrench — Overdrive Governor Removing and Installing.
- C-3105 Driver — Transmission Rear Oil Seal.

**Transfer Case Group**

- W-130 Thimble and Driver — Transfer Case Shifter Rod Oil Seal.
- W-131 Thimble and Driver — Pinion Shaft Rear Bearing Cone.
- W-139 Driver — Transfer Case Output Shaft Front Bearing Cone Removing.
- W-141 Ring — Transfer Case Output Shaft Front Bearing Cone Removing.
- W-143 Driver — Transfer Case Output Shaft Front and Rear Oil Seal Installer.
- W-176 Puller — Transfer Case Shift Rod Oil Seal.

- W-192 Pilot Pin — Transfer Case Intermediate Gear Thrust Washer.

**Universal Joints Group**

- W-162 Tool — U-Joint Flange Installer.
- W-220 Jig and Bushing — Power Take-Off U-Joint Pin Remover and Installer.
- C-452 Puller — U-Joint Flange.
- C-3281 Wrench — U-Joint Flange Holding.

**Rear Axle Group**

- W-99-B Set — Pinion and Ring Gear Setting Gauge.
- W-104-B Puller — Axle Shaft, Pinion Shaft and Differential Case Tapered Bearing Cone (Includes: Plates 13, 18, 20, 21, 28 and 32).
- W-126 Driver — Pinion Front Bearing Cup.
- W-128 Installer — Differential Carrier End Oil Seal.
- W-129 Spreader — Axle Housing.
- W-142 Driver — Differential Case Bearing Cone.
- W-147 Driver — Pinion Shaft Oil Seal.
- W-186 Driver — Rear Axle Shaft Oil Seal.
- W-188 Driver — Differential Case Bearing Cone.
- W-201 Wrenches — (pr.) Pinion Bearing Adjusting.
- W-207 Driver — Pinion Pilot Bearing Installing.
- W-251 Puller — Transfer Case Output Shaft Front and Rear Oil Seal Removing; also Pinion Shaft Oil Seal.
- C-319 Puller — Rear Wheel Hub.
- C-637 Puller — Axle Shaft and Oil Seal.

**Front Suspension Group**

- W-138 Driver and Adapter — King Pin Bearing Cap Remover and Installer.
- W-144 Wrench — Wheel Bearing Adjusting.
- W-163 Puller — Front Axle Drive Flange.
- C-690 Scale — King Pin Bearing Preload Checking.

**Steering Group**

- C-3646 Puller — Steering Shaft Arm.

**Brake Group**

- W-213 Wrench — Brake Adjusting.

## U-20. MISCELLANEOUS DATA

## MODEL L6-226 4WD

POWER TAKE-OFF SHAFT AND VEHICLE GROUND SPEEDS  
ALL GEAR SHIFT POSITIONS  
MILES PER HOUR

Governor Control Position	Transfer In	POWER TAKE-OFF 1 TO 1 GEAR RATIO						Engine Speed
		Transmission Gear In						
		Low		Intermediate		High		
		Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	
1	Low	357	2.61	644	4.70	1000	7.30	1000
	High	357	6.42	644	11.57	1000	17.95	
2	Low	428	3.13	773	5.64	1200	8.78	1200
	High	428	7.70	773	13.89	1200	21.54	
3	Low	500	3.65	902	6.58	1400	10.22	1400
	High	500	8.98	902	16.20	1400	25.13	
4	Low	571	4.18	1030	7.53	1600	11.67	1600
	High	571	10.26	1030	18.52	1600	28.72	
5	Low	643	4.70	1159	8.47	1800	13.13	1800
	High	643	11.55	1159	20.83	1800	32.31	
6	Low	714	5.22	1288	9.41	2000	14.59	2000
	High	714	12.83	1288	23.14	2000	35.90	
7	Low	785	5.74	1417	10.35	2200	16.05	2200
	High	785	14.11	1417	25.46	2200	39.49	
8	Low	857	6.26	1546	11.29	2400	17.51	2400
	High	857	15.40	1546	27.77	2400	43.08	
9	Low	928	6.79	1674	12.23	2600	18.97	2600
	High	928	16.68	1674	30.09	2600	46.69	

## MODEL F4-134 4WD

POWER TAKE-OFF SHAFT AND VEHICLE GROUND SPEEDS  
ALL GEAR SHIFT POSITIONS  
MILES PER HOUR

Governor Control Position	Transfer In	POWER TAKE-OFF 1 TO 1 GEAR RATIO						Engine Speed
		Transmission Gear In						
		Low		Intermediate		High		
		Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	Take-Off Shaft R.P.M.	Vehicle Speed M.P.H.	
1	Low	357	2.37	644	4.27	1000	6.62	1000
	High	357	5.82	644	10.50	1000	16.28	
2	Low	428	2.84	773	5.12	1200	7.94	1200
	High	428	6.98	773	12.59	1200	19.53	
3	Low	500	3.31	902	5.98	1400	9.26	1400
	High	500	8.15	902	14.69	1400	22.79	
4	Low	571	3.79	1030	6.83	1600	10.59	1600
	High	571	9.31	1030	16.79	1600	26.04	
5	Low	643	4.26	1159	7.68	1800	11.91	1800
	High	643	10.47	1159	16.89	1800	29.30	
6	Low	714	4.73	1288	8.54	2000	13.24	2000
	High	714	11.64	1288	20.99	2000	32.55	
7	Low	785	5.20	1417	9.39	2200	14.56	2200
	High	785	12.80	1417	23.09	2200	35.81	
8	Low	857	5.88	1546	10.24	2400	15.88	2400
	High	857	13.96	1546	25.19	2400	39.06	
9	Low	928	6.15	1674	11.10	2600	17.21	2600
	High	928	15.13	1674	27.29	2600	42.32	



### U-21. SPLINE SHAFT HORSEPOWER

The chart below shows the drawbar horsepower at the governor-controlled engine speeds and the horsepower at the spline shaft with the vehicle stationary. Also shown is the horsepower available at the spline shaft with the vehicle at the maximum

approved weight (6000 lb.) moving at the speed shown and exerting a drawbar pull of zero pounds thru 3000 lb. (maximum recommended) in steps of 1000 pounds.

Governed Engine rpm.	Vehicle Speed mph.*	Drawbar HP. †	Vehicle Stationary	HP. AT REAR P.T.O. SPLINE SHAFT			
				6000 Lb. Vehicle Moving with:			
				No Lb. Drawbar Pull	1000 lb. Drawbar Pull†	2000 lb. Drawbar Pull	3000 lb. Drawbar Pull
1000	2.56	19.2	22.0	20.8	14.0	7.3	1.6
1200	3.07	24.3	27.0	25.5	17.4	9.5	1.2
1400	3.59	28.5	31.7	30.0	20.5	11.1	1.5
1600	4.08	32.2	35.7	33.6	22.8	12.1	1.5
1800	4.62	36.6	40.0	38.2	25.6	13.4	1.2
2000	5.13	42.0	44.0†	41.5	27.5	14.5	NONE
2200	5.64	44.4	46.5†	44.8†	29.0	14.2	NONE
2400	6.4	50.7	50.5†	47.5†	30.6	14.7	NONE
2600	6.66	52.8	53.6†	50.4†	32.8	15.2	NONE

\*Vehicle in low transmission and transfer case ratio.

†Based on maximum recommended drawbar pull for continuous service of 3000 lb.

‡Limit rear P.T.O. to 40 HP. for continuous operation.

## U-22. LIST OF ABBREVIATIONS

a	to (metric conversions)	l.h.	left hand
ABC	after bottom center	ltr.	liters
amp.	ampere	m.	meters
API	American Petroleum Institute	max.	maximum
appx.	approximately	mfd.	microfarads
assy.	assembly	min.	minimum
ATC	after top center	mm.	millimeters
BBC	before bottom center	mph.	miles per hour
BTC	before top center	No.	number(s)
C.	centigrade	O.D.	outside diameter
cm.	centimeter	O.S.	oversize
cm <sup>2</sup>	square centimeter	oz.	ounces
cm <sup>3</sup>	cubic centimeter	P.T.O.	Power Take-Off
cp.	candle power	Par.	paragraph
cu. in.	cubic inches	psi.	pounds per square inch
dia.	diameter	r.h.	right hand
F.	fahrenheit	rpm.	revolutions per minute
Fig.	figure(s)	SAE	Society of Automotive Engineers
gal.	gallons	S/N	serial number
gm.	grams	sq. in.	square inches
gpm.	gallons per minute	SW	Station Wagon
HP.	horsepower	UD	Utility Delivery
I.D.	inside diameter	U.S.	undersize
kg.	kilograms	UW	Utility Wagon
kg-cm <sup>2</sup>	kilograms per square centimeter	v.	volts
kg-m.	kilograms per meter	x	times or by
kph.	kilometers per hour	"	inches
lb.	pounds	:	to (ratio)
lb-ft.	pounds-feet of torque	°	degrees
lg.	long		

## ALPHABETICAL INDEX

SUBJECT	PAR.	SUBJECT	PAR.
<b>A</b>			
Accelerator	F-85	Crankcase, Engine	B-7
Adjusting Rod, Clutch Control	J-23	Crankcase Ventilator Valve	E-14, E-110
Air Cleaner	B-24, B-42, F-59	Crankshaft	D-23, D-39, D-97, E-26, E-38, E-82
Alignment, Steering Wheel	O-4	Crankshaft Alignment	D-42, E-40
Antifreeze	H-9	Crankshaft End Play	D-55, E-50, E-83
Assembly, Engine	D-91, E-78	Crankshaft Main Bearings	D-46, D-97, E-43, E-82
Axle Caster	M-1, M-13, O-16	Crankshaft Pilot Bushing	D-45, J-20
Axle Drive Pinion	N-9	Crankshaft Pulley	E-12, E-96
Axle, Front	M-1, M-4, M-5	Crankshaft Rear Bearing Seal	E-63, E-85
Axle, Rear	N-1, N-15	Crankshaft Rear Oil Seal	D-75
Axle Shaft, Rear	N-3, N-4	Current-Voltage Regulators	I-22
<b>B</b>			
Battery	C-2, I-2	Cylinder Block	D-32, E-32, H-5
Bearing Fitting, Plastigage	D-49, D-54, E-45	Cylinder Bores	D-36, E-17, E-35
Bearing, Clutch Release	B-34	Cylinder Head	D-9, D-90, D-112, E-16, E-73, E-98
Bearing Journals, Main	D-43, E-41	Cylinder, Master	B-29, P-11
Bearing Seal, Crankshaft Rear	E-63, E-85	Cylinder, Wheel	P-12
Bearing, Water pump	B-34, H-11, H-15	<b>D</b>	
Bearings, Camshaft	D-58, E-51	Differential Carrier	N-6
Bearings, Connecting Rod	D-51, E-46	Differential Conventional	B-19, B-45, N-5
Bearings, Crankshaft Main	D-46, D-97, E-43, E-82	Differential Gauge Blocks	N-11
Bearings, Front Wheel	B-13, M-8, Q-3	Differential, Powr-Lok Nonslip	B-20, N-16
Bearings, King Pin	B-11, M-11	Differential Side Gears	N-10
Bearings, Rear Wheel	B-14, Q-6	Directional Signals	I-72
Bearings, Starting Motor	B-35	Disassembly, Engine	D-5, E-6
Bell Crank, Throttle	U-10	Distributor	B-21, C-16, C-21, C-24, I-4, I-5
Bellhousing, Flywheel	D-100, E-23, E-70, E-88	Distributor Shaft	D-113, I-11
Bendix Folo-Thru Drive	I-57	Door Adjustment	T-5
Block, Cylinder	D-32, E-32, H-5	Door Glass	T-10
Body	B-32, T-1	Door Locks	T-9
Body Exterior	T-2	Drain Tube, Tappet Chamber	D-24, D-95
Body Interior	T-4	Drive Pinion, Axle	N-9
Body Reinforcement	T-20	Drums, Brake	P-10, Q-9
Bores, Cylinder	D-36, E-17, E-35	<b>E</b>	
Brake Adjustment	P-5, P-6, P-8	Electrical Controls, Overdrive	I-74
Brake Control, Hand	B-26, P-7, P-9	Electrical Gauges	I-62
Brake Drums	P-10, Q-9	Electrical System	I-1
Brakes	P-1	Electrical Indicators	H-10, I-62
Brakes, Bleeding	P-4	End Plate, Front	D-21, D-98, E-22, E-86
Brakes, Relining	P-10	Engine Assembly	D-91, E-78
Bushing, Crankshaft Pilot	D-45, J-20	Engine Crankcase	B-7
Bushing, Flywheel Clutch Shaft	J-21	Engine Disassembly	D-5, E-6
Bushing, Oil Pump	D-83	Engine, F4-134	E-1
<b>C</b>			
Camber, Front Wheel	M-1, M-13, O-15	Engine Governor	B-33, U-9
Camshaft	D-25, D-58, D-94, E-28, E-51	Engine Ground Strap	D-3, E-4
Camshaft Bearings	D-58, E-51	Engine Idle Speed	C-10
Camshaft Thrust Plate	D-94, E-81	Engine Inspection	D-31, E-31
Carburetor	C-10, C-13, C-15, F-2	Engine, L6-226	D-1
Carrier, Differential	N-6	Engine Lubricating System	B-4
Caster, Axle	M-1, M-13, O-16	Engine Mounting	E-3
Chassis Lubrication	B-5, B-40	Engine Oil	B-2, B-39
Choke Control	B-27	Engine Removal	D-4, E-5
Chromium Finish	T-3	Engine Supports	D-2
Clutch	D-12, D-102, E-24, E-89, J-1	Engine Tune-Up	C-1
Clutch Control Adjusting Rod	J-23	Engine Vacuum	C-18
Clutch Disc	J-19	Exhaust Pipe	G-6
Clutch Housing	D-88	Exhaust System	G-1
Clutch Linkage	B-30	Exhaust Valve Seat Insert	D-70, E-60
Clutch Pedal Adjustment	J-3	Expansion Plugs, Core Hole	D-89, E-72
Clutch Pressure Plate	J-5	Exterior, Body	T-2
Clutch Release Bearing	B-34	Extra Equipment	U-2
Compression Gauge	C-4	<b>F</b>	
Connecting Rod Bearings	D-51, E-46	Fan Belt	H-19
Connecting Rod Crankpins	D-44, E-42	Filler Block, Front	D-20, D-78
Connecting Rod, Steering	O-9, O-20	Filler Block Guard, Rear	D-22, D-76, D-96
Connecting Rods	D-15, D-37, D-106, E-19, E-36	Filler Block, Rear	D-20, D-77
Controls, Flexible	B-26	Finish, Chromium	T-3
Conventional Differential	B-19, B-45, N-5	Fittings, Lubrication	B-8
Cooling System	H-1	Floating Oil Intake	E-64
Core Hole Expansion Plugs	D-89, E-72	Flywheel	D-13, D-85, D-101, E-25, E-67, E-87
Cover Oil Seal, Timing Chain	D-65	Flywheel Clutch Shaft Bushing	J-21
Cover, Timing Chain	D-18, D-63, D-105	Flywheel Bellhousing	D-100, E-23, E-70, E-88
Cover, Timing Gear	E-20, E-54, E-94	Folo-Thru Drive, Bendix	I-57
Cover Valve Tappet	D-111, E-62	Frame	R-1
Cowl Ventilator	T-21	Front Axle	M-1, M-4, M-5
		Front Axle Shaft U-Joints	B-11, B-43, M-6

## ALPHABETICAL INDEX

272

# JEEP UTILITY VEHICLES

SUBJECT	PAR.	SUBJECT	PAR.
Springs, Valve.....	D-16, D-67, D-103, E-27, E-56, E-90	Trouble Shooting.....	C-12
Sprockets, Timing Chain.....	D-19, D-63, D-104	Tune-Up, Engine.....	C-1
Starting Motor.....	I-43	Turning Angle, Front Wheel.....	M-14, O-17
Starting Motor Bearings.....	B-35		
Steering Connecting Rod.....	O-9, O-20	U	
Steering Gear.....	B-12, O-2	U-Joints, Front Axle Shaft.....	B-11, B-43, M-6
Steering Knuckle Oil Seal.....	M-12	U-Joints, Propeller Shaft.....	B-10, L-2
Steering System.....	O-1	U-Joints, Power Take-Off.....	B-47, U-6
Steering Tie Rod.....	O-10		
Steering Wheel Alignment.....	O-4	V	
Suspension, Front.....	M-1, M-13	Vacuum Gauge.....	C-18
Switch, Ignition.....	I-60	Vacuum Pump.....	C-9, F-39, F-46
Switch, Main Light.....	I-64	Valve Adjustment.....	D-117, E-106
Switch, Starting.....	I-59	Valve Guides.....	D-67, D-72, E-56, E-61
Switch, Stoplight.....	I-65	Valve, Oil Pressure Relief.....	D-30, D-99, D-122
		Valve Seat Insert, Exhaust.....	D-70, E-60
T		Valve Seats.....	D-71, E-59
Tail Gate.....	T-7	Valve Springs.....	D-16, D-67, D-103, E-27, E-56, E-90
Tail Pipe.....	G-6	Valve Tappet Cover.....	D-111, E-62
Tappet Chamber Drain Tube.....	D-24, D-95	Valve Tappets.....	C-5, D-28, D-73, D-93, D-119, E-29, E-62, E-80
Tappets, Valve.....	C-5, D-28, D-73, D-93, D-119, E-29, E-62, E-80	Valve Timing.....	C-19, D-109, E-108
Thermostat.....	E-11, H-7	Valves.....	D-67, D-103, E-27, E-56, E-90
Throttle Bell Crank.....	U-10	Valves, Refacing.....	T-21
Thrust Plate, Camshaft.....	D-94, E-81	Ventilating Valve, Crankcase.....	E-14, E-110
Tie Rod, Steering.....	O-10	Vibration Damper.....	D-17, D-66, D-108
Timing Chain.....	D-19, D-63, D-104	Voltage Regulators, Current.....	I-22
Timing Chain Cover.....	D-18, D-63, D-105		
Timing Chain Cover Oil Seal.....	D-65	W	
Timing Gear Cover.....	E-20, E-54, E-94	Water Pump.....	D-7, D-115, E-7, E-103, H-11
Timing Gears.....	D-19, D-63, D-104, E-21, E-54, E-84, E-91	Water Pump Bearing.....	B-34, H-11, H-15
Timing, Ignition.....	C-6, I-11, I-12	Wheel Alignment, Front.....	O-11
Timing Pointer.....	C-25	Wheel Bearings, Front.....	B-13, M-8, Q-3
Timing, Valve.....	C-19, D-109, E-108	Wheel Bearings, Rear.....	B-14
Tires.....	Q-11	Wheel Cylinder.....	P-12
Toe-In, Front Wheel.....	O-12	Wheel Shimmy, Front.....	O-19
Tools, Special.....	U-19	Wheels.....	Q-1
Torque Specifications.....	U-18	Window Glass.....	T-10
Transfer Case.....	B-16, B-44, K-3, K-22	Window, Sliding.....	T-14
Transmission.....	B-15, B-44, K-1	Windshield Glass.....	T-13
Transmission, Remote Control.....	K-7	Windshield Wiper.....	B-31, T-23

PRINTED IN U. S. A.





